



On-the-Go Story Pal™



 
Instruction Manual

This manual contains important information. Please keep it for future reference.

91-003934-006 (US)

INTRODUCTION

Thank you for purchasing the **On-the-Go Story Pal™** device!
Get ready to enter a magical world of storytelling, music and learning!

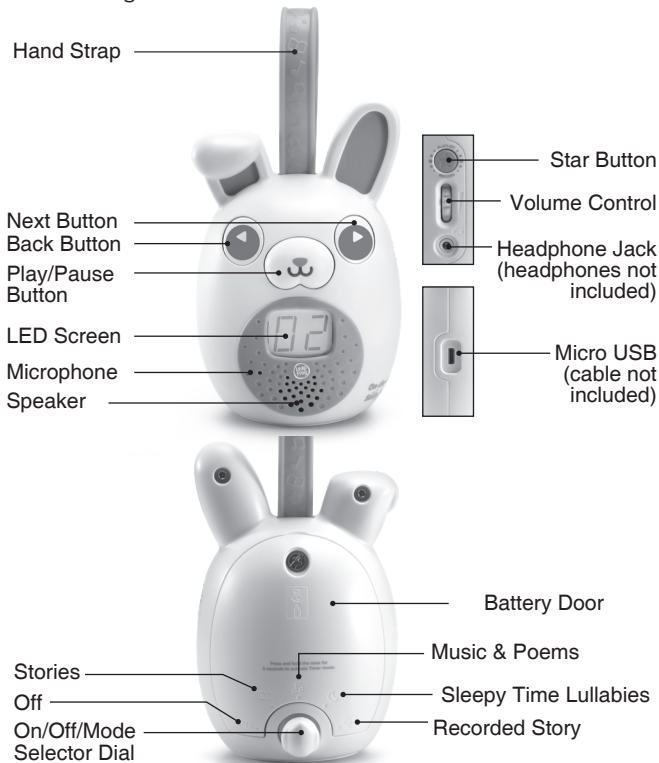

INCLUDED IN THE PACKAGE

On-the-Go Story Pal™ device

- Instruction Manual

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep the Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

 
Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

This toy is only to be connected to equipment bearing either the following symbols: □ or ⬠.

Le jouet doit uniquement être connecté à des équipements portant l'un des symboles suivants □ ou ⬠.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

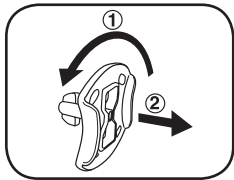

INSTRUCTIONS

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.
5. Replace the battery cover and tighten the screw to secure.

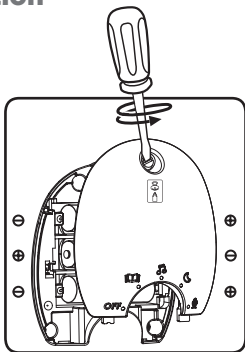

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the packaging. To activate normal play mode, please complete the following steps:

1. Rotate the **On/Off/Mode Selector Dial** to the **Off** position.



2. Rotate the **On/Off/Mode Selector Dial** to the **Stories** position to activate normal play mode.



PRODUCT FEATURES

1. On/Off/Mode Selector Dial

Rotate the **On/Off/Mode Selector Dial** to choose a category. Categories include: **Stories**; **Music & Poems**; **Sleepy Time Lullabies** and **Recorded Story**.

Rotate the **On/Off/Mode Selector Dial** to the **Off** position to turn the toy off.



 
2. Play/Pause Button

Press to pause the story, song or poem.
Press again to play.



3. Back Button

Press to select the previous story, song or poem.

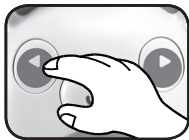

4. Next Button

Press to select the next story, song or poem.



5. Star Button

In the **Recorded Story** mode, follow the audio instructions and press the **Star Button** to begin recording.

In other modes, quickly press the **Star Button** to hear your playlist. To save a story/song to the playlist, press and hold the **Star Button** until it beeps.



6. Volume Control

Turn the dial up or down to adjust the volume level.



7. USB Port

To download additional free stories, follow the instructions in the **Downloadable Content** section later in this guide.



8. Set Timer

Press and hold the **Play/Pause Button** for 5 seconds, then follow the audio instructions to set the timer.

9. Automatic Shut-Off

To preserve battery life, the **On-the-Go Story Pal™** will automatically shut off after approximately 60 seconds if a story or song is not playing. The unit can be turned on by pressing any button.

ACTIVITIES

Listen to a Story, Poem or Song

Rotate the **On/Off/Mode Selector Dial** to choose a category. After selecting a category, press the **Next Button** to toggle through the story options. Stories will play automatically after their titles are announced.

Stories

1. The Tale of Peter Rabbit
2. The Little Mermaid
3. The Tortoise and the Hare
4. Peter Pan
5. Jack and the Beanstalk
6. The Elves and the Shoemaker
7. Rapunzel
8. The Midas Touch
9. The Three Little Pigs
10. The Ugly Duckling
11. The Wind and the Sun
12. Puss in Boots
13. Briar-Rose
14. The Legend of John Henry
15. The World of Dinosaurs
16. Beauty and the Beast
17. The Emperor's New Clothes
18. Cinderella
19. Rumpelstiltskin
20. The Gingerbread Man
21. Robin Hood and the Golden Arrow
22. Hansel and Gretel
23. Paul Bunyan and Babe the Big Blue Ox
24. The Little Red Hen

25. Chicken Little
26. The Three Billy Goats Gruff
27. The Lucky Drum
28. Little Red Riding Hood
29. The Little Engine That Could
30. The Fox and the Crow
31. Snow White
32. Anansi and the Turtle
33. Riki Tiki Tavi
34. Jacob and the Wise Man
35. Goldilocks and the Three Bears
36. The Boy Who Cried Wolf
37. The Frog Prince

Music and Poems

1. Old MacDonald Had a Farm
2. A Wise Old Owl
3. The ABC Song
4. The Owl and the Pussy Cat
5. Counting 1 to 10
6. I'm a Little Teapot
7. All the Colors of The Rainbow
8. Itsy Bitsy Spider
9. Rock-a-Bye Baby
10. If You Are Happy and You Know It
11. Round and Round the Garden
12. Twinkle, Twinkle Little Star
13. The Noble Duke of York
14. The Wheels on the Bus
15. Pease Porridge Hot
16. Every Letter Makes a Sound
17. Down by the Bay

18. Jack Be Nimble
19. Bingo
20. Star Light, Star Bright
21. The Muffin Man
22. Pat-a-Cake Baker's Man
23. Five Little Speckled Frogs
24. My First Counting Song
25. Hey Diddle, Diddle

Sleepy Time Lullabies

1. Hush Little Baby
2. Beethoven's "Ode to Joy"
3. Brahms' "Lullaby"
4. Ocean Waves - Music of the Sea
5. Pachelbel's "Canon in D"
6. Bach's "Minuet in G"
7. Earth's Song
8. Vivaldi's "Spring"
9. Frère Jacques
10. Beethoven's "Für Elise"

Recorded Story

The toy is capable of recording one story. Maximum recording time is 10 minutes.

Timer

Choose up to three stories, 25 songs or 10 lullabies to be played before the unit automatically turns off.

Playlist

Choose your top five stories, songs, poems or lullabies to listen to in your playlist.

To Add an Item to Your Playlist

1. Use the **On/Off/Mode Selector Dial** to choose a category.
2. Use the **Next/Back Buttons** to navigate to a story or song.
3. Press and hold the **Star Button** for three seconds to add the item to your playlist.
4. Audio will confirm when the item has been added.

To Delete an Item From Your Playlist

1. Use the **On/Off/Mode Selector Dial** to choose a category.
2. Use the **Next/Back Buttons** to navigate to a story or song in your playlist.
3. Press and hold the **Star Button** for three seconds to delete the item from your playlist.
4. Audio will confirm when the item has been deleted.

To Listen to Your Playlist

1. Quickly press the **Star Button** to enter your playlist.
2. Your playlist will automatically begin playing. Use the arrow buttons to navigate to a particular story in your playlist.

Note: To preserve battery life, you may want to limit the amount of stories in your playlist to three or less.

Downloadable Content

Download additional free stories, songs and poems using your computer and add them to your **On-the-Go Story Pal™** device.

1. Power Up and Connect

Locate the **On/Off/Mode Selector Dial** on the back of your **On-the-Go Story Pal™** device and rotate it to the **Stories** category. Then, connect the device to your computer using a micro USB cable (micro USB cable not included).

2. Set Up

Install the LeapFrog® Connect application for the **On-the-Go Story Pal™** onto your PC or Mac computer from leapfrog.com/connect

3. Download

Follow the on-screen instructions to download and install additional content.

4. Play and Learn!

Eject the **On-the-Go Story Pal™** device and your child is ready to play!

Warning: Do not power off the device or disconnect the micro USB cable while the device is being updated.

System Requirements for Computer Connection

High-speed Internet connection; parent account registration; monitor resolution of 1024 x 768; available USB port; 1 GB of RAM; 500 MB free disk space.

PC Requirements: Pentium® 4 or equivalent (2 GHz processor or faster recommended); 64-bit version of Windows® 8 or Windows® 10 operating system with latest service pack.

Mac Computer Requirements: Apple computer (1 GHz processor or faster recommended); Mac OS X 10.13+ operating system software.

WINDOWS is a trademark of Microsoft Corp., registered in the U.S. and other countries. PENTIUM and INTEL are trademarks of Intel Corp., registered in the U.S. and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT SAFETY INSTRUCTIONS

Adult supervision required at all times while children are playing with this product.

Not suitable for children under 18 months.

Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. The louder the volume, the less time required before your hearing may be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

Headphones should not be used by children under the age of 36 months.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Problem	Possible Cause	Correction
The On-the-Go Story Pal™ device has stopped working or does not turn on	Incorrect battery polarities	Ensure that the batteries are installed correctly
	Weak batteries	Replace with new batteries
Cannot download additional stories	The LeapFrog® Connect application is not installed	Install the LeapFrog® Connect application on your PC or Mac at leapfrog.com/connect
	The LeapFrog® Connect application is not working	Disconnect the On-the-Go Story Pal™ device and restart the LeapFrog® Connect application. Then, reconnect the On-the-Go Story Pal™ device to your computer again using a micro USB cable.
Cannot find any story in the device	The data in the On-the-Go Story Pal™ device has crashed	Connect the On-the-Go Story Pal™ device to your computer, run the LeapFrog® Connect application, select Reset under Settings and your On-the-Go Story Pal™ device will be restored. Your recorded story will be erased.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

DISCLAIMER AND LIMITATION OF LIABILITY

LeapFrog Enterprises, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. LeapFrog Enterprises, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. LeapFrog Enterprises, Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	6137
Product Name:	On-the-Go Story Pal™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell Street, Suite 500, Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more
information about our products,
downloads, resources and more.**


leapfrog.com

leapfrog.ca

**Read our complete warranty and
policies online at:**

leapfrog.com/legal

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2021 LeapFrog Enterprises, Inc.

All rights reserved.
91-003934-006 

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>