






**User's Manual**

# Notes, Cautions, and Warnings

-  **NOTE:** A NOTE indicates important information that helps you make better use of your smartphone.
-  **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

Information in this document is subject to change without notice.

© 2010 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc.; *Bluetooth* is a registered trademark owned by Bluetooth SIG, Inc. and is used by Dell under license.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Designs, images and other depictions of products may change from when this publication was produced.

August 2010 Rev. 1.1

# Contents

<b>Before Using Your Smartphone</b> . . . . .	<b>13</b>	Setting Up the Phone for the First Time . . . . .	18
Safety Warnings . . . . .	13	<b>Dell™ Aero Smartphone Accessories</b> . . . . .	<b>22</b>
General Statement on RF Energy. . . . .	14	<b>Dell Aero Smartphone Features</b> . . . . .	<b>24</b>
Proper Disposal . . . . .	14	Front View . . . . .	24
IEEE 1725 . . . . .	14	Back View . . . . .	24
FCC . . . . .	15	Left View . . . . .	25
<b>Setting Up Your Smartphone</b> . . . . .	<b>18</b>	Right view . . . . .	26
Smartphone Requirements . . . . .	18		
Activating Phone Service . . . . .	18		

**Basic Smartphone Functions . . . 28**

Using the Touch Screen . . . . . 28

    Connection Manager . . . . . 30

    Status Bar . . . . . 32

    Main Panels . . . . . 34

    Customizing the Screen  
    Panels . . . . . 37

Phone Display Panels . . . . . 38

Sleep Mode . . . . . 43

Phone Lock . . . . . 44

Entering Text . . . . . 45

    Activating the Keyboard . . . . . 45

    Using the Keyboard. . . . . 46

    Closing the Keyboard . . . . . 47

    Selecting an Input Method . . . . . 47

    Selecting Input Languages . . . . . 48

    Entering Text With QWERTY . . . . . 49

    Entering Numbers or Symbols . . . . . 51

    Using HandWriting . . . . . 52

    Using the Phone Keypad . . . . . 53

    Editing Text . . . . . 54

Connecting to the Internet. . . . . 56

    Selecting Cellular Data  
    Networks . . . . . 56

Basic Smartphone Settings . . . . . 56

    Display Settings. . . . . 56

    Date & Time Settings . . . . . 59

    Location Settings . . . . . 62

    Language Settings . . . . . 62

Ringtones and Sounds Settings . . . . .	63	Call Forwarding . . . . .	81
Wizard Settings . . . . .	67	Other Basic Call Settings . . . . .	82
Online Help . . . . .	67	My SIM number . . . . .	83
<b>Using the Smartphone . . . . .</b>	<b>68</b>	Dialing Prefix Number . . . . .	83
Making a Call . . . . .	68	Speed Dial . . . . .	84
Answering or Rejecting an Incoming Call . . . . .	73	Voicemail . . . . .	85
Accessing the Call Log . . . . .	74	Setting the In-Call Timer . . . . .	85
Contacts . . . . .	76	TTY Settings . . . . .	86
Call Settings . . . . .	78	Managing Bluetooth Connections . . . . .	86
Fixed Dial Number (FDN) List . . . . .	79	Turning On Bluetooth . . . . .	86
Call Barring . . . . .	80	Changing Bluetooth Settings . . . . .	87
		Pairing With Bluetooth Devices . . . . .	87
		Managing Wi-Fi Connections . . . . .	88
		Turning On Wi-Fi . . . . .	88

## Contents

Changing Wi-Fi Settings . . . . .	89	Configuring Voice Command . . . . .	95
Adding a Wi-Fi Network . . . . .	89	<b>Using Internet Features . . . . .</b>	<b>96</b>
Connecting to a Wi-Fi Network. . . . .	90	Internet Browser . . . . .	96
Mobile Networks . . . . .	90	Viewing Web Pages. . . . .	96
Configuring Mobile Networks . . . . .	91	Navigating Web Pages . . . . .	98
Security Options . . . . .	91	Browser Overview . . . . .	99
Resetting the Smartphone . . . . .	93	Bookmarks . . . . .	100
Master Clear . . . . .	93	Browser Options . . . . .	102
Master Reset . . . . .	93	Browser Settings . . . . .	103
Storage Information . . . . .	93	Twitter . . . . .	104
Managing SD Card and Phone Storage . . . . .	93	Logging In to Twitter . . . . .	104
Using Voice Command. . . . .	94	Using Twitter . . . . .	104
		Facebook. . . . .	107

Logging In to Facebook . . . . .	107	Managing Exchange Server Account . . . . .	118
Using Facebook . . . . .	107	Synchronization Settings . . . . .	118
Account Settings . . . . .	111	Managing Email Messages . . . . .	119
<b>Using Email Features . . . . .</b>	<b>114</b>	Sending Emails . . . . .	119
Adding an Email Account . . . . .	114	Receiving Emails . . . . .	119
Adding an Internet Email Account . . . . .	114	Deleting Messages . . . . .	120
Adding an Exchange Server Account . . . . .	115	<b>Using Multimedia Features . . . . .</b>	<b>122</b>
Adding More Email Accounts . . . . .	116	Browsing and Playing Music . . . . .	122
Setting Up and Editing Email Accounts . . . . .	116	Music Player . . . . .	124
Editing Account Settings . . . . .	116	Music Player Controls . . . . .	125
Removing an Account . . . . .	118	Setting a Song as Your Ringtone . . . . .	125

## Contents

Managing Music Files . . . . .	126	Managing Picture Files . . . . .	134
Synchronizing Music . . . . .	126	Changing Picture Settings . . . . .	136
Transferring Music . . . . .	126	Using the Video Editor . . . . .	137
Creating a Playlist . . . . .	127	Using the Storyboard . . . . .	137
Managing Playlists . . . . .	127	Using the Music Movie . . . . .	138
Browsing and Playing Videos. . . . .	128	Using Auto Cut . . . . .	139
Managing Videos. . . . .	129	Using the Camera. . . . .	140
Sorting Videos . . . . .	129	Camera Mode. . . . .	140
Deleting a File From a List . . . . .	129	Video Recording Mode . . . . .	142
Viewing Video File Properties . . . . .	130	Using the Recorder Application . . . . .	143
Sharing Videos . . . . .	130	<b>Using Network Features . . . . .</b>	<b>144</b>
Deleting a Video . . . . .	130	AT&T Navigator . . . . .	144
Using the Video Player . . . . .	132	AT&T Maps . . . . .	144
Using the Picture Application. . . . .	133		
Browsing Pictures . . . . .	133		



GPS . . . . .	147	Mobile Banking . . . . .	153
Using Where . . . . .	147	<b>Using Google Applications . . . . .</b>	<b>154</b>
Using AllSport GPS. . . . .	148	Google Talk . . . . .	154
AT&T Music. . . . .	148	Google Maps . . . . .	154
Using AT&T Radio . . . . .	148	Searching Places. . . . .	154
Using MusicID . . . . .	149	Getting Directions . . . . .	155
AT&T Games . . . . .	150	Changing Map Modes . . . . .	156
AT&T Hot Spots. . . . .	151	Finding Your Location. . . . .	156
YPmobile . . . . .	151	Using Latitude . . . . .	156
Using YPmobile. . . . .	151	Market . . . . .	158
AT&T Video . . . . .	153	Using Market . . . . .	158
Mobile Video . . . . .	153	YouTube . . . . .	160
MobiTV. . . . .	153	Using YouTube . . . . .	160

## Contents

Accessing My YouTube Account . . . . .	161	Using the Calendar . . . . .	170
Uploading Videos . . . . .	162	Calendar Views . . . . .	171
<b>Using Applications . . . . .</b>	<b>164</b>	Calendar Settings . . . . .	174
Messaging . . . . .	164	Alarm Clock . . . . .	176
Sending Messages to Contacts . . . . .	164	Add More Alarms . . . . .	177
Replying to a Message . . . . .	165	Changing the Clock Display . . . . .	178
Reading Unread Messages . . . . .	166	Hiding the Clock . . . . .	178
Viewing Messages . . . . .	166	Setting the Date & Time . . . . .	179
Using the Message View . . . . .	167	Calculator . . . . .	179
Messaging Settings . . . . .	168	File Manager . . . . .	180
Quickoffice . . . . .	169	Viewing Stored Files . . . . .	180
Calendar . . . . .	170	Adding New Folders . . . . .	180
		Sorting Files and Folders . . . . .	181
		Deleting Files and Folders . . . . .	181
		Cut, Copy, and Paste . . . . .	182

Searching for Contents . . . . .	183	World Clock . . . . .	188
Renaming Files or Folders . . . . .	183	Viewing Clocks . . . . .	188
Compressing Files and Folders . . . . .	184	Adding Clocks . . . . .	189
Decompressing Files and Folders . . . . .	184	Deleting Clocks . . . . .	189
Notes . . . . .	184	World Clock Settings . . . . .	189
Adding Notes . . . . .	184	Search . . . . .	190
Reading Notes . . . . .	185	Using Search . . . . .	190
Editing Notes . . . . .	186	Selecting Search Categories . . . . .	191
Deleting Notes . . . . .	186	Advanced Search . . . . .	191
Tasks . . . . .	187	Index Statistic . . . . .	192
Creating New Tasks . . . . .	187	DM Service . . . . .	192
Editing Tasks . . . . .	187	Backup . . . . .	193
Deleting Tasks . . . . .	188	Backup Your Mobile Contacts, Messages, and Settings . . . . .	193

## Contents

Restore Your Mobile Contacts, Messages, and Settings From the Backup File . . . . .	193
<b>Managing Applications . . . . .</b>	<b>194</b>
Uninstalling an Application. . . . .	194
Clearing Application Data . . . . .	194
Clearing Application Cache . . . . .	194
Stopping an Application . . . . .	194
<b>Dell Desktop Suite . . . . .</b>	<b>195</b>
Installing Dell Desktop Suite . . . . .	195
Connecting the Smartphone . . . . .	196
<b>Index. . . . .</b>	<b>197</b>

# Before Using Your Smartphone


## Safety Warnings

Read the following safety warnings before using your smartphone.

- This equipment is intended for use with power supplied from the provided battery charger(s) and/or power supply unit(s). Other usage will invalidate any certification given to this product and may be dangerous.
- Switch off your cell phone when in an aircraft. Use of cell phone in an aircraft may be dangerous to the operation of the aircraft, could disrupt cellular networks, and may be illegal. Failure to observe this warning may lead to suspension or denial of cell phone services to the offender, legal action, or both.
- Do not use the cell phone or cell phone equipment when you are at a refueling point or gas station.
- Observe restrictions on the use of radio equipment in fuel depots, gas stations, chemical plants, or where blasting operations are in progress.
- When driving a vehicle, you **MUST** exercise proper control of the vehicle at all times. Observe the following safety precautions while driving:
  - Do not use a hand-held telephone or microphone.
  - While driving, find a safe place to stop the vehicle before you use the phone.
  - Do not speak into a hands-free microphone if it will distract you from driving.

## Before Using Your Smartphone

- You **MUST NOT** stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.

 **NOTE:** In some areas where electric current is known to fluctuate, it is recommended that you connect the charger to an AVR (AC Voltage Regulator) instead of connecting it directly to a power outlet. Fluctuations in the electric current may damage the charger and/or the cell phone.

## General Statement on RF Energy

Your cell phone has a transmitter and a receiver. When the cell phone is on, it receives and transmits radio frequency (RF) energy. When you communicate using your phone, the system handling your call controls the power level at which your phone transmits RF energy.

## Proper Disposal



The symbol of the crossed out bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Please check local regulations for disposal of electronic products.

## IEEE 1725

- 1 Do not disassemble/open, crush, bend/ deform, or puncture/shred the battery.
- 2 Do not attempt to modify/remanufacture, or insert foreign objects into the battery.
- 3 Do not immerse or expose the battery to water/other liquids, fire, explosion, or other hazards.
- 4 Use the battery only with the device for which it is specified.

- 5 Use the battery only with charging systems that have been qualified with IEEE-Std-1725-2006 standard. Use of unqualified chargers may present risk of fire, explosion, leakage, or other hazards.
- 6 Do not short circuit the battery or allow metallic conductive objects to contact battery terminals.
- 7 Replace the battery only with another battery that has been qualified with the IEEE-Std-1725-2006 standard. Use of unqualified batteries may present risk of fire, explosion, leakage, or other hazards.
- 8 Promptly dispose of used batteries in accordance with local regulations
- 9 Use of the battery by children should be supervised.
- 10 Avoid dropping the phone or battery, especially on hard surfaces. If you suspect any damage to the phone or battery, take it to a service center for inspection.
- 11 Improper use of the battery may result in fire, explosion, or other hazards.
- 12 To charge the battery by connecting to a USB port, the phone should only be connected to charging systems that have the USB-IF logo or have completed the USB-IF compliance program.

## **FCC**

### **FCC Warning**

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

### **Cautions**

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC

## Before Using Your Smartphone

guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Contact your local dealer for a replacement antenna.

### Body-worn operation

This device was tested for typical body-worn operations with the back of the phone kept 1.5 cm away from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC ID: E2KV01B001

SAR: 1.09 W/kg over 1 g


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and



on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna - increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 **CAUTION: Do not use solvents, water, or other liquids to clean your smartphone.**

# Setting Up Your Smartphone

Congratulations on the purchase of your Dell™ Aero smartphone. This section provides information about setting up your smartphone.

## Smartphone Requirements

To use all of the smartphone features, you require:

- A wireless service plan with AT&T
- An Internet connection
- A computer with a USB 2.0 port

## Activating Phone Service

You must activate phone service before using your smartphone. To activate the phone service you must:

- Sign up for a service plan with AT&T
- Register the smartphone with AT&T

If you purchased this smartphone from AT&T, activation may have been done during the purchase.

 
## Setting Up the Phone for the First Time

You must install the battery, SIM card, and charge the battery before using your smartphone.

**To set up your phone for the first time:**

 
**1 Open the cover**

Press down with your right thumb on the Dell logo then lift the cover from the bottom.

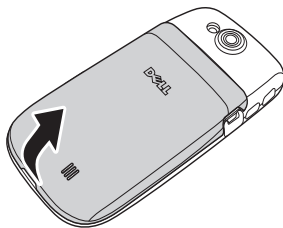


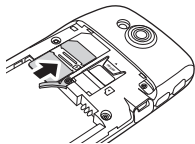 
## 2 Install the SIM card

- a Rotate the SIM card lock outwards.

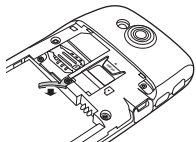


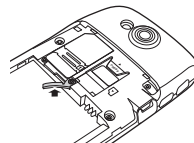 
- b Hold the SIM card with the metal contacts facing down and insert the card into the SIM card holder.

-  **NOTE:** To ensure proper installation, align the cut corners on the SIM card with that in the SIM card slot.




- c Rotate the SIM card lock back into place to lock the SIM card.

-  **NOTE:** The SIM card lock ensures that the SIM card is held in place in case of accidental drop.



## 3 Install the microSD card (if not installed)

 
- a Hold the microSD card with the metal contacts facing down.
- b Slide the microSD card into the microSD card holder.

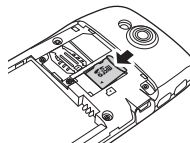

## Setting Up Your Smartphone


### 4 Install the battery

 Align the metal contacts on the battery with the contacts on the battery holder and insert the battery.

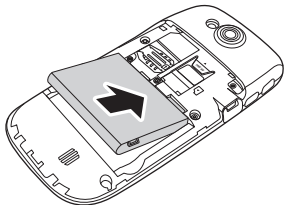

### 5 Close the cover

 Insert the tabs on the cover into the slots on the phone and snap the cover in place.

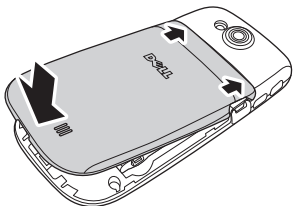


### 6 Charge the battery

△ **CAUTION:** Do not use unapproved battery chargers as they may damage your smartphone and invalidate any warranties.

■ **NOTE:** The battery requires at least one full charging cycle to attain peak performance.

 - a Using the Mini-USB to USB cable, connect your smartphone to the power adapter, and then plug the power adapter into a power outlet.

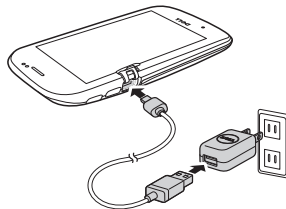

- b Charge your smartphone for about 2 hours. Ensure that your smartphone is fully charged by checking the charge status indicator on the display.


- 7** When charging is complete, press the power key for 2 seconds to exit the charging mode.

Your smartphone is now ready to use.


# Dell™ Aero Smartphone Accessories

 
Your smartphone may include the following accessories:

- **Mini-USB headset** — Allows you to listen to music or perform a phone conversation. Callers hear you through the integrated microphone. To use the headset, connect it to the Mini-USB connector (see “Left View” on page 25).

 **NOTE:** If the headset is connected during a call, there may be a slight delay of 3 to 4 seconds before the headset registers the ongoing call.

- **Mini-USB to USB cable** — Allows you to connect your smartphone to a computer for file transfers and data synchronization.




 **NOTE:** The Mini-USB to USB cable is also used to connect the power adapter for charging the battery.

- **Power adapter** — Use to charge the battery (see “Charge the battery” on page 20).



 
- **Mini-USB to 3.5 mm headset adapter** — Allows you to connect a 3.5 mm headset to your smartphone. To use the adapter, connect one end of the adapter to the Mini-USB connector (see “Left View” on page 25) and the other end to a 3.5 mm headset.

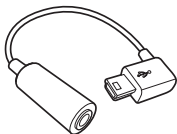

- **NOTE:** If the headset/3.5 mm adapter is connected during a call, there may be a slight delay of 3 to 4 seconds before the headset registers the ongoing call.
- **NOTE:** To avoid dropping a call or other unexpected behavior, always remove the 3.5mm adapter from the phone before removing your 3.5mm headset from the adapter.


# Dell Aero Smartphone Features
 
## Front View

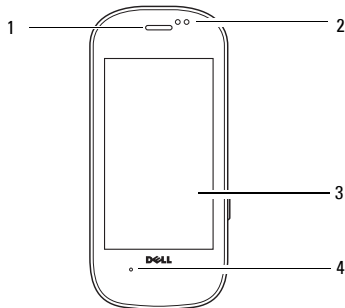

- 1 Speaker** — Use to listen to phone conversations.
- 2 Proximity sensor** — Deactivates the display and touch screen when the phone is brought near the face during a call to save battery power and prevent unintended phone behavior.
- 3 Touch screen** — Displays phone images.
- 4 Microphone** — Use for voice calls.


## Back View

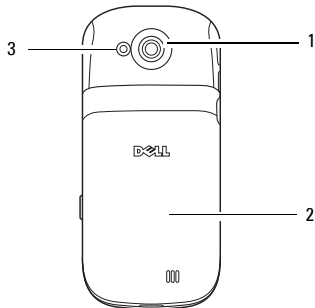 

- 1 Camera** — Use to capture photos and videos.
- 2 Cover** — Covers the battery, SIM card, and microSD card holder.
- 3 Camera flash** — Use to capture photos in dim light.




## Left View

 

- 1 Power/Lock key** — Press (when the display is active): locks or unlocks the display.  
Press (when the display is in sleep mode): wakes up the display.  
Press and hold: Power On/Power Off /Airplane mode.
- 2 Home/Back key** — Press: navigate back one screen at a time.  
Press and hold: return to the Home screen.
- 3 Mini-USB Connector** — Use to charge the phone, connect to a computer or a headset.

## Right view

 

- 1 Volume key** — Press up to increase volume.  
Press down to decrease volume.  
In Camera mode, press to zoom in or out.
- 2 Options key** — Press to open the Options menu.  
Press and hold for 3 to 4 seconds to activate the **Voice Control** function..
- 3 Camera key** — Press and hold for 3 to 4 seconds to launch the camera application.  
In camera mode, half press to focus on the image, full press to capture the image.

## Headset

Your smartphone accepts many commands while using your headset.

- **Answer a call** — Press the **Send/End** key to answer a call.
  - **Reject a call** — Press and hold the **Send/End** key to reject the call.
  - **Mute/Unmute a call** — During a call, press the **Send/End** key to mute or unmute the call.
  - **Answer another call** — Press the **Send/End** key to answer another incoming call and put the current call on hold.
  - **End the second call** — Press and Hold the **Send/End** key to end the call and go the original call.
    - **NOTE:** Two short beeps sound to confirm that you ended the second call.
  - **Activate Voice Control** — While the phone is idle, press and hold the **Send/End** key to activate the Voice Control feature.
- **Start or stop music playback** — While listening to music, press the **Send/End** key to start or stop the music.

# Basic Smartphone Functions

## Using the Touch Screen

This section provides information about using the touch screen features.



- **Selection** — To select an item or open an application, touch the item or application with your fingertip.

To go back to the previous screen, tap the **Home/Back** button or press the **Home/Back** key.

To go back to the Home screen, press and hold the **Home/Back** key or drag the **Home/Back** button to the right.

To perform additional actions in an application, tap the **Options** menu button. You may have to scroll up or down the menu to see all the available actions.



- 1  Home/Back button
- 2  Options menu button
- 3 Title bar

- **Options menu** — The options menu appears when you tap the Options menu button or press the Options key. The options menu displays the additional actions available in an application.
- **Pop-up menu** — The pop-up menu appears when you tap and release the item on the screen. It provides the options available for the current selection. You may have to scroll the pop-up menu to see all the available options.
- **Title Bar** — In certain applications, the Title bar is highlighted as a button to allow you to quickly complete a function within the application, such as Add city or Call. The Title bar changes depending on the application you are in.
- **Search Bar** — In applications with a Search bar, tap the search bar to bring up the QWERTY keyboard.
- **Navigate Between Fields** — Use either the up / down arrows or tap the field you wish to utilize.

- **Touch screen gestures** — The touch screen converts your phone into an interactive display.

 
**Press and hold:** Provides additional functionality if available. For example, press and hold a blank area on the display to change wallpaper or add shortcuts, or press and hold an Email account to edit the account.




**Zoom in:** To zoom in the current view, move two fingers away from each other at the section of the screen where you want to zoom in.




**Zoom out:** To zoom out in the current view, move two fingers closer together on the screen where you want to zoom out.

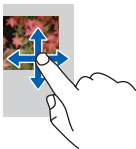

 **Drag items:** To move an item on the screen, place your finger and drag the item to the desired position.

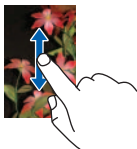

 **Scroll up/down:** To scroll up or down in a list or page on the screen, slide your finger up/down on the screen.

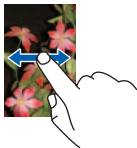


**Scroll right/left:** To scroll left or right in a menu or back to the previous menu, slide your finger right/left on the screen.

## Connection Manager

 Use the Connection Manager to change ringtones and sounds, view notifications, and enable/disable Mobile Network, Wi-Fi, and Bluetooth®.


- 1 Tap and slide the status bar downwards to open the Connection Manager.

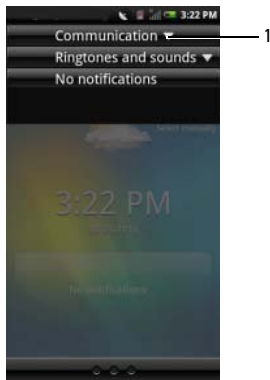

- 1 Expand icon

2 Tap the Expand icon to view the options under Communication and Ringtones and Sounds.

 
- **Communication** — Tap **Mobile Network** to turn on/off the cellular network service. Tap **Wi-Fi** to turn on/off Wi-Fi. Tap **Bluetooth** to turn on/off Bluetooth.
- **Ringtones and sounds** — Tap an icon to change the ringtone profile.

 **NOTE:** To change the Ringtone song, either tap the right arrow or go to **Settings > Ringtones and sounds**, and then select a new song under the desired ringtone profile.

- **Notifications** — Displays notification messages, such as missed calls, Emails, messages, and others.

3 Tap the right arrow for additional options.

4 To view a notification, tap the alert.

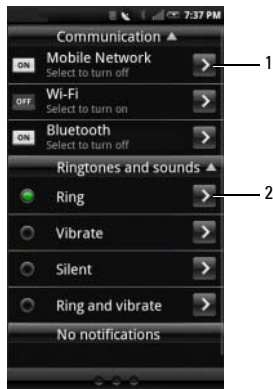

1 Right arrow — Tap to view and edit the associated settings.

2 Tap to edit the corresponding ringtone profile settings. See “Ringtones and Sounds Settings” on page 63.

5 Press the **Home/Back** key to close the Connection Manager.

## Basic Smartphone Functions











If you are in a call or listening to music, pull down the Connection Manager to get back to the active phone call or song.

### Status Bar






















The status bar is located on the top of your phone screen. Icons appear on the status bar to notify you of a new message, upcoming calendar event, alarm or other information important to you.

The following are the status icons that may appear on your smartphone:

Icon	Information
	New Email message
	New SMS or MMS
	New instant message
	New voicemail
	Alarm is set
	GPS is enabled
	GPS is connected
	Sync
	Sync error
	Outgoing call



Icon	Information
	Missed call
	Call forwarding is active
	Speakerphone is on
	Phone is on mute
	Silent mode
	Vibrate mode
	USB is connected
	Bluetooth is connected
	Bluetooth is enabled
	Battery is fully charged
	Battery charge level is 20%

Icon	Information
	Battery is charging
	Network signal strength is full
	Network signal strength is half
	No network signal
	microSD card is installed
	Flight mode
	3G data connection is active
	Wi-Fi connection in range


### Main Panels

Your smartphone has four screen panels.

 
Home Screen Panel




- 1 Favorites bar — Appears on all screen panels.
- 2 Current screen panel indicator
- 3 Weather widget (see “Using the Weather Widget” on page 35).

 **NOTE:** Additional panels may be present on your smartphone.

- Slide your finger to the left to view the next screen panel.
- Slide your finger to the right to view the previous screen panel.
- Tap the screen panel indicator to open the screen shown below, then tap a screen panel to view.

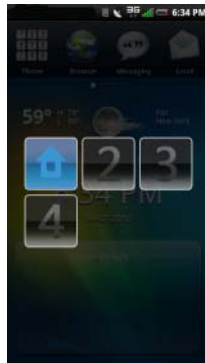

-  **NOTE:** The configuration and applications available on your smartphone may vary.

### Going Back to Home Screen

Your smartphone provides several ways to go back to the home screen:

- If viewing a screen panel, tap the screen panel indicator, and then tap the Home icon (as shown on the previous page).
- Press and hold the **Home/Back** key for 3 seconds.


- Slide the **Home/Back** button to the far right.



1 Home/Back button

### Using the Weather Widget

 
The Weather widget automatically displays the weather based on your location.

-  **NOTE:** Location services must be enabled to use this feature. See “Location Settings” on page 62.

## Basic Smartphone Functions

To manually set the location, do the following:

- 1 Tap the current city to open the Weather settings screen.
- 2 Enter the name of the new city on the Search bar.

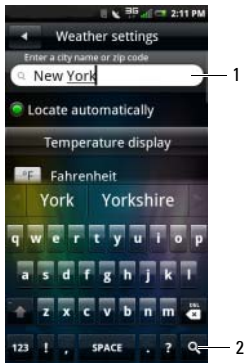

- 1 Search bar
- 2 Search icon

- 3 On the QWERTY keyboard, tap the **Search** icon.
- 4 Tap to select the city on the pop-up menu.
- 5 Tap **Save**.



- 1 Tap to toggle Fahrenheit or Celsius display.
- 2 Tap to select interval of weather updates.

## Customizing the Screen Panels

### Changing the Wallpaper

- 1 From any of the screen panels, press the **Options** key to display MyPanel pop-up menu.
- 2 Tap **Wallpaper**.
- 3 Tap either of the following:
  - **Pictures** — To select the wallpaper from pictures stored in the microSD card.
  - **Wallpaper gallery** — To select the wallpaper from the wallpaper gallery.
  - **Wallpaper restore** — To restore the original wallpaper setting.

### Adding More Screen Panels

- 1 From any of the screen panels, tap the **Options** menu button to display MyPanel pop-up menu.
- 2 Tap **Screen panels**.


- 3 Tap the desired number of screen panels.



























**NOTE:** Maximum number of screens available is 10.













# Phone Display Panels

The Phone Display panels provide access to all the applications available on your smartphone. The following are the applications available on your smartphone:




 **NOTE:** The applications available on your smartphone may vary based on the model and configuration.

Application	Description
 Phone	Allows you to make calls using either the recent caller list, contacts list, or manually using the numeric keypad.
 Browser	Allows you to browse the Internet.
 Messaging	Allows you to send and receive MMS and SMS text messages.
 Email	Allows you to send and receive e-mail messages through the Internet.
 Contacts	Allows you to view, search, add, change, or delete contacts.
 Market	Allows you to download games and applications from the Android Market.
 YouTube	Allows you to watch and upload videos to YouTube from your smartphone.
 Calendar	Allows you to set alerts to remind you of events, appointments, and deadlines.
 AT&T Music	Allows you identify songs from many sources, share tagged music with friends and purchase songs from your smartphone.
 AT&T Video	Allows you to watch Mobile Video and MobiTV on your smartphone.


<b>Application</b>	<b>Description</b>
 AT&T Navigator	Provides voice and on-screen driving directions on your smartphone.
 AT&T Maps	Allows you to search for local businesses, point of interest, and addresses.
 Camera	Allows you to capture pictures and videos.
 Pictures	Allows you to view slideshow of pictures stored on the microSD card.
 Google Maps	Allows you to view your location, keep track of your friends, find places, view traffic situations and view directions to your destination.
 Music	Provides a rich music experience with playlist management.
 Facebook	Allows you to access Facebook on your smartphone.
 Twitter	Allows you to access Twitter on your smartphone.
 Google Talk	Allows you to connect and chat with friends.
 AT&T Games	Allows you to play preset games on your smartphone.
 Settings	Allows you to set up connections, networks, basic functions, and applications.
 Alarm	Allows you to set up, add, or delete alarms.
 World Clock	Allows you to view the time in cities around the world by enabling you to add clocks of your favorite cities.
 Help	Allows you to view the online help.

<b>Application</b>	<b>Description</b>
 Voice Control	Allows you to access VSuite for voice commands.
 Video Editor	Allows you to edit video clips.
 File Mgr	Allows you to use and manage the files on the microSD card.
 Backup	Allows you to backup the data on your phone so you can restore the original data if data is lost.
 Calculator	Allows you to perform simple calculations.
 Notes	Allows you to record notes.
 Recorder	Allows you to record voice and store it in the microSD card.
 Tasks	Time management program that allows you to add time, date, priority, and status to your tasks.
 Mobile Banking	Allows you to manage your bank account, transfer funds, pay bills, and perform other banking transactions on your smartphone.
 Quickoffice	Allows you to use Quickoffice to view Word documents, Excel spreadsheets, and PowerPoint presentations on your smartphone.
 YPmobile	Allows you to find local businesses and get maps and driving directions on your smartphone.
 GPS	Allows you to use Where and AllSport GPS.



Application	Description
 AT&T Hot Spots	Allows you to search for hot spot venues.
 DM Service	Allows you to check and install software updates for your smartphone.
 Videos	Allows you to watch videos.

### Moving Items on the Phone Display Panel

- 1 Tap and hold the item until the **Delete** icon appears.
- 2 Tap and drag the item to its new location.  
 **NOTE:** If you want to cancel moving the item, press the **Back** key.

### Adding Items on the Phone Display Panel

- 1 Press the **Options** key to display the MyPanel pop-up.
- 2 Tap **Add**.



- 3 Tap the type of item to add: **Applications**, **Shortcuts**, **Native tools**, or **Remote widgets**.
- 4 Tap an option to add the item.

### Removing Items on the Phone Display Panel

- 1 Tap and hold the item until the **Delete** icon appears.



- 1 Delete icon
- 2 Tap the **Delete** icon to delete the item.

## Sleep Mode

 
Your smartphone may automatically enter sleep mode after a period of inactivity. You can set the period of inactivity after which the smartphone enters into sleep mode using the phone settings menu. When in sleep mode the display turns off, and your smartphone consumes less battery power.

### Activating Sleep Mode

Press the **Power/Lock** key once to activate sleep mode.

### Waking Up the Phone

- 1 Press the **Power/Lock** or the **Home/Back** key.
- 2 Tap and slide the lock panel to unlock.

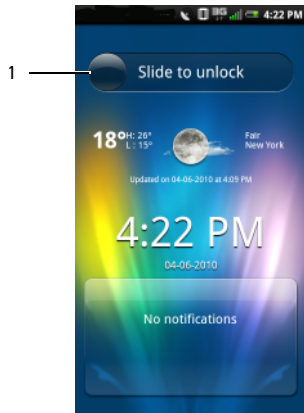

1 Lock panel

## Phone Lock

When not on a call, you can lock your control buttons and screen for security.

### Locking the Phone

- 1 Tap the **Settings** icon, and then tap **Security > Phone Lock Settings > Phone lock**.
- 2 Enter a 4-8 digit phone lock password.

The default password for phone lock is "1234". When setting the phone lock for the first time, enter "1234". To set a new password, tap **Security > Phone Lock Settings > Change Password** (see "Phone Lock Setting" on page 92).



- 3 Tap **OK** to save and exit to the previous screen.
- 4 Tap **Phone lock timeout**.
- 5 Tap an option to automatically lock the phone once the time interval has passed.

## Unlocking the Phone

- 1 Tap the text field, and then enter a 4-8 digit phone lock password.
- 2 Tap **Unlock** to unlock the phone.



## Entering Text

When you start a program or select a field that requires text or numbers, the input panel appears automatically. You can start entering text using the default input method. The phone's predictive text feature may automatically suggest words or commonly used phrases as you enter text.

## Activating the Keyboard

In applications that have a text field or a Search bar, tap the text field or the Search field to bring up the keyboard.



1 Text field — Tap to activate the keyboard.

2 Capitalize icon


3 Numbers or symbols icon

4 Delete icon

5 Enter icon

 
## Using the Keyboard

- To toggle between upper and lower case letter entry, tap the **Capitalize** icon.
- To enter all text in upper case letters, tap and hold the **Capitalize** icon.
- To enter numbers or symbols, tap the **Numbers or Symbols** icon.
- To swap keyboard input methods or edit keyboard settings, tap and hold the **Numbers or Symbols** icon.
- To delete a character, tap the **Delete** icon.
- To go to the next field, tap the **Enter** icon.

 **NOTE:** The **Done** icon appears in place of the **Enter** icon if no succeeding text field is available. Tap the **Done** icon to close the keyboard.

## Closing the Keyboard

To close the keyboard, quickly swipe your finger from the top to the bottom of the keyboard.

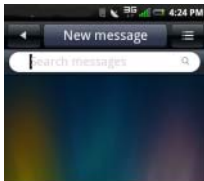

 **NOTE:** Some keypads have a **Done** button. Press the **Done** button to close the keypad.

## Selecting an Input Method

Your phone supports input in multiple languages, and provides the following input methods:

- QWERTY Keyboard
- Phone Keypad
- HandWriting

- 1 Tap a text field, such as in a note or new contact, to open the input panel.
- 2 Tap and hold the **Numbers or Symbols** icon to open the **Input Method Settings** screen.



- 1 Numbers or Symbols icon

## Basic Smartphone Functions

- 3 Tap the input method you prefer.



- 1 Numbers or Symbols icon

## Selecting Input Languages

 
- 1 Tap a text field, such as in a note or new contact, to activate the keypad.
- 2 Tap and hold the **Numbers or Symbols** icon to open the **Input Method Settings** screen.

- 3 Tap **Keyboard Settings**.





- 4 Tap **Optional Input Language** to select the input language.

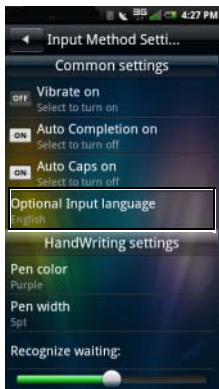

- 5 Tap the desired language.
- 6 Tap the **Home/Back** button to close the **Input Method Setting** screen.

## Entering Text With QWERTY

To type text using the standard keyboard, you should use the QWERTY input mode. As you type, each letter appears above your thumb or finger. The letter is not entered until you release your finger from the key.

### Switching to QWERTY Keyboard Mode

- 1 Tap a text field, such as in a note or new contact, to open the input panel.
- 2 Tap and hold the **ABC** or **123** icon to select **QWERTY Keyboard** as your input method.

## Basic Smartphone Functions

- 3 Tap the keys on the keyboard to enter text. As you tap the keys, word suggestions appear in the suggestion area. Tap a word to select it.



- 1 Suggestion area
- 2 Numbers or Symbols icon — Tap to change the input to numbers or symbols.

**NOTE:** If you begin a word and are interrupted without finishing the word, when you return to finish the word, predictive text picks up with the new letters you begin typing rather than the original word. For example, you begin to type the word “Olympics” but only get “Oly” typed. When you return to add “mpics”, predictive text begins to predict words beginning with “m”.

### Entering Special Characters

Tapping and holding some letters, numbers or symbols on the keyboard allows you to insert special characters.

For example, tap and hold “n” to display other options. To select, slide your finger to the desired special character.



Or, tap and hold “\$” to display other monetary symbols.



## Entering Numbers or Symbols

Tap the **Numbers or Symbols** icon to change the input to numbers or symbols.



 
- 1 Tap to view more symbols.
- 2 ABC icon — Tap to change to alphabet keyboard.

### Using HandWriting

Handwriting allows writing across the entire screen.


- 1 Tap a text field, such as in a note or new contact, to open the input panel.
- 2 Tap and hold the **Switch Input Method** icon and select **HandWriting** as your input method.

- 3 Use a stylus or your finger to write anywhere on the screen.



The handwriting will be converted to text shortly after you lift the stylus or your finger from the screen.

 - 4 The suggestion area displays predicted words. Tap a word to select it.

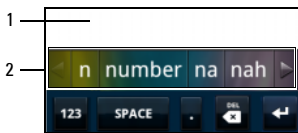

- 1 Screen
- 2 Suggestion area

## Using the Phone Keypad

In the Phone Keypad mode, you can text by typing out letters similar to texting on a numeric keypad.

- 1 Tap a text field, such as in a note or new contact, to open the input panel.
- 2 Tap and hold the **Switch Input Method** icon and select **Phone Keypad** as your input method.
- 3 Use a stylus or your finger to touch a key on the keypad. Characters, numbers, or symbols appear on the box.  
Continue touching the key to toggle different characters, numbers, or symbols.
- 4 Tap the desired character, number or symbol to insert it immediately.
- 5 If **Auto completion** is on (see page “Default Input Method Setting” on page 63), as you tap the keys, the smartphone matches the characters you type with the words in the

dictionary and displays predicted texts in the suggestion area. Tap a word to complete the entry.

- 6 Tap the **Home/Back** button to exit the input panel.



1 Suggestion area

## Editing Text

### Inserting the Cursor

To insert the cursor and make corrections, do one of the following:

 
- Tap to insert the cursor where you want to make a correction.
- Tap and hold the word to bring up the pop-up bubble, then move the cursor left and right to show you where you are within the text and allow you to insert the cursor easily.



## Selecting, Copying, or Cutting Text

You can select text by either of the following:

- Tap and hold in one place to display the Edit text pop-up menu. Then select either **Select all**, **Select text** (to select the current word), **Copy all**, or **Cut all**.

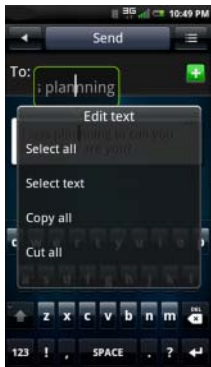

- Lightly swipe your finger over the word to highlight the text. Move the pins to the left or

right to accurately highlight the text you want to copy or cut. Then tap and hold the cursor to display the Edit text pop-up menu. Select either **Copy** or **Cut**.

## Pasting Text

Text that has been cut or copied can be pasted elsewhere.

- 1 Open the application where you want to paste the text.
- 2 In any text field, tap and hold the text field to display the Edit text pop-up menu.
- 3 Tap **Paste**.

### Connecting to the Internet

Your phone connects to the Internet using a cellular data network.

### Selecting Cellular Data Networks

You can connect to the Internet through EDGE, GPRS, 3G, HSDPA, or Wi-Fi networks. Check the carrier's network coverage in your area for availability. Ensure that you get the appropriate service plan for a desired network.

### Basic Smartphone Settings

This section provides information about the basic settings for your smartphone.

Tap the **Settings** icon to open the **Settings** screen.



### Display Settings

Display settings allow you to adjust the screen brightness, screen timeout, and screen lock settings.



## Enabling Auto Brightness

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Display settings** to open the Display settings screen.



- 3 Enable **Auto brightness** to activate auto brightness.

## Setting Brightness Manually

- 1 Tap the **Settings** icon to open the Settings screen.

- 2 In the Phone basics section, tap **Display settings** to open the Display settings screen.
- 3 Ensure that **Auto brightness** is disabled.
- 4 Tap **Brightness** from the Display settings screen to open the Brightness panel.
- 5 Use your finger or stylus to move the slider left or right on the screen to adjust the brightness.



- 1 Slider
- 6 Tap **OK** to save and exit the Brightness panel.

### Setting Compatibility Mode

Certain Google Market Place applications may not display correctly. Set the compatibility mode on your smartphone to improve application viewing.

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Display settings** to open the Display settings screen.
- 3 Tap to select the Compatibility mode settings box to change settings.
- 4 Tap **Compatibility**.
- 5 Tap either **Center** or **Scale**.

### Setting Font Size

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Display settings** to open the Display settings screen.
- 3 Tap **Font settings** to open the Font settings panel.
- 4 Tap an option to set the font size.

### Setting Screen Timeout

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Display settings** to open the Display settings screen.
- 3 Tap **Screen timeout** to open the Screen timeout panel.



- 4 Tap any of the available options to select the idle time after which the screen turns off.
- 5 To exit the screen, tap **Cancel**.

## Date & Time Settings

Date and time settings allow you to set the date, time, time zone, and formats.

### Setting the Date and Time Automatically By the Network

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Date & time settings** to open the Date & time settings screen.
- 3 Tap **Automatic** to set the date and time using the network provided values.

### Setting the Date and Time Automatically By Time Zone

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Date & time settings** to open the Date & time settings screen.
- 3 Tap the **Automatic** box to disable setting the date and time by network.

- 4 Tap **Set time zone** to open the Set time zone screen.
- 5 Slide your finger up or down on the screen to view the entire list.
- 6 Tap the time zone you desire to select.



The date and time are automatically set based on the selected time zone.

### Setting the Date Manually

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Date & time settings** to open the Date & time settings screen.
- 3 Tap the **Automatic** box to disable setting the date and time by network.
- 4 Tap **Set date** to open the Change date panel.



- 5 Slide your finger up or down on each field to change the **Month, Day, and Year**.
- 6 Tap **Save** to save your changes and exit the Change date panel.

### Setting the Time Manually

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Date & time settings** to open the Date & time settings screen.
- 3 Tap the **Automatic** box to disable setting the date and time by network.
- 4 Tap **Set time** to open the Change time panel.
- 5 Slide your finger up or down on each field to change the time.



- 6 Tap **Save** to save your changes and exit the Change time panel.

## Setting the Time to 24-hour Time Format

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Date & time settings** to open the Date & time settings screen.
- 3 In the Set format section, tap **Use 24-hour format** to display the time in 24-hour format.



## Setting Date Format

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the **Phone Basics** section, tap **Date & time settings** to open the Date & time settings screen.
- 3 Tap **Select date format** to open the Select date format panel.
- 4 Tap the date format you prefer from the list.



- 5 Tap **OK** to save and exit the Select Date Format panel.

### Location Settings

Location settings allow you to select the source the smartphone will use to determine your location.

#### Enabling Location Settings

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **My Location** to open the My Location screen.
- 3 In the My location sources, tap **Enable GPS satellites**.



### Language Settings

The language settings allow you to set the display language and the input method.

#### Selecting the Display Language

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Language and input > Select Language** to open the Language screen.
- 3 Tap to select the language you prefer from the list. The screen exits automatically after your selection.



## Default Input Method Setting

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 In the Phone basics section, tap **Language and input** to open the Language screen.
- 3 Tap **Default input method** to open the Input methods settings screen.
- 4 Select any of the following settings:
  - **Vibrate on** — Tap to turn on vibrate when a key is pressed.
  - **Auto Completion on** — Tap to enable auto complete.
  - **AutoCaps on** — Tap to enable auto caps function.
  - **Optional Input language** — Tap to select the first input language.
  - **Pen color** — Tap to select the pen color for handwriting input method.
  - **Pen width** — Tap to select the pen width for handwriting input method.

- **Recognize waiting** — Slide the bar to set the waiting time in seconds to recognize handwriting.
- **ABC Input mode interval** — Tap to select the interval time (milliseconds) between tapping keys.

## Ringtones and Sounds Settings

Ringtones and Sounds settings allow you to change or create a ringtone profile, select a profile to use, and edit an existing profile.

### Selecting a Profile

 
- 1 Tap the **Settings** icon to open the Settings screen.
- 2 Tap **Ringtones and sounds** to open the **Ringtones and sounds** settings. The check mark appears beside the selected ringtone

## Basic Smartphone Functions

profile. The available profiles include Ring, Vibrate, Silent, Ring and vibrate, and Airplane.



**NOTE:** You can also select the ringtone profile using the **Connection Manager**.

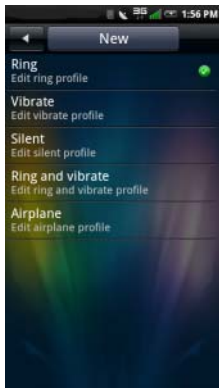

- 3 Tap the ringtone profile you want to select. The **Ringtone** profile screen is displayed.

- 4 Tap the **Options** menu button, and then tap **Select** to activate the ringtone profile.



- 1 Options menu button
- 2 Options menu



## Changing Ringtones and Alerts

- 1 Tap the **Settings** icon to open the Settings screen.
- 2 Tap **Ringtones and sounds** to open the **Ringtones and sounds** settings.
- 3 Edit the individual settings by tapping the options on the screen.



- **Alert Style** — Tap **Ring**, **Vibrate**, or **Ring and Vibrate** on the panel to change the alert style and tap **OK** to exit.



- **NOTE:** You can only change the alert style in Ring and vibrate mode or a custom ringtone profile that you created.
- **Audible selection** — Select this option to play sound when tapping the screen.

## Basic Smartphone Functions

- **Volume** — Slide your finger right/left on the screen to increase/decrease the volume and tap **OK** to exit.



- **Ringtone** — Tap **Ringtone** or a specific alert from the Ringtone Profile Settings screen to open the Ringtones screen. Tap to select the ringtone you prefer, and then tap **OK** to exit.



- **Message alert** — Tap this option to set the message alert tone.
- **Email alert** — Tap this option to set the Email alert tone.

- **Calendar alert**— Tap this option to set the calendar alert tone.
  - **Alarm alert**— Tap this option to set the alarm alert tone.
  - **Reminder alert**— Tap this option to set the reminder alert tone.
- 4 Tap **Save** to save settings and close the screen.

## Wizard Settings

The wizard provides visual tutorial on setting up and using your smartphone.

- 1 Tap the **Settings** icon.
- 2 In the Applications section, tap **Wizard**.
- 3 Follow the instructions on the screen.

## Online Help

Tap the **Help** icon to view the online help manual for additional information.



**NOTE:** You may also access online help and additional information on Dell Aero at [support.Dell.com/Aero](http://support.Dell.com/Aero).

# Using the Smartphone

You can make calls using your smartphone by either tapping a number in your contacts list or recent caller list. You can also dial a number manually using the **Phone** icon that appears on the screen.

## Making a Call



You can make calls using either the on-screen dialer, Contacts, Call log, Favorites, or Voice Control.

## Dialing a Number Using the On-Screen Dialer

- 1 Tap the **Phone** icon to open the Phone screen.





- 1  Home/Back button
- 2 Call tab
- 3 Options menu button
- 4  Backspace icon
- 5 Matching numbers from Contacts
- 6 On-screen dial pad

- 2 Tap the on-screen dial pad to enter a number. Use the **Backspace** icon to make corrections.

As you dial the numbers, the phone will auto-match the numbers already stored in your Contacts list. Both the number you are dialing and the potential matches are displayed. If you see a match, you can tap it to make the call.


If no matching result is found, finish dialing the number and then tap the **Call** tab to dial the number you entered.

## Using the Smartphone

You can switch out of the **In call** screen by tapping the **Home/Back** button to continue using other features on the phone.

 
The **Ongoing call** icon will be displayed in the status bar during your phone call.




1  Ongoing call icon

## Ending a Call


Tap the **End call** tab to end the phone call.

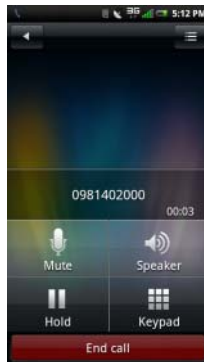

 **NOTE:** Making a new phone call before ending the current call places the current call on hold.


## Redialing the Last Called Number

 
- 1 Tap the **Phone** icon to open the Phone screen.
- 2 Tap **Redial** to display the last called number.
- 3 Tap **Call**.

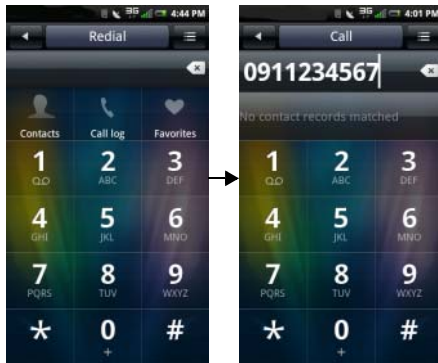

## Dialing a Number Using the Call Log

 
- 1 Tap the **Phone** icon to open the Phone screen.
- 2 Tap the **Call log** icon to open the Call log screen.

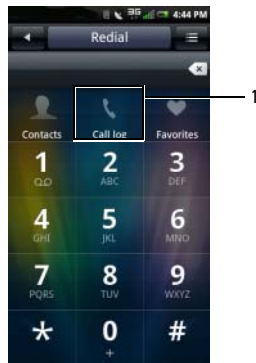

- 1  Call log icon
- 3 Tap a contact from the log.
- 4 Tap **Call**.


### Dialing a Number Using Your Contacts

 - 1 Tap the **Phone** icon to open the Phone screen.
- 2 Tap the **Contacts** icon to open the Contacts list.

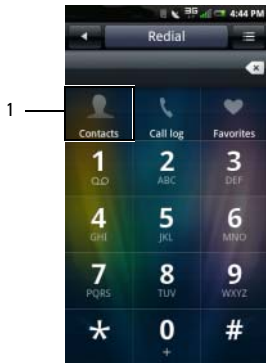

- 1  Contacts icon

 - 3 Scroll through the list and tap the **Call** icon to the right of the contact to place a call.

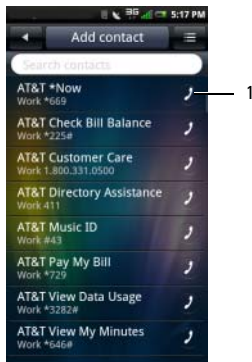

- 1 Call icon





**NOTE:** When scrolling through the Contacts list, be sure to scroll through the middle of the list and not the far right to avoid accidentally calling someone that you do not intend to call.



## Dialing a Number Using Your Favorites

 
- 1 Tap the **Phone** icon to open the Phone screen.
- 2 Tap the **Favorites** icon to open the Favorites screen.

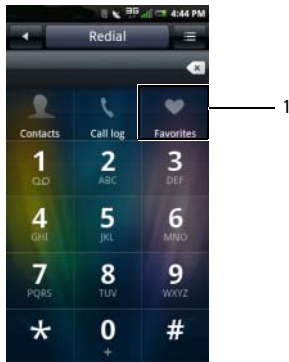

- 1  Favorites icon
- 3 Tap a contact from the list.
- 4 Tap **Call**.

## Answering or Rejecting an Incoming Call

 
To answer a call, tap and drag the slider to **Answer**.  
To reject a call, drag the slider to **Decline**.

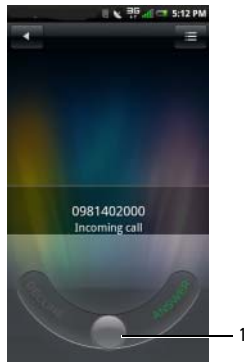


- 1 Slider


## Accessing the Call Log

 - 1 Tap the **Phone** icon to open the Phone screen.
- 2 Tap the **Call log** icon to open the call log screen.

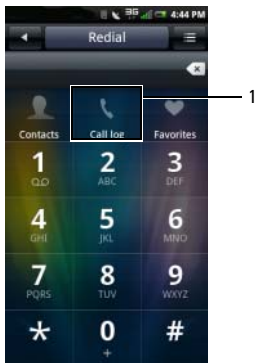

- 1  Call log icon

 The call log lists all incoming, outgoing, and missed calls.

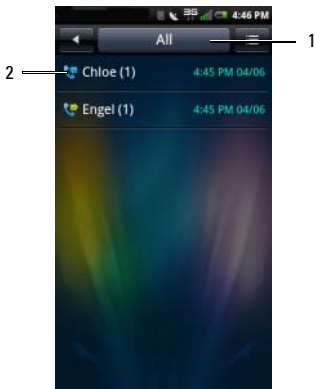

- 1 Call log tab  
All  
Missed  
Received  
Dialed  
Failed


- 2 Received/Dialed/Missed calls icon

To sort the call list, tap the **Call log** tab, then select sorting view.

To delete a contact from the Call log list, change the category, or view call time, tap the **Options** menu button.

### Using the Call Log

 - 1 Tap and hold a contact to open the pop-up menu.

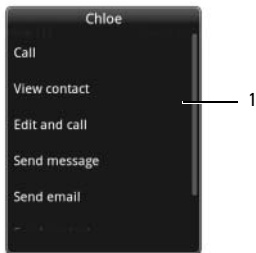

- 1 Pop-up menu
- 2 Perform any of the options below as required:

- Tap **Call** to call the contact.
- Tap **View contact** to view the contact details.
- Tap **Edit and call** to edit contact details then call the contact.
- Tap **Send message** to send a message to the contact.
- Tap **Send contact** to send the selected contact's information to another contact.
- Tap **Remove from call log** to remove the contact from the call log list.

## Contacts


### Adding New Contacts

- 1 Tap the **Contacts** icon.
- 2 Tap **Add Contact**.



- 1 Add Contact tab
- 2 Please input name field — To search a contact, enter the contact's name here.
- 3 Call icon — Tap to call Contact

- 3 Enter the contact information. Continue adding data to the remaining fields by tapping on the next field you would like to edit.

 **NOTE:** To close the keypad, swipe your finger from the top to the bottom of the keypad. See “Closing the Keyboard” on page 47.

Tap the **Add** icon to add an icon for the contact.

Tap the **Add Field** tab on the bottom of the screen to add more information.

Tap the **Delete** icon to delete a field.




- 1 Save tab
- 2 Delete icon
- 3 Add Field tab
- 4 Tap the **Save** tab to save your contact information and exit. Tap the **Home/Back** button to exit without saving.

## Adding a Contact to Favorites

- 1 In the Contacts screen, tap a contact to open the **Edit Contact** screen.
- 2 Press the **Options** key, and then tap **Add to Favorites**.

## Synchronizing with Facebook Contacts

You can manually sync your Facebook contacts to your smartphone Contacts.

 **NOTE:** You must enable the **Synchronize address book** setting in Facebook before you can sync to your Contacts (see “Account Settings” on page 111).

- 1 Tap the **Contacts** icon to open the Contacts screen.
- 2 Press the **Options** key, and then tap **Sync with Facebook**.

## Call Settings

The following options are available from the Call settings screen:

- Fixed Dial Number list
- Call barring
- Call forwarding
- Other basic settings
- My SIM number
- Dialing prefix number
- Speed dial
- Voice mail
- In-call timer
- TTY settings

### Editing Call Settings

- 1 Open the **Settings > Call settings** screen.

- 2 Tap any of the available options to enter the sub menu.



- 1 Settings screen

- 2 Call settings screen

- 3 To exit the screen tap the **Home/Back** button.

See the following sections for more information on each Call setting option.

## Fixed Dial Number (FDN) List

The FDN list allows you to restrict outgoing calls from your phone to a preset list of numbers. To enable this feature, you must know the SIM PIN2 code for your phone. You can obtain this number from your cellular operator, provided this feature is supported.

### Managing the FDN list

- 1 In the **Call settings** screen, tap **Fixed dialing number**.
- 2 Type in your PIN2 number to enable this the FDN feature.

- 3 Tap **Manage FDN list**. If you have numbers on your SIM card you will be able to select them. If not, you will be able to add contacts or numbers to your list.



- 4 To add new numbers, tap **Add**. Type the name and number of the contact and then tap **Save**. Your FDN list now includes the newly added contact.

 
## Using the Smartphone

- 5 Continue adding numbers until you have all the contacts you wish to include on the FDN list.  
You may also edit or delete contacts at any time.
- 6 To disable FDN functionality, tap the **FDN Enabled** option again.

## Call Barring

The call barring screen allows you to restrict outgoing or incoming calls from a specific number or contact.

To enable or disable the call barring functions, tap the option on the **Call barring** screen that you want like to set up.

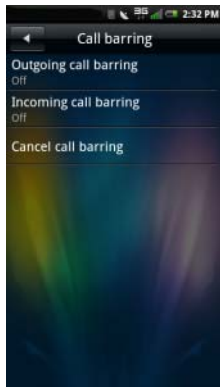

To exit the Call barring screen, tap the **Home/Back** button.



## Call Forwarding

The Call forwarding option allows you to forward your calls directly to voicemail or to other numbers.



The following are the available call forwarding options:

- **Always forward** — Select to enable this feature and specify a forwarding number. When this feature is enabled, the **Forward when busy**, **Forward when unanswered**, and **Forward when unreachable** are disabled.
- **Forward when busy** — Select to enable this feature. When enabled, incoming calls are forwarded to a voicemail when you are on a call.
- **Forward when unanswered** — Select to enable this feature. When enabled, incoming calls are forwarded to a voicemail when unanswered.
- **Forward when unreachable** — Select to enable this feature. When enabled, calls are forwarded to a voicemail if an incoming call cannot connect.

To exit the Call forwarding screen, tap the **Home/Back** button.

## Other Basic Call Settings



The following are the available options:

- **Caller number** — Select to change the caller number settings. Options are:
  - **Network default** — Tap to use the default network setting.
  - **Hide number** — Tap to hide your number to your call recipients. Your call recipients will see your number as an unknown number.
  - **Show number** — Tap to show your number to your call recipients. Your phone number and Caller number picture will appear on your call recipient's phone provided the call recipient's phone supports this feature.

- **Call waiting** — Enable **Call waiting** to display incoming calls when you are on a call. Disable to ignore incoming calls when you are already on a call.
  - ✎ **NOTE:** When call waiting is set to ignore incoming calls, routing of the ignored call is determined by your Call forwarding settings.
- **Auto answer** — Select to answer incoming calls automatically without performing any action.
- **Auto redial** — Select to auto redial a call that failed the first time.

To exit this screen, tap the **Home/Back** button.

## My SIM number

The My SIM number option allows you to view the SIM name and number.

## Dialing Prefix Number

The Dialing Prefix Number option allows you to set up to two prefix numbers when making calls.



- 1 Tap to enable the **Dialing prefix number** box.
- 2 Enter a prefix number. Tap the next text field to enter another prefix number.
- 3 To save settings, tap the Options menu button, then tap **Save**.

### Speed Dial

The speed dialing option allows you to set up your most frequently used numbers for quick dialing.



1 Add icon

### Setting Up Speed Dialing

Tap the **Add** icon to add a name from **Contacts** or tap a number icon to enter the phone number directly.

### Using Speed Dialing

Tap the **Phone** icon, and then tap and hold the Speed dial number. For example, tap and hold **1** to call Speed dial #1.

To exit this screen, tap the **Home/Back** button.

## Vicemail

Your Voicemail number is set by your cellular operator and is stored on your SIM card. Use the Voicemail option to view your voicemail number.

 


- 1 Tap **Settings > Call Settings > Voice mail**.
- 2 When you have completed using the voicemail option, tap **OK** to save and exit the screen.

## Setting the In-Call Timer

The in-call timer allows you to monitor the duration of your calls. You can set the timer to **30, 60, 90, or 120 seconds**. You will hear a tone at the interval set. You can also use this option to enable or disable the in-call timer function.


- 1 Tap **Settings > Call Settings > In-call timer**.
- 2 Tap the appropriate in-call timer option from the list.

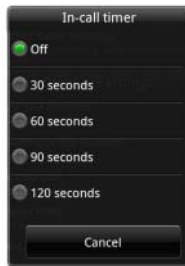

## TTY Settings

Use the TTY settings to set TTY.

 - 1 Tap **Settings** > **Call Settings** > **TTY Settings**.
- 2 Tap the appropriate TTY option from the list.

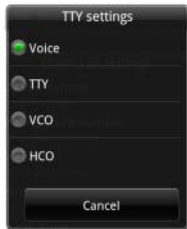


## Managing Bluetooth Connections

Bluetooth<sup>®</sup> is a short-range wireless communication technology. Using Bluetooth technology, devices within a 10 meter range can exchange information without requiring a physical connection.

## Turning On Bluetooth

 - 1 Tap and slide the status bar downwards to open the Connection Manager.
- 2 If **Bluetooth** is not turned on, tap it to enable Bluetooth connections.

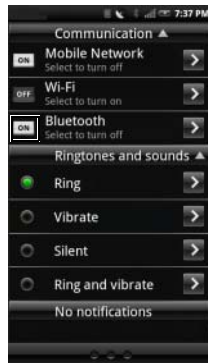

## Changing Bluetooth Settings

- 1 Tap and slide the status bar downwards to open the Connection Manager.
- 2 Tap the **Bluetooth** right arrow to display the Bluetooth settings screen.



- **Discoverable** — Enable **Discoverable** to make your smartphone discoverable to other Bluetooth devices in 120 seconds.

- **Device name** — Tap to change the name of your smartphone. This is the name that appears on other Bluetooth devices.
- **Scan for devices** — Tap to scan for Bluetooth devices.

## Pairing With Bluetooth Devices

- 1 Tap and slide the status bar downwards to open the Connection Manager.

Ensure that Bluetooth is enabled on your smartphone before you begin to pair with another device.

- 2 Tap the **Bluetooth** right arrow to display the Bluetooth settings screen.
- 3 Select a Bluetooth device listed in Bluetooth devices screen to initiate a connection.
- 4 You might be prompted to enter a passkey to authenticate. Enter the same passkey on both devices, or enter the specific passkey provided by the device manufacturer.

## Managing Wi-Fi Connections

Wi-Fi or wireless fidelity is a network that allows Internet connection within 100 meters of a wireless access point.

### Turning On Wi-Fi

- 1 Tap and slide the status bar downwards to open the Connection Manager.

- 2 If **Wi-Fi** disabled, tap it to enable Wi-Fi connections.





## Changing Wi-Fi Settings


- 1 Tap and slide the status bar downwards to open the Connection Manager.
- 2 Tap the **Wi-Fi** right arrow to display the Wi-Fi settings screen to set up and manage wireless access points.
- 3 Tap **Network notification** to display or sound an alert when a network is available.



## Adding a Wi-Fi Network

- 1 Tap and slide the status bar downwards to open the Connection Manager.
- 2 Tap the **Wi-Fi** right arrow to display the Wi-Fi settings screen.
- 3 Tap **Add a Wi-Fi network** to search and add a new network manually.
- 4 Enter the **network SSID**, **Type**, **Security**, and other security settings.



 **NOTE:** The above screen may vary based on the selected Security setting.

- 5 Tap **Save** to add the Wi-Fi network.

## Connecting to a Wi-Fi Network

- 1 Tap and slide the status bar downwards to open the Connection Manager.
- 2 Tap the **Wi-Fi** right arrow to display the Wi-Fi settings screen.
- 3 Tap an available network on the list.
- 4 When prompted, enter the security password.
- 5 Tap **Connect**.

## Mobile Networks

The Mobile Networks settings enable you to set options for roaming and networks.

- 1 Tap and slide the status bar downwards to open the Connection Manager.
- 2 Tap the **Mobile Network** right arrow to display the Mobile Networks settings screen.



## Configuring Mobile Networks

- **Current Network** — Select this setting to view your current network.
- **Operator selection** — Use this setting to select a network operator.
- **Preferred networks** — Select this setting to set network preferences.
- **Search mode** — Select this setting to set the search mode to manual or auto.
- **Network mode** — Select this setting to set the preferred network mode.

## Security Options

### SIM Lock Settings


In the **Settings** screen, tap **Security** > **SIM lock settings** to enable the SIM card lock and change your pin code.



- **Lock SIM** — Select to lock your SIM card.
- **Change PIN** — Select this setting to change your SIM card's PIN code.

### Phone Lock Setting

In the **Settings** menu, tap **Security > Phone lock settings** to open Phone Lock Setting and set the Phone lock and change your password.

 **NOTE:** The phone lock feature may not be available on your smartphone.



- **Phone lock** — Select to set the phone lock.
- **Change password** — Select this setting to change the password for your phone. The default password is “1234”.

### Change PIN2

In the **Settings** menu, tap **Security > Change PIN2** to change the PIN2 code.

### Change Call Barring Password

In the **Settings** menu, tap **Security > Change call barring password** to change the call barring password.

### Change Factory Password

In the **Settings** menu, tap **Security > Change factory password** to change the factory password.

### Restore Factory Password

In the **Settings** menu, tap **Security > Restore factory password** to restore the factory password.

## Resetting the Smartphone

You can reset your smartphone to the factory default settings.

### Master Clear

Select this option to reset all user settings to the factory default settings and delete all data stored on your smartphone, such as calendar events, tasks, and contacts, including contents that you have downloaded, such as applications, wallpapers, and ringtones.

- 1 In the **Settings** menu, tap **Master clear & reset > Master clear**.
- 2 Enter the master clear password. The default password is “1234”.
- 3 Tap **OK** to reset the smartphone.

### Master Reset

Select this option to reset all user settings to the factory default settings. However, all data stored on your smartphone, such as Contacts, are not deleted.

- 1 In the **Settings** menu, tap **Master clear & reset > Master reset**.
- 2 Enter the master reset password. The default password is “1234”.
- 3 Tap **OK** to reset the smartphone.

## Storage Information

### Managing SD Card and Phone Storage

In the **Settings** menu, tap **Storage Information** to view storage information such as **Total space**, **Available space** on your smartphone and SD card.

To safely remove your SD card, tap **Safely remove storage card**.


## Using the Smartphone

To delete applications and clear user data, tap **Manage storage**.



## Using Voice Command

- 1 Open **Voice Control** application by one of the following methods:
  - Tap the **Voice Control** icon.
  - Press and hold the **Options** key.
- 2 When the application prompts you to speak an available command from the menu, such as **Call (number or contact name)** or **Check battery**, say the command in normal conversation tone and speed.
- 3 If the application recognizes the command you said, it may prompt you for a confirmation, select **Yes** or **No**.

 **NOTE:** To view the tutorial, press the **Options** key, and then tap **Tutorial** at the bottom of the screen.

## Configuring Voice Command

- 1 Open **Voice Control** application by one of the following methods:
    - Tap the **Voice Control** icon.
    - Press and hold the **Options** key.
  - 2 Press the **Options** key.
  - 3 Tap **Settings** at the bottom of the screen.
  - 4 Tap any of the following:
    - **Confirmation** — Allows you to control whether the system should ask you to confirm a name or number.
    - **Adaptation** — Allows you to improve voice recognition of primary user. You will be prompted to speak several commands for the system to record which will improve voice recognition of user.
    - **Audio Modes** — Allows you to set the level of audio assistance.
- **Shortcuts** — Allows you to select what shortcuts are activated with the **Go To** command.
  - **Dialing Region** — Allows you to select the region that you are dialing from.
  - **About** — Allows you to view the software version.

# Using Internet Features

## Internet Browser

On the Favorites bar, tap the **Browser** icon to open the Browser screen.



## Viewing Web Pages

- 1 Open the Browser screen and tap the **Web address** tab to open the web address screen.



- 1 Web address tab



- 2 Tap the current web address to bring you to the search screen.
- 3 Select a web address from the list or tap the **Search on Internet** field to enter the web address manually.
- 4 Possible matches appear on a list of links as you enter the web address. Select a match or continue entering the web address.
- 5 Tap the **Go** icon to follow the link to the selected address.



- 1 Search on Internet field
- 2 Go icon

### Navigating Web Pages

To zoom in, pinch the section of the screen where you want to zoom in (see “Touch screen gesture” on page 29).

To zoom out, expand your fingers at the section of the screen where you want to zoom out (see “Touch screen gesture” on page 29).

Slide your finger across the screen to display the **Page Bar**.


Tap the **Previous Page** icon to view the previous web page.

Tap the **Next Page** icon to view the next web page.

Tap the **Browser Overview** icon to add a new window and manage opened web pages.

Tap the **Save Page** icon to bookmark the page.



- 1  Previous Page icon
- 2  Next Page icon
- 3  Browser Overview icon
- 4  Save Page icon
- 5 Page Bar

## Browser Overview

Browser overview allows you to open and manage multiple web pages.

- 1 Tap **New window** to open a new web page.



 
- 1 Opens a new window
  - 2 Opened web page window
  - 3 Close icon
- 2 Tap a window to view the opened web page.
  - 3 Tap the **Close** icon to close opened pages.
  - 4 For more options, tap the Options menu button, and then tap any of the following:
    - **New window** — To open a new window.
    - **Bookmarks** — To view saved bookmarks.
    - **History** — To view the history of visited web pages.

### Bookmarks

You can store your favorite web pages as bookmarks in your phone browser.

#### Viewing Bookmarks

- 1 Open the Browser screen and tap the **Options** menu button.
- 2 Tap **Bookmarks** on the options menu to open the available bookmarks.

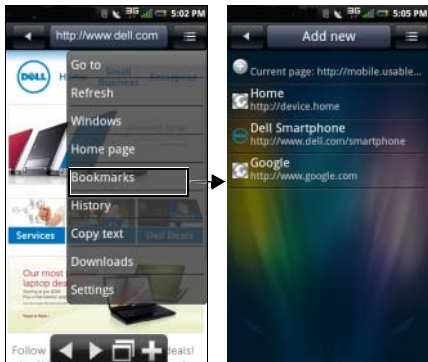

### Adding Bookmarks

- 1 Open the Browser screen and tap the **Options** menu button to open the options menu.
- 2 Tap **Bookmarks** on the options menu to open the Bookmarks screen.
- 3 Tap **Add new** to open the Bookmark link screen.




- 4 Enter a name and web address in the appropriate fields.



 
- 1 Name field  
2 Location field

- 5 Tap **Save** to save and exit the screen.

 **NOTE:** You can also save bookmarks using the **Save page** icon on page “Navigating Web Pages” on page 98.

## Browser Options

Tap the **Options** menu button to access the following browser options:

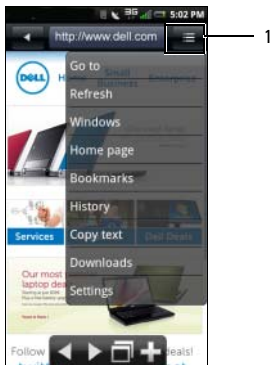

1 **Options** menu button


- **Go to** — Tap this option to enter a web address to a web page that you want to visit.


- **Refresh** — Tap this option to refresh the web page.
- **Windows** — Tap this option to open a new window.
- **Home page** — Tap this option to go to the home page.
- **Bookmarks** — Tap this option to view a saved bookmark.
- **History** — Tap this option to view the web pages you visited recently.
- **Copy text** — Tap this option to use the copy and paste function.
- **Downloads** — Tap this option to view the history of your downloads.
- **Settings** — Tap this option to change browser settings (see “Browser Settings” on page 103).
- **More actions** — Tap this option to set a web page as your home page, view page info, share a page, toggle to full screen view, toggle orientation, and to use the find option on page.

- **Exit** — Tap to close the Browser screen.

## Browser Settings

To change Browser settings, from the Browser screen, tap the **Options** menu button and select **Settings**.

 **NOTE:** To change the **Browser** settings, you must be on the Browser's home page.

 **NOTE:** The Internet service provider options are dependent on your network operator. The options you see may vary depending on the options provided by your network operator.

The following are the available **Browser settings**:

- **Set text size** — Select this setting to set the size of the text displayed on web pages.
- **Set text encoding** — Select this setting to set the character encoding type.
- **Block pop-up windows** — Enable this setting to prevent pop-up windows from appearing.
- **Load images** — Enable this setting to display images on web pages.
- **Enable JavaScript** — Enable this setting to enable JavaScript.
- **Set home page** — Select this setting to set your home page.
- **Set preloaded home page** — Select this setting to set the preloaded home page.
- **Search Portal** — Select this setting to set the default search engine to use.
- **Data connection** — Select this setting to set the data network to which you want to connect.
- **Clear cache** — Select this setting to delete all cached page contents.
- **Clear history** — Select this setting to clear the browser navigation history.
- **Accept cookies** — Enable this setting to allow sites to save and read “cookie” data.
- **Clear all cookie data** — Select this setting to delete all browser cookies.
- **Remember form data** — Enable this setting to save the data you typed in forms for later use.

- **Clear form data** — Select this setting to delete all saved form data.
- **Remember passwords** — Enable this setting to save usernames and passwords for websites.
- **Clear passwords** — Select this setting to delete all saved passwords.
- **Show security warning** — Enable this setting to show security warnings if there is a problem with a website.
- **Restore to default** — Select this setting to clear all browser data and reset all settings to factory default.

## Twitter

**Twitter** comes preinstalled on your smartphone.

### Logging In to Twitter

- 1 Tap the **Twitter** icon.
- 2 Enter the **Username** or **Email** and the **Password**.
- 3 Tap **Sign in**.



**NOTE:** To create a new account, tap **Create an account**, and then follow the instruction on the screen.

### Using Twitter

#### Updating Tweets

- 1 Tap the **Twitter** icon.
- 2 Login to Twitter (see “Logging In to Twitter” on the right).
- 3 To update Tweet, type in the **What’s happening?** field, and then tap **Update**.





### Viewing the Trends

- 1 Tap the **Twitter** icon.
- 2 Login to Twitter (see “Logging In to Twitter” on page 104).
- 3 Press the **Options** key, and then tap **Trends**.
- 4 The top 10 tweets are displayed on the screen. Tap a tweet to view tweets.

### Viewing Messages

- 1 Tap the **Twitter** icon.
- 2 Login to Twitter (see “Logging In to Twitter” on page 104).
- 3 Press the **Options** key, and then tap **Messages**.
- 4 Personal emails from those you are connected to are displayed on the screen.

To refresh, press the **Options** key, and then tap **Refresh**.

To send a message, press the **Options** key, and then tap **New message**.

To delete a message, press the **Options** key, and then tap **Delete message**.

### Following Tweets

- 1 Tap the **Twitter** icon.
- 2 Login to Twitter (see “Logging In to Twitter” on page 104).
- 3 Press the **Options** key, and then tap **My account** to display your Profile screen.

## Using Internet Features

- 4 To view the people who you are following, tap the right arrow of **following**. To view the people who are following you, tap the right arrow of **followers**.
- 5 Tap the name of the person to view more information.

### Adding Favorite Tweets

- 1 Tap the **Twitter** icon.
- 2 Login to Twitter (see “Logging In to Twitter” on page 104).
- 3 Press the **Options** key, and then tap **Favorites**.
- 4 The screen displays the tweets you have tagged.
- 5 Tap the tweet you want to add as favorites.
- 6 Press the **Options** key, and then tap **Add to Favorites**.

### Searching Tweets

- 1 Tap the **Twitter** icon.
- 2 Login to Twitter (see “Logging In to Twitter” on page 104).

- 3 Press the **Options** key, and then tap **Search**.
- 4 Enter the keywords to search on the **Search** bar, and then tap the **Search** icon.

### Uploading Photos to Twitter


- 1 Tap the **Twitter** icon.
- 2 Login to Twitter (see “Logging In to Twitter” on page 104).
- 3 Press the **Options** key, and then tap **Upload photo**.
- 4 Enter the subject of the photo to upload on the text field.
- 5 Press the **Options** key, and then tap one of the following:
  - **Select photo** — To select a photo stored in the microSD card.
  - **Capture photo** — To capture a photo using your phone’s camera.

## Facebook


**Facebook**, a social networking site, comes preinstalled on your smartphone.

### Logging In to Facebook

- 1 Tap the **Facebook** icon.
- 2 Enter the Email and the Password.
- 3 Tap **Login** to start using Facebook.

 **NOTE:** To create a new account, tap **Sign Up**, and then follow the instruction on the screen.

### Using Facebook

- 1 Tap the **Facebook** icon.
  -  **NOTE:** You must sign in to Facebook before you access your account (see “Logging In to Facebook” on page 107).
- 2 Tap an icon to access the function.



### Updating Your Status

 
- 1 Tap the **Facebook** icon to open the Facebook screen.
- 2 Press the **Options** key, and then tap **Status update**.
- 3 Tap the **What's on your mind?** field, and then enter your thoughts.
- 4 Tap **Share**.

### Finding Friends

- 1 Tap the **Facebook** icon to open the Facebook screen.
- 2 Press the **Options** key, and then tap **Find friends**.
- 3 Enter the **Email, Phone Number, or User Name** of the friend you want to find.
- 4 Tap **Find friends**.

### Writing on Friends' Wall

- 1 Tap the **Facebook** icon to open the Facebook screen.
- 2 Tap **Friends**.
- 3 Enter the name of your friend or scroll down the screen to find your friend, then tap your friend to open his/her profile screen.

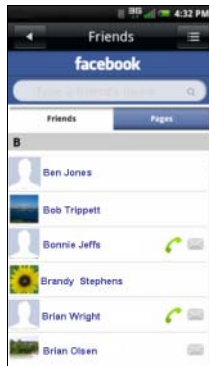

- 4 Tap the **Write something here** field, then enter the message you want to write on your friend's wall.
- 5 Tap **Share**.


### Sending Messages to Friends

 - 1 Tap the **Facebook** icon to open the Facebook screen.
- 2 Tap **Friends**.

- 3 Enter the name of your friend or scroll down the screen to find your friend, then tap your friend to open his/her profile screen.
- 4 Press the **Options** key, and then tap **Send a Message**.
- 5 Enter your message.

### Viewing Messages

- 1 Tap the **Facebook** icon to open the Facebook screen.
- 2 Tap **Inbox**.

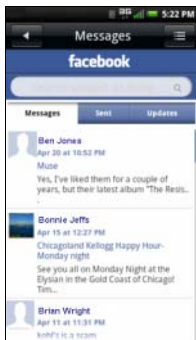


- 3 Tap either one of the following tabs to display messages:
  - **Messages** — To view messages received from friends. Tap the message to reply.
  - **Sent** — To view messages you sent to friends.
  - **Updates** — To view special messages from various pages.

### Viewing Requests

 - 1 Tap the **Facebook** icon to open the Facebook screen.

### 2 Tap **Requests**.

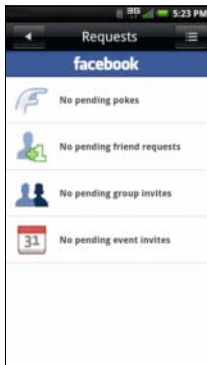

### 3 Tap the request category to view.

## Viewing Events

- 1 Tap the **Facebook** icon to open the Facebook screen.
- 2 Tap **Events** to display upcoming and past events.
- 3 To accept or decline an event, tap the event.



### 4 Tap **Change** to modify your response.

### 5 Tap one of the following options: **Attending**, **Maybe Attending**, or **Not Attending**.

### 6 Tap **OK**.

## Managing Photos

- 1 Tap the **Facebook** icon to open the Facebook screen.

- 2 Tap **Photos**.
- 3 Tap the photo album that you want to view.
- 4 Tap a photo to enlarge the view.



- 1 **Share** icon
- 2 **Set As** icon
- 3 **Caption** icon

To share the photo, tap the **Share** icon.

To set the photo as wallpaper, tap the **Set As** icon.

To write a caption for the photo, tap the **Caption** icon.

To upload photos from your smartphone to Facebook, see “Sharing Pictures” on page 136.

## Account Settings

On the Facebook screen, press the **Options** key, and then tap **Settings**. The following are the available settings:

### General Settings

- **Notifications** — Tap to turn on/off notifications. When turned off, the individual Notification settings are disabled.
- **Refresh interval** — Tap to select the refresh interval option.

### Notification settings

- **Messages** — Tap to turn on/off notification when new messages are received.

## Using Internet Features

- **Pokes** — Tap to turn on/off notification when a friend pokes you.
- **Friend requests** — Tap to turn on/off notification when somebody asks permission to add you as friend.
- **Event invites** — Tap to turn on/off notification when a friend invites you to an event.
- **Group invites** — Tap to turn on/off notification when a friend invites you to join a group.

### Advance Settings

- **Reset** — Tap to clear all data and reset to restore the default settings.
- **Clear cached images** — Tap to clear all cached images.
- **Synchronize address book** — Tap to turn on automatic synchronization of Facebook Contacts to your phone's Contacts.



**NOTE:** If Synchronize address book is turned on, you can also manually sync Facebook Contacts to your phone's Contacts (see "Synchronizing with Facebook Contacts" on page 77).

- **Always show sync dialog** — Tap to turn on/off prompt that asks you whether to allow sync to occur.
- **Clear Facebook contact** — Tap to remove all synchronized Facebook contact information from your phone's Contacts.
- **View display settings** — To set the day/hour interval to check for updates.

### Facebook Sync Settings

Tap to turn on/off synchronization of individual items, such as: profile picture, email address, birthday, phone number, and birthday event.

### Help

Tap **Help Tips** to view the help information.



## Other Settings

- **Camera capture photo size** — Tap to compress pictures.
- **Security: use https** — Tap to enable/disable access to https sites.
- **Enable Facebook service** — Tap to enable/disable other applications to use Facebook or leave Facebook permanently connected.
  - **NOTE:** If Enable Facebook service is turned on, you do not have to log into Facebook each time you access the application.

## Using Email Features

You can choose between Email applications to manage your Email. Your smartphone allows you to check Email from your corporate Exchange server, from your POP/IMAP accounts with your ISP (Internet service provider), and from Internet mail accounts such as AOL, Gmail, Yahoo!, and others.

## Adding an Email Account

### Adding an Internet Email Account

- 1 Tap the **Email** icon to open the Email account screen.



- 2 Enter the **Email Address**, **Password**, and **From Name**.

- 3 Tap **Next** to verify your account.
- 4 In the Advanced Settings screen, tap **Save** to save your account.

## Adding an Exchange Server Account

You can wirelessly synchronize Email, contacts, appointments, and other information on your smartphone with Microsoft® Exchange Server.

To wirelessly synchronize your smartphone with an Exchange server, you must set up an Exchange server account.

- 1 Tap the **Email** icon to open the Email account screen.
- 2 Enter the **Email Address, Password, and From Name.**
- 3 Tap **Next.**

During account verification, if the email address is not one of the standard POP3/IMAP accounts, the Manual setup screen appears.



- 4 Tap **Exchange.**
- 5 Enter the **Sync Server Address and Domain.** Enable/Disable **Use https.**
- 6 Tap **Next** to establish a connection.

### Adding More Email Accounts

- 1 Tap the **Email** icon to open the Email account screen.
- 2 Tap the **Add Account** tab.




- 1 Add Account tab
- 3 Follow the procedures in adding an Internet Email Account or Exchange server account

(see “Adding an Internet Email Account” on page 114 or “Adding an Exchange Server Account” on page 115).

### Setting Up and Editing Email Accounts

Tap the **Email** icon to open the Email Account screen.

### Editing Account Settings

- 1 Tap and hold the Email account you want to edit.
  - 2 Tap **Settings** to open the settings screen.
  - 3 Scroll through the list and select the setting you want to change.
-  **NOTE:** Contact your Email providers for the required setup information.
- 4 Tap **Save** when you are done to save and exit the screen.
  - 5 Tap **Save** to save and exit the settings screen.

The following are the available **Email Account** settings:

- **Email Address** — Select this setting to edit your Email address.
- **User Name** — Select this setting to edit the user name.
- **Password** — Select this setting to edit the password for your account.
- **Protocol** — Select this setting to choose the protocol to be used to send and receive Emails including **POP3**, **POP3/SSL**, **CMPCP**, and **CMPCP/SSL**. Contact your service provider for information.
- **Server** — Select this setting to edit the address of the server that provides your mail.
- **Port (incoming)** — Select this setting to edit the port value used for incoming traffic.
- **SMTP Server** — Select this setting to edit the address of the server through which you send your Email.
- **Port (outgoing)** — Select this setting to edit the port value used for outgoing traffic.
- **Authentication** — Select this setting to select the authentication type for your Email.
- **Data Connection** — Select this setting to choose the network to use for data connection.
- **Reply with the original** — Enable this setting to include the original messages when you reply to Emails.
- **Pull Frequency** — Select this setting to choose how often automatic POP3 retrievals are performed.
- **Number to sync each time** — Specify the maximum number of Emails to sync on every connection. You can select **25 Mails**, **50 Mails**, **100 Mails**, or **All**.
- **Read Limit** — Select this setting to set the read limit for your Emails if you wish to set a send/receive message size limit. Setting the limit to **Headers Only** allows you to only see the subject of Emails.
- **From name** — Select this setting to enter your full name to be displayed to recipients.

- **Reply-to-Address** — Select this setting to send replies to your Email to a different account.
- **Signature** — Select this setting to append your signature to your Emails.
- **IMAP IDLE** — Select this option to open or close IMAP idle.

## Removing an Account

- 1 Tap the **Email** icon.
- 2 Tap and hold the Email account you want to remove to open the pop-up menu.
- 3 Tap **Remove** to remove the account.
- 4 Tap **OK** to confirm and exit the screen.

## Managing Exchange Server Account

### Synchronization Settings

Tap the **Settings** icon, and then tap **Data synchronization**.

The following are the available settings:

- **Background data** — Enables or disables background data usage.
- **Auto-sync** — Enables or disables automatic synchronization of data.

## Managing Email Messages


### Sending Emails

- 1 Tap the **Email** icon and tap an Email account to open the Email screen.
- 2 Press the **Options** key, and then tap **Compose** to open the Compose Mail screen.



- 3 Enter the recipient's address or tap the **+** icon to add a contact from the **Phonebook**.
- 4 Enter a subject.
- 5 Enter your message.
- 6 Tap the **Options** menu button to select **Attach**, **Save to Draft**, **Add/Hide Cc**, **Add/Hide Bcc**, **Discard** or **Priority**.
- 7 Tap **Send** to send message and exit this screen.

### Receiving Emails

 **NOTE:** To automatically receive Emails, set it through the Email account's **Settings > Pull Frequency** (see "Pull Frequency" on page 117).

- 1 Tap the **Email** icon and tap an Email account to open the Email screen.

- 2 Tap the **Options** menu button and tap **Synchronize** to receive new Emails.

 


1 Synchronize option


- 3 Tap **Inbox** to open your inbox folder and read your unread mails.
- 4 To exit this screen, tap the **Home/Back** button.

## Deleting Messages


- 1 Tap the **Email** icon and tap an Email account to open the Email screen.
- 2 Tap the **Options** menu button and then tap **Delete**.
- 3 Tap to select the messages you want to delete.

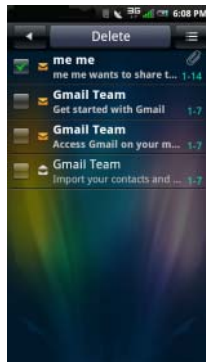



 **NOTE:** To select all messages, tap the **Options** menu button, and then tap **Select all**.

- 4 Tap **Delete** to delete the selected messages and exit this screen.

 **NOTE:** Deleted messages are moved to the **Trash** folder.

### Emptying the Trash

Deleted messages are moved to the Trash folder. To permanently delete the messages, do the following:

- 1 Tap the **Email** icon and tap an Email account to open the Email screen.
- 2 Tap the **Options** menu button and select **Folders**.
- 3 Tap **Trash** to open the Trash screen.
- 4 Tap the **Options** menu button and select **Empty Trash**.
- 5 Tap **OK** to confirm.

# Using Multimedia Features

## Browsing and Playing Music

- 1 Tap the **Music** icon.  
Your music is organized into five categories: **Artists**, **Albums**, **Songs**, **Genres**, and **Playlists**. Select a category to view the lists within each.



- 2 To browse all audio files on the phone and the microSD card, tap the **Search** tab. Otherwise, select from one of the five categories.



- 1 Enter music to search here

- 3 Tap any song to start playing the song.









## Music Player

To access the Music Player, tap an audio file. The Music Player appears.




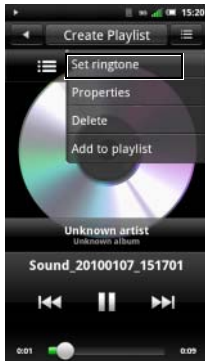 
- 1 View current playlist
- 2 Album art
- 3 Artist
- 4 Track
- 5 Playback controls
- 6 Time elapsed
- 7 Time remaining
- 8 Progress bar
- 9 Album
- 10 Shuffle mode
- 11 Repeat songs

## Music Player Controls

-  Tap to play
-  Enable shuffle mode and play songs randomly
-  Tap to repeat all songs  
Tap twice to repeat the current song  
Tap three times to turn repeat off
-  Tap and hold to fast forward  
Tap to go to the next song
-  Tap to go to the beginning of the song  
Tap twice to go to the previous song
-  Tap to view the current playlist

## Setting a Song as Your Ringtone

- 1 Tap the song you wish to set as your ring tone to open the Music Player.
  -  **NOTE:** Only songs with the size less than 300 KB can be set as a ringtone.
- 2 Tap the **Options** menu button, and then tap **Set ringtone**. The ringtone is set as your default incoming call ringtone.
- 3 Tap the **Home/Back** button to exit the screen.



## Managing Music Files

### Synchronizing Music

You can synchronize media files on your computer to your smartphone.

- 1 Ensure your smartphone is turned on. Connect your smartphone to the computer using the mini-USB to USB data cable.
- 2 When prompted, tap **Media Sync**.
- 3 On your computer, select **Sync digital media files to this device**.
- 4 Depending on your computer setup, you can manually or automatically sync media files to your smartphone.

 
### Transferring Music


You can transfer music files from your computer to the microSD card installed on your phone.

- 1 Ensure your smartphone is turned on.
- 2 Connect your smartphone to the computer using the mini-USB to USB cable.
- 3 When prompted, tap **Mass Storage** to allow your computer to recognize your smartphone as a USB mass storage device.
- 4 On your computer, locate the mounted USB drive and open it.
- 5 Transfer music files from your computer to your smartphone using the copy and paste or drag and drop functions.


## Creating a Playlist

- 1 In the Music screen, select a category.
- 2 In the list that appears, navigate to the artist, album, or song that you want on a playlist.
- 3 Tap and hold the artist, album, or song to open the pop-up menu. Tap **Add to playlist**.

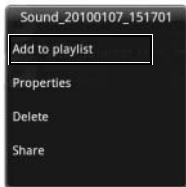

-  **NOTE:** You can also use this menu to view the **Properties**, **Delete**, or **Share** the songs.

 - 4 In the **Add to playlist** panel that opens, tap **New** to create a new playlist, or select one of the existing playlists such as the current playing list or other playlists you created earlier.

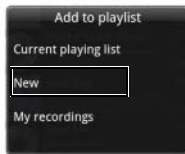

The selected song(s) are added to the playlist.

## Managing Playlists

Go to the Music screen and select **Playlists**. All the available playlists are displayed.

Select the playlist, and then tap the **Play all** tab to play the songs in the list.

 
- To delete or edit a playlist, tap and hold the playlist to open the pop-up menu. Tap **Delete** to delete the playlist or tap **Edit** to edit the playlist.



## Browsing and Playing Videos

- Tap the **Videos** icon.

Your videos are displayed in a thumbnail list.

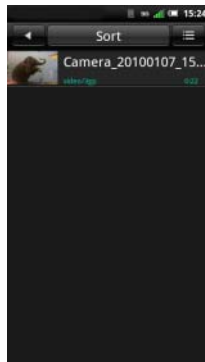


- Slide your finger up and down on the list to view the entire list.
- Tap any video to start playing the video.
- To exit the screen, tap the **Home/Back** button.



## Managing Videos
 
### Sorting Videos


- 1 Tap the **Sort** tab, then tap **Sort by time**, **Sort by name**, or **Sort by size** to sort your videos.

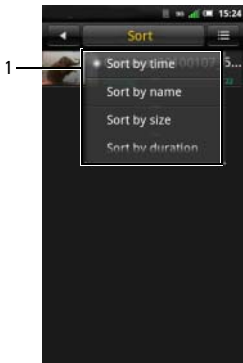

- 1 **Sort by** options
- 2 To exit the screen tap the **Home/Back** button.


### Deleting a File From a List

 - 1 Tap and hold a video file to open the pop-up menu.
- 2 Tap **Delete** to delete the video file.
- 3 Tap **OK** to confirm.

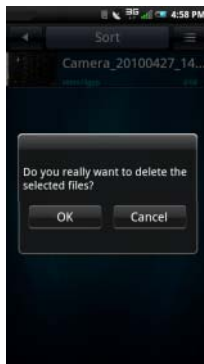

### Viewing Video File Properties

 
- 1 Tap and hold a video file to open the pop-up menu.
- 2 Tap **Properties** to view file property.

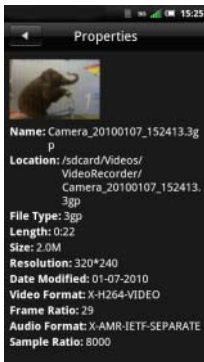

- 3 Tap the **Home/Back** button to exit the screen.

### Sharing Videos

 
- 1 Tap and hold a video file to open the pop-up menu.
- 2 Tap **Share**, and then tap your preferred application for sharing.

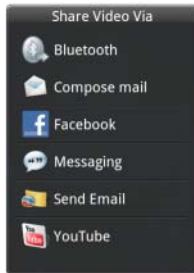

### Deleting a Video

- 1 Tap the **Options** menu button and tap **Delete** to open the Delete screen.
- 2 Tap the check box of the video or videos you want to delete.

 
You can also tap the **Options** menu button and tap **Select All** to select all files.

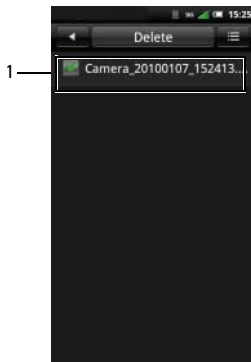


1 File selected for deletion check box

**3** Tap the **Delete** tab and tap **OK** to delete the files.

### Using the Video Player



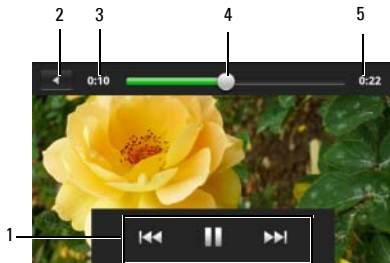 

 **NOTE:** For best viewing experience, videos are played in landscape mode only.

Tap a video file to open the Video player.



- 1 Playback controls
- 2 Home/Back button
- 3 Time elapsed
- 4 Progress bar
- 5 Duration of video

#### Playback Controls

-  Tap to pause.
-  Tap to play.
-  Press and hold to fast forward.  
Tap to skip forward.
-  Press and hold to rewind.  
Tap to skip backward.

To exit the the video player, press the **Home/Back** key.

## Using the Picture Application

To view a picture, tap the **Pictures** icon.

### Browsing Pictures

Your pictures may be categorized into folders.

 


Tap a folder to view the thumbnails. Slide your finger up and down on the list to view the entire list.

- 1 Tap a thumbnail to view the photo in full screen view.
- 2 To zoom in, expand your fingers at the section of the screen where you want to zoom in. To zoom out, pinch the section of the screen (see "Touch screen gestures" on page 29).
- 3 Slide your finger to the left or right to view next or previous picture.
- 4 Press the **Back** key to exit the screen.

### Viewing Pictures as a Slideshow

- 1 In thumbnail view, tap **Slideshow**.

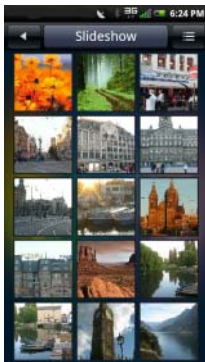

- 2 Select an audio file to play during the slideshow or select **No music for slideshow**.
- 3 Tap anywhere on the screen to stop the slideshow.
- 4 Press the **Back** key to exit the screen.


### Managing Picture Files

  
#### Deleting a Picture

- 1 Tap and hold the thumbnail of the picture you want to delete to open Picture options menu.
- 2 Tap **Delete** to delete the picture.
- 3 Tap **OK** to confirm.

#### Editing a Picture

- 1 In thumbnail view, tap and hold the picture you want to edit.
- 2 In the pop-up menu, tap **Edit** to access a number of edit functions.

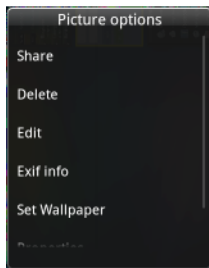

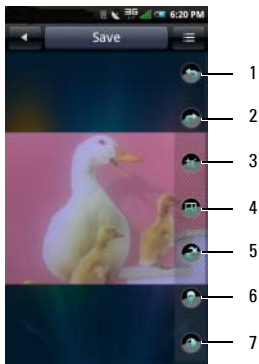


- 1 Rotate counter-clockwise icon
- 2 Rotate clockwise icon
- 3 Crop icon
- 4 Resize icon
- 5 Invert icon
- 6 Brightness icon
- 7 Contrast icon

- Tap the **Rotate counter-clockwise** icon to rotate the picture 90° counter-clockwise.
  - Tap the **Rotate clockwise** icon to rotate the picture 90° clockwise.
  - Tap the **Crop** icon to activate the crop function. Slide your finger across the screen to select the portion of the picture you wish to crop. Tap **Done** to see the cropped picture.
  - Tap the **Resize** icon to change the size of the picture. Enter the the width and the height, and then tap **OK**.
  - Tap the **Invert** icon to invert the picture.
  - Tap the **Brightness** icon to set the brightness setting. Drag the slider to adjust brightness.
  - Tap the **Contrast** icon to set the contrast setting. Drag the slider to adjust contrast.
- 3** Tap **Save** to save the edited picture as a new copy.

### Sharing Pictures

 
- 1 In thumbnail view, tap and hold the picture you want to share.
- 2 In the pop-up menu, tap **Share** and select your preferred application for sharing.

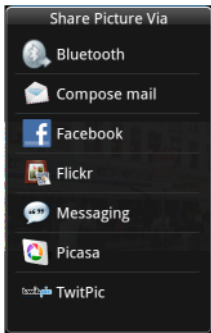

**NOTE:** You may need to scroll down to view more options.

### Changing Picture Settings

 To open Picture settings, tap the **Options** menu button then select **Settings**.

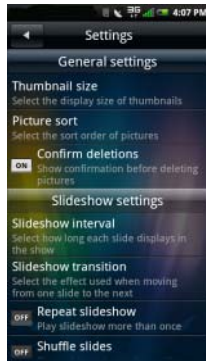

The following are the available settings:

- **Thumbnail size** — You can select from Large or Small picture display sizes.




- **Picture sort** — You can select to sort pictures with the newest pictures first or newest pictures last.
- **Confirm deletions** — Enable this setting if you want confirmations before deleting pictures from the phone memory and the microSD card.
- **Slideshow interval** — Select how long each slide plays. The available options are: **2, 3, or 4 seconds**.
- **Slideshow transition** — Select the effect used when moving from one slide to another. The available options are: **Fade in & out, Slide left-right, Slide up-down, and Random selection**.
- **Repeat slideshow** — Enable this setting to play the slideshow more than once.
- **Shuffle slides** — Enable this setting to shuffle the pictures in your slideshow.

## Using the Video Editor


Use the **Video Editor** to make your own videos.

### Using the Storyboard

- 1 Tap the **Video Editor** icon to open the Video Editor screen.
- 2 Tap **Storyboard** from the Video Editor menu.
- 3 Tap the **Select Media** tab.
- 4 Tap the images that you want to include in your storyboard.
  -  **NOTE:** To include all images, tap the **Select all** icon.
- 5 Tap the **OK** tab.
- 6 In the Storyboard menu, tap the icons at the bottom of the screen to add music, insert additional images, add text and preview the video.
- 7 Tap a specific image to apply the time duration of the image, add sound dubbing, apply a subtitle, apply a transition, or apply an image effect.

- 8 After previewing the file, do either of the following:
  - Tap the **Home/Back** button located at the top of the screen to make additional edits.
  - Tap the **Save** tab to complete video editing. The file information shows the location of the saved file.

### Using the Music Movie

- 1 Tap the **Video Editor** icon to open the Video Editor screen.
- 2 Tap **Music movie** from the Video Editor menu.
- 3 Tap the background for the movie by rotating it to the center of the screen where the background title is displayed.
- 4 Tap the **Select photos** tab.
- 5 Tap the images that you want to include in your storyboard.
  -  **NOTE:** To include all images, tap the **Select all** icon.
- 6 Tap the **Organize photos** tab.
- 7 Set BGM, and then tap the **Set BGM** tab.
- 8 Tap the music from the available sound files on your smartphone, and then tap the **Apply** tab.
- 9 Tap the **Add movie title** tab.
- 10 Tap the center of the background to add text.
- 11 Tap the text entry bar.
- 12 Type the desired title, and then tap **Done**.
- 13 Tap the **OK** tab.
- 14 The options at the bottom of the screen allow you to change the text size, style, color and edit text.
- 15 Tap the **Preview** tab, and then tap the center arrow.
- 16 After previewing the file, do either of the following:
  - Tap the **Home/Back** button located at the top of the screen to make additional edits.

- Tap the **Save** tab to complete video editing. The file information shows the location of the saved file.

## Using Auto Cut

- 1 Tap the **Video Editor** icon to open the Video Editor screen.
- 2 Tap **Auto cut** from the Video Editor menu.
- 3 Tap the editing style for the movie by rotating it to the center of the screen where the background title is displayed.
- 4 Tap the **Select media** tab.
- 5 Tap the video to edit its length.
- 6 Tap the **Preview** tab, and then tap the center arrow.
- 7 Drag the bar to where you want to stop the video.
- 8 Tap the **Save** tab. The file information shows the location of the saved file.



### Using the Camera

You can use the camera to capture photos and video clips.

To activate camera, press and hold the Camera key for 3 to 4 seconds or tap the **Camera** icon. The camera screen is displayed in landscape view.

#### Camera Mode



- 1 Settings icon
- 2 Flash
- 3 Exposure compensation setting icon
- 4 Self timer icon
- 5 Zoom icon
- 6 Go to photo gallery
- 7 Capture icon
- 8 Switch to video recorder
- 9 Back icon


#### Using the camera

- Half press the **Camera** key to focus on images.
- Full press the **Camera** key or tap the **Capture** icon to capture photos.
- Tap the **Settings** icon to set **Image size**, **White Balance (WB)**, **Color tone**, **Contrast**, **Sharpness**, **Geo Tagging** (see “Enabling Geo Tagging” on page 141), **Sequence**, and **Grid View**.


- Tap the **Flash** icon to turn the flash on or off.
- Tap the **Exposure compensation setting** icon to set Exposure compensation.
- Tap the **Self Timer** icon to set the timer.
- Tap the **Zoom** icon to adjust zoom.
- Tap the **Go to photo gallery** icon to view your captured photos.
- Tap the **Switch to video recorder** icon to switch to video recorder mode.
- Tap the **Back** icon to exit the Camera screen.

## Enabling Geo Tagging

Geo Tagging allows you to insert the GPS coordinates to a picture.

 **NOTE:** Geo Tagging works best outdoors with a clear view of the sky.

- 1 On the camera screen, tap the **Settings** icon, and then tap **Geo Tagging**.
- 2 Tap **On**. Once the GPS service is connected, the GPS icon displays an **x** indicating that the location is fixed.

 **NOTE:** It may take up to 1 minute to connect to GPS.

### Video Recording Mode



- 1 Settings icon
- 2 Exposure compensation setting icon
- 3 Duration
- 4 Zoom icon
- 5 Go to video gallery
- 6 Capture icon
- 7 Switch to camera mode
- 8 Back icon



### Using the video recorder

- Press the **Camera** key or tap the **Capture** icon to start recording videos, press again to stop recording.
- Tap the **Settings** icon to set **White Balance (WB)**, **Mute**, and **Video Quality**.
- Tap the **Exposure compensation setting** icon to set exposure compensation.
- Tap the **Duration** icon to set the maximum duration.
- Tap the **Zoom** icon to adjust zoom.
- Tap the **Go to video gallery** icon to playback recorded videos.
- Tap the **Switch to camera mode** icon to switch to camera mode.
- Tap the **Back** icon to exit the video recorder screen.

## Using the Recorder Application

The Recorder feature allows you to capture audio notes. To open the Recorder, tap the **Recorder** icon.



- 1  Start recording icon
- 2  Stop recording icon

## Using the Recorder

- Tap the **Start recording icon** to start recording.
- Tap the **Stop recording icon** to stop recording or playback.
- Tap the **Save** tab, edit the file name that is automatically given, and retain the .amr file extension to save the file. To browse and open the audio file, tap the **File Mgr** icon.
- Tap the **Options** menu button to share or discard the recorded file.


# Using Network Features

This section provides information about the applications solely provided by AT&T.

## AT&T Navigator


**AT&T Navigator** is a GPS navigation system that provides voice or onscreen driving directions.

- 1 Tap the **AT&T Navigator** icon to open the AT&T Navigator screen.
- 2 Read and accept the Terms of Use to start using **AT&T Navigator**.

 **NOTE:** Contact your AT&T service provider for more details.

## AT&T Maps

Use **AT&T Maps** to search for local businesses, point of interest, and addresses. It provides turn-by-turn non-voice guided driving directions.

 **NOTE:** Before using AT&T Maps, enable GPS satellites in **Settings > My location > Enable GPS satellites**.

Tap the **AT&T Maps** icon to open the AT&T GPS screen.

To zoom in, tap the + icon or press the **Options** key, and then tap **Zoom In**.

To zoom out, tap the - icon or press the **Options** key, and then tap **Zoom Out**.

To go back to the **AT&T Maps** home screen panel, press the **Options** key, and then tap **Home Screen**.

To submit feedback, press the **Options** key, and then tap **Feedback**.



To view help, press the **Options** key, and then tap **Help**.

To open **AT&T Navigator**, press the **Options** key, and then tap **AT&T Navigator**.

To exit **AT&T Maps**, press the **Options** key, and then tap **Exit**.

### Searching Places

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **Search Nearby**.
- 4 Enter a business name or a category to search.
- 5 Select a category from the **Category** list to filter the search.
- 6 Tap **Where** and select an option to enter the starting point.
- 7 Tap **Search** to start searching.

### Getting Directions

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **Get Directions**.
- 4 Tap **Origin** and select a starting point.
- 5 Tap **Destination** to select an option and enter the destination.
- 6 Tap **Preferences** and select the route style.
- 7 Tap **Get Route** to get driving directions.

### Viewing Current Location

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **Current Location** to view map.

### Changing Maps

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **New Map**.
- 4 Select an option to enter the desired location.
- 5 Tap **Done** to view map.

### Saving to Favorites

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **Save To Favorites**.
- 4 Enter the **Address, Category**, and the desired **Label**.
- 5 Tap **Done** to save the location to favorites.

### Sharing Maps and More

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **Share and More**.
- 4 Tap an option to share. Then enter the recipient and other required information.
- 5 Tap **Send Now** to start sharing.

### Setting General Preferences

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **Options**.
- 4 Tap **General**. Enter the First Name, Last Name, and Email. Select options for **Distance Units** and **Tips**.
- 5 Press the **Options** key, and then tap **Save** to save preferences.
- 6 Press the **Back** key to exit the screen.

## Setting Navigation Preferences

- 1 Tap the **AT&T GPS** icon to open the AT&T GPS screen.
- 2 Tap **AT&T Maps**.
- 3 Press the **Options** key, and then tap **Options**.
- 4 Tap **Navigation**.
- 5 Tap **Route Style**.
- 6 Tap desired route style from the pop-up menu.
- 7 Press the **Options** key, and then tap **Save** to save preferences.
- 8 Press the **Back** key to exit the screen.

## GPS

Tap the **GPS** icon to open the GPS screen.

GPS provides the following services:

- Where
- AllSport GPS


## Using Where

**Where** is an application that detects and displays your current location accurately.

- 1 Tap the **GPS** icon to open the GPS screen.
- 2 Tap **Where**.
- 3 Accept the Terms of Use, and then tap **OK**.
- 4 Tap one of the following:
  - **Use GPS to get locations** — Select this option to automatically detect your location using GPS.
    - ▣ **NOTE:** GPS tracking may require a few minutes to detect your location.
  - **Set location manually** — Select this option to enter your current location. Tap **Find** to start tracking your location.


## Using AllSport GPS

**AllSport GPS** monitors your outdoor fitness activities, record distance, time, speed, calories, and route, allows you to view maps and elevation profiles and share your fitness data online.

 **NOTE:** Before using AllSport GPS, enable GPS satellites in **Settings > My location > Enable GPS satellites** and disable Wi-Fi in **Settings > WLAN**.

- 1 Tap the **GPS** icon to open the GPS screen.
- 2 Tap **AllSport GPS**. The welcome screen appears.
- 3 Press the **Options** key, and then tap **Next**.
- 4 Read the tips that appear on the screen. Press the **Options** key, and then tap **Next**.
- 5 Read the Privacy Information. Press the **Options** key, and then tap **Agree**.
- 6 Read more tips. Press the **Options** key, and then tap **Next** to continue.

- 7 Repeat step 6 until all tips have been read to start using AllSport GPS.

 **NOTE:** Contact your AT&T service provider for more details.


## AT&T Music

**AT&T Music** provides the following services:

- AT&T Radio
- MusicID
- Community

## Using AT&T Radio

**AT&T Radio** provides commercial-free music channels, live local FM radio, news, and sports.

 **NOTE:** Additional data charges may be incurred when using this application. Contact your service provider for more details.

- 1 Tap the **AT&T Music** icon to open the AT&T Music screen.
- 2 Tap **AT&T Radio**.

- 3 Tap a category to load the page, and then select from the list of available channels to start listening.

To play the last played channel, press the **Options** key, and then tap **Last Played**.

To play the recently played channel, press the **Options** key, and then tap **Recent**.

To manage subscription settings, press the **Options** key, and then tap **Settings > Subscription**.

To go back the AT&T Radio main screen, press the **Options** key, and then tap **Home**.

- 4 Press the **Options** key, and then tap **Exit** to exit **AT&T Radio**.

## Using MusicID

**MusicID** is a music exploration application that recognizes songs by listening to music from a radio, TV, or other music source signals. You can also find songs by searching the artist name, song title, lyrics, or popularity.

### Identifying Songs

- 1 Tap the **AT&T Music** icon to open the AT&T Music screen.
- 2 Tap **MusicID**.
- 3 Tap **Identify Song**.
- 4 Place the smartphone's microphone closer to the source of music. When the application identifies the song, the song information is displayed on the screen.



**NOTE:** Contact your AT&T service provider for more details.

### Finding Songs

- 1 Tap the **AT&T Music** icon to open the AT&T Music screen.
- 2 Tap **MusicID**.
- 3 Tap **Explore**.
- 4 Tap one of the following options:
  - **Search** — Select **Search** to enter the Search screen. Tap either **Artist Name**, **Lyric Phrase**, or **Song Title**, and then enter the song information to search. Tap **Search** at the bottom of the screen.
  - **Popularity IDs** — Select **Popularity IDs** to find songs by popularity.

### Managing Songs

- 1 Tap the **AT&T Music** icon to open the AT&T Music screen.
- 2 Tap **MusicID**.
- 3 Tap **My Songs** to view the songs you've identified or saved.

### Viewing Account Information and Help

- 1 Tap the **AT&T Music** icon to open the AT&T Music screen.
- 2 Tap **MusicID**.
- 3 Tap **My Account**.
- 4 Tap one of the following:
  - **Getting Started** — Select this option to view help information on how to use MusicID.
  - **FAQs** — Select this option to view frequently asked questions.
  - **About MusicID** — Displays the application version number.

## AT&T Games

Tap the **AT&T Games** icon to access **AT&T Games**.

## AT&T Hot Spots

**AT&T Hot Spot** allows you to search for hot spot venues.

- 1 Tap the **AT&T Hot Spots** icon to open the AT&T Hot Spots screen.
- 2 Select a venue, service type, and enter zip, city, or state.
- 3 Tap **Search**.



**NOTE:** Contact your AT&T service provider for more details.

## YPmobile

**YPmobile** is a mobile-based yellow pages directory which allows you to find businesses, get maps, and driving directions.

### Using YPmobile

- 1 Tap the **YPmobile** icon to open YPmobile.
- 2 Enter the establishment name to search on the Search text box, and then tap **Find**.

To search by category, press the **Options** key, and then tap **Browse**. Tap a category. If only one establishment is available, the location is automatically shown on the map.

Otherwise select the establishment from the list.

- 3 If the place is found, a callout appears on the map.



- 1 Search text box
- 2 Callout
- 3 Current location icon
- 4 Zoom in icon
- 5 Zoom out icon
- 6 Close icon
- 7 Find icon

To view the information screen, tap the callout.

To view your current location on the map, tap the **Current location** icon.

To zoom in or zoom out, tap the **Zoom in** or **Zoom out** icon.

To close the map, tap the **Close** icon.

- 4 The address, phone number, and other information is displayed. Tap any of the following icons:

- **Call** — Select to call the establishment.
- **Map** — Select to view the location on the map.
- **Street View** — Select to display a street view map.
- **Add To** — Select to save the establishment's contact information to Contacts.
- **Share** — Select to send the establishment's contact information using Messaging or Email.




- 5 To exit **YPmobile**, press and hold the **Back** key.

## AT&T Video

AT&T Video provides Mobile Video and MobiTV.


### Mobile Video

**Mobile Video** allows you to watch news, sports, weather, entertainment, and more.

-  **NOTE:** Additional data charges may be incurred when using this application. Contact your service provider for more details.

### MobiTV


**Mobile TV** allows you to watch TV in broadcast quality from your smartphone.

-  **NOTE:** Additional data charges may be incurred when using this application. Contact your service provider for more details.

## Mobile Banking

**Mobile Banking** allows you to check balances, transfer funds, pay bills and perform other banking transactions from your smartphone.

- 1 Tap the **Mobile Banking** icon to open Mobile Banking.
- 2 Read and accept the End User License Agreement, and then tap **Yes**.


-  **NOTE:** Contact your bank to enroll this service.

# Using Google Applications

Your smartphone comes with preinstalled Google applications.

## Google Talk

Use **Google Talk** to send instant messages and chat with your online friends.

 **NOTE:** When using Google Talk for the first time, you must set up an account. Follow the instructions on the screen to complete setup.

Tap the **Google Talk** icon to open the Google Talk screen.

## Google Maps

**Google Maps** allows you to view your location, keep track of your friends, find places, view traffic situations and view directions to your destination.

### Searching Places

 
- 1 Tap **Google Maps** to open the Google Maps screen.
- 2 Press the **Options** key, and then tap **Search**.
- 3 Enter the place to search on the text box, and then tap the search icon to start searching.
- 4 When the place is found, a searched icon and a callout appear on the map. When more than one search results are found, more searched icons appear and are labeled alphabetically according to the nearest one from your location.






- 1 Callout
- 2 Next location
- 3 Previous location
- 4 Results icon
- 5 Zoom in icon
- 6 Zoom out icon
- 7 Searched icon

## Getting Directions

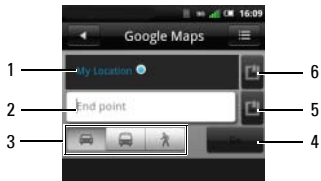- 1 Tap the **Google Maps** icon to open the Google Maps screen.
- 2 Press the **Options** key, and then tap **Directions**.



- 1 Starting point
- 2 Ending point
- 3 Directions icons
  -  Driving directions
  -  Transit directions
  -  Walking directions
- 4 Go icon
- 5 Choose point icon (ending)
- 6 Choose point icon (starting)

## Using Google Applications

- 3 Enter the starting point and the ending point or tap the corresponding **Choose point** icon and select an option.
- 4 Tap a directions icon.
- 5 Tap **Go** to view directions.

Press the **Options** key to do any of the following:

- **Show on map** — Tap to view the directions on the map.
- **Reverse** — Tap to reverse the directions.
- **Update route** — Tap to update the route.

## Changing Map Modes

- 1 Tap the **Google Maps** icon to open the Google Maps screen.
- 2 Press the **Options** key, and then tap **Map mode**.
- 3 Tap a mode option:
  - **Map** — View the map with names of streets, rivers, parks, and boundaries.
  - **Satellite** — View the same satellite data that is used by Google Earth.

- **Traffic** — View the map with real-time traffic information.

## Finding Your Location

- 1 Tap the **Google Maps** icon to open the Google Maps screen.
- 2 Press the **Options** key, and then tap **My Location** to view your location on the map.

## Using Latitude

**Latitude** allows you to keep track of your friends' location and share your location to them.

### Joining Latitude for the First Time

- 1 Tap the **Google Maps** icon to open the Google Maps screen.
- 2 Press the **Options** key, and then tap **Join Latitude**.
- 3 Tap **Allow & Share** to share your location to your friends and accept Google Latitude's Terms and Service.

## Adding Friends

- 1 Tap the **Google Maps** icon to open the Google Maps screen.
- 2 Press the **Options** key, and then tap **Latitude** to open the Latitude screen.
- 3 On the **Friends** tab, press the **Options** key, and then tap **Add friends**.
- 4 Tap either of the following:
  - **Select from Contacts** — Select this option to add friends from your Contacts list.
  - **Add via email address** — Select this option to enter the Email address of the friend you want to add.
- 5 Tap **Add friends** to send sharing request.
- 6 To go back to the maps screen, press the **Options** key, and then tap **Show map**.

## Viewing Updates

- 1 Tap the **Google Maps** icon to open the Google Maps screen.

- 2 Press the **Options** key, and then tap **Latitude** to open the Latitude screen.
- 3 Tap the **Updates** tab to view updates.  
To post messages, enter your message on the **Shout out** box, and then tap **Post update**.  
To change your location, tap **Change**, and then select a location.  
To turn notifications on or off, press the **Options** key, and then tap either **Notification On** or **Notification off**.

## Refreshing Latitude

 
- 1 Tap the **Google Maps** icon to open the Google Maps screen.
- 2 Press the **Options** key, and then tap **Latitude** to open the Latitude screen.
- 3 Press the **Options** key, and then tap **Refresh** to refresh friends list and updates.

## Market

**Market** allows you to download games, ringtones, and other applications on your smartphone.

- 1 Tap the **Market** icon to open the Market screen.
- 2 When using Market for the first time, read and accept Android Market Terms of Use. Tap **Accept** to continue.

The **Android Market** main screen appears.

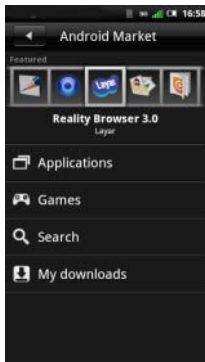

- NOTE: Before you access Android Market, login to your Google account or create a new one.

## Using Market


Tap a category to view the available applications. You can view by popularity or by date which will show you the newest applications added to the Market.

- NOTE: New applications are added everyday. Check the Market often for the latest applications.

## Downloading Applications

- 1 Tap the **Market** icon to open the Market screen.
- 2 Tap a category, then browse the selections to view the available applications.
- 3 To get a brief description of an application, tap the application.

- 4 To download, tap **Install**, and then tap **OK**.

 **NOTE:** You can check the download process in the Notifications area in the Connection Manager.

Once the application is installed successfully, the application icon appears on the Phone Display Panel.

You can also access the application by tapping the **Market** icon, and then tapping **My downloads**.

### Uninstalling Applications

- 1 Tap the **Market** icon to open the Market screen.
- 2 Tap **My downloads**.
- 3 Tap the application to uninstall.
- 4 Tap **Uninstall**.

### Viewing Downloaded Applications

From **My downloads**, you can view, open, and uninstall an application.

- 1 Tap the **Market** icon to open the Market screen.
- 2 Tap **My downloads** to view all downloaded applications.

### Searching Applications

To search for a specific application or a specific tool, search the keywords to find an application.

- 1 Tap the **Market** icon to open the Market screen.
- 2 Tap **Search**.
- 3 Enter the keywords to search.

# YouTube

**YouTube** allows you instant access to watch videos and upload your own videos to the YouTube website.

## Using YouTube

- 1 Tap the **YouTube** icon to open the YouTube main screen.
- 2 Tap a category to view the available videos, and then tap a video thumbnail to watch the video.

Or tap a video thumbnail from the Featured videos to watch the video.

Press the **Options** key to access other functions.

## Searching for Videos

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Press the **Options** key, and then tap **Search**.

- 3 Enter the video name on the search box, and then tap the Search icon.
- 4 In the search results, tap a video thumbnail to watch the video.

## Searching Videos By Categories

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Press the **Options** key, and then tap **Categories**.
- 3 Tap a category.
- 4 Tap a video thumbnail to watch the video.

## Viewing Video Details

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Search for the video, and then tap and hold the video thumbnail.
- 3 In the pop-up menu, tap **Details** to view the video details.



### Sharing Videos

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Search for the video, and then tap and hold the video thumbnail you want to share.
- 3 In the pop-up menu, tap **Share**.
- 4 Tap your preferred application for sharing the video.

### Rating Videos

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Search for the video, and then tap and hold the video thumbnail you want to rate.
- 3 In the pop-up menu, tap **Rate**.
- 4 Tap a number of stars to rate the video.

### Viewing Video Comments

- 1 Tap the **YouTube** icon to open the YouTube screen.

- 2 Search for the video, and then tap and hold the video thumbnail.
- 3 In the pop-up menu, tap **Comment**. The list of comments are displayed on the screen.

### Accessing My YouTube Account

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Press the **Options** key, and then tap **My Account**.
- 3 If you have an existing YouTube account, enter your username and password to sign in. Otherwise, follow the instructions on the screen and create an account.  
The **My Account** screen is displayed.

### Adding Videos to Favorites


- 1 Tap the **YouTube** icon to open the YouTube screen.

- 2 Search for the video, and then tap and hold the video thumbnail you want to add to favorites.
- 3 On the pop-up menu, tap **Add to favorites** to add the video to favorites.

### Removing Videos from Favorites

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Press the **Options** key, and then tap **Favorites**.
- 3 Tap and hold the video thumbnail you want to remove from favorites.
- 4 In the pop-up menu, tap **Remove from favorites** to remove video from favorites.

## Uploading Videos

- 1 Tap the **YouTube** icon to open the YouTube screen.  
 **NOTE:** You must sign in to YouTube before you upload videos. See “Accessing My YouTube Account” on page 161.
- 2 Press the **Options** key, and then tap **Upload**.
- 3 Tap the video you want to upload.
- 4 Enter the **Title**, **Access**, and other information.
- 5 Tap **Upload** to upload the video.

### Deleting Videos

Only videos from your account can be deleted.

- 1 Tap the **YouTube** icon to open the YouTube screen.
- 2 Press the **Options** key, and then tap **My Account**.
- 3 Tap a category.

- 4 Tap and hold the video thumbnail you want to delete.
- 5 In the pop-up menu, tap **Delete**.

# Using Applications

 
This section provides information about the applications that are installed on your smartphone.

## Messaging

You can send and receive text messages using the Messaging application. To open Messaging, tap the **Messaging** icon.


### Sending Messages to Contacts

- 1 Tap the **Messaging** icon to open the Messaging screen.
- 2 Tap **New Message** to open the Compose screen.
- 3 Tap the **Select Contacts** icon to open Contacts, and then tap the check boxes that appear beside the contacts you want to message. To enter the number directly, tap the **To** field and enter the contact number.

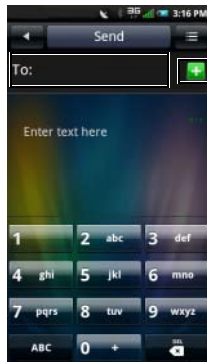

- 1 Select contacts icon
- 4 Enter your message.

 - For other functions such as inserting a picture, tap the **Options** menu button to open the options menu, and tap any of the available options.

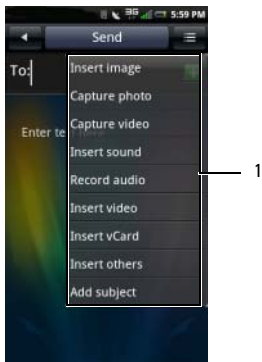


1 Options menu

- Tap **Send** to send your message.

## Replying to a Message

 
- Tap the **Messaging** icon to open the Messaging screen.
- If there is more than one conversation, tap the conversation.
- Tap a bubble to reply.

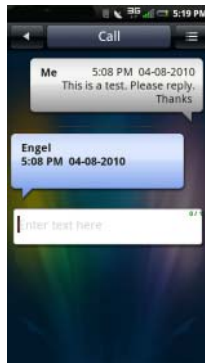

- Enter your message.
- Tap **Send** to send your message.

### Reading Unread Messages

 The **Unread Messages** icon indicates unread messages from the contacts on your Messaging list. Tap the contacts with unread messages to read the messages.

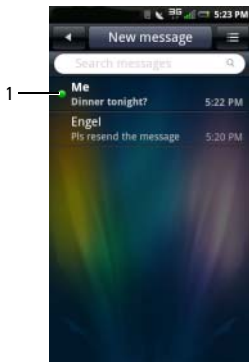

1 Unread message icon


### Viewing Messages

 You can view messages in the **Conversation View** or **Message View** screen. To change view, tap the **Options** menu button, and then tap either **Conversation View** or **Message View**, then tap a message.

In the Conversation View screen, messages are listed as grouped conversation or message threads that are sent to and received from a contact.

In the Message View screen, messages can be sorted according message folders.

1

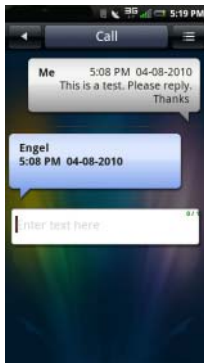

1 Conversation View


2



2 Message View

## Using the Message View

 
- 1 Tap the **Messaging** icon to open the Messaging screen.
- 2 Tap the **Options** menu button, and then tap **Message View**.
- 3 Tap the **Options** menu button, and then tap **Folder View**.
- 4 Tap a folder such as **Inbox**, **Outbox**, **Sent**, **Drafts**, or **Sim Card** to read your messages.

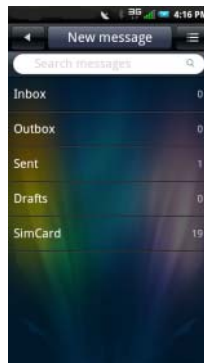

### Messaging Settings

This section provides information about Message Settings including **Delivery reports**, **Request read reports**, **Auto retrieval**, and **Signature**.

 To edit your Messaging settings, tap the **Options** menu button in the Messaging screen and tap **Settings**.

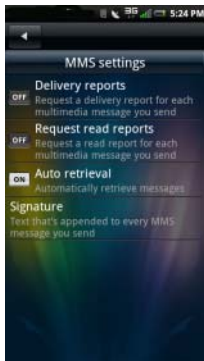

The following settings are available:

#### **Delivery reports**

Select this to request a delivery report for each message you send.

#### **Request read reports**

Select this to request a read report for each message you send.

#### **Auto retrieval**

Select this to retrieve messages automatically.



## Signature

Select this setting to append a signature to your messages. The signature is appended to every MMS message you send.



Tap **OK** to save and exit when you are done.

## Quickoffice

**Quickoffice** allows you to open and view Word files, Excel spreadsheets, PowerPoint presentations, and PDF files saved in your microSD card or downloaded from Email.

- 1 Tap the **Quickoffice** icon to open the Quickoffice screen.
- 2 Tap a location source.
- 3 Browse and tap the file to view.

### Calendar

 
The Calendar lets you assign events such as appointments or specific tasks to a date or time and receive reminders to remind you of the events. You can view your events in a continuous list, by day, by week, or by month. To open the Calendar, tap the **Calendar** icon.



### Using the Calendar

#### Adding a New Event

- 1 Tap the **Calendar** icon to open the Calendar.
- 2 Tap the **Options** menu button, and then tap **New event** or select a date or time in the calendar to open Event details.

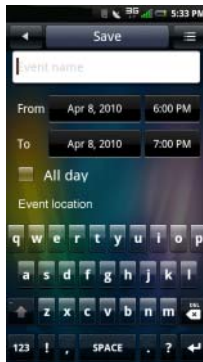

- 3 Select the duration of the event.

- 4 Swipe up the screen to view and enter event details and set reminders.
- 5 Tap the **Save** tab to save and exit.

### Editing an Event

To edit an event, tap the event to view its details, tap the **Options** menu button, and then tap Edit event.

To exit the screen, tap the **Home/Back** button.

### Calendar Views

To select calendar view, tap the **Title bar** and select **Month View**, **Week View**, **Day View**, or **Agenda View**.

### Month view

The blue square on vertical bars represent events you added.



1 Title bar

To view event details, tap a day to view all events on that day, and then select an event to view its details.

 
## Using Applications

To navigate months, slide your finger left or right through the days and past the beginning or end of the month to move to the previous or next month.


To navigate to the current day, tap the **Options** menu button, and then tap **Jump to today**.

### Agenda view

The Agenda view displays all events in the current month.

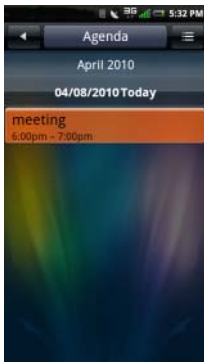

Tap an event to view its details.

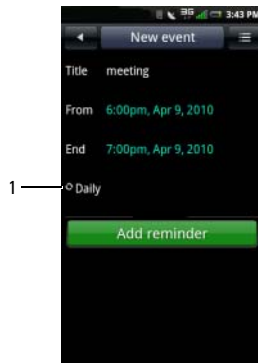 

1 Repeating events icon

Repeating events are marked with the **Repeating events** icon.

To navigate within the current month, slide your finger up or down on the screen.

To navigate to the current day, tap the **Options** menu button, and then tap **Jump to today**.

To exit the screen, tap the **Home/Back** button.

### Week view

The Week view displays the events as blocks.



Tap an event to open the pop-up window that displays more event information. Tap the pop-up window to view the event details.

To navigate within the current week, slide your finger up or down on the screen.

To navigate to the previous or next week, slide your finger left or right on the screen.

To navigate to the current day, tap the **Options** menu button, and then tap **Jump to today**.

To exit the screen, tap the **Home/Back** button.

### Day view

Events are shown tiled and span the time they last. All-day events are displayed at the top of the day list.



Tap an event to open the pop-up window that displays more event information. Tap the pop-up window to view the event details.

To navigate within the current day, slide your finger up or down on the screen.

To navigate to the previous or next day, slide your finger left or right on the screen.

To navigate to the current day, tap the **Options** menu button, and then tap **Jump to today**.

 
To exit the screen, tap the **Home/Back** button.

### Calendar Settings

To edit Calendar settings, tap the **Options** menu button, and then tap **Settings**. You can set up **Hide declined events**, **Set default view**, **Set alert & notifications**, and **Set default reminder** in the Calendar Settings.



- **Set default view** — Select this setting to set the default view for your calendar. You can set your default view to **Month view**, **Week view**, **Day view**, or **Agenda view**.

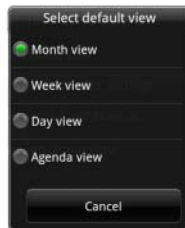

The following settings are available:

- **Hide declined events** — Select to hide all declined events.

- **Set alerts & notifications** — Select this setting to set the type of event reminder you want. You can choose **Alert**, **Status bar notification**, or **Off**.



- **Set default reminder** — Select this setting to set the default reminder time for your events.


To exit the screen, tap the **Home/Back** button.

## Alarm Clock

 To use the Alarm Clock, tap the **Alarm** icon.

### Setting an Alarm

- 1 Tap the **Alarm** icon to open the Alarm Clock.

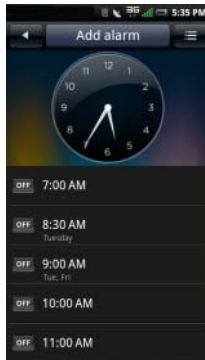



- 2 Tap one of the preset alarms to use and open the Set Alarm screen.



- 3 Tap **Time** to set the alarm time.
- 4 Select an alarm repeat type:
  - **Never** — Tap if you only want the alarm to go off once.
  - **Daily** — Tap to sound the alarm everyday.

- **Work day** — Tap to sound the alarm on week days.
- **Customized repeat** — Tap to repeat the alarm on selected days of the week.

- 5 Tap **Alarm** to turn on the alarm.
- 6 To exit the screen, tap the **Home/Back** button.

## Add More Alarms

- 1 Tap the **Alarm** icon to open the Alarm Clock.
- 2 Tap the **Add alarm** function to add more alarms.

## Changing the Clock Display

- 1 Tap the **Alarm** icon to open the Alarm Clock.



 
1 Clock

- 2 Tap the clock to open the Select clock screen.

- 3 Slide your finger left or right on the screen to browse through the selections at the bottom of the screen, and tap to select the clock you prefer.

## Hiding the Clock

- 1 Tap the **Alarm** icon to open the Alarm Clock.
- 2 Tap the **Options** menu button, and then tap **Hide clock**.

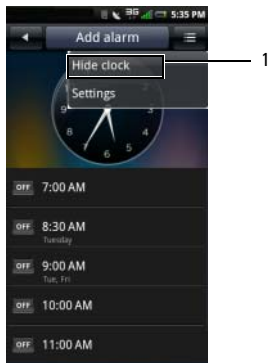

1 Hide clock


- 3 To exit the screen, tap the **Home/Back** button.

## Setting the Date & Time

 See “Date & Time Settings” on page 59.

## Calculator

The Calculator allows you to do basic math operations. To open the Calculator, tap the **Calculator** icon.

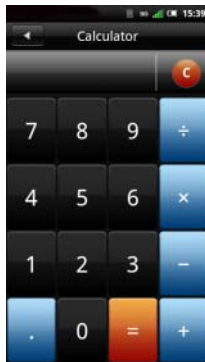

- Tap **C** to clear your entry.
- Use the numeric keys to enter numbers.
- Use +, -, x, ÷, = to perform calculations.
- To exit the screen, tap the **Home/Back** button.

### File Manager

The File Manager allows you to browse and manage the contents of your memory card and phone. To open File Manager, tap the **File Mgr** icon.

### Viewing Stored Files

 
- 1 Tap the **File Mgr** icon to open the File Manager.
- 2 Tap a folder to view files inside the folder.




- 3 To exit the screen, tap the **Home/Back** button.

### Adding New Folders

- 1 Tap the **File Mgr** icon to open the File Manager.
- 2 Tap the **New folder** tab to open the New Folder screen.

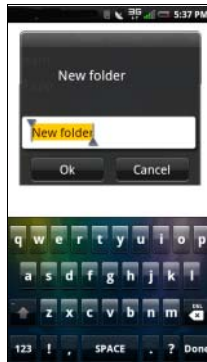

- Enter the folder name.
  -  **NOTE:** Once you start typing, the highlighted preset name “New folder” is deleted.
- Tap **OK** when done.

## Sorting Files and Folders

- Tap the **File Mgr** icon to open the File Manager.
- Tap the **Options** menu button, and then tap **Sort**.
- Tap **name**, **size**, **time**, or **type** to sort your files and folders by name, size, time, or type.



- To exit the screen, tap the **Home/Back** button.


## Deleting Files and Folders

- Tap the **File Mgr** icon to open the File Manager.
- Tap the **Options** menu button, and then tap **Delete**. Check boxes appear beside all the files and folders.
- Tap the check boxes that appear beside the files or folders you want to delete.




## Using Applications

 
- 4 Tap the **Delete** tab, and then tap **Yes** to confirm.

 **NOTE:** You can also select a file or folder directly by tapping and holding the file or folder, and then tapping **Delete**.

## Cut, Copy, and Paste

- 1 Tap the **File Mgr** icon to open the File Manager.
- 2 Tap the **Options** menu button, and then tap **Cut** to cut or **Copy** to copy. Check boxes appear beside all the files and folders.
- 3 Tap the check boxes that appear beside the files or folders you want to cut or copy.

-  **NOTE:** You can also select a file or folder directly by tapping and holding the file or folder and tapping **Copy** or **Cut** on the pop-up menu.

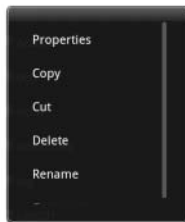

- 4 Select a folder or storage for insertion.
- 5 Tap the **Options** menu button, and then tap **Paste** to move the files or folders to the new destination.
- 6 To exit the screen, tap the **Home/Back** button.

## Searching for Contents

- 1 Tap the **File Mgr** icon to open the File Manager.
- 2 Tap the **Options** menu button, and then tap **Search**. The Search screen appears.
- 3 Enter your search terms, and then tap the **Search** icon to begin the search.

 


1 Search icon

- 4 Your search results are sorted by categories and listed in tabs. Tap the tabs to view the search results.
- 5 Tap the **Home/Back** button to exit the screen.

## Renaming Files or Folders

- 1 Tap the **File Mgr** icon to open the File Manager.
- 2 Tap and hold the file or folder you want to rename to open the pop-up menu.
- 3 Tap **Rename** on the pop-up menu to open the rename screen.

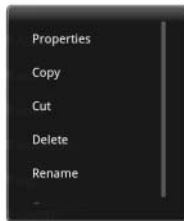

## Using Applications

- 4 Enter the new name, and tap **OK** to save and exit the screen.

## Compressing Files and Folders

- 1 Tap the **File Mgr** icon to open the File Manager.
- 2 Tap and hold the file or folder you want to compress to open the pop-up menu.
- 3 Tap **Compress** on the pop-up menu to open the compress screen.
- 4 Enter the name for your zip file, and tap **OK** to save and exit the screen.

## Decompressing Files and Folders

 
- 1 Tap and hold the file or folder you want to decompress to open the pop-up menu.
- 2 Tap **Decompress**.
- 3 Enter the name for your unzip file, and tap **OK** to save and exit the screen.

## Notes

To open Notes, tap the **Notes** icon.

## Adding Notes

- 1 Tap the **Notes** icon to open the Notes.

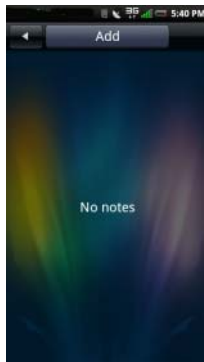




- 2 Tap the **Add** tab. The Create note screen opens.



- 3 Enter the title and the note content.
- 4 Tap the **Save** tab to save notes and exit the screen.

## Reading Notes

 Notes are listed by date added, with the most recent note at the top. You can see the title of each note in the list. Tap the note to view its details.

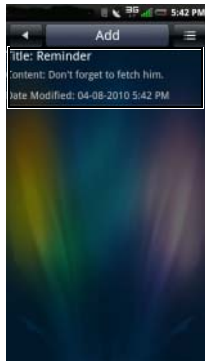

To exit the screen, tap the **Home/Back** button.


### Editing Notes

 - 1 Tap the **Notes** icon to open the Notes screen.
- 2 Tap the note you want to edit to view its details.  
  
Finish editing the note.
- 3 Tap the **Save** tab to save notes and exit the screen.

### Deleting Notes

- 1 Tap the **Notes** icon to open the Notes.
- 2 Tap the **Options** menu button, and then tap **Delete**. Check boxes appear beside all the notes.

- 3 Tap the check boxes that appear beside the notes you want to delete.

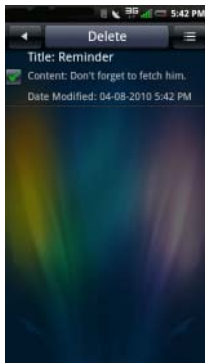


- 4 Tap the **Delete** tab to delete the note.
- 5 Tap **OK** to confirm.
- 6 To exit the screen, tap the **Home/Back** button.


## Tasks

 Tasks allows you to keep track of tasks you need to do. To open the Tasks, tap the **Tasks** icon.

### Creating New Tasks

- 1 Tap the **Tasks** icon to open the Tasks screen.
- 2 Tap the **Add** tab to open the Create Task screen.
- 3 Enter the task title, date and time, task details, priority, and status.
  -  **NOTE:** Swipe up the screen to add the priority and status.

- 4 Tap the **Save** tab to save the task.

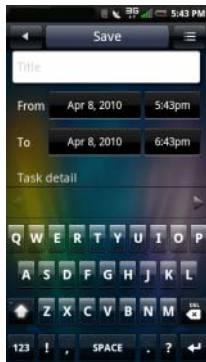

- 5 Tap the **Home/Back** button to exit the screen.

### Editing Tasks

- 1 In the main Tasks screen, tap the task that you want to edit.
- 2 The Edit Task screen opens. Make the required edits to the task.

## Using Applications

- 3 Tap the **Save** tab to save the task.
- 4 Tap the **Home/Back** button to exit the screen.

## Deleting Tasks

 
- 1 In the main Tasks screen, tap the **Options** menu button, and then tap **Delete**. Check boxes appear beside all the tasks.
- 2 Tap the check boxes that appear beside the tasks you want to delete.
- 3 Tap the **Delete** tab to delete the task.

## World Clock

World Clock allows you to view and add the time in other major cities and time zones around the world. To open World Clock, tap the **World Clock** icon.

## Viewing Clocks


- 1 Tap the **World Clock** icon to open the World Clock.

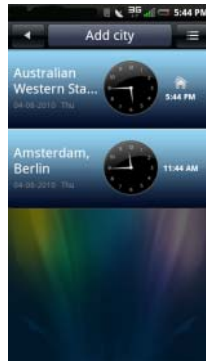

- 2 Slide your finger up and down to browse the clocks.

## Adding Clocks

- 1 Tap the **World Clock** icon to open the World Clock screen.
- 2 Tap the **Add City** tab.
- 3 Tap the city or time zone to add the clock.
- 4 Tap the **Add City** tab to add the clock and exit the screen.

 **NOTE:** If your city does not appear in the World Clock, choose a city with the same time zone. Once the city is added, tap the city to rename it.

## Deleting Clocks

- 1 Tap the **World Clock** icon to open the World Clock screen.
- 2 Tap the **Options** menu button, and then tap **Delete City**. The Delete City screen opens.
- 3 Tap the check boxes that appear beside the names of the clocks you want to delete.



- 4 Tap the **Delete City** tab, and then tap **OK** to confirm deletion and exit the screen.

## World Clock Settings

Tap the **Options** menu button to access the clock settings (see “Date & Time Settings” on page 59).

### Search

To open Search, tap the **Search** icon.

### Using Search

 
#### Simple search

- 1 Enter the word to search on the Search bar.



- 2 Tap the **Search** icon to begin search.

- 3 Your search results are sorted by categories and listed in tabs. Select the tabs to view the search results.

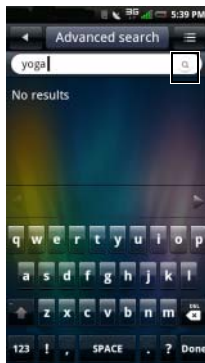

## Selecting Search Categories

- 1 Tap the **Search** icon to open Search screen.
- 2 Tap the **Options** menu button, and then tap **Settings** and **Search Category**.
- 3 Tap the check boxes that appear beside the categories you want to include in your search.



 
- 4 Tap the **Done** tab to save and exit the screen.

## Advanced Search


- 1 Tap the **Search** icon to open Search screen.



- 2 Tap the **Advanced search** tab to open the Advanced Search screen.

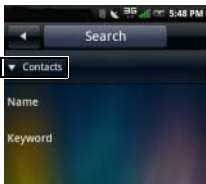

 - 3 Tap the tick to open the pop-up menu, and then tap your search preference: **Contacts**, **Message**, **Email**, **File**, **Call log**, or **Web History**.

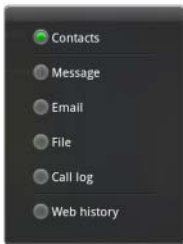

- 4 Enter the search terms.

- 5 Tap the **Options** menu button, and then tap **Search** to begin search.

## Index Statistic

- 1 Use Index statistic to view the number of records you have in each program. Tap the **Search** icon to open Search.
- 2 Tap the **Options** menu button, and then tap **Index**. The Index screen opens.
- 3 Tap **View by location** or **View by category**.
- 4 Slide your finger up and down to view the entire list.
- 5 Tap the **Home/Back** button to exit the screen.

## DM Service

The **DM Service** application allows you to check and update your smartphone's software.

- 1 Tap the **DM Service** icon.
- 2 Tap **Software Update**.
- 3 Select an option:




- **Software version** — View the current software version.
- **Find software updates** — Check for software updates.
- **Install updates** — Install the software updates.

## Backup


The **Backup** application allows you to create a backup file on your SD card for **Contacts, SMS, MMS, Call log, Settings, Tasks, Calendar, Email, Browser, Notes, Alarm Clock,** and **Multimedia.**

### Backup Your Mobile Contacts, Messages, and Settings

- 1 Tap **Backup** to open the Backup screen.
- 2 Tap the items you want to save into the backup file.
  -  **NOTE:** By default, all items are selected.
- 3 Tap the **Options** menu button to open the options menu.

- 4 Tap **To storage card.**
- 5 Tap **OK** to accept the provided file name or use the QWERTY keyboard to change it, and then tap **OK.**


### Restore Your Mobile Contacts, Messages, and Settings From the Backup File

- 1 Tap **Backup** to open the Backup screen.
- 2 Tap **Restore.**
- 3 Tap the file name of the backup file you want to restore.
- 4 Tap the items from the backup file that you want to restore to the smartphone.
- 5 Tap the **Options** menu button to open the options menu.
- 6 Tap **Restore.**
- 7 Tap **OK** to restore.
  -  **NOTE:** When reverting to the backup file, the current data of that file in the smartphone is overwritten.

- 8 Exit the menu. The selected data from the backup file is now available for use.

## Managing Applications

### Uninstalling an Application

 **NOTE:** Certain preloaded applications can be moved, but cannot be deleted.

- 1 Tap the **Settings** icon.
- 2 Tap **Manage applications** to view the list of installed applications.
- 3 Tap **Uninstall**.
- 4 Tap **Yes** to confirm.

### Clearing Application Data

- 1 Tap the **Settings** icon.
- 2 Tap **Manage applications** to view the list of installed applications.
- 3 Tap the application you want to delete data.
- 4 Tap **Clear data**.

- 5 Tap **OK** to confirm.

### Clearing Application Cache

- 1 Tap the **Settings** icon.
- 2 Tap **Manage applications** to view the list of installed applications.
- 3 Tap the application you want to clear cache.
- 4 Tap **Clear cache**.


### Stopping an Application

- 1 Tap the **Settings** icon.
- 2 Tap **Manage applications** to view the list of installed applications.
- 3 Tap the application you want to stop.
- 4 Tap **Force stop**.

## Dell Desktop Suite

You can synchronize the information on your computer with the information on your device. Synchronization compares the data on your device with your PC and updates both the computer and your smartphone with the most recent information. Using synchronization, you can:

- Synchronize information to get the latest information in all locations.
- Transfer files between your device and a PC.
- Backup data stored on the phone.
- Upgrade smartphone software when a software upgrade is available.

 **NOTE:** Dell Desktop Suite may not be preinstalled on all devices. Download the latest software from [Support.Dell.com/Aero](http://Support.Dell.com/Aero)

## Installing Dell Desktop Suite

Before beginning synchronization, you must install the Dell Desktop Suite on your computer.

On some models, the Dell Desktop Suite comes installed on the microSD card. To see if the application is shipped on your device, open the **File Manager** application on your computer, to view the contents on your SD card. The Dell Desktop Suite will be in **Dell Desktop Suite** folder.

If Dell Desktop Suite is not preloaded on your microSD card, or if you simply want to get the latest version, please visit [Support.Dell.com/Aero](http://Support.Dell.com/Aero).

### Installing Dell Desktop Suite from the microSD card:

- 1 Connect your smartphone to a USB connector on your computer with the USB to mini-USB cable that shipped with your phone.
- 2 In the menu that appears on your screen, tap **Mass Storage** (USB Mass Storage Mode). Your computer displays the phone memory as **Removable disk (X:)** in **My Computer**, where X is the drive letter on your computer. The drive letter on your computer may vary.
- 3 Double-click **Removable disk (X:)**.

- 4 In the **Dell Desktop Suite** folder, drag the file to your computer desktop. Double-click the installation file and follow the instructions.

### Connecting the Smartphone

After installing the Dell Desktop Suite, connect a USB cable to the mini USB port on the device and to a PC. The PC will detect your device automatically.



**NOTE:** You will be prompted to change the phone USB mode. Select **SYNC MODE** to enable synchronization via USB cable.



**NOTE:** Dell Desktop Suite will automatically notify you when there is a software upgrade available for your smartphone or for the Dell Desktop Suite.



**NOTE:** You can find Dell Desktop Suite help after installing and opening the software by choosing **Help > Help Content**.

# Index

## A

### Account settings

- Authentication, 117
- From name, 117
- Password, 117
- Port (Incoming), 117
- Protocol, 117
- Read Limit, 117
- Reply mails with the original, 117
- Signature, 118

### Alarm Clock

- Add more alarms, 177
- Change clock display, 178
- Hide the clock, 178
- Set an alarm, 176
- Set up date & time, 59

### AllSport GPS, 148

### Android Market, 158

### Application Settings

- Phone Lock Setting, 92
- SD card & phone storage, 93
- SIM card lock, 91

### AT&T Games, 150

### AT&T Maps, 144

### AT&T Music, 148

## B

### Bluetooth

- Pairing, 87

## C

### Calculator, 179

## Index

### Calendar

- Add a new event, 170
- Agenda view, 172
- Day view, 174
- Edit an event, 171
- Month view, 171
- Week view, 173

### Calendar Settings

- Hide declined events, 175
- Set alerts & notifications, 176
- Set default reminder, 176
- Set default view, 175

### Camera

- Camera mode, 140
- Using the camera, 140
- Using the video recorder, 142
- Video recording mode, 142

### Contacts, 76

## D

Delivery reports, 168

Dell Desktop Suite, 195

### Display settings

- Set brightness manually, 57
- Set up screen time out, 58
- Setting compatibility mode, 58
- Turn on the auto brightness, 57

## E

### Entering text

- Activating the Keyboard, 45
- Changing the language, 48
- HandWriting, 52
- Numbers or symbols, 51
- Phone Keypad, 53
- QWERTY, 49
- Select input method, 47

**F**

## File Manager

- Add new folders, 180
- Compress files or folders, 184
- Cut, copy, and paste, 182
- Decompress files or folders, 184
- Delete files and folders, 181
- Search for contents, 183
- Sort files and folders, 181
- View stored files, 180

**G**

- Google Maps, 154
- Google Talk, 154
- GPS, 62

**I**

- IMAP Idle, 118

**L**

- Latitude, 156

**M**

## Mail

- Add an account, 114
- Delete messages, 120
- Receive Emails, 119
- Remove an account, 118
- Send Emails, 119
- Set up, 116

## Media Center, 122

## Messaging

- Open Message View, 167
- Read unread messages, 166
- Reply to a message, 165
- Send messages to contacts, 164

## Messaging Settings

- Auto retrieve, 168

## Mobile Banking, 153

## Index

Mobile TV, 153

### Music

- Browse, 122
- Create a playlist, 127
- Manage playlist, 127
- Music player, 124

## N

### Network Settings

- Mobile settings, 91

### Notes

- Add notes, 184
- Delete notes, 186
- Edit notes, 186
- Read notes, 185

## P

Phone Display panel, 38

### Picture

## 200

Browse pictures, 133

Crop a picture, 135

Delete a picture, 134

Edit a picture, 134

Resize a picture, 135

Share a picture, 136

View slideshow, 134

### Picture settings

Confirm deletions, 137

Picture sort, 137

Repeat slideshow, 137

Shuffle slides, 137

Slideshow interval, 137

Slideshow transition, 137

Thumbnail size, 136

Product overview, 24

## Q

Quickoffice, 169



**R**

Radio, 148

Recorder, 143

Ringtone, 65

**S**

Search

Advanced search, 191

Index statistic, 192

Select search category, 191

Simple search, 190

Status bar, 32

**T**

Text Encoding, 103

To Do List

Create new tasks, 187

Delete tasks, 188

Edit tasks, 187

Touch screen

Drag items, 30

Scroll right/left, 30

Scroll up/down, 30

Selection, 28

Zoom in, 29

**V**

Video

Browse, 128

Delete multiple videos, 130

Video player, 132

View property, 130

**W**

Where, 147

World Clock

Add clocks, 189

## Index

Delete clocks, 189

View clocks, 188

## Y

YouTube, 160

YPmobile, 151

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>