

To comply with FCC rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

The 53000 Series remote control works only with door openers and light controls having a green "SRT" button and green indicator light.

Instructions are given below for programming your opener to match the remote control's code. The additional remote control buttons can also activate other garage door openers and/or light controls. (Instructions for programming light products are included with those accessories.)

### Program the Opener to Accept the Remote Control Code

Select a remote control push button to operate the receiver. The *large* button is recommended for use with the garage door opener.

1. Press and HOLD the selected remote control push button, Figure 1.
2. Then press and release the green "SRT" button on the right side panel of the opener in Figure 2. The opener light will flash once.
3. Release the remote control push button.

Now the opener will operate when the remote control push button is pressed.

If you release the remote control push button before the opener light flashes, the opener has not accepted the code.

### To Change the Selected Push Button On the Same Remote Control

If you decide to use a different remote control button than originally programmed into the opener, you need to erase *all* the learned codes and reprogram each remote control used to operate the garage door opener.

### To Erase All Remote Control Codes

- Press and hold the green "SRT" button on the opener panel until the indicator light turns off (about 6 seconds). **All the codes the opener has learned will be erased.**
- To reprogram, repeat Steps 1 – 3 for each remote control in use.

Code programming instructions are also located on the opener panel.

### Replacement Parts:

3-Function remote control housing only (no circuit board) - 41A4873;  
Compact remote control housing only (no circuit board) - 41A4874;  
3V 2016 Lithium Battery - 10A19 (2 required); Visor Clip - 29B134




## WARNING

Children operating or playing with a garage door opener can injure themselves or others. *The garage door could close and cause serious injury or death. Do not allow children to operate the door push button(s) or remote control(s).*


*A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.*

FIGURE 1

 Select a remote control push button to operate opener

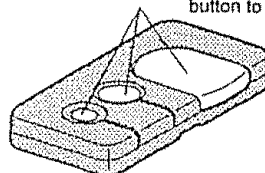


3-Function Remote Control

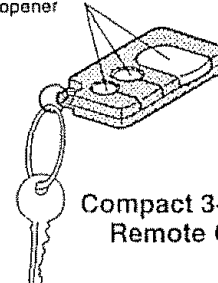 

Compact 3-Function Remote Control

### 53000 Series Garage Door Openers (With Green "SRT" Button and Green Indicator Light)

 FIGURE 2

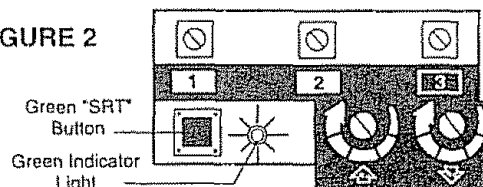

## WARNING

 
Keep batteries away from small children. If swallowed, promptly notify doctor.

### The Remote Control Batteries

The lithium batteries should produce power for up to 5 years. Replace batteries *positive side down*, as follows.

**3-Function remote:** Use the visor clip or screwdriver blade to pry open the case as shown. To replace the cover, insert the 3 tabs at the opposite end and snap shut.

**Compact remote:** Use a screwdriver blade to pry open the case as shown. To replace cover, snap shut along both sides

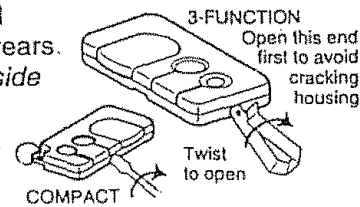

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>