

READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

Automatic Drip Coffeemaker

**USE AND CARE GUIDE FOR
MODEL ME5B**



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using appliance.
- Do not touch hot surfaces. Use handles or knobs.
- Do not immerse cord, plug or appliance in water or other liquid. See instructions for cleaning.
- Close supervision is necessary when this appliance is used near children.
- This appliance is not for use by children.
- Unplug from outlet when not in use. Unplug and allow to cool before putting on or taking off parts, and before cleaning appliance.
- To disconnect, switch OFF, then remove plug from wall outlet.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
- Use attachments only if recommended by the manufacturer.
- Do not use outdoors, or while standing in a damp area.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Only use appliance as indicated in these instructions.
- Be certain lids are securely in place before operating appliance.
- Keep lid on carafe while serving coffee and brewing.
- This carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with abrasive cleansers, steel wool pads, or other abrasive material.
- Do not remove filter basket or lids during brewing cycles, scalding may occur.
- Do not remove carafe from hot plate while liquid is dripping from basket.
- Allow filter basket to cool before removing it from coffeemaker.
- Do not pour liquid other than water and the cleaning solution specified in this manual into the water reservoir. (See instructions for cleaning the coffeemaker.)

- Do not move entire unit when carafe contains hot liquid.
- **WARNING:** Do not remove bottom cover. No user serviceable parts inside. Repair must be done by authorized service personnel only.

SAVE THESE INSTRUCTIONS


THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG: This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER: If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electric circuit from other operating appliances.

Product may vary slightly from illustration

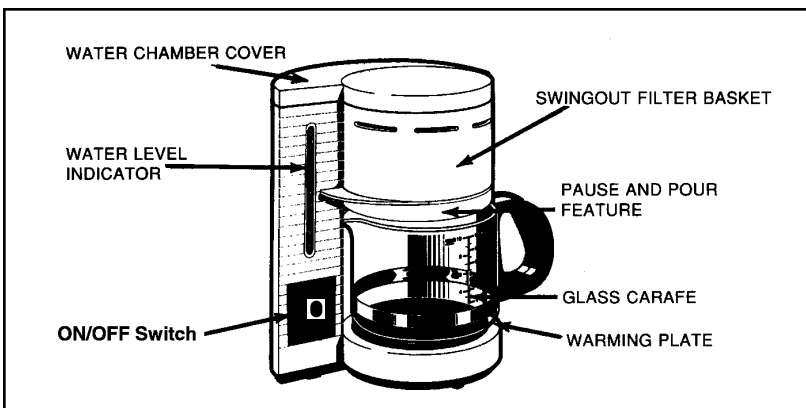

BEFORE USING YOUR COFFEEMAKER

Before preparing coffee in your new coffeemaker, thoroughly clean the carafe, carafe lid, removable filter basket, and water chamber cover in hot, sudsy water. Rinse and dry. Replace disassembled parts. Clean the inside of the coffeemaker by brewing two full carafes of tap water (see “**BREWING INSTRUCTIONS**”). Do not place coffee in filter basket for this initial cleaning. **Note:** At the end of first cycle, turn coffeemaker “**OFF**” and wait ten minutes. Turn unit “**ON**” and brew second carafe of water.

SPECIAL CARE FOR YOUR CARAFE

A damaged carafe may result in possible burns from hot liquid. To avoid breaking the carafe:

- Do not allow all liquid to evaporate from carafe. Do not heat carafe when empty.
- Discard if damaged in any manner. A chip or crack could result in breakage or contaminate liquid contents with glass particles. To order new carafe contact Consumer Service.
- Never use abrasive scouring pads or cleaners as they may scratch and weaken the glass.
- Do not place carafe on or near a hot gas or electric burner, in a heated oven, or in a microwave oven.
- Avoid rough handling and sharp blows.

COFFEE FILTERS

Number 2 cone-shaped paper filters are available locally at grocery stores and where coffeemakers are sold. The use of basket-style filters is not recommended, since they do not conform to the shape of the filter basket and may cause coffee to back up and spill over during brewing.

COFFEE YIELD

Note: A 5-ounce cup is the American industry standard and is used by most coffeemaker manufacturers. To fill up your favorite mug, fill coffeemaker water chamber with enough water for 2 cups (10 ounces).

BREWING INSTRUCTIONS

1. Plug coffeemaker into any 120V ~ 60Hz outlet.
2. Fill carafe with cold tap water and pour into water chamber. Markings on the carafe indicate level of water required to brew desired number of cups or use the markings on the water level indicator. Not less than two cups is recommended when using 5-cup and 10-cup units. **Note:** The amount of brewed coffee will always be less than the amount of water placed into coffeemaker, since 10% is absorbed by coffee grounds and filter.
3. Place coffee filter in filter basket. Use a #2 paper cone filter. Measure

one level teaspoon of drip or regular grind coffee for each cup of coffee desired. For stronger or milder coffee, adjust amount of coffee to suit your taste.

4. Return filter basket to closed position.
5. Place carafe on warming plate.
6. Switch control to **“ON.”**
7. If you wish to serve a cup of coffee before brew cycle is completed, simply remove carafe from warming plate. Dripping will automatically cease. Return carafe to position on warming plate within 45 seconds; dripping will resume.
8. Upon completion of the brew cycle, wait about one minute until the brew drip from the filter basket into the carafe has stopped. Carafe lid should be kept in place to facilitate safe serving and help keep coffee at proper serving temperature.
9. To keep coffee hot, return carafe to the warming plate after serving. The warming plate will automatically cycle to maintain ideal serving temperature as long as the coffeemaker is on.
10. Switch to **“OFF”** when carafe is empty or when unit is not in use.
11. To brew another carafe of coffee, turn unit **“OFF”** and wait 10 minutes to allow heating element to cool. **Important:** If unit is not allowed to cool before immediate repeated use, water placed in water chamber may become overheated and a spray of steam could be released from opening, creating a risk of burns.

BREWING A SECOND POT OF COFFEE

As mentioned above, it is recommended that the coffeemaker should be in **“OFF”** position for 10 minutes between cycles, in order to allow unit to cool. While unit is in **“OFF”** position, dispose of used coffee filter, and rinse carafe and filter basket in water. Place a fresh filter in basket. Repeat brewing procedure.

HINTS FOR GREAT TASTING COFFEE

- A clean coffeemaker is essential for making great tasting coffee. Regular cleaning, as specified in **“CARE AND CLEANING OF YOUR COFFEEMAKER”** is highly recommended.
- Always use fresh, cold water in your coffeemaker.
- Finer grinds, such as drip and ADC coffee, promote fuller extraction and provide rich, full-bodied coffee. Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
- For optimum flavor, buy whole beans and grind them just before brewing.
- Do not re-use coffee grounds since this will greatly impair coffee flavor.
- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
- Small oil droplets on the surface of brewed coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Over-extraction may also cause oiliness, indicating a need to clean your coffeemaker.

CARE AND CLEANING OF YOUR COFFEEMAKER

Always make sure coffeemaker is unplugged and warming plate is cool before attempting to clean. After daily use, the filter basket and carafe should be washed in hot, sudsy water, rinsed and dried. Wipe exterior with a damp cloth to remove superficial stains. For stubborn stains, use a nylon or plastic pad with a non-abrasive cleanser. Do not use metal scouring pads or abrasive cleansers.

Special cleaning of your coffeemaker is recommended at least once a month, depending on frequency of use and quality of water used in the unit. If water in your area is especially hard, the following cleaning procedure should be performed every two weeks, since minerals in water can detract from the flavor of the coffee and possibly lengthen brew time.

1. Fill carafe with one part white vinegar to three parts cold water. Pour water and vinegar solution into the water chamber.
2. Place a paper filter in the filter basket and swing to closed position. Place carafe on warming plate. Plug into a 120V ~ 60Hz outlet and switch control to **"ON."** During cleaning, more steam will occur than during normal brewing.
3. Keep the coffeemaker on until carafe is half full. Switch control to **"OFF."** When liquid stops dripping from filter basket into the carafe, remove the basket and carafe and allow liquid to cool in the carafe for 15 minutes. When cooled, pour liquid back into the water chamber.
4. Replace basket and return carafe to warming plate.
5. Switch control to **"ON."** Repeat procedure, allowing all the cleaning solution to empty into the carafe. After dripping has stopped, discard contents of carafe.
6. After allowing coffeemaker to cool for 10 minutes, rinse it out by brewing a carafe full of cold water. Make sure to insert a fresh filter into the filter basket before brewing.
7. At end of the brew cycle, switch control to **"OFF."** Discard water in the carafe. Remove used filter and wash carafe and filter basket in hot sudsy water. Dry parts.
8. When coffeemaker has cooled, wipe exterior with a dry cloth.

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

IMPORTANT NOTICE

*If any parts are missing or defective,
DO NOT return this product.*

Please call our Customer Service Department for assistance.

800-233-9054 Monday - Friday 9:00 am - 5:00 pm CST

Thank You

ONE-YEAR LIMITED WARRANTY

This Salton, Inc. product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton, Inc. option) when the product is returned to the Salton, Inc. facility within the warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CUSTOMER SERVICE stating that you are a consumer with a problem.

In-Warranty Service (USA) for an appliance covered under the warranty period, no charge is made for service or postage.

In-Warranty Service (Canada) for an appliance covered under the warranty period, no charge is made for service or postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Customs duty/brokerage fee, if any, must be paid by the consumer.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$15.00 (U.S.) for return shipping and handling.

Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose

the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Salton, Inc.
708 South Missouri St.
Macon, MO 63552
Consumer Service: 1-800-233-9054
Consumer Parts: 1-800-947-3745
Hours: 9:00 a.m. - 5:00 p.m. CST

For more information on Salton, Inc. products:

visit our website: URL <http://www.salton-maxim.com> or
E-mail us at SALTON550@aol.com

This Melitta product is distributed and serviced by Salton, Inc.

Printed in China

©1999 Salton, Inc.

®Reg. T.M. of a company of the Melitta Group

Part No. 60492

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>