

THE
SHARPER
IMAGE

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for the life of the original purchaser from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS Consumer Relations
Service Center Dept. 168
3000 Pontiac Trail
Commerce Township, MI 48390
No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: www.siproducts.com

For service or repair - do not return this unit to the retailer.

Contact SI PRODUCTS Consumer Relations at 1-888-856-6781.

©The Sharper Image. All rights reserved. THE SHARPER IMAGE name and logo are registered trademarks.

THE
SHARPER
IMAGE

Sound Soother® 20 Soothing Sounds



Instruction Manual and
Warranty Information

EC-B100

1 year
limited warranty



Experience maximum relaxation.

Thank you for purchasing The Sharper Image® Sound Soother® with 20 Soothing Sounds.

This product, along with the entire The Sharper Image collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. End each day with the relaxing sounds of nature. Wake up refreshed to the gentle rhythms of your favorite soothing selection. Sleek in design, escape from everyday stress with the luxury of twenty digital soothing sounds.

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

- To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in a wet or moist condition.

Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.

WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

SAVE THESE INSTRUCTIONS

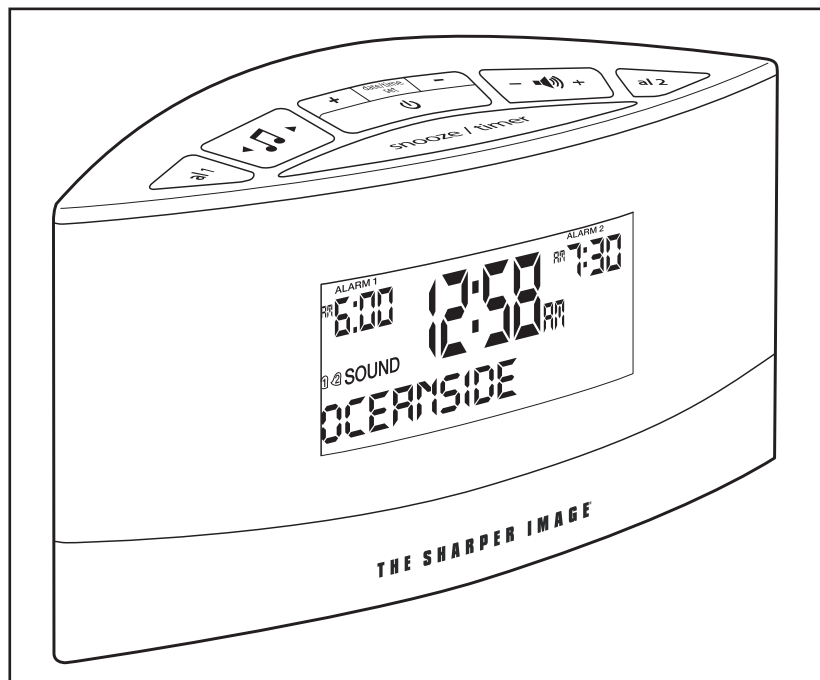


Fig. 1

Sound Soother® Features:

- 20 Digitally Recorded Sounds: Aviary, Brook, City, Dockside, Ebb Tide, Everglades, Fireside, Foghorns, Heartbeat, North Woods, Oceanside, Rain, Rainforest, Roadside, Steam Train, Summer Night, Surfs Up, Thunderstorm, White Noise, Wind Chimes.
- Easy-to-read illuminated LCD with white backlight displays time & sound name
- Dual Alarm Clock for individual wake times
- Choice of two Alarm Wake Modes: Soothing Sounds or Beep Tone
- Snooze automatically set for nine minutes for extended sleep
- Digital volume control adjusts the volume of your sound selection
- 2-pc speaker included (2.5" in diameter)
- Powered by 3V DC (a total of 3 (three) AA batteries (not included)) or 6V 300mA (120V input) AC/DC adaptor (included)

Battery installation:

Alarm clock uses an AC adaptor (included) or 3 (three) AA batteries (not included).

The battery power is designed only to provide MEMORY BACK-UP for the clock and alarm settings. Three AA batteries (not included) should be inserted following the polarity marked in the battery compartment if memory back-up is desired (in the event of power outages or if the unit is unplugged). However, the time will not be illuminated on the clock display. As soon as the power supply returns, the display will indicate the correct time.

NOTE: Battery must be installed in order for clock memory back-up to operate. In the event of a power failure or disconnection, if the battery is not installed, the clock and alarm will need to be re-set when power is restored.

Battery Precautions

- Use only the size and type of batteries specified.
- When installing batteries, observe proper +/- polarities. Incorrect installation of battery may cause damage to the unit.
- Do not mix different types of batteries together (e.g., alkaline with carbon-zinc or old batteries with new ones).
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
- Do not dispose of batteries in fire. Batteries may explode or leak.

POWER:

Plug adapter into a 120V AC outlet and plug the receptacle end into the input jack on the back of the unit. Press the POWER button (located center of top panel) to turn the sound on or off.

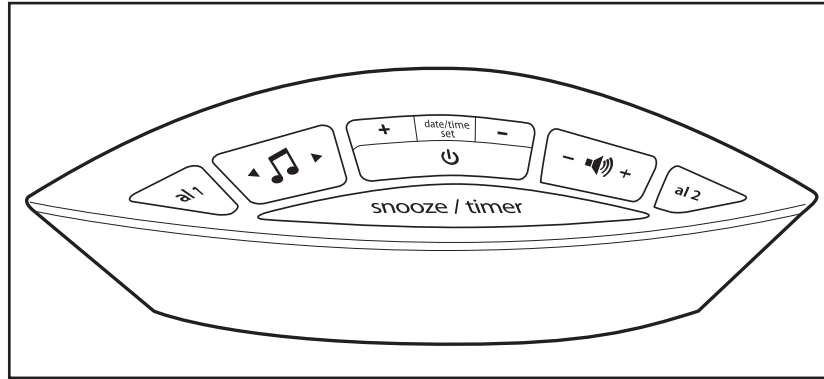



Fig. 2

Choosing the Sound Selection:

1. Press the POWER button. 
2. Press the right side of the MUSICAL NOTE ">" button for the next nature sound (short press). Long press and hold to fast forward.
3. Press the left side of the MUSICAL NOTE "<" button for previous nature sound (short press). Long press and hold to go backwards quickly.

(Refer to Fig.2)

NOTE: The digital display should show the sound number with the respective sound name.

Volume Control:

- Press "+" to increase the volume level.
- Press "-" to decrease the volume level.

Setting the Clock:

1. Long press and hold the DATE/TIME SET button (for more than 3 seconds) and press "+" and "-" to "INCREASE" (+) and "DECREASE" (-) to the time you desire. Press it again once to set Year > Month > Day > Hour > Minute > Exit.

NOTE: AM/PM choice will be made at this time.

2. Short press DATE/TIME SET button once, it will display the date. Press twice, it will display the time. Normal time display will return after 5 seconds.

(Refer to Fig.2)

Setting and Using the Alarm:

For your convenience, two separate alarms may be set to accompany individual wake-up times.

- al 1 = "Alarm 1"
- al 2 = "Alarm 2"

(Refer to Fig.2)

al 1 Button

Short press al 1 button: Set Alarm mode, Beep, Sound, Off

The Alarm 1 bell icon will appear next to the selected mode when alarm is set.

Press and hold the al 1 button:

1. The "ALARM 1" icon illuminates, time flashes for hour (HH), press "-/+ " button to change HOUR setting.
2. Press Alarm 1 button to confirm and change to the minute setting. Time flashes for minutes (MM), press "-/+ " button to change MINUTE setting, wait for timeout to save and go back to normal mode.
3. The digital display will then show "ALARM 1" icon after you have successfully set the ALARM 1 time.

al 2 Button

Short press the al2 button: Set Alarm mode, Beep, Sound, Off

The alarm 2 bell icon will appear next to the selected mode when alarm is set.

Press and hold the al 2 button:

1. The "ALARM 2" icon illuminates, time flashes for hour (HH), press "-/+ " button to change hour setting.
2. Press Alarm 2 button to confirm and change to minute setting. Time flashing for minutes (MM), press "-/+ " button to change Minute setting, wait for timeout to save and go back to normal mode.
3. The digital display will then show "ALARM 2" icon after you have successfully set the ALARM 2 time.

Snooze:

When the alarm sounds, press the SNOOZE/TIMER button to snooze. This will automatically activate snooze time for nine minutes. Press the POWER button to turn snooze off.

Timer:

When the power is on and you are listening to a nature sound, you may set a timer so the unit will automatically turn off.

1. Toggle through the SNOOZE/TIMER button until you find the time of your choice, 15, 30, 45 or 60 minutes.
2. To cancel the timer, toggle through the SNOOZE/TIMER button until the LED light says "OFF" or press POWER.

(Refer to Fig.2)

Settings located on back:

DC IN:

DC Jack for adaptor plug-in.

Daylight Savings Time:

Slide the DST ON/OFF button to activate or inactivate the Daylight Savings Time feature, which will automatically adjust for Daylight Savings Time.

BACKLIGHT:

Choose between three settings of brightness on your display: HI, MED or LO.

Maintenance

To Store

You may leave the unit on display, or you can store it in its box in a cool, dry place.

To Clean

Use only a soft dry cloth to clean the enclosure of the unit.
NEVER use liquids or abrasive cleaner to clean.

Modifications not authorized by the manufacturer may void user warranty.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>