

MYPAL

A716 Pocket PC


Quick Start Guide




Getting to know MyPal


Front features

Back features

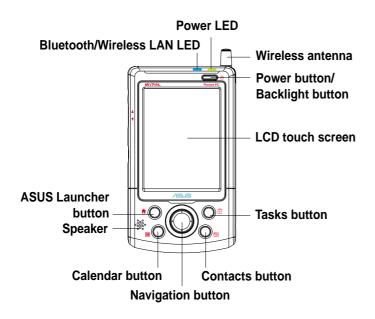

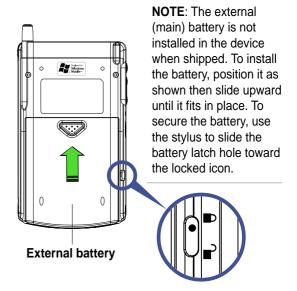



Side features

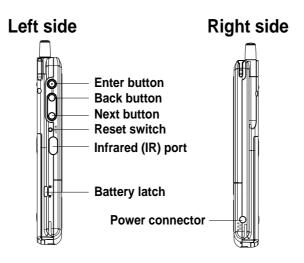


Top features

 Bottom features

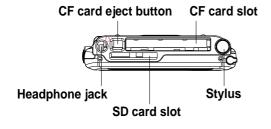





Setting up MyPal

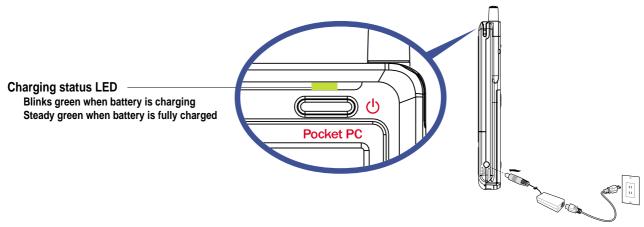

Connect the AC adapter cable to the connector at the bottom of the device.

Connect the power plug to a grounded power source. Note that the charging status LED blinks green.

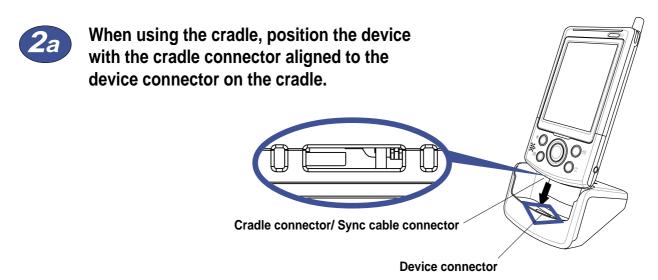

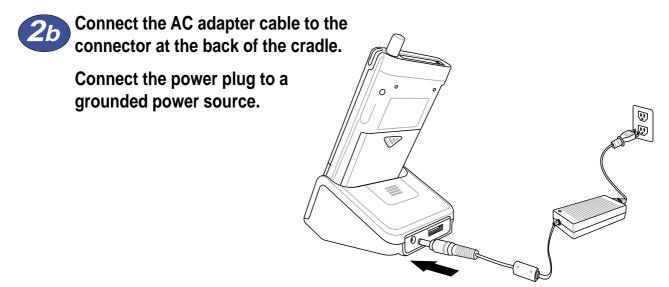

Synchronizing MyPal

Use the Companion CD to install the Microsoft® ActiveSync® on your desktop computer. ActiveSync is already installed on your device.

NOTE Do not connect your device to your computer until you have installed ActiveSync.

Connect the flat plug of the USB sync cable to the connector at the bottom of the device.


Connect the USB plug to a USB port on your computer.



When using the cradle, connect the flat plug of the USB sync cable to the connector at the back of the cradle.


Connect the USB plug to a USB port on your computer.

Connect the AC adapter.

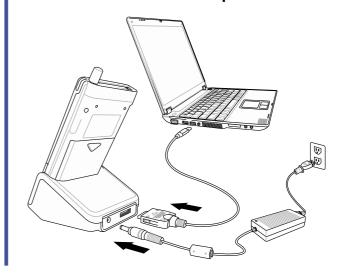

Upon connection, your device is automatically synchronized with your computer.

Synchronization status on MyPal

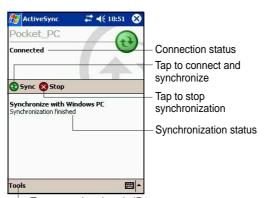

 Tap to synchronize via IR or change synchronization settings

Synchronization status on your computer




Pocket PC Software

Your device bundles the Pocket PC 2003 which includes several applications such as Microsoft® Pocket Outlook, Pocket Word, Pocket Excel, MSN Messenger, Windows® Media Player, and Microsoft® Reader.


Today screen

The Today screen appears when you turn on your device. The Today screen gives you a summary of the important information for the day. Tap any of the listed items with the stylus to display the details.

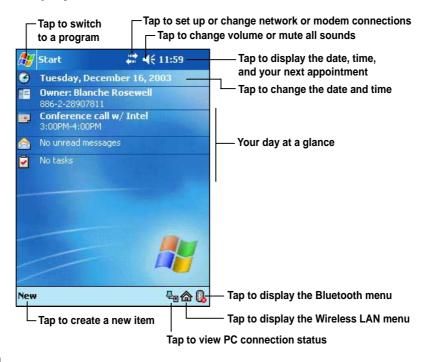

Start menu

From the Start menu, you can select programs, settings, and Help topics. To display the Start menu, tap the **2** icon from the top of the screen.

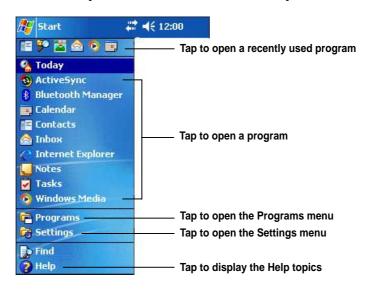

MyPal basics

Use any one of the following ways to enter information on your device

• **Typing** Tap the arrow on the lower right corner of the screen, select Keyboard.

Writing Tap the Pen button on the command bar, use the stylus to write.
 Drawing Tap the Pen button on the command bar, use the stylus to draw.

• Recording Press the Record button on the side of the device, or tap the Record button on

the recording toolbar.


Typing



Writing



Drawing

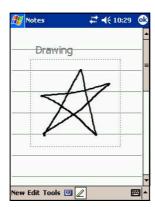

Recording



Reference information

Refer to the following sources of additional information for the ASUS MyPal A716

Operation MyPal A716 user's manual

Online Help Windows Pocket PC Help (on your device)

ActiveSync Help (on your computer)

Web sites and technical support

Technical support: +886-2-2894-3447 ext. 7122

Support Fax: +886-2-2890-7698
Support e-mail: tsd@asus.com.tw
Web site: www.asus.com.tw

Online forum: www.asusnetq.com.tw Software download: download.asus.com.tw Electronic magazine: www.asusmag.com.tw

Pocket PC web site: www.microsoft.com/mobile/pocketpc

15-06A101000

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com