

EncryptTight Enforcement Point (ETEP) Installation Guide

EncryptTight acts as a transparent overlay that integrates easily into any existing network architecture, providing encryption rules and keys to EncryptTight Enforcement Points.

EncryptTight consists of a suite of tools that performs various tasks of appliance and policy management, including Policy Manager (PM), Key Management System (KMS), and EncryptTight Enforcement Points (ETEPs).



Customer Support Information

Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500)
FREE technical support 24 hours a day, 7 days a week: Call 724-746-5500 or fax 724-746-0746
Mailing address: Black Box Corporation, 1000 Park Drive, Lawrence, PA 15055-1018
Web site: www.blackbox.com • E-mail: info@blackbox.com

Table of Contents

About This Document	7
Contacting Black Box Technical Support.....	7
Chapter 1: Product Overview	9
ETEP Introduction.....	9
ET0010A Physical Description.....	11
Front Panel Connectors.....	11
Status Indicators.....	12
Rear Panel.....	13
ET0100A Physical Description.....	13
Front Panel Connectors.....	14
LED Indicators.....	14
Rear Panel.....	15
ET1000A Physical Description.....	16
Front Panel Connectors.....	16
LED Indicators.....	16
Rear Panel.....	18
Features.....	19
Specifications.....	20
Chapter 2: Installation	23
Before You Start.....	23
Safety Guidelines.....	23
Software Requirements.....	24
ETEP Site Preparation.....	25
Firewall Ports.....	26
Installing the ET0010A.....	26
Cabling Requirements: ET0010A.....	27
Unpacking the Shipping Carton: ET0010A.....	27
Installation Instructions: ET0010A.....	28
Rack Mount Installation.....	28
Solid Surface Installation.....	31
Connecting the Cables: ET0010A.....	33
Powering On the ET0010A.....	34
Installing the ET0100A.....	35
Cabling Requirements: ET0100A.....	35
Unpacking the Shipping Carton: ET0100A.....	36
Rack-Mount Installation: ET0100A.....	36
Connecting the Cables: ET0100A.....	37
Powering on the ET0100A.....	38
Installing the ET1000A.....	39
Cabling Requirements: ET1000A.....	40
Unpacking the Shipping Carton: ET1000A.....	41
Rack Mount Installation: ET1000A.....	41

Connecting the Cables: ET1000A	42
Powering on the ET1000A.....	43
Shutting Down the ETEP	45
Chapter 3: Initial Setup.....	47
Overview	47
Logging In Through a Serial Link	47
Configuring the Management Port	48
Setting the Date and Time	51
Entering a Throughput License.....	52
Configuration Example.....	53
Managing the ETEP	53
Chapter 4: Maintenance	55
Preventative Maintenance.....	55
What To Do If an Appliance Fails.....	56
Obtaining a License for Replacement Units	56
Replacing the ET1000A Power Supply	56
Tamper Switch and Zeroization	58
Cable Pinouts.....	59
RS-232 Serial Cable: ET0010A.....	59
RS-232 Serial Cable: ET0100A/ET1000A.....	60
Chapter 5: Troubleshooting.....	61
Symptoms and Solutions	61
LED Indicators	61
Error State	62
Temperature Threshold and Discarded Traffic	62
Diagnostic Code Display	63
Status Codes: ET0010A.....	63
Diagnostic Codes: ET0100A and ET1000A	64
Appendix A: Environmental and Regulatory Information.....	65
WEEE Directive.....	65
RoHS Directive.....	65
Regulatory Information.....	66
ET0010A Regulatory Information	66
Safety	66
Immunity.....	66
Emissions.....	66
FCC Information (USA).....	66
Interference-Causing Equipment Standard Compliance Notice (Canada).....	67
European Notice	67
ET0100A Regulatory Information	67
Safety	67
Immunity.....	67
Emissions.....	67
FCC Information (USA).....	67
Interference-Causing Equipment Standard Compliance Notice (Canada).....	68
European Notice	68

ET0100A Cabling	68
ET1000A Regulatory Information	68
Safety	68
EMI/EMC	68
FCC Information (USA)	69
Interference-Causing Equipment Standard Compliance Notice (Canada).....	69
European Notice	69
Normas Oficiales Mexicanas (NOM): Electrical Safety Statement	69
Index.....	71

About This Document

Purpose

The *ET VSE-series Installation Guide* describes how to cable and install the Black Box™ ETEP EncrypTight Enforcement Points.

Intended audience

This document is intended for use by network technicians and security administrators who are familiar with setting up and maintaining network equipment.

Assumptions

This document assumes that its readers have an understanding of the following:

- Basic principles of TCP/IP networking, including IP addressing, switching and routing.
- Personal computer (PC) operation and common PC terminology
- Terminal emulation software and FTP operations.

Conventions used in this document

Bold	Indicates one of the following: <ul style="list-style-type: none">● a menu title● the name of a command● the name of a parameter
<i>Italics</i>	Indicates a new term
Monospaced	Indicates machine text, such as terminal output or a file name
Monospaced bold	Indicates a command to be issued by the user

Contacting Black Box Technical Support

Contact our FREE technical support, 24 hours a day, 7 days a week:

Phone 724-746-5500
Fax 724-746-0746
e-mail info@blackbox.com
Web site www.blackbox.com

1 Product Overview


This section includes the following topics:

- [ETEP Introduction](#)
- [ET0010A Physical Description](#)
- [ET0100A Physical Description](#)
- [ET1000A Physical Description](#)
- [Features](#)
- [Specifications](#)

ETEP Introduction

The EncrypTight Enforcement Point (ETEP) Variable Speed Encryptors (VSEs) are purpose-built encryption appliances that provide multi-layer data protection. With straightforward setup and configuration, the ETEP has the flexibility to provide Ethernet frame encryption for Layer 2 networks, IP packet encryption for Layer 3 networks, and Layer 4 data payload encryption for MPLS networks.

The ETEP's variable speed capability lets you enable just the bandwidth you need, using a software license. As your bandwidth needs increase, simply update your license. No need to replace your hardware. The ET VSE-series offer full-duplex, line rate encryption from 3 Mbps to 1 Gbps using the AES-256 encryption algorithm.

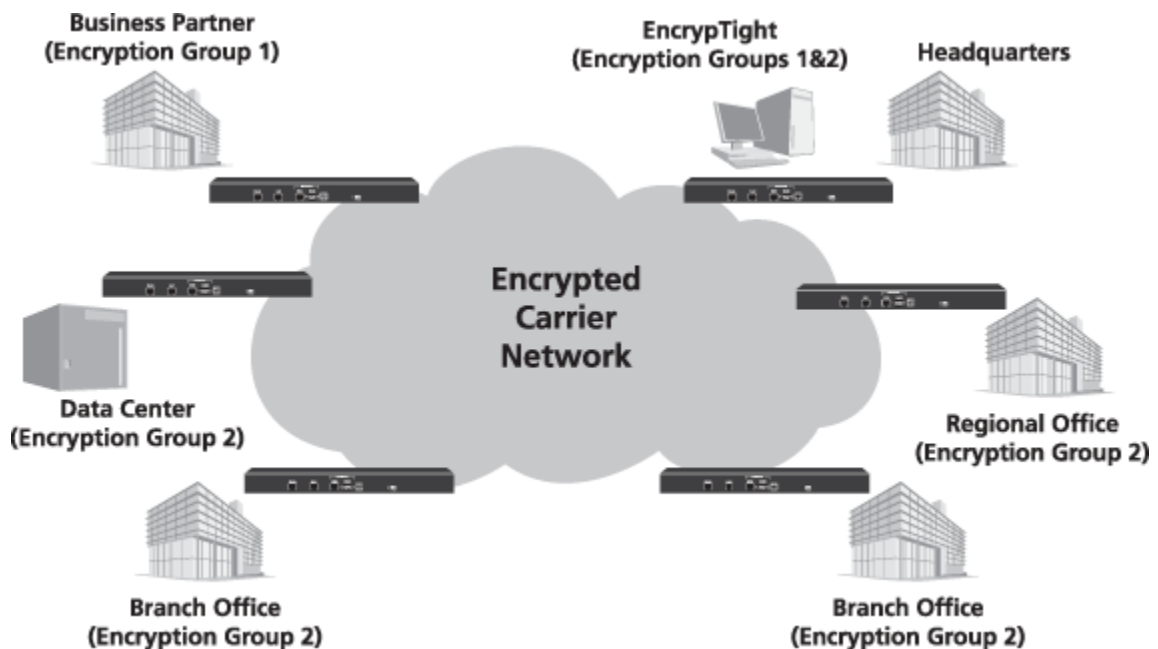Figure 1 Multipoint Ethernet Encryption using EncrypTight

The ETEP interfaces with network equipment through two data ports, the local port and the remote port. Unencrypted traffic that originates from a trusted, local network is received on the local port, where the ETEP applies security processing to it. The encrypted traffic is then sent from the remote port to an untrusted network such as the Internet. At the opposite endpoint the process is reversed. Encrypted traffic is received on the ETEP remote port and decrypted. Then the decrypted traffic is sent from the local port to the destination.

The ETEP is managed in-line or out-of-band through a dedicated Ethernet management interface. The ETEP can be managed in two ways, depending on the size and complexity of your deployment:

- **Command Line Interface (CLI)**

The CLI is all you need to manage a standalone deployment, typically a pair of ETEPs. CLI commands are available to perform initial setup of the ETEP, along with diagnostic and troubleshooting commands. In Layer 2 deployments, you can configure the ETEPs for operation and create Layer 2 point-to-point policies using the CLI commands.

- **EncrypTight Policy and Key Manager™**

EncrypTight is an application for managing group encryption deployments. EncrypTight separates the functions of policy management, key generation and distribution, and policy enforcement. As a result, multiple ETEPs can use common keys. This works for complex mesh, hub and spoke, and multicast networks, as well as in straightforward point-to-point topologies. [Figure 1](#) shows ETEPs deployed in a multipoint Ethernet network.

EncrypTight includes the following components:

- EncrypTight Element Management System (ETEMS) for appliance configuration and management
- EncrypTight Policy Manager (ETPM) for policy definition and deployment
- EncrypTight Key Management System (ETKMS) for key generation and distribution


ET0010A Physical Description

The ET0010A is a rack-mountable encryptor that can run at speeds ranging from 3-50 Mbps. It has three data ports on the front panel labeled Remote, Local, and Aux1. The following sections describe the ET0010A connectors and LED indicators.

Front Panel Connectors

The ET0010A front panel connectors are shown in [Figure 2](#).

Figure 2 ET0010A Front Panel Connectors

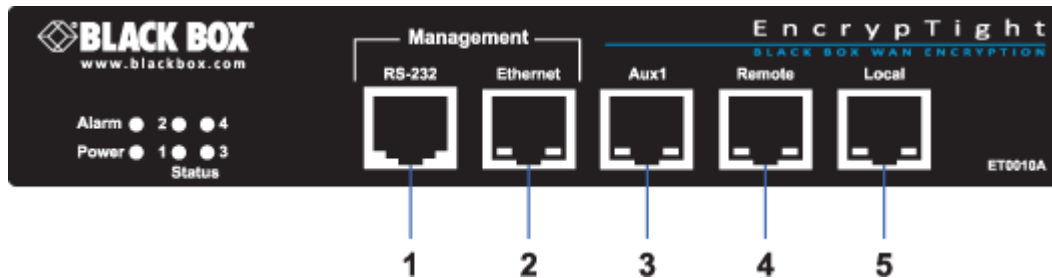


Elements in [Figure 2](#):

- 1) RS-232 management port
- 2) Ethernet management port
- 3) Auxiliary port (not enabled in this release)
- 4) Remote port (encrypted traffic):
- 5) Local port (clear traffic):

Status Indicators

The ET0010A status indicators are shown in [Figure 3](#). The status indications are described in [Table 1](#).

Figure 3 ET0010A Status Indicators

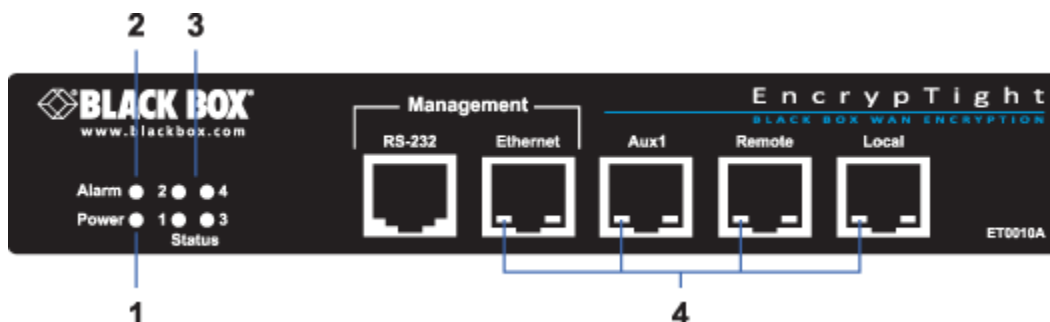

Elements of [Figure 3](#):

- 1) Power LED
- 2) Alarm LED
- 3) Status indicators
- 4) Link indicators

The following table describes how to interpret the ET0010A status indicators.

Table 1 ET0010A Status Indicators

Indicator Light	State	Indication
Power (green)	Off	Unit is powered off.
	On	Unit is powered on.
10/100 link status (green) ^a	Off	Loss of signal on the 10/100 link.
	On	The 10/100 link is up but no traffic is passing over the link.
	Blinking	Indicates the presence of traffic on the 10/100 link.
Gigabit link status (amber) ^a	Off	Loss of signal on the Gigabit link.
	On	The Gigabit link is up but no traffic is passing over the link.
	Blinking	Indicates the presence of traffic on the Gigabit link.
Alarm (green)	Off	Normal operation.
	On	The unit is in an error state. This occurs when the diagnostics detect a boot failure, a critical error threshold is exceeded, or a FIPS test fails when the ETEP is in FIPS mode.
Status (1,2,3,4)	Off	Unit is up and operational.
	On	Displays diagnostic codes during boot up.

a. The link status LEDs are on the remote and local data ports, Ethernet management port, and Aux1 port.

Rear Panel

The ET0010A rear panel and external power supply are shown in [Figure 4](#).

Figure 4 ET0010A Rear Panel and External Power Supply



Elements of [Figure 4](#):

- 1) External power supply power connector
- 2) Rear panel power connector


ET0100A Physical Description

The ET0100A is a rack-mountable encryptor that can run at speeds ranging from 100–250 Mbps. The following sections describe the connectors and LED indicators that appear on the front and rear panels of the ET0100A.

Front Panel Connectors

The ET0100A front panel connectors are shown in [Figure 5](#).

Figure 5 ET0100A Front Panel Connectors

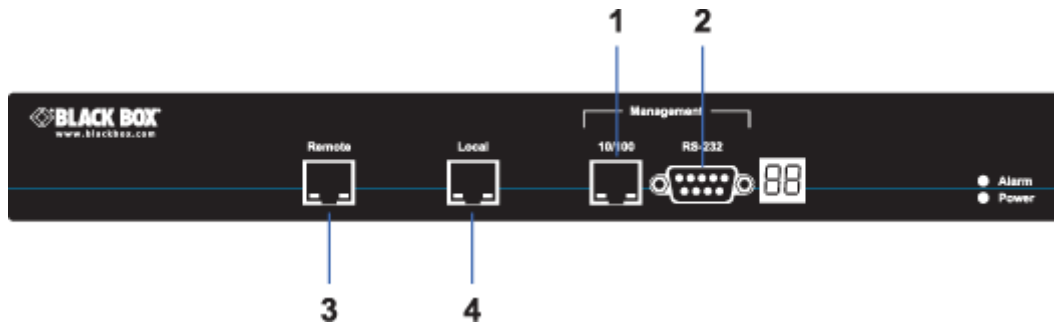


Elements of [Figure 5](#):

- 1) 10/100 Ethernet management port
- 2) RS-232 port
- 3) Remote port (encrypted traffic)
- 4) Local port (clear traffic)

LED Indicators

The ET0100A LED indicators are shown in [Figure 6](#). The LED indications are described in [Table 2](#).

Figure 6 ET0100A LED Indicators

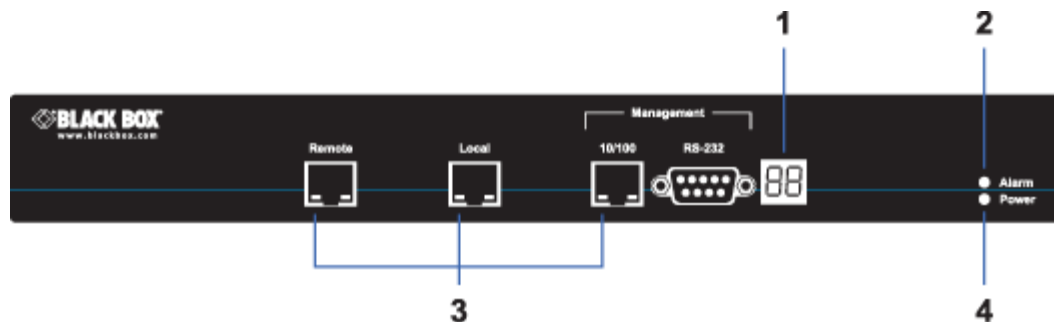

Elements of [Figure 6](#):

- 1) Diagnostic display
- 2) Alarm LED
- 3) Link indicators
- 4) Power indicator

The following table describes how to interpret the LEDs on the ET0100A front panel.

Table 2 ET0100A Front Panel LED Indicators


Indicator Light	State	Indication
Power (green)	Off	Unit is powered off.
	On	Unit is powered on.
Ethernet port status (green) ^a	Off	Loss of signal on the 10/100 link.
	On	The link is up but no traffic is passing over the link.
	Blinking	Indicates the presence of traffic on the 10/100 link.
Gigabit link status (amber) ^a	Off	Loss of signal on the Gigabit link.
	On	The Gigabit link is up but no traffic is passing over the link.
	Blinking	Indicates the presence of traffic on the Gigabit link.
Alarm (green)	Off	Normal operation.
	On	The unit is in an error state. This occurs when the diagnostics detect a boot failure, a critical error threshold is exceeded, or a FIPS test fails when the ETEP is in FIPS mode.
Diagnostic code display	On	Displays diagnostic codes during boot up. After boot up, it reflects the operational state of the appliance and error conditions.

a. The link status LEDs are on the remote and local data ports, and Ethernet management port.

Rear Panel

The ET0100A rear panel is shown in [Figure 7](#).

Figure 7 ET0100A Rear Panel

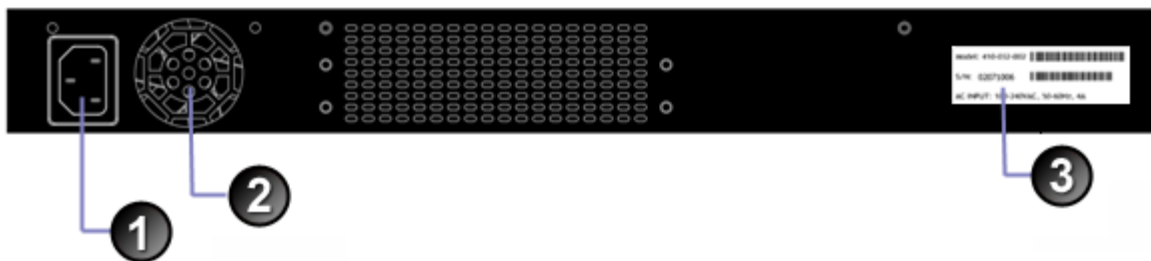

Elements of [Figure 7](#):

- 1) Power receptacle
- 2) Fan
- 3) Product ID label


ET1000A Physical Description

The ET1000A is a rack-mountable 1 Gbps encryptor with dual power supplies. It can operate at speeds ranging from 500 Mbps–1 Gbps. The following sections describe the ET1000A connectors and LED indicators.

Front Panel Connectors

The ET1000A front panel connectors are shown in [Figure 8](#).

Figure 8 ET1000A Front Panel Connectors

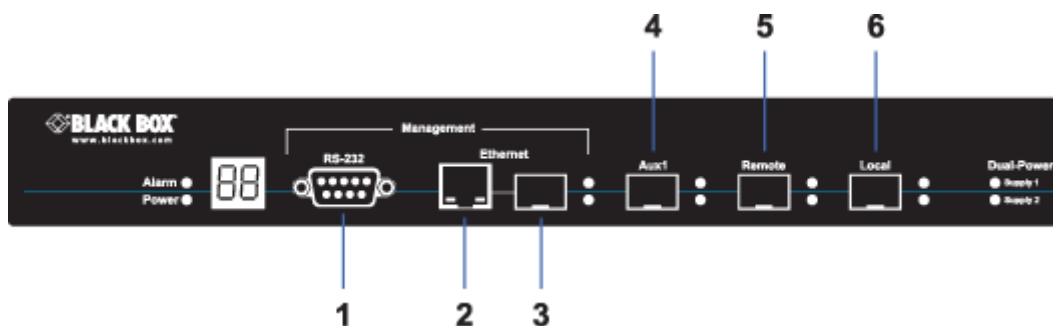


Elements of [Figure 8](#):

- 1) RS-232 serial port
- 2) 10/100 Ethernet management port
- 3) Gigabit Ethernet management port (not enabled in this release)
- 4) Aux1 port (not enabled in this release)
- 5) Remote port (encrypted traffic)
- 6) Local port (clear traffic)

LED Indicators

The ET1000A LED indicators are shown in [Figure 9](#). The LEDs are described in [Table 3](#).

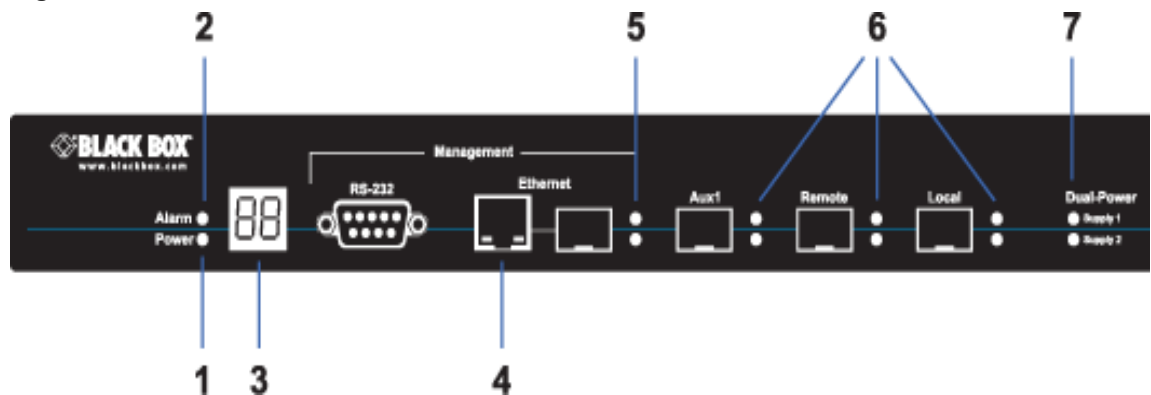Figure 9 ET1000A LED Indicators

Elements of [Figure 9](#):

- 1) Power LED
- 2) Alarm LED
- 3) Diagnostic display
- 4) Link indicators: 10/100 Ethernet management port
- 5) Link indicators: Gigabit management port
- 6) Link indicators: Aux1, Remote and Local ports
- 7) Power supply status LEDs

[Table 3](#) describes how to interpret the LEDs on the ET1000A front panel.

Table 3 ET1000A Front Panel LED Indicators


Indicator Light	State	Indication
Power (green)	Off	Unit is powered off.
	On	Unit is powered on.
Alarm (green)	Off	Normal operation.
	On	The unit is in an error state. This occurs when the diagnostics detect a boot failure, a critical error threshold is exceeded, or a FIPS test fails.
Diagnostic code display	On	Displays diagnostic codes during boot up. After boot up, it reflects the operational state of the appliance and error conditions.
10/100 link status (green)	Off	Loss of signal on the 10/100 link.
	On	The 10/100 link is up but no traffic is passing over the link.
	Blinking	Indicates the presence of traffic on the 10/100 link.
Gigabit link status (green) ^a	Off	Loss of signal on the Gigabit link.
	On	The Gigabit link is up but no traffic is passing over the link.
	Blinking	Indicates the presence of traffic on the Gigabit link.
Power supply status	Off	Power supply is not operational. Possible causes include power supply unplugged, power supply removed from chassis, or a malfunction.
	On	Power supply is operational.

a. Gigabit links include the remote and local data ports, gigabit Ethernet management port, and Aux1 port.

Rear Panel

The ET1000A rear panel is shown in [Figure 10](#).

Figure 10 ET1000A Rear Panel

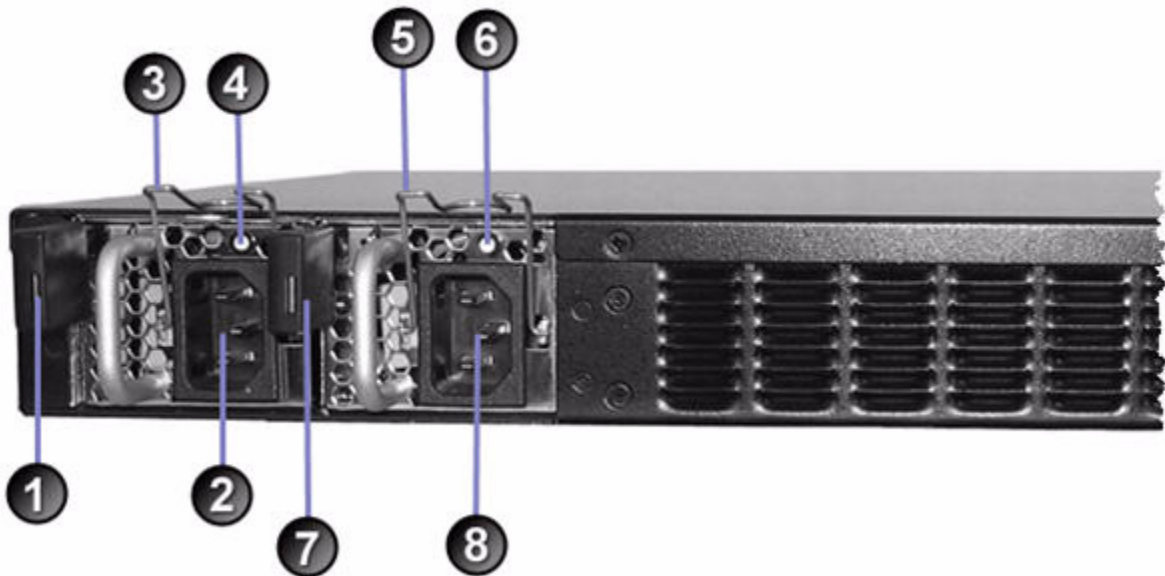

Elements of [Figure 10](#):

Power Supply # 2

- 1) Release lever for power supply 2
- 2) Power supply 2 receptacle
- 3) Power cord clip for power supply 2
- 4) Status LED for power supply 2. Green indicates normal operation. Red indicates a power fail state.

Power Supply # 1

- 5) Power cord clip for power supply 1
- 6) Status LED for power supply 1. Green indicates normal operation. Red indicates a power fail state.
- 7) Release lever for power supply 1
- 8) Power supply 1 receptacle

Features

ETEPs share many of the same features and capabilities across hardware models, as shown in [Table 5](#). Hardware differences between the ETEP models are summarized in [Table 4](#).

Table 4 ETEP Hardware Comparison

Model	Form Factor	Data Port Speed	Data Port Interface	Mgmt Port Interface	Auxiliary port	Dual Power Supplies
ET0010A	1u rack-mount	(2) 3–50 Mbps	RJ-45	RJ-45	Yes	No
ET0100A	1u rack-mount	(2) 100–250 Mbps	RJ-45	RJ-45	No	No
ET1000A	1u rack-mount	(2) 500–1000 Mbps	SFP	RJ-45 and SFP	Yes	Yes

The ETEP features are summarized in [Table 5](#).

Table 5 ETEP Feature Summary

Category	Feature
Throughput	<ul style="list-style-type: none"> ET0010A: Supports encrypted throughput rates of 3, 6, 10, 25 and 50 Mbps ET0100A: Supports encrypted throughput rates of 100, 155, and 250 Mbps ET1000A: Supports encrypted throughput rates of 500, 650, and 1000 Mbps
Encryption Support	<ul style="list-style-type: none"> Advanced Encryption Standard (AES): FIPS 197 (256 bit keys) 3DES: ANSI X9.52 (168 bit keys), standard CBC mode User-configurable for Layer 2 Ethernet or Layer 3 IP encryption, with option to encrypt only the Layer 4 payload
Authentication Methods	<ul style="list-style-type: none"> X.509 v3 digital certificates (management interface) HMAC-SHA-1-96 HMAC-MD5-96
Encapsulation Modes	<ul style="list-style-type: none"> Layer 2: Ethernet payload encryption Layer 3: IPSec Tunnel mode with original IP header preservation IPSec Transport mode for Layer 4 payload encryption option
Device Management	<ul style="list-style-type: none"> EncryptTight software for device and policy management Out-of-band management Alarm condition detection and reporting Syslog support SNMPv2c and SNMPv3 managed object support Audit logging Management access using X.509 v3 digital certificates Security options include TLS, SSH, IKE/IPsec

Table 5 ETEP Feature Summary

Category	Feature
Network Support	<ul style="list-style-type: none"> • Ethernet • VLAN tag preservation • MPLS tag preservation • Jumbo frame support (ET0100A, CEP100-XSA, CEP1000, ET1000A) • Link state pass-through • IPv4 • IPv6 (Layer 2 Ethernet encryption mode) • NTP • Host or gateway packet reassembly option
Policy Selector Options	<ul style="list-style-type: none"> • Source or destination IP address • Source or destination port number • Protocol ID (Layer 3 IP packet and Layer 4 payload options) • VLAN ID (Layer 2 encryption option) • Multicast address

Specifications

This section lists the mechanical and environmental specifications for the following ETEP models:

- ET0010A specifications are listed in [Table 6](#)
- ET0100A specifications are listed in [Table 7](#)
- ET1000A specifications are listed in [Table 8](#)

Table 6 ET0010A Mechanical and Environmental Specifications

Category	Specification
Interfaces	(2) 10/100 Mbps Ethernet ports for encrypting and decrypting traffic (1) 10/100 Mbps Ethernet auxiliary port (ET0010A only, not enabled) 10/100/1000 Mbps auto-sensing Ethernet LAN port for management RS-232 port for management

Table 6 ET0010A Mechanical and Environmental Specifications

Category	Specification
ET0010A Electrical/Mechanical Dimensions	19 inch rack mount design 1u tamper evident chassis Dimensions: 1.6" H x 8.0" W x 5.8" D Weight (without external power supply), 1 pound 4 ounces External power supply: <ul style="list-style-type: none"> • Weight: 11 ounces • Input voltage: 100-240 VAC @ 1.5 amps, 50/60 Hz, auto-sensing • Output voltage: 12 VDC @ 5 amps Nominal input current: 0.25 amps Nominal power dissipation: 36 watts Thermal power: In-rush 102 BTU/hour, steady state 102 BTU/hour
Environmental	Operating temperature: 0 to 40 degrees C (32 to 104 degrees F) Operating humidity: Up to 90% (non-condensing) Operating altitude: -200 to 10,000 feet AMSL
Regulatory	See "ET0010A Regulatory Information" on page 66.

Table 7 ET0100A Mechanical and Environmental Specifications

Category	Specification
Interfaces	(2) 10/100/1000 Mbps Ethernet ports for encrypting and decrypting traffic 10/100 Mbps auto-sensing Ethernet LAN port for management RS-232C port for management
Electrical/Mechanical Dimensions	19 inch rack mount design 1U tamper evident chassis Dimensions: 1.75" H x 17" W x 10" D Weight: 6 pounds 100-240 VAC @ 4 amps, 50/60 Hz, auto-sensing Nominal input current: 1.0A Nominal power dissipation: 65 watts Thermal power: In-rush 380 BTU/hour, steady state 140 BTU/hour
Environmental	Operating temperature: 0 to 40 degrees C (32 to 104 degrees F) Operating humidity: Up to 90% (non-condensing) Operating altitude: -200 to 10,000 feet AMSL
Regulatory	See "ET0100A Regulatory Information" on page 67.

Table 8 ET1000A Mechanical and Environmental Specifications

Category	Specification
Interfaces	<p>(2) Gigabit Ethernet ports for encrypting and decrypting traffic (single mode, multimode, or copper)</p> <p>10/100 Mbps auto-sensing Ethernet LAN port for management</p> <p>RS-232C port for management</p> <p>(1) Auxiliary Gigabit port for data traffic (not enabled)</p> <p>(1) Gigabit Ethernet port for management (not enabled)</p>
ET1000A Electrical/Mechanical Dimensions	<p>19 inch rack mount design</p> <p>1U tamper evident chassis</p> <p>Dimensions: 1.75" H x 17" W x 15.5" D</p> <p>Weight: 10 pounds</p> <p>100-240 VAC @ 3-1.5A, 47-63 Hz, auto-sensing</p> <p>Nominal input power: 72 watts</p> <p>Maximum power: 90 watts</p> <p>Nominal input current: 0.65 A @ 110V</p> <p>Thermal power, single power supply: In-rush 266 BTU/hour, steady state 222 BTU/hour</p> <p>Thermal power, dual power supplies: In-rush 440 BTU/hour, steady state 263 BTU/hour</p>
Environmental	<p>Operating temperature: 0 to 40 degrees C (32 to 104 degrees F)</p> <p>Operating humidity: Up to 90% (non-condensing)</p> <p>Operating altitude: -200 to 10,000 feet AMSL</p>
Regulatory	See "ET1000A Regulatory Information" on page 68.

2 Installation

This section includes the following topics:

- [Before You Start](#)
- [Installing the ET0010A](#)
- [Installing the ET0100A](#)
- [Installing the ET1000A](#)
- [Shutting Down the ETEP](#)

Before You Start

Before you prepare the ETEP for installation, review the following information:

- [“Safety Guidelines” on page 23](#)
- [“Software Requirements” on page 24](#)
- [“ETEP Site Preparation” on page 25](#)
- [“Firewall Ports” on page 26](#)

Safety Guidelines

The ETEP does not contain any field-replaceable internal parts. Do not remove the unit’s cover for any reason. The cover is to be removed only by authorized Black Box service personnel.

Authorized service personnel should review the following safety information prior to performing service or maintenance procedures on the ETEP.



Disconnect all power cords before servicing.

**WARNING**

The ETEP contains a lithium battery, which users should not attempt to replace. Battery replacement must be performed by qualified Black Box personnel. Risk of explosion if battery is replaced by an incorrect type. Used batteries should be disposed of according to the manufacturer's instructions.

**CAUTION**

Electrostatic discharge (ESD) can damage electronic components and equipment. ESD occurs when electronic components are improperly handled and can result in complete or intermittent failures. Always follow ESD-prevention procedures when removing and replacing components.

Qualified service personnel should use the following guidelines to prevent ESD damage:

- Always use an ESD wrist or ankle strap and ensure that it makes skin contact.
- Connect the equipment end of the strap to an unpainted metal chassis surface.
- If no wrist strap is available, ground yourself by touching the metal chassis.

Software Requirements

ETEP software is factory installed on the appliance. A backup copy of the software is provided on the ETEP CD. To learn how to reinstall your software or install an update, refer to the user guide for your management software.

If you are using EncrypTight to manage your ETEPs, you will need to install the EncrypTight software on the management station to configure the ETEPs for network operation and to create and deploy policies. See the *EncrypTight User Guide* for more information about using ETEPs in a EncrypTight deployment.

The third party software listed in [Table 9](#) is used when managing the ETEP in a standalone deployment. See the *EncrypTight User Guide* for additional third party software you may want to install when using in EncrypTight to manage EncrypTight appliances.

Table 9 Third party management station software

Software	How it's used	Vendor
FTP server	Copies files to and from EncrypTight appliances, including log files and new firmware	Microsoft FTP server, included with Windows XP
SFTP server (optional: available with ETEP 1.6 and later)	Secures file transfers to and from EncrypTight appliances	Cerberus FTP Server 4 – Professional Edition
PDF reader	Opens the user documentation files on the product CD	Adobe Acrobat Reader version 6.0 or higher. Free download available from www.adobe.com .
SSH client (ETEPs)	Securely connects to the ETEP CLI	PuTTY, included with the ETEMS installation

ETEP Site Preparation

Most ETEP models can be mounted in a standard 19-inch rack using the supplied mounting kit, or simply placed on a rack shelf or solid surface. Before installing the ETEP in a 19-inch rack, consider the following guidelines:

- *Ambient temperature*

Install the ETEP in an environment compatible with the 40°C maximum recommended ambient temperature. Extra clearance above or below the unit on the rack is not required; however, be aware that equipment placed in the rack beneath the ETEP can add to the heat load. Therefore, avoid installing in an overly congested rack. Air flowing to or from other equipment in the rack might interfere with the normal flow of cooling air through the ETEP, increasing the potential for overheating.

- *Air flow*

Make sure that there is sufficient flow of air around the ETEP so that safe operation is not compromised. Maintain a clearance of at least 3 inches (7.62 cm) at the sides of the ETEP to ensure adequate air intake and exhaust. If installing in an enclosed rack, make sure the rack has adequate ventilation or an exhaust fan. An enclosed rack with a ventilation system that is too powerful can prevent proper cooling by creating negative air pressure around the ETEP.

- *Mechanical Loading*

Keep the center of gravity in the rack as low as possible. This ensures that the weight of the ETEP will not make the rack unstable. Make sure that the rack is secured and use the proper mounting hardware to secure the ETEP to the rack.

- *Circuit Loading*

Consider the connection of the ETEP to the supply circuit and the effect that overloading of circuits might have on overcurrent protection and supply wiring. Consult the voltage and amperage ratings on the UL label affixed to the unit's rear panel when addressing this concern.

- *Grounding*

Maintain reliable grounding of a rack-mounted ETEP. Pay particular attention to supply connections other than direct connections to the branch circuit, such as the use of power strips.

- *Maintenance*

Allow at least 19 inches (48.3 cm) of clearance at the front of the rack for maintenance. Use a cable-management system to help keep cables organized, out of the way, and free from kinks or bends that degrade cable performance.

Firewall Ports

[Table 10](#) lists the protocols that are used by the ETEPs and the EncrypTight system. Make sure that any firewalls in your system are configured to allow for the protocols that are required for your deployment: standalone ETEPs used for point-to-point encryption or ETEPs used in an EncrypTight system.

Table 10 Firewall ports

Protocol	Port	Description	Standalone ETEPs	Cipher-Engine
FTP	TCP 20, 21	Used for upgrading the software on the ETEP and retrieving appliance log files.	Yes	Yes
ICMP/Ping		Used to check connectivity with a device.	Yes	Yes
IKE / ISAKMP	UDP 500	Used to establish security associations in IKE policies.	Yes	
IPSec ESP	IP protocol 50	Used in encryption policies.	Yes	Yes
SFTP	TCP 22	Used for secure FTP operations.	Yes	Yes
SNMP	UDP 161, 162	Used to send SNMP traps from the ETEPs to a management workstation.		Yes
SNTP	UDP 123	Used for time synchronization among EncrypTight components.		Yes
SSH	TCP 22	Used to securely access the CLI on ETEPs.	Yes	Yes
Syslog	UDP 514	Used to send syslog messages from the ETEPs to a syslog server.		Yes
TLS (HTTPS)	TCP 443	A secure method of communicating management information between ETEMS and the ETEPs.		Yes
XML-RPC	TCP 443	Used for communications between EncrypTight components.		Yes

Installing the ET0010A

This section describes how to install ET0010A. To prepare the ET0010A for installation, review the installation steps in [Table 11](#), unpack the shipping carton, and prepare a space for the installation of the appliance.

The steps to perform for a typical installation are listed below.

Table 11 Installation Steps

Step	Action to Perform	Description
1	Review the cabling requirements.	on page 27
2	Unpack the shipping package.	on page 27
3	Install the ETEP in a rack or on a solid surface.	on page 28
4	Connect the cables.	on page 33
5	Apply power to the ETEP.	on page 34

Cabling Requirements: ET0010A

[Table 12](#) outlines the standard cables used with each port on the ETEP. The connector type listed indicates only what is required to connect to the ETEP port, and may or may not be the same connector type required for the other end of the cable. Some cables are supplied by Black Box and others are user-supplied.

Table 12 ET0010A Standard Cables

ETEP Port	Cabling	Supplied by...
Power receptacle	Power supply and power cable	Black Box
RS-232 port	1.8 meter shielded null modem cable with an RJ45 connector at one end and a DB9 female connector at the opposite end.	Black Box
Ethernet Management Port	Unshielded Category 5 straight through cable (UTP), RJ-45 connector ^a .	Black Box
Aux1 port	Not applicable. Port is not enabled in this release.	Not applicable
Remote and Local ports	(2) Unshielded Category 5 straight through cables (UTP), RJ-45 connector ^a	User

a. The local, remote, and Ethernet management ports are auto-sensing for polarity. You can use shielded Category 5 straight through cables or crossover cables when connecting to these ports.

Unpacking the Shipping Carton: ET0010A


Remove all product components from the shipping carton and compare the contents to the packing list. Keep all packaging in case it is necessary to return the unit.

The ETEP is packaged with the standard items listed below. Additional cables, country-specific power cords, and other accessories can be ordered separately.

- 1 ET0010A
 - Firmware and software is factory-installed on the unit.
- 2 Accessory Kit
 - (1) Power cable (US)
 - (1) Power supply

- (1) Shielded null modem cable with an RJ-45 connector at one end and a DB-9 female connector at the opposite end.
- (1) Unshielded Category 5 straight through cable (UTP) with RJ-45 connectors
- Rack mount kit includes 2 mounting brackets, 4 large screws (#10-32), and 4 small black screws. The kit also includes 4 rubber feet and 4 small silver-toned screws with built-in washers for solid surface installations (see [Figure 11](#)).
- CD containing user documentation and a backup copy of the ETEP software

Figure 11 Accessory screws and feet

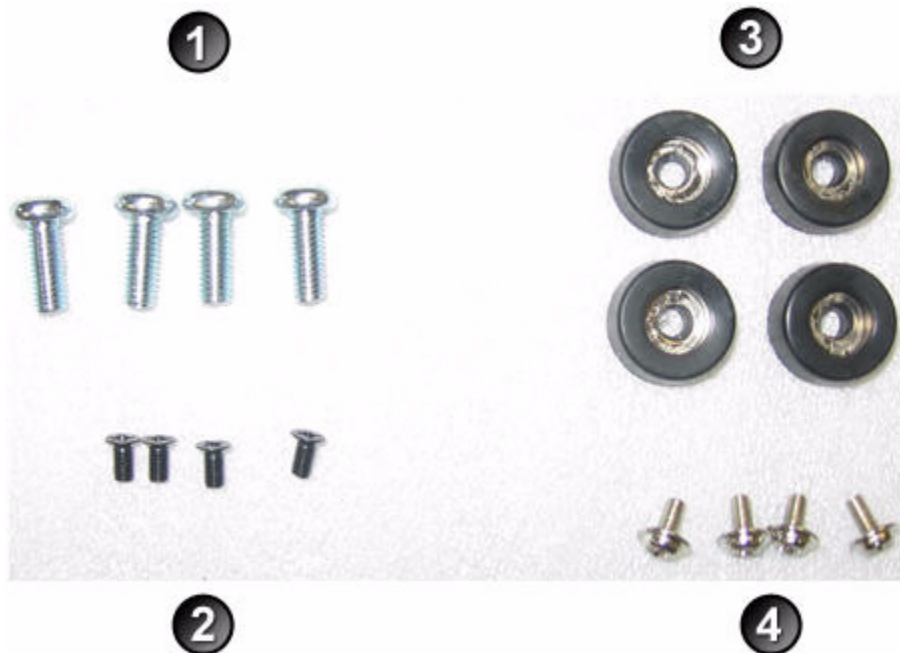

Elements of [Figure 11](#):

- 1) Large screws (#10-32), used to attach the mounting brackets to the rack
- 2) Small black screws, used to attach the mounting brackets to the ETEP
- 3) Rubber feet, used for solid surface installation
- 4) Small silver-toned screws with built in washers, used to attach rubber feet to the bottom of the ETEP

Installation Instructions: ET0010A

The ET0010A can be mounted in a standard 19-inch rack using the mounting kit, or simply placed on a rack shelf or solid surface. Before installing the ETEP in a 19-inch rack, review the mounting guidelines listed in [“ETEP Site Preparation”](#) on page 25.

Rack Mount Installation

To mount the ETEP in a standard 19-inch equipment rack, have the following tools and materials available:


- External power supply
- Two mounting brackets, supplied in the Accessory Kit
- (4) small black screws and (4) large #10-32 screws, supplied in the Accessory Kit
- #1 Phillips and #2 Phillips screwdrivers (user-supplied)

To install the ETEP in a rack:

- 1 Place the unit on a solid surface, with the bottom panel facing up.

When looking at the ET0010A from the bottom rear, the bracket that holds the power supply is on the right, as shown in [Figure 12](#).

Figure 12 Bottom rear view of the ET0010A, with rack mount brackets

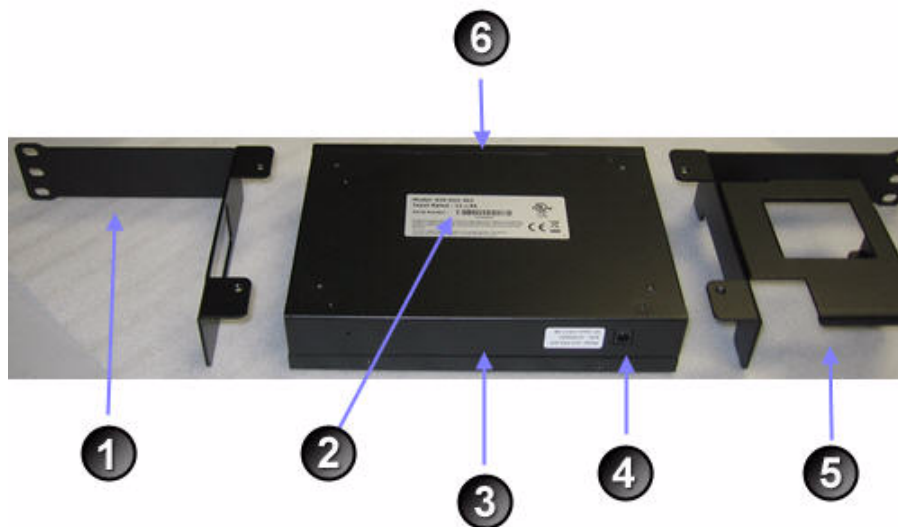


Elements of [Figure 12](#):

- 1) Mounting bracket
- 2) Regulatory label on the bottom of the unit
- 3) Rear panel
- 4) Power supply connector
- 5) Mounting bracket with power supply cradle
- 6) Front panel

- 2 Attach the mounting brackets to each side of the unit using the four small black screws provided in the Accessory Kit (item 2 in [Figure 11](#)), and a #1 Phillips screwdriver.


When looking at the ET0010A from the bottom rear, the bracket that holds the power supply is on the right, as shown in [Figure 13](#).

Figure 13 Attach mounting brackets to the bottom panel. ET0010A is shown below.

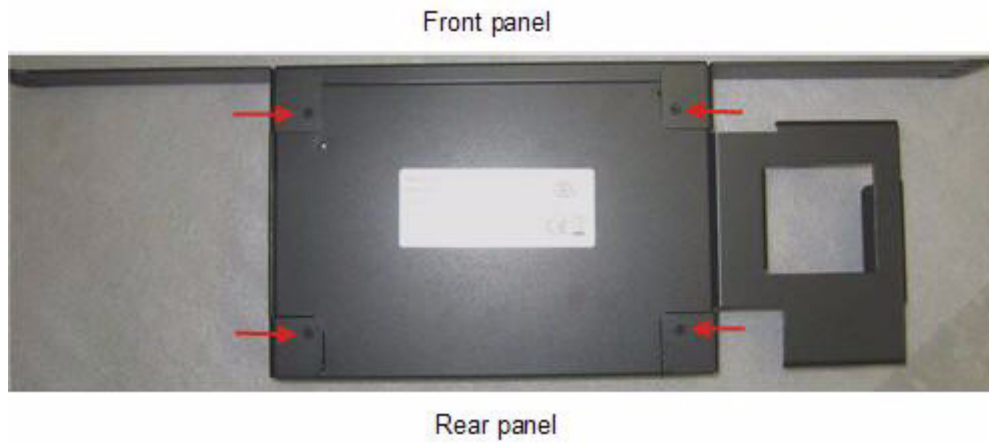

- 3 Turn the ETEP face up and locate the external power supply. With the label side facing down, place the power supply in the mounting bracket cradle and snap it into place, as shown in [Figure 14](#).

Figure 14 Power supply installed in mounting bracket cradle on the ET0010A

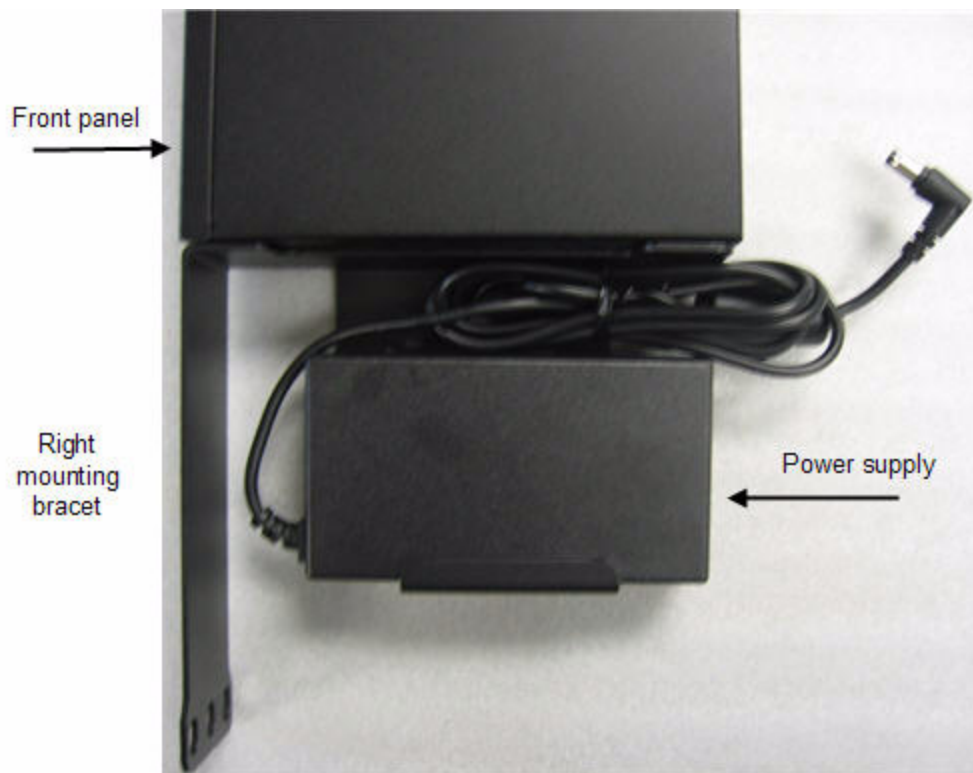

- 4 Connect the power supply cable to the rear panel connector.

[Figure 15](#) shows the ET0010A power connector.

Figure 15 Insert the power supply cable into the connector on the rear panel

- 5 Attach the mounting brackets to the rack's front supports with the large #10-32 screws (item 1 in [Figure 11](#)), using a #2 Phillips screwdriver. Insert two screws in each bracket, using the top and bottom holes.

Figure 16 Front view of ET0010A mounting brackets and power supply

Solid Surface Installation

When installing the ET0010A on a solid surface, have the following tools and materials available to attach the rubber feet to the bottom of the unit:

- External power supply
- (4) rubber feet, supplied in the Accessory Kit (item 3 in [Figure 11](#)).
- (4) small silver screws with built-in washers, supplied in the Accessory Kit (item 4 in [Figure 11](#)).
- #1 Phillips screwdriver (user-supplied)

To install the ETEP on a solid surface:

- 1 Place the unit on a solid surface, with the bottom panel facing up.
- 2 Locate the four screw holes on the bottom of the unit ([Figure 17](#)).

Figure 17 Screw holes for rubber feet installation on bottom of unit



- 3 Place one of the rubber feet over the hole and insert a screw into the opening (Figure 18). Tighten the screw.

Figure 18 Rubber feet installed



- 4 Repeat step 3 for the remaining feet.
- 5 Turn the unit over so that it is resting on the rubber feet.
- 6 Attach the external power supply to the power connector on the rear panel.

Figure 19 shows the ET0010A rear panel and power supply.

Figure 19 ET0010A rear panel connector for external power supply.




Connecting the Cables: ET0010A

Follow the instructions below to connect the ET0010A to the appropriate network devices (see [Figure 20](#)).

To cable the ET0010A:

- 1 For initial setup, connect the RS-232 serial port directly to a PC or workstation. Using the null modem cable supplied by Black Box, insert the RJ-45 connector in the RS-232 port and connect the DB-9 female connector to your PC. This cable can be removed after initial setup is complete.
- 2 Connect the Ethernet management port to a LAN using a Category 5 cable with an RJ-45 connector.
- 3 Connect the remote port to the untrusted network, typically via a router port, using a Category 5 cable with an RJ-45 connector.
- 4 Connect the local port to the local device, such as a server or switch, using a Category 5 cable with an RJ-45 connector.

Figure 20 ET0010A Cabling

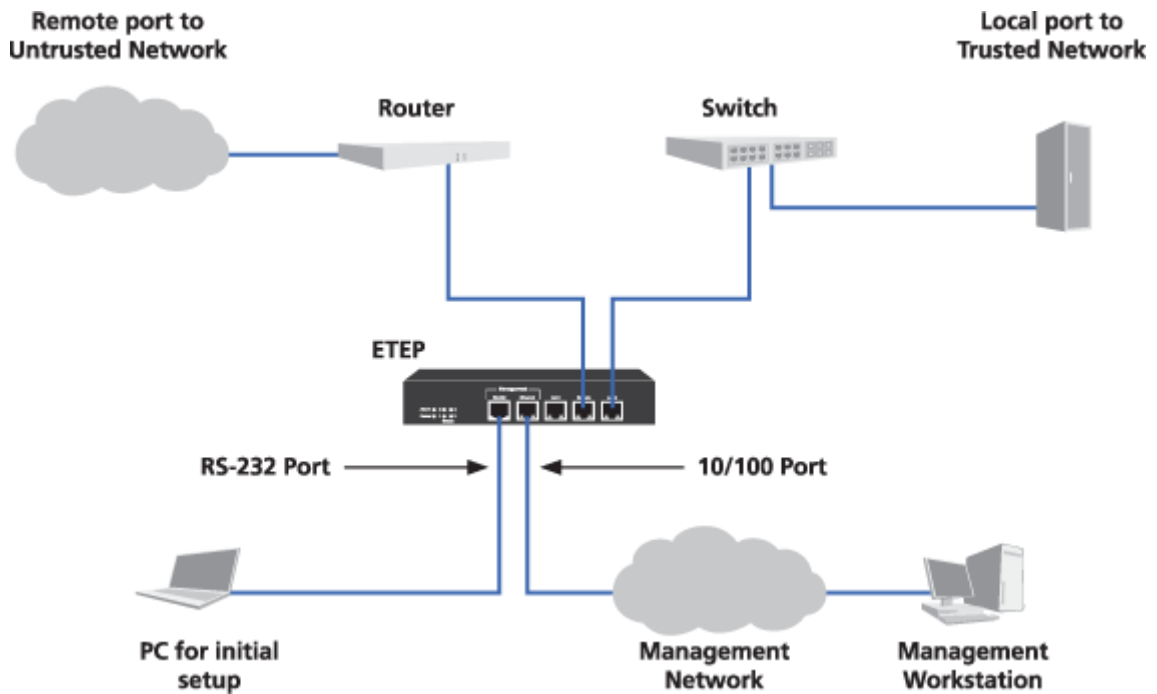


NOTE

The Aux1 port on the ET0010A is not enabled in this release.

Powering On the ET0010A

Use the following procedure to power up the ETEP.

Figure 21 Attaching the power cables on the ET0010A

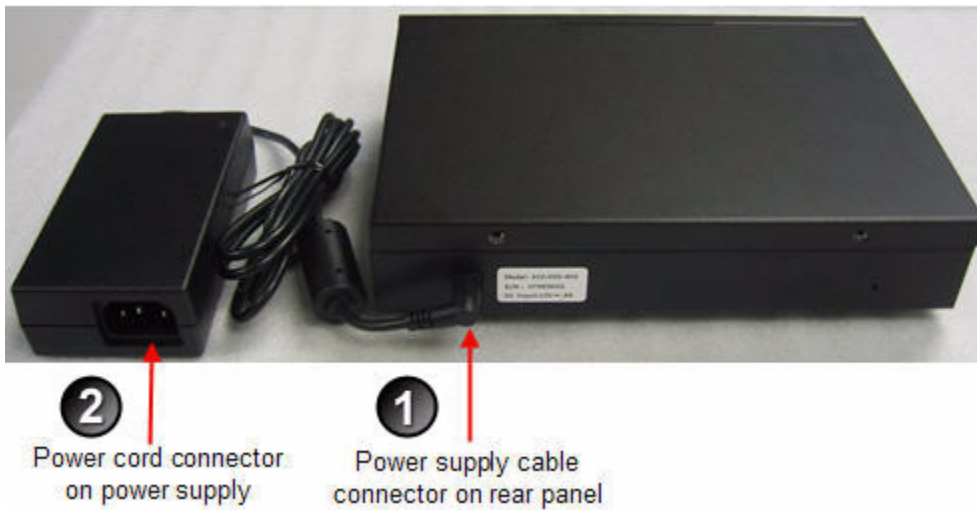

To power on the ETEP:

- 1 Check that the power supply cable is properly inserted in the power connector on the ETEP rear panel. The ET0010A is shown in [Figure 21](#).
- 2 Plug the power cord into the ETEP power supply. Attach the opposite end to a power source to apply power to the appliance.

When the appliance powers up, all LEDs illuminate. The power LED remains lit until the unit is powered off.

During the boot process the ETEP cycles through its startup tests, and the corresponding status LEDs are illuminated (see “[Status Codes: ET0010A](#)” on page 63). After the tests execute successfully, the status indicators turn off.

 **NOTE**

During the boot process the ETEP discards all traffic on its data ports. Once the appliance is operational, the default mode of operation passes all packets in the clear until you deploy security policies.

Installing the ET0100A

To prepare the ET0100A for installation, review the installation steps in [Table 13](#), unpack the shipping carton, and prepare a space for the installation of the appliance.

The steps to perform for a typical installation are listed below.

Table 13 ET0100A Installation Steps

Step	Action to Perform	Description
1	Review the cabling requirements.	on page 35
2	Unpack the shipping package.	on page 36
3	Prepare a space for installation of the ET0100A.	on page 36
4	Connect the cables.	on page 37
5	Apply power to the ET0100A.	on page 38

Cabling Requirements: ET0100A

[Table 14](#) outlines the standard cables used with each port on the ET0100A. The connector type listed indicates only what is required to connect to the ET0100A port, and may or may not be the same

connector type required for the other end of the cable. Some cables are supplied by Black Box and others are user-supplied.

Table 14 ET0100A Standard Cables

ET0100A Port	Cabling	Supplied by...
Power receptacle	Power supply cable certified and approved for use in the country of interest	Black Box
RS-232 Port	Shielded copper null modem cable, RS-232 DB9 connector (female to male)	Black Box
10/100 Ethernet Management Port	Shielded Category 5 straight through cable (STP), RJ-45 connector ^a	Black Box
Remote and Local ports	Shielded Category 5 straight through cables (STP), RJ-45 connector ^a	User

a. The local, remote, and Ethernet management ports are auto-sensing for polarity. You can use shielded Category 5 straight through cables or crossover cables when connecting to these ports.

NOTE

To meet the requirements of FCC Part 15 and the EU EMC Directive 2004/108/EC, use only shielded cables with the ET0100A (DB-9 null modem cables and Category 5 STP cables).

Unpacking the Shipping Carton: ET0100A

Remove all product components from the shipping carton and compare the contents to the packing list. Keep all packaging in case it is necessary to return the unit.

The ET0100A is packaged with the standard items listed below. Additional cables, country-specific power cords, and other accessories can be ordered separately.

- 1 ET0100A chassis
 - Firmware and software is factory-installed on the unit.
- 2 Accessory Kit
 - Rack mount kit containing two mounting brackets and 10 screws
 - (1) Power cable (US)
 - (1) Shielded DB-9 null modem cable (female to male)
 - (1) Shielded Category 5 straight through cable (STP) with RJ-45 connector
 - CD containing user documentation and a backup copy of the ETEP software

Rack-Mount Installation: ET0100A

The ET0100A can be mounted in a standard 19-inch rack using the mounting kit, or simply placed on a rack shelf or solid surface. Before installing the ET0100A in a 19-inch rack, review the rack-mounting guidelines listed in “[ETEP Site Preparation](#)” on page 25.


To mount the ETEP in a standard 19-inch equipment rack, have the following tools and materials available:

- Two mounting brackets, supplied in the Accessory Kit
- (6) small screws and (4) large screws, supplied in the Accessory Kit
- #1 Phillips and #2 Phillips screwdrivers (user-supplied)

To install the ETEP in a rack:

- 1 Attach a mounting bracket to each side of the ETEP (near the front panel). Attach each bracket with three small screws provided in the Accessory Kit, using a #1 Phillips screwdriver.
- 2 Attach the ETEP to the rack's front supports with the large screws, using a #2 Phillips screwdriver (Figure 22). Insert two screws in each bracket, using the top and bottom holes.

Figure 22 Rack Mounted ETEP, Front Panel View

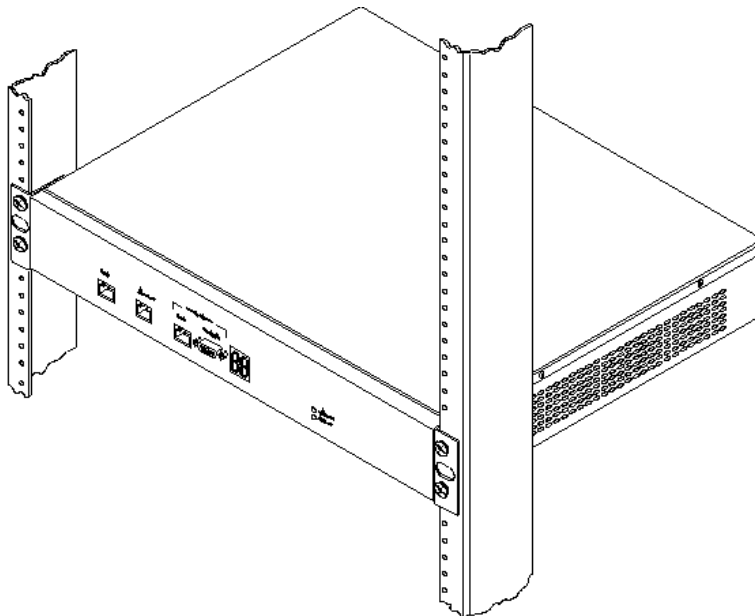


Connecting the Cables: ET0100A

The procedure in this section describes how to connect the ET0100A to your network devices, as shown in Figure 23.

To cable the ET0100A:

- 1 For initial setup, connect the RS-232 port directly to a PC or workstation using a DB-9 null modem cable. This cable can be removed after initial setup is complete.
- 2 Connect the 10/100 Ethernet management port to a LAN using a Category 5 shielded twisted pair (STP) cable with an RJ-45 connector.
- 3 Connect the remote port to the untrusted network, typically via a router port, using a Category 5 STP cable with an RJ-45 connector.
- 4 Connect the local port to the local device, such as a server or switch, using a Category 5 STP cable with an RJ-45 connector.

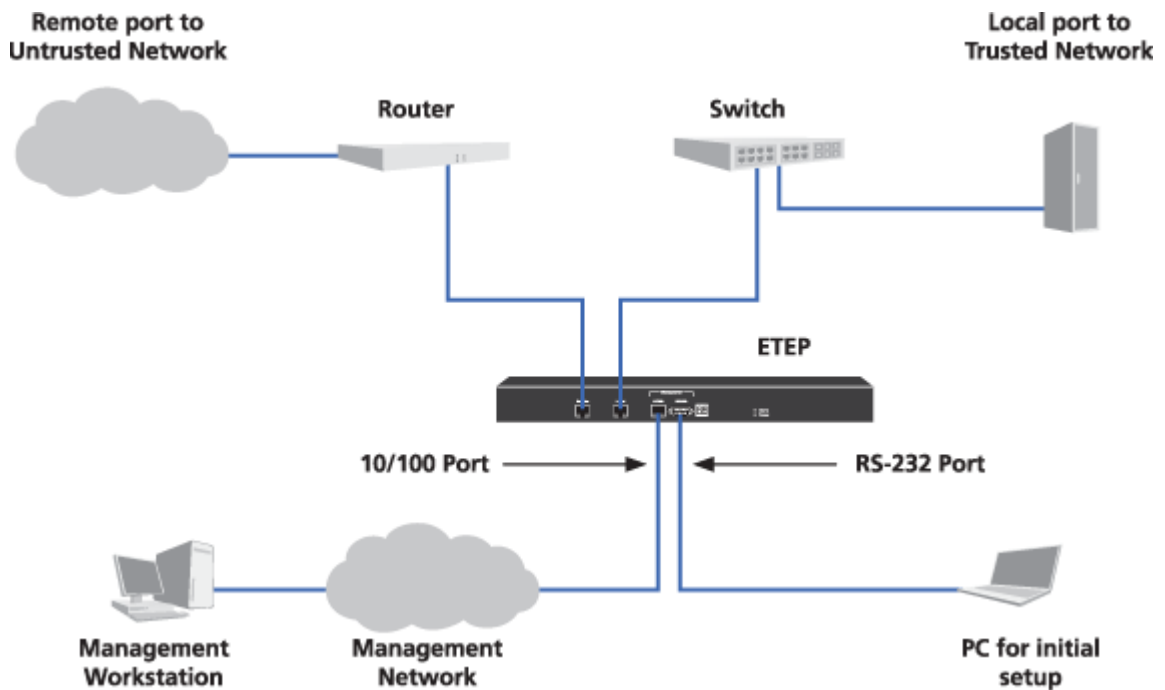Figure 23 ET0100A Cabling

Powering on the ET0100A

Use the following procedure to power up the ET0100A.

To power on the ET0100A:

- On the appliance's rear panel, plug the power cord into the ET0100A power receptacle. Attach the opposite end to a power source to apply power to the appliance.

Due to the shielding in the power cable, you must exert significant pressure to properly insert the power cord into the ET0100A power receptacle. A properly seated power cord cannot be moved within the receptacle (Figure 24). Wiggling or jostling an improperly seated power cord may cause the appliance to reboot (Figure 25).

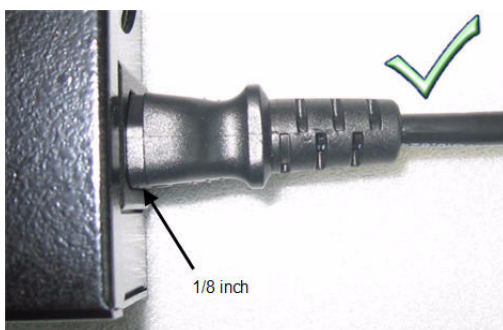
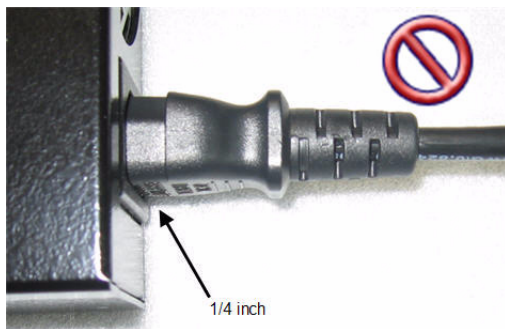
Figure 24 Properly seated ET0100A power cable


Figure 25 Improperly seated ET1000A power cable

When the appliance powers up, all LEDs illuminate (see [Figure 26](#)). The Alarm LED illuminates briefly and the diagnostic code LED displays 88 to verify that the diagnostic display segments are functioning. The power LED remains lit until the unit is powered off.

During the boot process the ET1000A cycles through its startup tests, and the corresponding diagnostic codes are displayed (see “[Diagnostic Codes: ET1000A and ET1000A](#)” on page 64). After the tests execute successfully, the diagnostic code display is solidly illuminated with code 00.

NOTE

During the boot process the ET1000A discards all traffic on its data ports. Once the appliance is operational, the default mode of operation passes all packets in the clear until you deploy security policies.

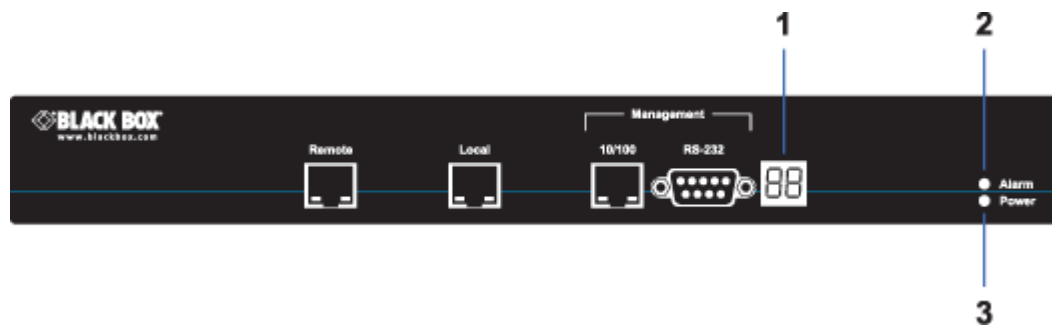Figure 26 ET1000A Front Panel Status Indicators

Elements of [Figure 26](#):

- 1) Diagnostic display
- 2) Alarm LED
- 3) Power indicator

Installing the ET1000A

To prepare the ET1000A for installation, review the installation steps in [Table 15](#), unpack the shipping carton, and prepare a space for the installation of the appliance.

The steps to perform for a typical installation are listed below.

Table 15 ET1000A Installation Steps

Step	Action to Perform	Description
1	Review the cabling requirements.	on page 40
1	Unpack the shipping package.	on page 41
2	Prepare a space for installation of the ET1000A.	on page 41
3	Connect the cables.	on page 42
4	Apply power to the ET1000A.	on page 43

Cabling Requirements: ET1000A

Table 16 outlines the standard cables used with each port on the ET1000A. The connector type listed indicates only what is required to connect to the ET1000A port, and may or may not be the same connector type required for the other end of the cable. Some cables are supplied by Black Box and others are user-supplied.

Table 16 ET1000A Standard Cables

ET1000A Port	Cabling	Supplied by...
Power receptacles	Power supply cables certified and approved for use in the country of interest	Black Box
RS-232 Port	Shielded copper null modem cable, RS-232 DB9 connector (female to male)	Black Box
Ethernet Management Port (RJ-45)	Shielded Category 5 straight through cable (STP), RJ-45 connector ^a	Black Box
Ethernet Management port (SFP)	Not applicable. Port is not enabled in this release.	Not applicable
Local and Remote Gigabit Ethernet ports <ul style="list-style-type: none"> Optical SFP transceivers 	<ul style="list-style-type: none"> 1000Base-LX SFPs 9/125µm single-mode duplex fiber or simplex fiber pair (1 transmit, 1 receive), 1310 nm nominal wavelength, LC connector OR <ul style="list-style-type: none"> 1000Base-SX SFPs 62.5/125µm multi-mode duplex fiber or simplex fiber pair (1 transmit, 1 receive), 850nm nominal wavelength, LC connector 	Available as accessory options
Local and Remote Gigabit Ethernet ports <ul style="list-style-type: none"> Copper SFP transceivers 	Shielded Category 5 straight through cable (STP), RJ-45 connector	Available as accessory options
Aux1 port (SFP)	Not applicable. Port is not enabled in this release.	Not applicable

a. The 10/100 Ethernet management port is auto-sensing for polarity. You can use a shielded Category 5 straight through cable or a shielded crossover cable when connecting to this port.

 **NOTE**

To meet the requirements of FCC Part 15 and the EU EMC Directive 2004/108/EC, use only shielded Category 5 cables with the ET1000A Ethernet management port.

Unpacking the Shipping Carton: ET1000A

Remove all product components from the shipping carton and compare the contents to the packing list. Keep all packaging in case it is necessary to return the unit.

The ET1000A is packaged with the standard items listed below. Additional cables, country-specific power cords, SFPs, and other accessories can be ordered separately. A list of approved transceivers is included in the *ETEP Release Note*.

- 1 ET1000A chassis
 - Firmware and software is factory-installed on the unit.
- 2 Accessory Kit
 - Rack mount kit includes 2 mounting brackets, 4 large screws (#10-32), and 8 small black screws
 - (2) Power cables (US)
 - (1) 6 ft. shielded DB-9 null modem cable (female to male)
 - (1) 6 ft. shielded Category 5 straight through cable (STP) with RJ-45 connector
 - CD containing user documentation and a backup copy of the ETEP software

Rack Mount Installation: ET1000A

The ET1000A can be mounted in a standard 19-inch rack using the mounting kit, or simply placed on a rack shelf or solid surface. Before installing the ET1000A in a 19-inch rack, review the rack-mounting guidelines listed in [“ETEP Site Preparation” on page 25](#).

To mount the ET1000A in a standard 19-inch equipment rack, have the following tools and materials available:

- Two mounting brackets, supplied in the Accessory Kit
- 8 small black screws and (4) large #10-32 screws, supplied in the Accessory Kit
- #1 Phillips and #2 Phillips screwdrivers (user-supplied)

 **CAUTION**

In order to safely and securely install the ET1000A in a rack, you must use the mounting brackets supplied in the Accessory Kit. Other brackets may fail to properly support the weight of the ET1000A.

To install the ET1000A in a rack:

- 1 Place the unit on a solid surface, with the top facing up. Position the mounting brackets on each side of the appliance, as shown in [Figure 27](#).

Figure 27 Mounting bracket orientation



- 2 Attach the mounting brackets to each side of the unit using the 8 small black screws provided in the accessory kit, and a #1 Phillips screwdriver, as shown in [Figure 28](#).

Figure 28 Each bracket is attached to the side of the ET1000A using four screws



- 3 Attach the mounting brackets to the rack's front support with the large #10-32 screws, using a #2 Phillips screwdriver. Insert two screws in each bracket, using the top and bottom holes ([Figure 29](#)).

Figure 29 Front view of mounting brackets




Connecting the Cables: ET1000A

Follow the instructions below to connect the ET1000A to the appropriate network devices (see [Figure 30](#)).

To cable the ET1000A:

- 1 For initial setup, connect the RS-232 port directly to a PC or workstation using a DB-9 null modem cable. This cable can be removed after initial setup is complete.
- 2 Connect the Ethernet management port to a LAN using a Category 5 shielded twisted pair (STP) cable with an RJ-45 connector.
- 3 Plug an SFP Gigabit transceiver into the ET1000A remote port. If you are using an optical SFP, insert the fiber cable in the SFP and connect the other end to the untrusted network, typically via a router port. If you are using a copper SFP, use a shielded Category 5 straight through cable.
- 4 Plug a second SFP Gigabit transceiver into the ET1000A local port. If you are using an optical SFP, insert the fiber cable in the SFP and connect the other end to the local device, such as a server or switch. If you are using a copper SFP, use a shielded Category 5 straight through cable.

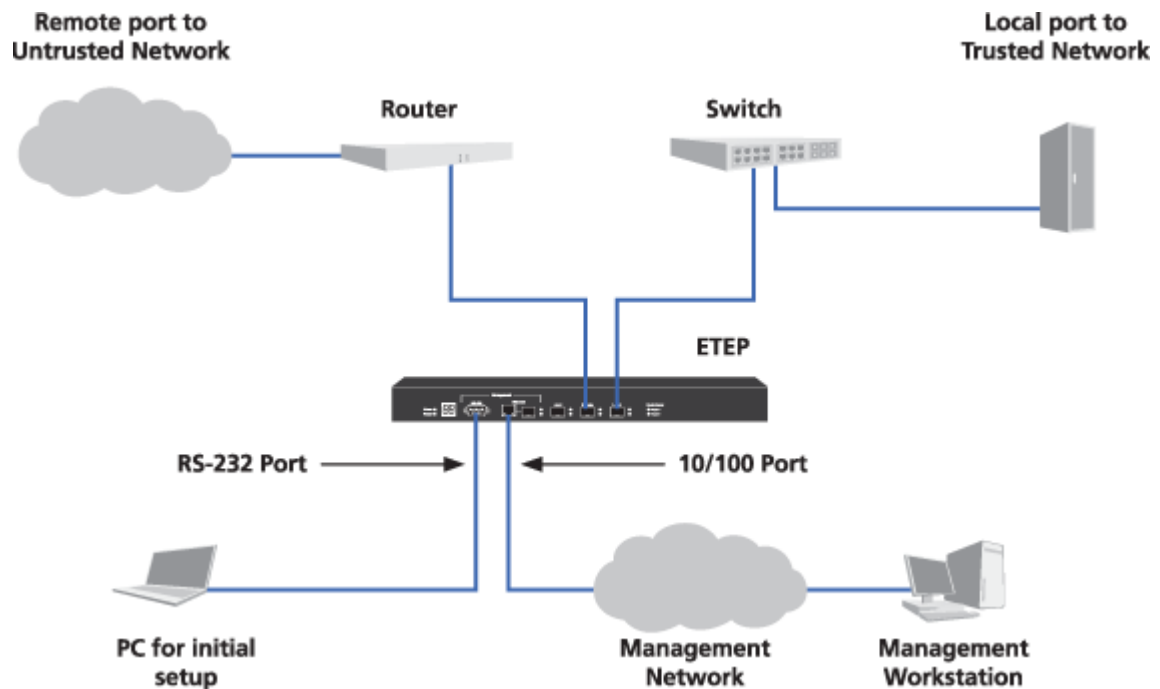Figure 30 ET1000A Cabling**NOTE**


The Gigabit management and Aux1 ports are not enabled in this release.

Powering on the ET1000A

Review the following guidelines prior to powering up the ET1000A:

- The ET1000A has two power supplies. We recommend that you connect the power cords to separate live circuits to provide redundancy in the case of a power outage on one of the circuits.
- When manually cycling the power, remove power on both circuits, wait five seconds, and then reapply power on both circuits.

Figure 31 Dual power supplies on the ET1000A rear panel

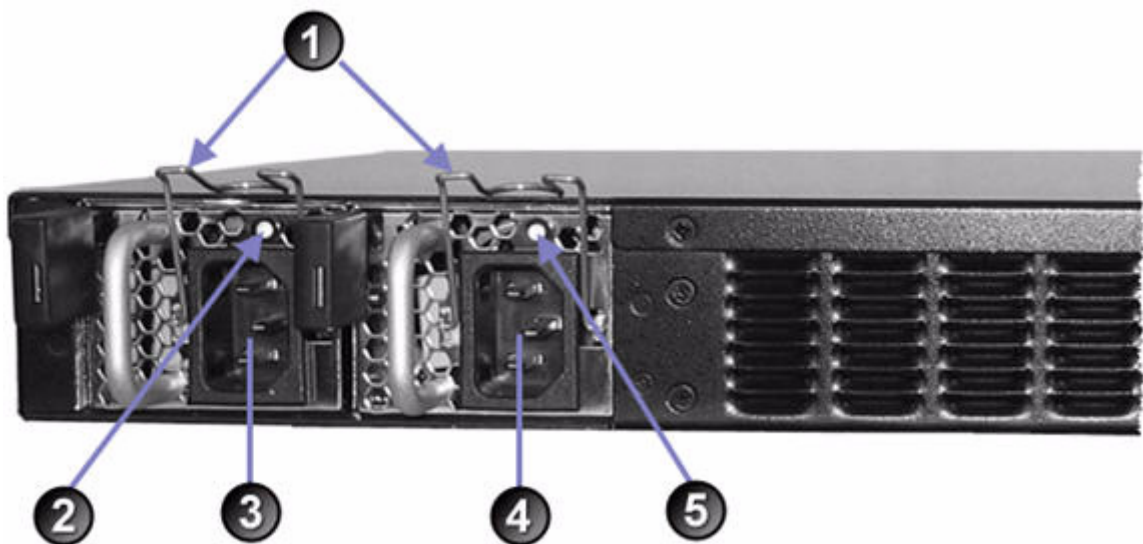

Elements of [Figure 31](#):

- 1) Power cord clips
- 2) Status LED for power supply 2
- 3) Power receptacle for power supply 2
- 4) Power receptacle for power supply 1
- 5) Status LED for power supply 1

To power on the ET1000A:

- 1 On the appliance's rear panel, plug the power cords into the power receptacles for each power supply.
- 2 Attach the opposite end of the first power cord to a power source. Attach the second power cord to a power source on a different circuit. The power supply status LED illuminates when power is applied.
- 3 After the power cords are plugged in, secure the cords using the clips on the rear of the unit.

Figure 32 The power cord for power supply # 1 is secured with a clip




When the appliance powers up, all of the front panel LEDs illuminate (see [Figure 33](#)). The Alarm LED illuminates briefly and the diagnostic code LED displays 88 to verify that the diagnostic display segments are functioning. The power LED remains lit until the unit is powered off. The Power Supply LEDs illuminate for each operational power supply.

During the boot process the ET1000A cycles through its startup tests, and the corresponding diagnostic codes are displayed (see “[Diagnostic Codes: ET0100A and ET1000A](#)” on page 64). After the tests execute successfully, the diagnostic code display is solidly illuminated with code 00.

NOTE

During the boot process the ET1000A discards all traffic on its data ports. Once the appliance is operational, the default mode of operation passes all packets in the clear until you deploy security policies.

Figure 33 ET1000A Front Panel Status Indicators

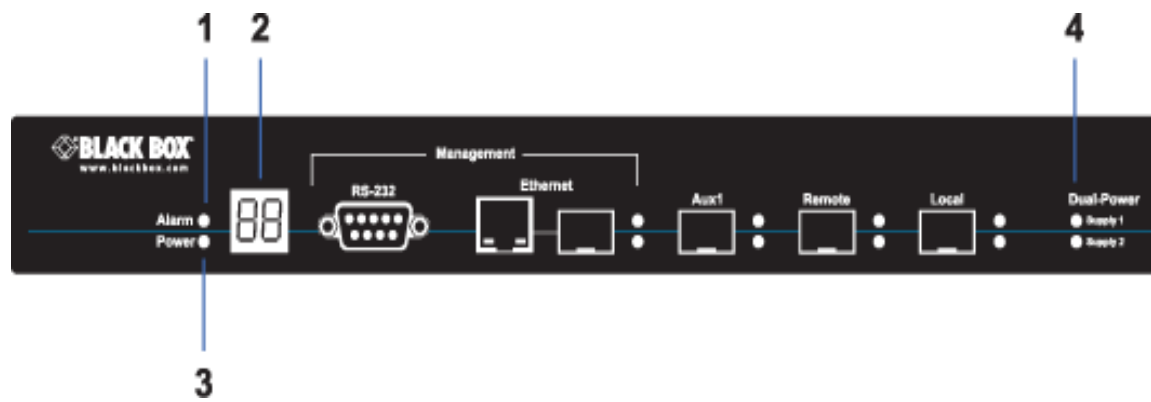

Elements of [Figure 33](#):

- 1) Alarm LED
- 2) Diagnostic display
- 3) Power indicator
- 4) Power supply LEDs

Shutting Down the ETEP

It is important that a proper system shutdown is performed prior to powering off the appliance. The **shutdown** command halts all running tasks on the ETEP and prepares it for being powered off. Failure to perform a shutdown may lead to file system corruption and potential appliance failure.

The ETEP remains in a shutdown state until the power is cycled. The shutdown state is indicated with an operational code on the status/diagnostic display as shown in [Table 17](#).

Table 17 Shutdown operational codes

Appliance model	Operational code
ET0010A	2, 3, 4
ET0100A, CEP100-XSA, CEP1000, ET1000A	--

You can perform a shutdown using a CLI command or ETEMS. The following procedure describes the CLI command.

To shut down the ETEP from the CLI:

- 1 Log in as Administrator (user name **admin**) or Ops (user name **ops**).
- 2 At the command prompt, type **shutdown**. After the system shutdown is complete, the following message is displayed on the terminal.
`Power cycle required to reboot appliance`
- 3 Unplug the power cable from the back of the unit or from the power outlet.

Example

In the following example the user logs in as **admin** and shuts down the ETEP.

```
pep login: admin
Password:
Last login: Tue Apr  8 15:12:21 2008 on ttyS0
Welcome admin it is Tue Apr  8 15:17:57 UTC 2008
admin> shutdown
```

Related topic:

- [“shutdown” on page 148](#)

3 Initial Setup

This section includes the following topics:

- [Overview](#)
- [Logging In Through a Serial Link](#)
- [Configuring the Management Port](#)
- [Setting the Date and Time](#)
- [Entering a Throughput License](#)
- [Configuration Example](#)
- [Managing the ETEP](#)

Overview

The following steps are required for initial setup of the ETEP:

- 1 Log in through a serial link.
- 2 Configure the management port.
- 3 Set the date and time.
- 4 Enter the throughput license.

Logging In Through a Serial Link

Initial setup is performed through a serial link to the RS-232 port. The initial setup commands are available to the Admin and Ops users. The procedures and examples in this chapter assume that the Admin user is performing the setup tasks.

To log in to the CLI via a serial link:

- 1 Connect the RS-232 serial port directly to a PC or workstation, as described in [Chapter 2](#).
- 2 Open a terminal session through a VT-100 terminal emulation program such as HyperTerminal. Enter the connection name, the appropriate serial port (usually COM1 or COM2), and the following serial port parameters:

Baud Speed	38,400
Parity	None
Data Bits	8
Stop Bits	1
Flow Control	None

- 3 In the terminal session window, press ENTER. The login prompt displays.

```
Linux 2.6.16.17 on mips
pep login:
```
- 4 At the login prompt, type the default user name **admin** and press ENTER. User names and passwords are case-sensitive.
- 5 At the password prompt, type the default password **admin** and press ENTER.
- 6 When you are successfully logged in, the command line prompt displays as shown below (password text is not displayed).

```
pep login: admin
Password:
Last login: Tue Jan 29 19:18:59 2008 on ttyS0
Welcome admin it is Tue Jan 29 19:37:12 UTC 2008
admin>
```

It is strongly recommended that you change the default passwords when you configure the ETEP for operation. For more information about user management see the documentation for your management software: *ETEP CLI User Guide* or the *EncrypTight User Guide*.

Configuring the Management Port

The ETEP can be managed in-line or out-of-band through a dedicated Ethernet management interface. Management port configuration consists of the following items:

- Setting the IP address and default gateway
- Reviewing the auto-negotiation settings

About the management port IP address, mask and gateway


The management port must have an assigned IP address in order to be managed remotely and communicate with other devices. An IPv4 IP address is mandatory, even when the ETEP is operating in an IPv6 network. When the ETEP is operating in an IPv6 network, configure the ETEP for dual-homed operation by assigning an IPv4 and an IPv6 address to the management port.

The Ethernet management port *IP address* identifies the ETEP to the management workstation. The *subnet mask* is the portion of the IP address that identifies the network or subnetwork for routing purposes.

When the ETEP management port and the management workstation are on different subnets, the ETEP uses a *default gateway* to route packets to the other devices. The default gateway identifies the local router port that is on the same subnet as the ETEP Ethernet management port. The appliance sends all packets to the specified router for forwarding to the management station or other EncrypTight components (key generation server, time server). When the management port and workstation are on the same subnet a default gateway is not needed to route packets between the devices.

Figure 34 shows an example of a default gateway when the management station and ETEP are on different subnets. The management station's IP address is 192.168.1.10, and the ETEP's management port IP address is 192.168.10.10. To send packets between the two devices, the local port on Router #1 is specified as the default gateway (192.168.10.1). The gateway address must match the subnet of the management port.

Figure 34 Management Port Default Gateway

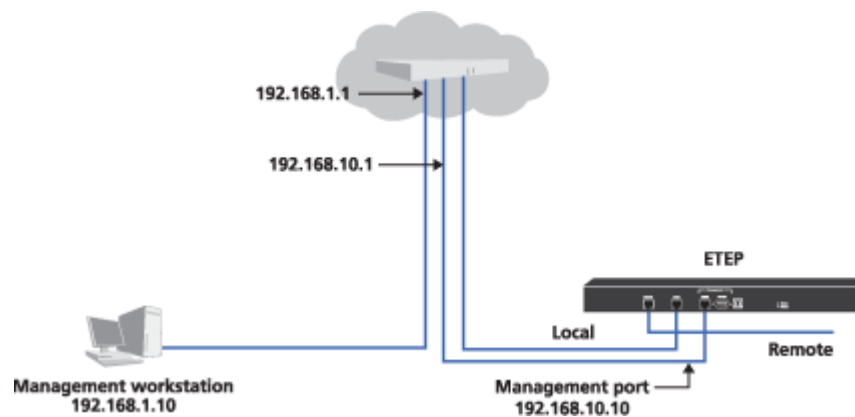

About auto-negotiation

The default setting for the ETEP enables auto-negotiation, which negotiates the link speed, duplex setting, and flow control. Use the **autoneg** command if the device that the ETEP connects to from a particular port does not support auto-negotiation or flow control.

It is important to configure the ETEP and the other device the same way. Both devices should either auto-negotiate or be set manually to the same speed and duplex mode. Having one device set manually and the other auto-negotiate can cause problems that make the link perform slowly. When manually setting the ETEP link speed, configure the speed and duplex mode to match that of the other device.

On the management port, the ETEPs can negotiate to the following link speeds:

Table 18 Link speeds on the management port

Link speed	Auto-negotiate ET0010A	Auto-negotiate ET0100A, ET1000A	Fixed Speed All ETEPs
10 Mbps Half-duplex	✓	✓	✓
10 Mbps Full-duplex	✓	✓	✓
100 Mbps Half-duplex	✓	✓	✓
100 Mbps Full-duplex	✓	✓	✓

Table 18 Link speeds on the management port

Link speed	Auto-negotiate ET0010A	Auto-negotiate ET0100A, ET1000A	Fixed Speed All ETEPs
1000 Mbps Full-duplex	✓		
1000 Mbps Half-duplex	✓		

To configure the management port:

- 1 At the command prompt, type **configure** to enter configuration mode.
- 2 At the `config>` prompt, type **management-interface**.
- 3 Assigning an IPv4 address to the management port is mandatory. To set the management port IPv4 address, mask, and gateway, type

```
ip <ip address> <subnet mask> [gateway]
```

ip address Management port IP address, entered in dotted decimal notation.

subnet mask IP subnet mask, entered in dotted decimal notation.

gateway Specifies how to route traffic between the ETEP management port and the management station. When the management port is on a different subnet than the management station, specify the IP address of the router's local port on the same subnet as the ETEP management port (see [Figure 34](#)). If the devices are on the same subnet, you do not need to enter a default gateway.

After entering the new IP address, it takes 10-20 seconds for the ETEP to set the address on the management port. During that time you cannot enter any CLI commands. When the operation is complete, the `man-if>` prompt is displayed.

- 4 *Optional.* If the ETEP is operating in an IPv6 network you can also assign an IPv6 address to the management port. To do so, type

```
ip6 {<ip address>/<prefix-length>} [gateway]
```

ip address IPv6 address of the ETEP management port. This is a 128-bit address consisting of eight hexadecimal groups that are separated by colons. Each group is a 4-digit hexadecimal number. The hexadecimal letters in IPv6 addresses are not case sensitive.

prefix-length A decimal value that indicates the number of contiguous, higher-order bits of the address that make up the network portion of the address. The decimal value is preceded by a forward slash (/).

gateway IPv6 address of the router port that is on the same local network as the ETEP management port.

- 5 Auto-negotiation is enabled by default. If you want to disable auto-negotiation and manually set the link speed and flow control, configure the `autoneg` command. Attributes are described in [Table 19](#).

```
autoneg {enable} | {disable [<speed>] [<flow-control>]}
```

- 6 Type **exit** to return to the config prompt, or type **top** to return to the command prompt.

Table 19 Management port autoneg command description

Attribute	Description
enable	Enables auto-negotiation on the management port. This is the default setting.
disable	Disables auto-negotiation on the management port. Use this setting to manually configure link speed and flow control.
speed	[100m-full 10m-full 100m-half 10m-half] When auto-negotiation is disabled, the speed attribute specifies the link speed and duplex setting. The speed defaults to 100m-full.
flow control	[on off] When auto-negotiation is disabled, this attribute configures the flow control setting to be on or off. The flow control setting defaults to on.

Example

The following example sets the management port IPv4 address, subnet mask, and gateway for the ETEP as shown in [Figure 34](#). Auto-negotiation is left at its default setting of enabled.

```
admin> configure
config> management-interface
man-if> ip 192.168.10.10 255.255.255.0 192.168.10.1
man-if> exit
```

The next example sets the management IPv4 address and subnet mask, and omits the default gateway. The default gateway can be omitted when the management station and the ETEP management port and are wired directly to each other on the same subnet. Auto-negotiation is disabled. The link speed is set to 100 Mbps full-duplex and flow control is turned on.

```
admin> configure
config> management-interface
man-if> ip 192.168.10.10 255.255.255.255
man-if> autoneg disable 100m-full on
man-if> exit
```

The following example sets an IPv6 address, prefix length, and default gateway on the management port.

```
admin> configure
config> management-interface
man-if> ip6 2001:DB8::211:11FF:FE58:743/64 2001:DB8::20F:F7FF:FE84:BFC2
man-if> exit
config>
```

Setting the Date and Time

Setting the date and time on the ETEP helps ensure that the appliance's time can be synchronized properly with other ETEPs or components in the EncrypTight system.

The time zone on the ETEP is set to UTC 0 (Coordinated Universal Time), and is not user configurable. Enter the date and time relative to UTC 0, also referred to as Greenwich Mean Time (GMT). To calculate

the local time relative to UTC, add or subtract the offset hours from UTC for the local time zone (UTC \pm n). The following examples give the local time at various locations at 12:00 UTC when daylight saving time is not in effect:

- New York City, United States: UTC-5; 07:00
- New Delhi, India: UTC+5:30; 17:30

To set the date and time:

- 1 At the command prompt, type **configure** to enter configuration mode.
- 2 At the `config>` prompt, type **date** `<year>` `<month>` `<day>` `<hour>` `<minutes>` `<seconds>`

year	2008-2037
month	01-12
day	01-31
hour	00-23
minutes	00-59
seconds	00-59
- 3 Type **exit** to return to the command prompt.

Example

```
admin> configure
config> date 2008 10 11 15 30 00
config> exit
```

Entering a Throughput License

The method for entering licenses on the ETEP depends on your management software:

- For ETEPs that are managed exclusively through the command line, follow the procedure in this section.
- For EncrypTight deployments, throughput licenses *must* be managed with the EncrypTight software. Licenses entered from the CLI are not recognized as valid in an EncrypTight deployment. See the *EncrypTight User Guide* for more information.

Each ETEP is capable of transmitting traffic at a range of speeds that varies by model. When you install the license you purchased, ETEPs transmit traffic at the speed specified by the license. [Table 20](#) lists the available speeds for each ETEP model.

Table 20 ETEP Throughput Speeds

Model	Available Throughput
ET0010A	3, 6, 10, 25, 50 Mbps
ET0100A	100, 155, 250 Mbps
ET1000A	500, 650 Mbps, 1 Gbps

You need to install a license on each ETEP that you use. Licenses are linked to the serial number of the ETEP on which they are installed. You cannot install a license intended for one ETEP on a different ETEP.

If you upgrade from a command line-only installation to a full EncrypTight deployment, you can no longer use the command line-only license and must acquire an EncrypTight license.

To add a license from the command line:

- 1 At the command prompt, type **configure** to enter configuration mode.
- 2 At the `config>` prompt, type **license <string>**, where string is the license provided by Customer Support. The license is case sensitive. Enter the license exactly as provided. It will look something like this: 1:0:0508C482:10:258482fab2

To view the ETEP throughput speed:

- 1 At the command prompt, type **show throughput-speed**.

Configuration Example

The following example illustrates the commands used for initial setup of the ETEP to configure the following parameters: management IP address, subnet mask, and default gateway, auto-negotiation, date and time. The **autoneg** command needs to be configured only if you want to disable auto-negotiation and configure the link speed and flow control manually.

```

pep login: admin
Password: *****
admin> configure
config> management-interface
man-if> ip 192.168.10.10 255.255.255.0 192.168.10.1
man-if> autoneg disable 100m-full on
man-if> exit
config> date 2008 10 15 12 30 00
config> exit
admin>

```

Managing the ETEP

The ETEP can be managed in two ways, depending on the size and complexity of your deployment:

- **Command Line Interface (CLI)**
You can configure the ETEPs for operation and create Layer 2 point-to-point policies using the CLI commands.
To manage the ETEP using the CLI, you can attached a PC directly to the serial port or use any SSH client for a secure remote connection through the Ethernet management port.
- **EncrypTight Policy and Key Manager™**
EncrypTight can distribute keys to a large number of ETEPs. It works for complex mesh, hub and spoke, and multicast networks, as well as in straightforward point-to-point topologies. EncrypTight

includes tools for appliance configuration, policy definition and deployment, and key generation and distribution.

To prepare the ETEP for operation in the network, you will need to perform the following tasks:

- 1 Assign passwords
- 2 Configure the ETEP
- 3 Define security policies

If you plan to operate the ETEP in FIPS mode, we recommend enabling FIPS mode as your first configuration task. Entering FIPS mode resets many configuration items, such as passwords, policies, and certificates. To avoid having to reconfigure the ETEP, enable FIPS mode and then perform the rest of the appliance and policy configuration tasks.

See the user guide for your management software for details:

- *ETEP CLI User Guide*
- *EncrypTight User Guide*

4 Maintenance

This section includes the following topics:

- Preventative Maintenance
- What To Do If an Appliance Fails
- Tamper Switch and Zeroization
- Cable Pinouts

Preventative Maintenance

Periodically perform maintenance on your ETEP. Keep components free of dust and other particulate matter. Examine cables for damage and ensure that airflow requirements have been met. On ETEP models that have fans, check the fans for reduced airflow caused by dust build-up and clean as necessary. No special maintenance is required.

The ETEP is housed in a tamper evident chassis. Periodically check the chassis for evidence of tampering. Items to look for include stripped screws and damage to the tamper-evident seal. The tamper-evident seal is located on the rear panel;

The frequency of a physical inspection depends on the value of the intellectual property being protected and the security of the environment in which the ETEP is located. For example, a locked equipment closet is more secure than an open server room. At a minimum, it is recommended that the unit's physical integrity be checked on a monthly basis.

CAUTION

The ETEP does not contain any field-replaceable internal parts. Do not remove the unit's cover for any reason. Removing the cover will zeroize the ETEP, returning it to its factory default state. All configuration data and keys are destroyed during the zeroization process. The cover is to be removed only by authorized service personnel. Unauthorized cover removal voids the product warranty.

CAUTION

Disconnect all power cords before servicing.

What To Do If an Appliance Fails

Most ETEP models do not contain any field-replaceable parts. If you experience an appliance failure, contact Customer Support for a replacement ETEP and throughput license.

The ET1000A has field-replaceable power supplies. Contact Customer Support to obtain a replacement power supply in the event of a failure. See [“Replacing the ET1000A Power Supply” on page 56](#) for removal and installation instructions.

Related topics:

- [“Obtaining a License for Replacement Units” on page 56](#)
- [“Replacing the ET1000A Power Supply” on page 56](#)

Obtaining a License for Replacement Units

When replacing an ETEP with a spare, the replacement ETEP will run at full throughput for a grace period. During the grace period, contact customer support to report the RMA unit and to receive a new license for the replacement. Licenses are linked to the serial number of the ETEP on which they are installed. You cannot install a license intended for one ETEP on a different ETEP.

Upon receipt of the new license, install it on the ETEP as described in [“Entering a Throughput License” on page 52](#).

Replacing the ET1000A Power Supply

The ET1000A comes with dual internal power supplies. In the event of a failure, each power supply can be removed and replaced in the field.




Disconnect all power cords before servicing the ET1000A.

To replace a power supply in the ET1000A:

- 1 Unplug both power supplies at the power source.
- 2 On the rear panel, lift the power cord clip on the affected power supply, and then remove the power cord from the receptacle ([Figure 35](#)).

Figure 35 Power cord is removed from power supply # 2

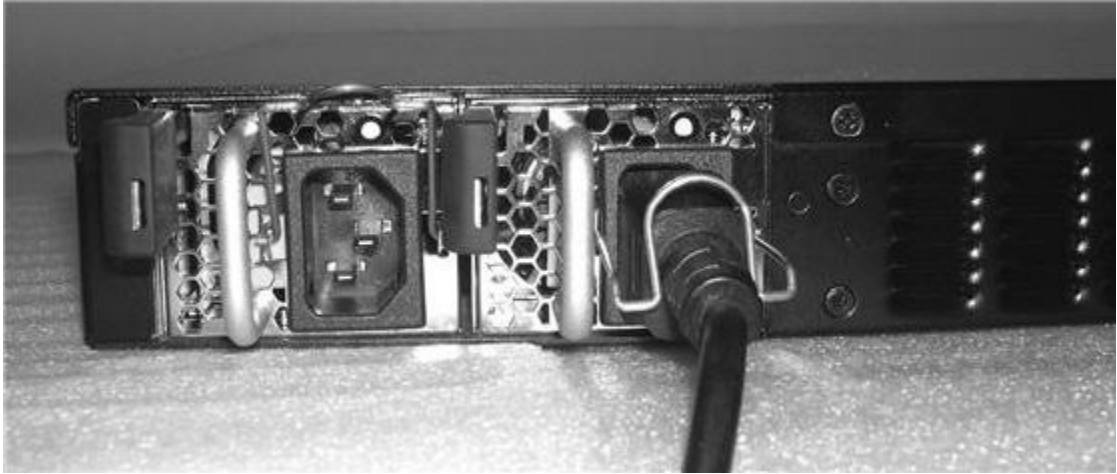

- 3 Locate the release lever on the left of the power supply (Figure 36). Press the release lever inward toward the metal support to release the power supply latch. Pull the power supply outward to remove it from the chassis.

Figure 36 Release lever on power supply # 2



- 4 On the replacement power supply, press the release lever toward the metal support and insert the new power supply until it latches (Figure 37). When the power supply is correctly inserted, you should not be able to remove it by pulling on it. It can only be removed when the latch is disengaged.

Figure 37 Slide the replacement power supply into the slot on the rear panel

- 5 Insert the power cord in the replacement power supply and secure it with the clip.
- 6 Reconnect power supplies 1 and 2 to their respective power sources.
- 7 Return the failed power supply to Black Box as directed by Customer Support.

Tamper Switch and Zeroization

The following ETEP models include a tamper switch: ET0010A, ET0100A, and ET1000A. The switch is activated if the ETEP cover is removed while the unit is operating or if the ETEP detects that the cover is open while it is booting. When the ETEP detects that the switch is activated it enters an error state, zeroizes the appliance's keying material, and discards all traffic. Zeroization has the same effect as issuing the **filesystem-reset** command.

Zeroization occurs under the following conditions:

- When operating in FIPS mode, the FIPS self-tests fail during boot
- When operating in FIPS mode, signature errors are detected on critical files pertaining to policies and keys
- The tamper switch is activated when the cover is removed

The following events occur when the ETEP is zeroized:

- Alarm LED illuminates
- The ETEP sends a critical error trap
- The ETEP discards all packets that it receives on the local and remote ports
- Ethernet management port communication is disabled. You will be unable to manage the ETEP using ETEMS.
- CLI login is disabled via the serial port and Ssh
- Data files are permanently deleted, including log files
- The file system is reset to factory defaults

The zeroization process takes about 20 minutes to complete.

To recover the ETEP following zeroization:

Wait approximately 20 minutes for the zeroization process to complete. If you are connected to the ETEP through the serial port, you will see the following message:

```
Power cycle required to reboot appliance
```

After cycling the power, you will be able to configure and manage the ETEP from its factory default settings. If you cycle the power prior to the completion of the zeroization process the appliance will enter an unrecoverable state, which requires returning the ETEP to the factory.

Related topic:

- [“filesystem-reset” on page 132](#)

Cable Pinouts

This section lists the serial cable pinouts for the following ETEPs:

- ET0010A
- ET0100A/ET1000A

RS-232 Serial Cable: ET0010A

The RS-232 serial cable on the ET0010A is a null modem cable with an RJ-45 connector to the ET0010A and a DB-9 female connector to a PC or laptop.

Figure 38 ET0010A Null Modem Serial Cable

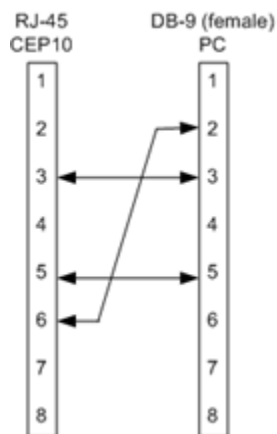


Table 21 ET0010A Null Modem Pin Connection

RJ-45 Pin	DB-9 Pin
3 Receive Data	3 Transmit Data
6 Transmit Data	2 Receive Data
5 Signal Ground	5 Signal Ground

RS-232 Serial Cable: ET0100A/ET1000A

The RS-232 serial cable on the ET0100A and ET1000A is a null modem cable with DB-9 connectors (female to male).

Figure 39 ET0100A/ET1000A Null Modem Serial Cable

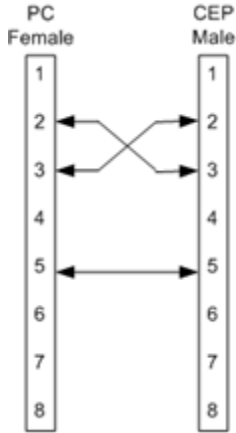


Table 22 ET0100A/ET1000A Null Modem Pin Connection

Pin	Pin
2 Receive Data	3 Transmit Data
3 Transmit Data	2 Receive Data
5 Signal Ground	5 Signal Ground

5 Troubleshooting

This section includes the following topics:

- [Symptoms and Solutions](#)
- [Diagnostic Code Display](#)

Symptoms and Solutions

The following tables provide some solutions to common problems that may occur with your ETEP.

LED Indicators

Table 23 LED Indicators

Symptom	Explanation and Possible Solution
No power light.	<ul style="list-style-type: none">• Make sure the power cable is attached and plugged in to both the device and the power outlet.
Alarm light is lit.	<ul style="list-style-type: none">• The ETEP is in an error state. See “Error State” on page 62 for information about possible causes and recovery procedures.
Port status LED is off (no link).	<ul style="list-style-type: none">• Check the network cable. Verify correct transmit and receive cable polarity.• Check the operational status of the equipment being connected.• Verify that the auto-negotiation and flow control settings on the local or remote port in question match the settings of the equipment to which they are connected.• If the problem is not resolved, the network may not be functioning properly. Consult a local network administrator.
Port status LED is not blinking (no traffic).	<ul style="list-style-type: none">• Check physical connectivity.• Verify that the policies are set up to allow traffic to pass through the appliance.• Check with your Network Administrator to ensure proper placement in the network.

Table 23 LED Indicators

Symptom	Explanation and Possible Solution
Power supply LED is off	<p>The power supply is unplugged or is unable to recover from a power interruption.</p> <ul style="list-style-type: none"> • Make sure the power cable is attached and plugged in to the power supply and the power outlet. • Check the status LED on the power supply on the rear of the unit. If the LED is off, the power supply is not receiving power. If the LED is red, the power supply requires a manual power cycle. Unplug the power cord, wait 5 seconds, and then reapply power. The LED is green during normal operation. If a manual power cycle does not restore power, contact customer support.

Error State

Table 24 Error State Symptoms and Solutions

Symptom	Explanation and Possible Solutions
The Alarm LED is illuminated	<p>The ETEP enters an error state when a boot test fails, the operating temperature threshold is exceeded, signature errors are detected on critical files pertaining to policies and keys, or a FIPS test fails when the ETEP is in FIPS mode.</p> <p>When the ETEP is in an error state the Alarm LED illuminates, and the appliance discards all packets it receives. Depending on the error, other notifications may be sent (traps, status messages to the ETEMS or the terminal).</p> <p>To recover from an error state when FIPS mode is disabled:</p> <ul style="list-style-type: none"> • When the ETEP detects a corrupted policy, it enters an error state and sends a critical error trap to the management station. To recover, redeploy the policies and then reboot the ETEP. • For non-policy errors, reboot the appliance. If the operating temperature threshold is exceeded, cycle the power to restart the ETEP. • If a failure occurs during the boot process, refer to “Diagnostic Code Display” on page 63 for additional troubleshooting information. • If the actions listed above do not clear the error, contact customer support. <p>To recover from an error state when the ETEP is in FIPS mode:</p> <ul style="list-style-type: none"> • A FIPS test failure or signature error will cause the ETEP to zeroize. To learn more about the zeroization process and recovery from that state, see “Tamper Switch and Zeroization” on page 58.

Temperature Threshold and Discarded Traffic

When the ETEP enters an alarm state due to a temperature failure, the Alarm indicator illuminates and the ETEP discards traffic. The ETEP remains in an error state until it is rebooted. However, once the temperature drops below the critical threshold, the alarm indicator turns off and the ETEP stops reporting an alarm state to ETEMS, even though the alarm state has not been cleared and the ETEP continues to discard traffic.

If the ETEP is discarding traffic, check the system log for temperature warning notices to confirm that a temperature error occurred. Reboot the ETEP to resume normal operation.

Diagnostic Code Display

ETEPs display self-test codes during boot up, in addition to operational status and error conditions. See the following sections for information about your appliance model:

- “Status Codes: ET0010A” on page 63
- “Diagnostic Codes: ET0100A and ET1000A” on page 64

Status Codes: ET0010A

The ET0010A status LEDs display self-test codes during boot up. After the ET0010A boots, the status LEDs reflect the operational state of the appliance.

When the appliance powers up, the Alarm LED illuminates briefly and the four status LEDs illuminate to verify that they are functioning. As the ET0010A cycles through its self-tests the status LEDs indicate the self-test that is in progress (see [Table 25](#)). After the tests execute successfully, the status LEDs turn off.

If the ET0010A fails to boot properly the illuminated status LEDs indicate the number of the last test that completed successfully, and a message describing the failure is displayed on the terminal. In addition, the Alarm light illuminates if any of the first four self-tests fail (status LEDs 1, 2, 1&2, or 3). In the event of a failure, make a note of the status code and of the error message on the console, and then contact Black Box customer support.

Table 25 ET0010A Self-Tests

Status LEDs Illuminated	Description
1, 2, 3, 4	LED display test.
1	Bootflash CRC test.
2	DRAM test #1.
1, 2	Initialize IO devices. DRAM test #2.
3	Initialize compact flash.
1,3	Complete bootloader initialization.
2,3	Download operating system.
1, 2, 3	Start operating system, IPSec dataplane code, and management and control software.
All status LEDs off	Up and operational.

After the ET0010A boots up, the status LEDs reflect the operational state of the appliance.

Table 26 ET0010A Operational Codes

Code	Description
All status LEDs off	Up and operational.
2, 3, 4	The ET0010A is in a shutdown state.

Diagnostic Codes: ET0100A and ET1000A

The 7-segment diagnostic display on the front panel of the following models displays self-test codes during boot up: ET0100A and ET1000A. After the ETEP boots, the display reflects the operational state of the appliance and error conditions.

When the appliance powers up, all LEDs illuminate. The Alarm LED illuminates briefly and the diagnostic code LED displays 88 to verify that the diagnostic display segments are functioning. As the ETEP cycles through its self-tests the corresponding diagnostic code is displayed (see [Table 27](#)). After the tests execute successfully, the diagnostic code display is solidly illuminated with code 00.

If the ETEP fails to boot properly the diagnostic code display indicates the number of the last test that completed successfully, and a message describing the failure is displayed on the terminal. In addition, the Alarm light illuminates if diagnostic tests 01-04 fail. In the event of a failure, make a note of the code and of the error message on the console, and then contact Black Box customer support.

Table 27 ET0100A/ET1000A Self-Tests

Code	Description
88	7-segment display test.
01	Bootflash CRC test.
02	DRAM test #1.
03	Initialize IO devices. DRAM test #2.
04	Initialize compact flash.
05	Complete bootloader initialization.
06	Download operating system.
07	Start operating system, IPSec dataplane code, and management and control software.
00	Up and operational.

After the ETEP boots up, the diagnostic display reflects the operational state of the appliance.

Table 28 ET0100A/ET1000A Operational Codes

Code	Description
00	Up and operational.
rb	The ETEP is in a reboot required state.
AL	An alarm condition or error condition has been reported.
dL	The ETEP is downloading new software.
--	The ETEP is in a shutdown state.

Appendix A Environmental and Regulatory Information

This section includes the following topics:

- [WEEE Directive](#)
- [RoHS Directive](#)
- [Regulatory Information](#)

WEEE Directive

Black Box is committed to environmentally responsible behavior. As part of this commitment, we have put in place a product end-of-life management solution that meets the European Union's Waste Electrical and Electronic Equipment (WEEE) Directive. All products shipped from the Black Box manufacturing facility have the appropriate WEEE markings and qualify for the recycling program. Black Box products that have reached the end of their useful life are to be recycled. Send all requests for recycling to Black Box, and we will arrange for pick up and transport to a recycling location that complies in an environmentally responsible manner with the EU WEEE Directive.

RoHS Directive

The Restriction of Hazardous Substances (RoHS) Directive restricts the use of certain materials that are commonly found in electronic products. Restricted substances are heavy metals, including lead, and poly-brominated materials.

Black Box has eliminated or substantially reduced its usage of the prohibited materials. However, the RoHS Directive allows a lead-in-solder exemption for Category 3 Telecommunications Products. It is Black Box's position that its network security products qualify for the lead-in-solder exemption.

Black Box is committed to completely eliminating its use of RoHS prohibited materials as that becomes technically feasible. We are constantly monitoring the availability of lead-free components and the progress of the lead-free manufacturing processes. We pledge to continually evolve and refine our products and processes as viable alternatives that do not impact product reliability or performance become available.

For more information on the status of our RoHS efforts or product-specific environmental questions, please e-mail us at info@blackbox.com.

Regulatory Information

This section contains regulatory information for the following Black Box appliances:

- ET0010A
- ET0100A
- ET1000A

ET0010A Regulatory Information

The ET0010A (part number 410-032-402) has received a statement of compliance for the items listed in the following sections:

- Application of Regulations: FCC Title 47, Part 15, Subpart B, EMC Directive 2004/108/EC
- Class of Equipment: Class A

Safety

- UL: IEC 60950-1:2005, Second Edition; EN 60950-1:2006
- CSA-C22.2 No. 60950-1

Immunity

- EN 55024:1998/A1:2001/A2:2003 (IEC 61000-4-2:1995/A2:2000, IEC 61000-4-3:2002, IEC 61000-4-4:2004, IEC 61000-4-5:1995/A1:2000, IEC 61000-4-6:1996/A1:2000, IEC 61000-4-8:1993/A1:2000, IEC 61000-4-11:1994/A1:2000)

Emissions

- FCC Part 15, Subpart B, Class A
- EN55022: 2006, Class A
- EN61000-3-2:2006, EN61000-3-3:1995/A1:2001/A2:2005
- AS/NZS CISPR 22:2006 Class A

FCC Information (USA)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC rules. Operations are subject to the following conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesirable operation.

Interference-Causing Equipment Standard Compliance Notice (Canada)

“The Class A digital apparatus complies with Canadian ICES-003.”

“Cet appareil numérique de la class A est conforme a la norme NMB-003 du Canada.”

European Notice

Products with the CE Marking comply with both the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

ET0100A Regulatory Information

The ET0100A, part number 410-032-002, has received a statement of compliance for the items listed in the following sections.

- Application of Regulations: FCC Title 47, Part 15, Subpart B, EMC Directive 2004/108/EC
- Class of Equipment: Class B

Safety

- UL 60950-1
- CSA-C22.2 No. 60950-1

Immunity

- EN 55024:1998/A1:2001/A2:2003 (IEC 61000-4-2:1995/A2:2000, IEC 61000-4-3:2002, IEC 61000-4-4:2004, IEC 61000-4-5:1995/A1:2000, IEC 61000-4-6:1996/A1:2000, IEC 61000-4-8:1993/A1:2000, IEC 61000-4-11:1994/A1:2000)

Emissions

- EN55022: 2006, ANSI C63.4:2006, EN61000-3-2:2006, EN61000-3-3:1995/A1:2001/A2:2005

FCC Information (USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Interference-Causing Equipment Standard Compliance Notice (Canada)

“The Class B digital apparatus complies with Canadian ICES-003.”

“Cet appareil numérique de la class B est conforme a la norme NMB-003 du Canada.”

European Notice

Products with the CE Marking comply with both the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

ET0100A Cabling



WARNING

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

ET1000A Regulatory Information

The ET1000A, part number 410-032-103, has received statements of compliance for the items listed in the following sections:

- Application of Regulations: FCC Title 47, Part 15, Subpart B (US), Canada Standard ICES-003, European Council Directive 2004/108/EC
- Class of Equipment: Class B

Safety

- UL 60950-1, 2nd Edition, 2007-03-27
- CSA-C22.2 No. 60950-1-07, 2nd Edition, 2007-03
- IEC 60950-1, 2nd Edition
- EN 60950-1:2006+A11:2009

EMI/EMC

- ANSI C63.4:2003
- FCC Title 47, Part 15 Subpart B
- Canada Standard ICES-003
- European Council Directive 2004/108/EC
- EN55022: 2006/A1:2007 Class B
- EN61000-3-2:2006, EN61000-3-3:1995/A1:2001/A2:2005

- EN 55024:1998/A1:2001/A2:2003 (IEC 61000-4-2:1995/A2:2000, IEC 61000-4-3:2002, IEC 61000-4-4:2004, IEC 61000-4-5:1995/A1:2000, IEC 61000-4-6:1996/A1:2000, IEC 61000-4-8:1993/A1:2000, IEC 61000-4-11:1994/A1:2000)
- Australian Standard AS/NZS CISPR 22:2006 Class B

FCC Information (USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules.

Interference-Causing Equipment Standard Compliance Notice (Canada)

“The Class B digital apparatus complies with Canadian ICES-003.”

“Cet appareil numérique de la class B est conforme a la norme NMB-003 du Canada.”

European Notice

Products with the CE Marking comply with the European Council Directive 2004/108/EC.

Normas Oficiales Mexicanas (NOM): Electrical Safety Statement

INSTRUCCIONES DE SEGURIDAD

- 1 Todas las instrucciones de seguridad y operación deberán ser leídas antes de que el aparato eléctrico sea operado.
- 2 Las instrucciones de seguridad y operación deberán ser guardadas para referencia futura.
- 3 Todas las advertencias en el aparato eléctrico y en sus instrucciones de operación deben ser respetadas.
- 4 Todas las instrucciones de operación y uso deben ser seguidas.
- 5 El aparato eléctrico no deberá ser usado cerca del agua—por ejemplo, cerca de la tina de baño, lavabo, sótano mojado o cerca de una alberca, etc..
- 6 El aparato eléctrico debe ser usado únicamente con carritos o pedestales que sean recomendados por el fabricante.
- 7 El aparato eléctrico debe ser montado a la pared o al techo sólo como sea recomendado por el fabricante.
- 8 Servicio—El usuario no debe intentar dar servicio al equipo eléctrico más allá a lo descrito en las instrucciones de operación. Todo otro servicio deberá ser referido a personal de servicio calificado.
- 9 El aparato eléctrico debe ser situado de tal manera que su posición no interfiera su uso. La colocación del aparato eléctrico sobre una cama, sofá, alfombra o superficie similar puede bloquea la ventilación, no se debe colocar en libreros o gabinetes que impidan el flujo de aire por los orificios de ventilación.
- 10 El equipo eléctrico deber ser situado fuera del alcance de fuentes de calor como radiadores, registros de calor, estufas u otros aparatos (incluyendo amplificadores) que producen calor.
- 11 El aparato eléctrico deberá ser conectado a una fuente de poder sólo del tipo descrito en el instructivo de operación, o como se indique en el aparato.

- 12 Precaución debe ser tomada de tal manera que la tierra física y la polarización del equipo no sea eliminada.
- 13 Los cables de la fuente de poder deben ser guiados de tal manera que no sean pisados ni pellizcados por objetos colocados sobre o contra ellos, poniendo particular atención a los contactos y receptáculos donde salen del aparato.
- 14 El equipo eléctrico debe ser limpiado únicamente de acuerdo a las recomendaciones del fabricante.
- 15 En caso de existir, una antena externa deberá ser localizada lejos de las líneas de energía.
- 16 El cable de corriente deberá ser desconectado del cuando el equipo no sea usado por un largo periodo de tiempo.
- 17 Cuidado debe ser tomado de tal manera que objetos líquidos no sean derramados sobre la cubierta u orificios de ventilación.
- 18 Servicio por personal calificado deberá ser provisto cuando:
 - a El cable de poder o el contacto ha sido dañado; u
 - b Objetos han caído o líquido ha sido derramado dentro del aparato; o
 - c El aparato ha sido expuesto a la lluvia; o
 - d El aparato parece no operar normalmente o muestra un cambio en su desempeño; o
 - e El aparato ha sido tirado o su cubierta ha sido dañada.

Index

A

- alarm LED
 - ET0010A, 12
 - ET0100A, 15
 - ET1000A, 17
- autoneg command, 50

B

- battery replacement, 24
- booting the appliance
 - ET0010A, 34
 - ET0100A, 38
 - ET1000A, 43

C

- cables
 - connecting the cables
 - ET0010A, 33
 - ET0100A, 37
 - ET1000A, 42
 - pinouts, 59
 - requirements
 - ET0010A, 27
 - ET0100A, 35
 - ET1000A, 40
- command line interface
 - logging in, 47
- connectors
 - ET0010A connectors, 11
 - ET0100A connectors, 14
 - ET1000A connectors, 16
- customer support, 7

D

- default gateway configuration, management port, 48
- diagnostics
 - power up codes
 - CEP100-XSA description, 64

- ET0010A description, 63
- ET0100A description, 64
- ET1000A description, 64

diagrams

- ET0010A
 - front panel connectors, 11
 - front panel LEDs, 12
 - rear panel connectors, 13
- ET0100A
 - front panel connectors, 14
 - front panel LEDs, 14
 - rear panel, 15
- ET1000A
 - front panel connectors, 16
 - front panel LEDs, 16
 - rear panel, 18

E

- environmental compliance, 65
- error state, 62

F

- failures
 - replacing appliances, 56
 - replacing ET1000A power supplies, 56
- FIPS mode operation, 54
- firewall ports, 26
- front panel diagrams
 - ET0010A, 11, 12
 - ET0100A, 14
 - ET1000A, 16, 17

I

- initial setup
 - auto-negotiation settings, 49
 - logging in through the serial port, 47
 - overview, 47
 - setting the management IP address, 48
- installation

- ET0010A
 - applying power, 34
 - connecting the cables, 33
 - rack mounting, 28
 - table top installation, 31
 - unpacking the shipping carton, 27
 - ET0100A
 - applying power, 38
 - connecting the cables, 37
 - rack mounting, 25
 - unpacking the shipping carton, 36
 - ET1000A
 - applying power, 43
 - cabling requirements, 40
 - connecting the cables, 42
 - rack mounting, 41
 - unpacking the shipping carton, 41
 - firewall ports, 26
 - IP address, setting on the management port, 48
- ## L
- LEDs
 - ET0010A indicator description, 12
 - ET0100A indicator description, 15
 - ET1000A indicator description, 17
 - troubleshooting, 61
 - license
 - entering, 52
 - for replacement units, 56
 - viewing, 53
 - lithium battery warning, 24
 - logging in through the serial port, 47
- ## M
- maintenance
 - recommendations, 55
 - replacing appliances, 56
 - management interface
 - auto-negotiation, 49
 - default gateway, 48
 - description, 48
 - IP address, 48
- ## P
- packing list
 - ET0010A, 27
 - ET0100A, 36
 - ET1000A, 41
 - pinouts
 - ET0010A, 59
 - ET0100A/ET1000A, 60
 - port status
 - ET0010A LED description, 12
 - ET0100A LED description, 15
 - ET1000A LED description, 17
 - ports, configuring your firewall, 26
 - power indicator LED
 - ET0010A, 12
 - ET0100A, 15
 - ET1000A, 17
 - power supply
 - replacing on the ET1000A, 56
 - powering up the appliance
 - ET0010A, 34
 - ET0100A, 38
 - ET1000A, 43
- ## R
- rack mount
 - CEP10-602 instructions, 28
 - ET0010A instructions, 28
 - ET0100A/ET1000A mounting instructions, 37
 - preparation, 25
 - rear panel diagrams
 - ET0010A, 13
 - ET0100A, 14, 15
 - ET1000A, 18
 - regulatory information
 - ET0010A, 66
 - ET0100A, 67
 - ET1000A, 68
 - requirements
 - ET0010A cables, 27
 - ET0100A cables, 35
 - ET1000A cables, 40
 - safety guidelines, 23
 - software, 24
 - RoHS directive, 65
- ## S
- safety guidelines, 23
 - self-tests
 - ET0010A, 63
 - ET0100A/ET1000A, 64
 - serial port, logging in to the CLI, 47
 - SFTP server
 - third party software, 24
 - shutting down the ETEP, 45
 - software
 - ETEP software requirements, 24
 - specifications
 - ET0010A, 20
 - ET0100A, 21

- ET1000A, 22
- status LEDs
 - ET0010A self-tests, 63
 - ET0100A/ET1000A self-tests, 64

T

- tamper-evident seal, 55
- technical support, 7
- throughput license
 - See *also* license
 - entering, 52
 - licensed ETEP speeds, 52
- traffic status LED
 - ET0010A, 12
 - ET0100A, 15
 - ET1000A, 17
- troubleshooting
 - diagnostic code display
 - ET0010A, 63
 - ET0100A/ET1000A, 64
 - error state, 62
 - LED indicators, 61
 - power up codes
 - ET0010A, 63
 - ET0100A/ET1000A, 64

U

- unpacking the shipping carton
 - ET0010A, 27
 - ET0100A, 36
 - ET1000A, 41

W

- WEEE directive, 65

Z

- zeroization
 - how it works, 58
 - recovery from, 59

Black Box Tech Support: FREE! Live. 24/7.

Tech support the
way it should be.



Great tech support is just 30 seconds away at 724-746-5500 or blackbox.com.



About Black Box

Black Box Network Services is your source for more than 118,000 networking and infrastructure products. You'll find everything from cabinets and racks and power and surge protection products to media converters and Ethernet switches all supported by free, live 24/7 Tech support available in 30 seconds or less.

© Copyright 2011. All rights reserved. Black Box and the Double Diamond logo are registered trademarks of BB Technologies, Inc. Any third-party trademarks appearing in this manual are acknowledged to be the property of their respective owners.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>