

Telephone Paging Amplifiers

MODELS TPU-35B, TPU-60B, TPU-100B

INSTALLATION & OPERATING INSTRUCTIONS

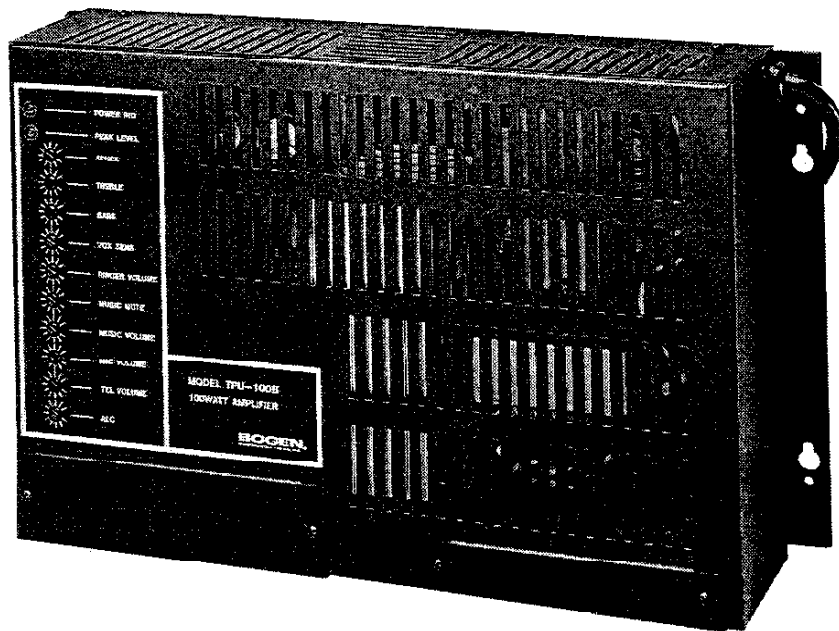

BOGEN[®]
COMMUNICATIONS, INC.

Description

Congratulations on your purchase of a BOGEN TPU-B Series Telephone Paging Amplifier. The TPU-B Series represents the continuing evolution of the popular TPU-Series Telephone Paging Amplifiers. The amplifiers supply the full range of features already found in the TPU Series, and incorporate exciting new features that further define the state-of-the-art of telephone paging.

The feature set of the TPU-B Series amplifiers includes:

- Three Models/Power Levels Available: TPU-35B/35 Watts, TPU-60B/60 Watts, and TPU-100B/100 Watts.
- Inputs for 600-ohm balanced telephone line, LO-Z balanced microphone, and background music source.
- Choice of outputs: 16-ohm, 25VCT, 25V, or 70V outputs, balanced or unbalanced.
- Choice of RCA jack or screw terminals for Music source (unbalanced).
- Volume controls for Tel channel, MIC, Music and Ringer.
- Ringer circuit activated by contact closure or 90V ring signal.
- Variable music mute with adjustable Mute level control.
- Signal-activated paging channel with VOX sensitivity and ALC adjustments.
- Aphex® Aural Exciter Circuit with on/off switch and effect adjustment.
- Bridging jacks supplied to double number of inputs and outputs.
- Output (RCA jack) to line-matching transformer (WMT-1A).

The frequency response on the paging or microphone channels is +/-1dB from 70Hz to 15KHz. Distortion is less than 1% from 80Hz to 15KHz. Hum and noise, from 20Hz to 20KHz is -70dB or better on the music and page channels and -55dB or better on the microphone channel. Bass response is adjustable +/-9dB at 100Hz. Treble response is adjustable +/-9dB at 10KHz (both +/-2dB).

The amplifier operates from a 120V AC source and is protected by a circuit breaker, electronic overload protection and by resettable thermostat.

CAUTION

Connect only to PBX system incorporating isolation from telecom network.

ATTENTION

Raccorder seulement a un systeme PBX independant du reseau de telecommunication.

Unpacking

The amplifier was carefully checked before leaving the factory; inspect the shipping container and unit closely for improper handling. If the unit has been damaged, make an immediate claim to the distributor from whom it was purchased. If the unit was shipped directly to you, save all packaging material, notify the carrier immediately and place a claim.

WARNING

The following installation instructions are for use by qualified service personnel only. To avoid an electric shock hazard, do not perform any functions requiring removal of the cover of the amplifier unless you are qualified to do so. To prevent fire or shock hazard, do not expose this unit to rain or moisture.

Power and Grounding

The AC line cord has a three-prong plug which must be plugged into a three-wire grounded outlet. It is important to ground the amplifier. If necessary, have an electrician ensure that the outlet is grounded. The POWER LED illuminates when power is applied to the unit.

Installation

The TPU-Series is designed for surface wall mounting. When mounting the unit, avoid proximity to heat sources. Allow space for terminal wiring, access to controls, and adequate air flow for heat dissipation. Amplifiers are heavy; where possible, secure the unit to wall studs or a suitable back brace. Use self-fastening or molly-type hardware on hollow sheet rock type walls.

Four #6 x 3/4" screws are provided with the unit to mount to solid wall stock. Hold the amplifier to the wall and trace the inside edge of the top keyhole mounting holes. Set the amplifier down and locate the top two screws in position (13-1/2" apart). Secure them to the wall, allowing the screw heads to protrude 1/8" to 1/4". Fit the chassis over the screw heads and position the bottom two screws. Complete the mounting of the amplifier by tightening all screws securely.

Input Connections

The TPU-B Input connections and Apex On/Off switch are housed in the Input Connections Bay, accessible by removing the left cover panel on the front of the amplifier. Loosen the hold down screws on the panel and slide the panel up to remove. A knockout is provided on the panel to admit wiring. Be sure to replace the cover and secure the hold down screws after making connections.

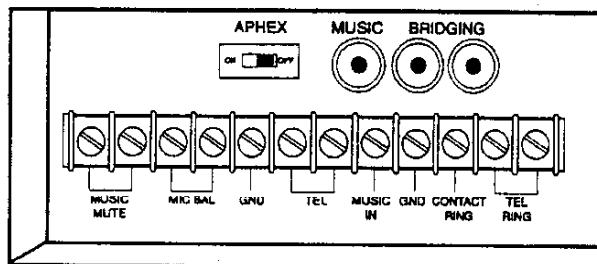


Figure 1. TPU Input Connections Bay

TEL

A balanced isolating transformer input for a telephone line is provided. A 600-ohm telephone line may be connected to the TEL terminals. If two-conductor shielded wire is used, connect the shield to the adjacent GND (ground) terminal, which is to the left of the TEL terminals.

MIC BAL & MUSIC MUTE

A low-impedance balanced microphone can be connected to the screw terminals marked MIC BAL. Use two-conductor shielded wire and connect the shield to the adjacent GND terminal. Connect the MUSIC MUTE terminals to the switch on the microphone for microphone muting of the music channel.

MUSIC IN

A wide range of HI-Z background music sources can be connected to the TPU amplifier. Connect the source to either the MUSIC RCA jack or MUSIC IN screw terminals.

TEL RING & CONTACT RING

The night ringer can be activated either by a 90V ring signal or from a dry contact closure.

To activate the night ringer using the ring signal, connect the signal to the TEL RING terminals.

To activate the night ringer using contact closure, connect a pair of normally-open dry contacts (customer-supplied and installed in the telephone system) to the CONTACT RING terminal and adjacent GND terminal.

RINGER TONE

As shipped, a steady ringing tone will be heard as long as the dry contacts remain closed. To produce a pulse tone, it is necessary to remove the cover and place the jumper located at J1 in the P (Off) position.

WARNING

This procedure requires removal of the amplifier cover. To avoid an electric shock hazard, do not perform this procedure unless you are qualified to do so.

APHEX®

The Aphex® Aural Exciter circuit is controlled by the on/off switch located in the input connections bay. When the switch is in the on position, the harmonics that are usually lost in the amplification process are regenerated and added to the audio signal. This results in increased presence and clarity, increased intelligibility, greater perceived loudness (without adding extra power) and reduced listener fatigue.

BRIDGING JACKS

Two TPU amplifiers may be bridged together to double the number of inputs and outputs. Connect a single-conductor shielded cable, terminated in an RCA phono plug at each end, between the BRIDGING jacks of the two amplifiers. The cable should not be more than 20 feet in length.

Output Connections

Output connections are housed in the connections bay, accessible by removing the right hand cover panel on the front of the amplifier. Loosen the hold down screws on the panel and slide the panel up to remove. Knockouts are provided on the panel to admit wiring. Be sure to replace the cover and secure the hold down screws after making connections.

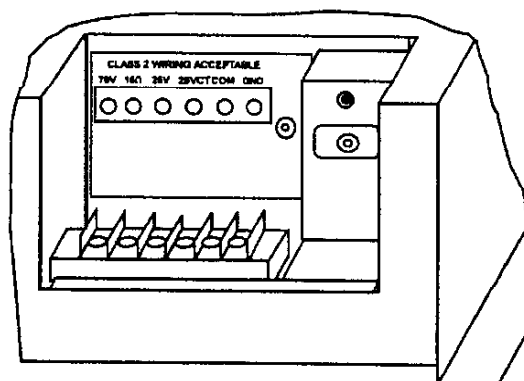


Figure 2. TPU Output Connections Bay


Speakers

Speaker systems can be connected directly to the speaker output terminals. The amplifier provides outputs at 16-ohm, 25VCT, 25V, and 70V, and is shipped for use with unbalanced systems. Connect one lead to the terminal corresponding to the impedance of the speaker system and the other to the COM and GND terminals on the output terminal strip.

For balanced systems, remove the link between COM and GND.

Additional Power Amplifier

An external power amplifier can be used with the TPU amplifier. You must modify the output circuitry of the telephone amplifier by adding a resistor network, as illustrated below. Connect a patch cord to the high-level/high-impedance input of the booster amplifier.

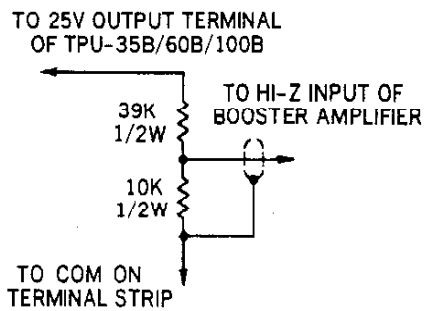

WMT-1A

Connect a Bogen WMT-1A accessory to the RCA jack labeled WMT-1A in order to feed a 600-ohm telephone line, LO-Z input or balanced Mic input of another amplifier. Refer to the instructions furnished with the WMT-1A accessory for full information.

Operation

Power

Plug the amplifier line cord into a suitable outlet. The POWER LED will illuminate once power is applied to the amplifier. The unit remains in a power standby condition after power is applied.

PEAK LEVEL

The PEAK LEVEL LED will illuminate if the amplifier is driven into clipping. Adjust the output level of MIC VOLUME, PAGE VOLUME, MUSIC VOLUME, or RINGER VOLUME if the PEAK LEVEL LED remains ON.

Controls

APHEX®

The APHEX® control on the front panel adjusts the mix of the Aphex effect with the audio signal. Clockwise rotation of the control maximizes the effect. Counterclockwise rotation minimizes the effect.

To turn the Aphex circuit on or off, use the slide switch located in the connections bay (See INPUT CONNECTIONS).

Treble & Bass

The BASS control provides +/-9dB of boost and cut at 100Hz. The TREBLE control provides +/-9dB of boost and cut at 10KHz. Rotate controls clockwise to boost and counterclockwise to cut.

TEL INPUT

VOX (Voice-Operated) SENS

The VOX SENSitivity control should be set so that only the desired signal is above the threshold level, while noise or unwanted signal is below it. When an input signal (such as voice) is detected, the music channel will be muted. To adjust the sensitivity of this circuit:

1. Rotate the control fully clockwise. While making a page announcement and talking at a low level, the sound should not be choppy nor missing parts of words. If it is choppy, or if intelligibility is poor, rotate the control counterclockwise to the point where the sound is clear and crisp (but not to the maximum counterclockwise position).

2. If the background music shuts down when no page is in progress, rotate the control clockwise until the music is restored.

VARIABLE MUSIC MUTE

The MUSIC MUTE control adjusts the mute level of the background music when using the telephone paging channel. This control differs from the MUSIC MUTE terminals which mute background music during a microphone page (See Input Connections). The fully counterclockwise position results in maximum muting. The fully clockwise position results in minimum muting.

RINGER VOLUME

Adjust to the desired level - clockwise to increase, counterclockwise to decrease the level.

MUSIC VOLUME

The MUSIC VOLUME control adjusts the volume of background music. Rotate the control counterclockwise to decrease the level. Rotate the control clockwise to increase the level.

MIC VOLUME

The MIC VOLUME control adjusts the microphone level. Rotate the control counterclockwise to decrease the level. Rotate the control clockwise to increase the level.

TEL VOLUME

This control adjusts the telephone paging level. It does not affect the microphone level. Rotate the control counterclockwise to decrease the level. Rotate the control clockwise to increase the level.

ALC

The telephone paging channel has an ALC circuit that maintains constant output level regardless of input variations in the varying voice levels of persons using the system. The ALC is factory set and adjustments are not normally required. If ALC is required, set the ALC control using the directions below.

1. Turn off the ALC by rotating the control fully counterclockwise.
2. Set the TEL VOLUME control to the highest level likely to be required. Hold a telephone handset in a normal position and speak softly yet distinctly into the mouthpiece. Adjust the TEL VOLUME control to the desired output level.
3. Speak in a loud voice directly into the handset mouthpiece while rotating the ALC control clockwise to the point where the output of the amplifier is reduced to the same level as that obtained in Step 2.

To vary the overall volume without disturbing the ALC adjustment, use the TEL VOLUME control.

Maintenance

CAUTION

There are no user-serviceable parts within the amplifier. Have all internal servicing performed by a qualified technician. The warranty may become void if repairs are performed by anyone other than the Bogen Factory Service Department.

Circuit Breaker

If the circuit breaker trips, the POWER LED will go out and there will be no output. Unplug the AC line cord. Remove the cover of the output connections bay and press the red Circuit Breaker button to reset it. Replace the cover and plug the line cord back into the outlet. If the breaker trips again, have the trouble investigated by qualified personnel.

Thermal Protection

If the thermal protection activates, there will be no audio output but the POWER LED will remain on. Wait approximately five minutes for the amplifier to cool. If the amplifier overheats again, investigate the cause of the over-temperature condition. This may be due to improper connections at the output terminals or excessive environmental heat due to inadequate ventilation.

Bogen Service

The TPU amplifier is covered by a 2-year warranty. If you encounter difficulty with your TPU amplifier, please do not hesitate to ask our advice or assistance. Information can be obtained by calling our Application Engineering Department or Factory Service Department at (201) 934-8500.

If you are shipping the unit for a warranty repair, pack it in the original shipping container or similar container and send the unit, fully insured and prepaid, via any responsible carrier. Include a letter stating the problem and proof of purchase showing the purchase date. The amplifier will be promptly repaired and returned to you freight prepaid while in warranty.

BOGEN[®]
COMMUNICATIONS, INC.

50 Spring Street, Ramsey, NJ 07446 (201) 934-8500

54-9213-01 9904

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>