


DIGITAL VIDEO CAMCORDER

Instruction Manual

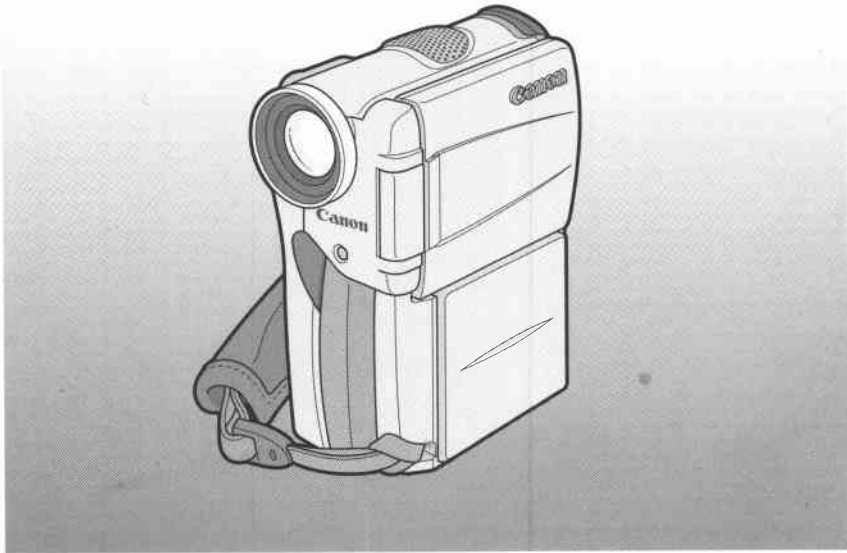

Canon

MiniDV Digital Video Cassette

MV3/MV3 MC

MV3i/MV3i MC

This instruction book explains the use of the MV3, MV3 MC, MV3i and MV3i MC camcorders. There are two main differences between them. The models with an 'MC' include a MultiMediaCard Memory Card function. The models with an 'i' include a DV Recording function. Please note that most illustrations and explanations in this instruction book refer to the MV3 model.

PAL

Download from www.Somanuals.com. All Manuals Search And Download.

E

Introduction

Mastering
the Basics

Using the Full
Range of Features

Editing

Using the MultiMediaCard
(MV3 MC and MV3i MC only)

Additional
Information

Important Usage Instructions

E

Introduction

WARNING:



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING:



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.

For Users in the UK

When replacing the fuse only a correctly rated approved type should be used and be sure to re-fit the fuse cover.

CAUTION:

CUSTOMERS IN THE U.K. SHOULD READ THIS BEFORE USING THIS PRODUCT.

CHANGING THE FUSE

THE MAINS LEAD ON THIS PRODUCT IS FITTED WITH A NON-REWIREABLE (MOULDED) PLUG, INCORPORATING A 3 AMP FUSE. SHOULD THE FUSE NEED TO BE REPLACED AN ASTA OR BSI APPROVED BS1362 FUSE OF THE SAME RATING MUST BE USED.

ALWAYS REFIT THE FUSE COVER AFTER REPLACING THE FUSE. NEVER USE THE PLUG WITH THE FUSE COVER OMITTED.

 
CHANGING THE PLUG

IF THE FITTED PLUG IS NOT SUITABLE FOR YOUR SOCKET OUTLETS, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED IN ITS PLACE. IF POSSIBLE FIT AN APPROPRIATE 3 AMP FUSE. IF THE NEW PLUG HAS NO FUSE, THEN FIT A 5 AMP FUSE AT THE DISTRIBUTION BOARD.

AC POWER CORD CONNECTION

The wires in the mains lead of this apparatus are coloured in accordance with the following cord.

(IMPORTANT)



As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. Neither Blue wire or Brown wire is to be connected to the Earth pin of a 3 pin plug.

THE SEVERED PLUG MUST BE DESTROYED IMMEDIATELY TO AVOID ANY POSSIBLE ELECTRIC SHOCK HAZARD.

CA-400 identification plate is located on the bottom.

- This equipment has been tested in a typical system to comply with the technical requirements of EMC Directive.
- Use of CV-150F DV cable is necessary to comply with the technical requirement of EMC Directive.

Contents

Introduction

Important Usage Instructions	2
Thank you for Choosing a Canon	4
Introducing the MV3/MV3 MC/ MV3i/MV3i MC	5

Mastering the Basics

Finding Your Way Around the Camera	6
~ Preparations ~	
Powering Your Camcorder	9
Loading a Cassette	12
~ Basic Recording ~	
Basic Recording	14
Zooming	18
Using the LCD Screen	19
~ Basic Playback ~	
Playing Back a Cassette	22
Connections for Playback on a TV Screen	26
Tips for Making Better Videos	30

Using the Full Range of Features

~ General ... ~	
Turning the Image Stabilizer Off	32
Using the Menus	33
Using the Wireless Controller/Tally Lamp	42
~ For Recording ...~	
Setting the Date and Time	45
Recording in Progressive Scan Mode	48
Taking Still Pictures to Cassette	49
Transferring Still Pictures to a PC with the FR-100 (optional)	51
Searching and Reviewing While Recording	52
Using the Various Recording Programs	53
Using Digital Effects	57
Using the Multi-Image Screen	63
Audio Recording	65
Setting the Self-Timer	67
~ When Making Manual Adjustments ...~	
Adjusting Exposure Manually	69
Adjusting Focus Manually	72
Setting the White Balance	73
~ For Playback ...~	
Displaying Date, Time and Camera Data (Data Code)	75

Searching the Tape (Photo Search/ Date Search)	78
Returning to a Pre-Marked Position	79

Editing

Editing to a VCR	80
Dubbing with Digital Video Equipment	81
Recording Over Existing Scenes-A/V Insert Editing (MV3i and MV3i MC only)	84
Audio Dubbing	87
Setting the Audio Mix	90

Using the MultiMediaCard (MV3 MC and MV3i MC only)

MultiMediaCard Introduction	92
Recording Still Images to a MultiMediaCard	97
Recording an Image from a Cassette as a Still Image	99
Recording from Another DV Device as a Still Image	100
Viewing Still Images	101
Preventing Accidental Erasure (Protect)	103
Erasing Still Images	104
Combining Images and Recording Them to a Cassette (Card Mix)	106
Copying Still Images from a Cassette	109
Copying MMC Still Images to a Cassette	110
Marking a Still Image for Printing (Print Mark)	111
Formatting a MultiMediaCard	112
Other Information and Precautions	113

Additional Information

Preparing the Camera	116
Notes on Using the Batteries	117
Maintenance	120
Troubleshooting	124
The MV3/MV3 MC/MV3i/MV3i MC System Diagram	128
Optional Accessories	129
Screen Displays	132
Specifications	139
Index	140
Menu at a Glance	143

Thank you for Choosing a Canon

E

Introduction

First, we'd like to thank you for purchasing this Canon camcorder. Its advanced technology makes it very easy to use — you will soon be making high-quality videos which will give you pleasure for years to come.

To get the most out of your new camcorder, we recommend that you read this manual thoroughly — there are many sophisticated features which will add to your recording enjoyment.






Getting started

To get started we suggest that you master the basic operations of the camcorder first, before moving on to use its full range of features.


 





 



 

For quick reference (in addition to the contents and index) please refer to:

- Finding Your Way Around the Camera (6)
- Screen displays (132)
- Troubleshooting — in case you run into any problems (124)
- Menu at a Glance (143)

Symbols used in this instruction manual:

-  Reference page numbers
-  Functions that can be operated from the body of the camera
-  Functions that can be operated from the wireless controller
-  Supplementary notes for camcorder operation
-  Operation confirmation beeps (17)
- Capital letters are used to refer to settings displayed in the menus and buttons labelled on the camcorder itself, e.g. Press the MENU button.

Your camcorder is supplied with the following accessories:

<p>Wireless Controller MV3/MV3i:WL-D76 MV3 MC/MV3i MC:WL-D75</p> 	<p>Two AA batteries</p> 
<p>Lens cap and lens cap cord</p> 	<p>BP-406 Battery Pack</p> 
<p>CA-400 Compact Power Adapter (including AC power cable)</p> 	<p>DC-400 DC Coupler</p> 
<p>Lithium button battery</p> 	<p>S-150 S-video Cable</p> 
<p>STV-250N Stereo Video Cable</p> 	<p>PC-A10 SCART Adapter (Europe, Asia)</p> 
<p>MV3 MC/MV3i MC only: MMC-8M MultiMediaCard (with pre-recorded sample images)</p> 	<p>DU-300 Docking Unit</p> 
<p>MV3 MC/MV3i MC only: Soft case for MultiMediaCard</p> 	

Introducing the MV3/MV3 MC/MV3i/MV3i MC

IEEE 1394 DV Terminal



MV3/MV3 MC/MV3i/MV3i MC conforms to the digital video ^{Mini} DV standard and is equipped with the IEEE 1394 DV terminal to give you outstanding picture and sound quality.

MultiMediaCard (MV3 MC and MV3i MC only)

Record, manage and store still images on the MultiMediaCard. Combine still images recorded on the card with your original movies or still photographs. Also great for easy transfer to a PC.

Progressive Scan CCD



Shoot both superb quality video and beautifully clear still pictures. Choose your favourite scenes from videos (taken using progressive scan) and display them as blur-free still pictures too!

2.5" LCD Screen



A 2.5" LCD screen makes it easy for you to shoot colourful, well composed video. It is also great for playback.

Image Stabilizer



Stabilizes your recordings even in long telephoto shots.

10x Lens and 40x Digital Zoom



From wide-angle to 10x telephoto—with unparalleled optical quality. The digital zoom magnifies this up to 40x for even more dramatic results.

Still Photos



The MV3/MV3 MC/MV3i/MV3i MC has the technology to capture crisp, clear, digital still pictures.

Digital Effects



Advanced digital technology allows you to add special effects during recording or playback. Display 4, 9 or 16 still images at once with the multi-image screen.

Audio Dubbing




Add new sound to original sound on a prerecorded tape.


A/V Insert Editing (MV3i and MV3i MC only)



Replace original sound and images on a prerecorded tape with the DV in terminal.

PCM Digital Sound

Finding Your Way Around the Camera

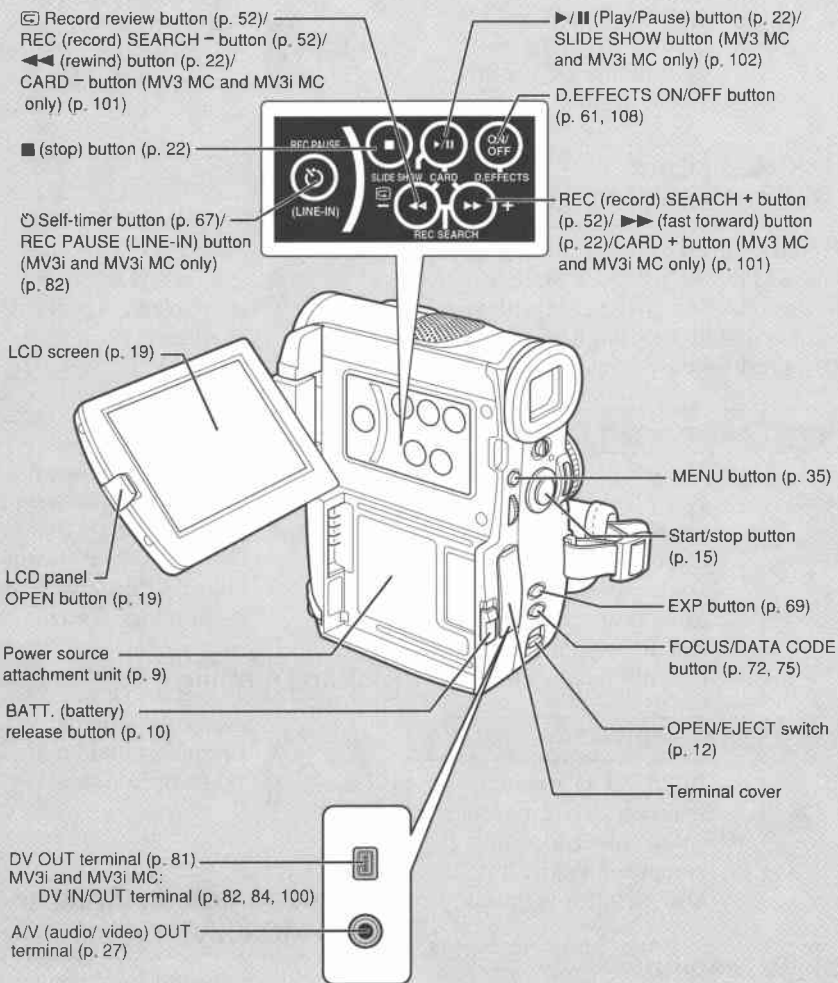

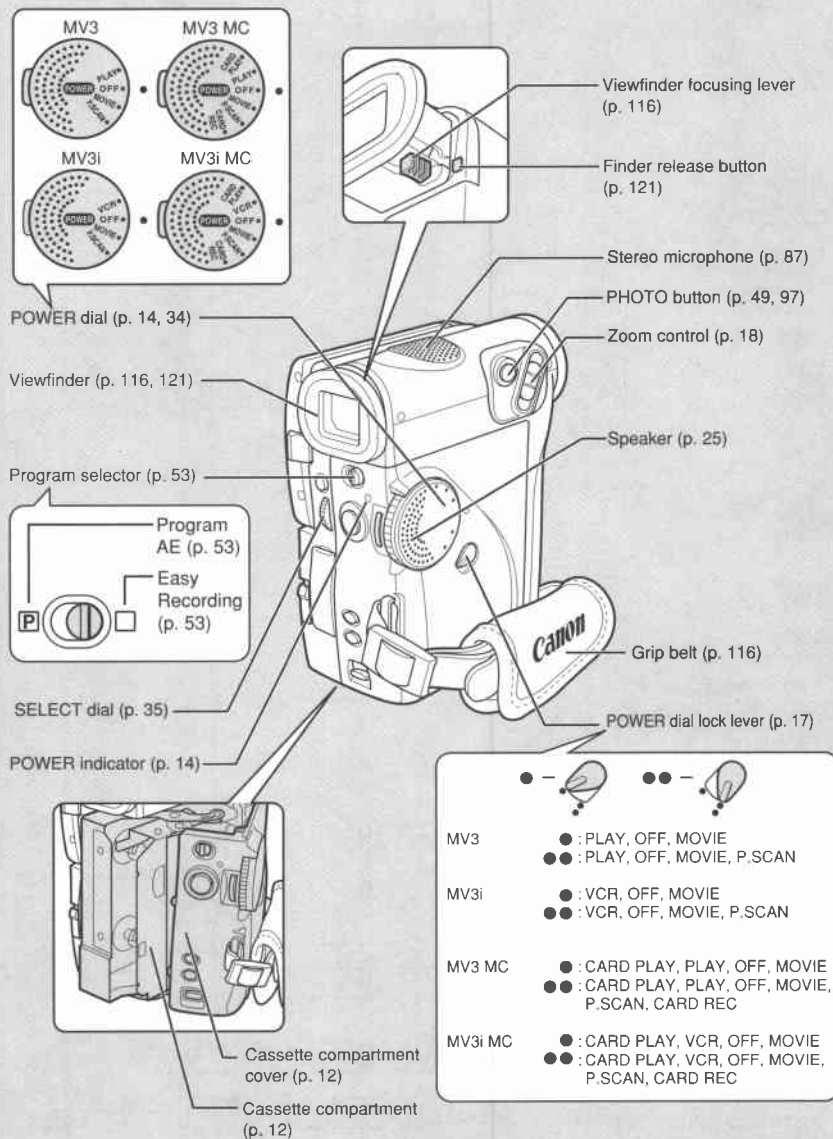

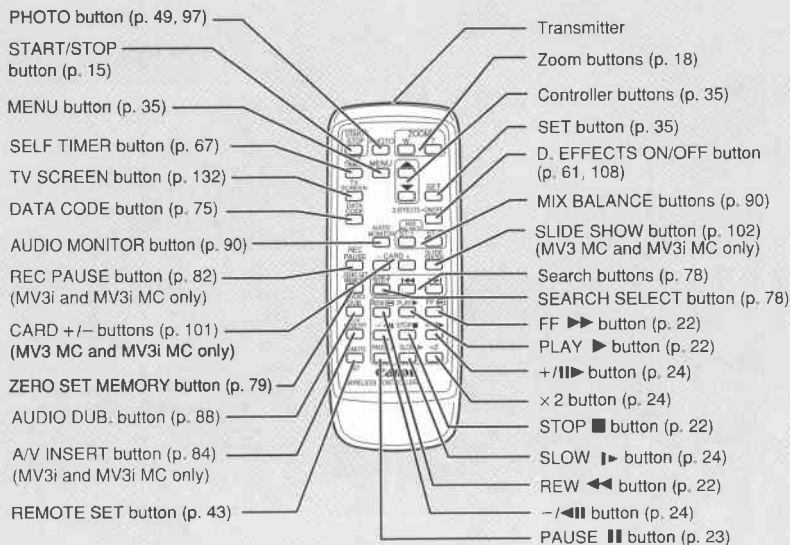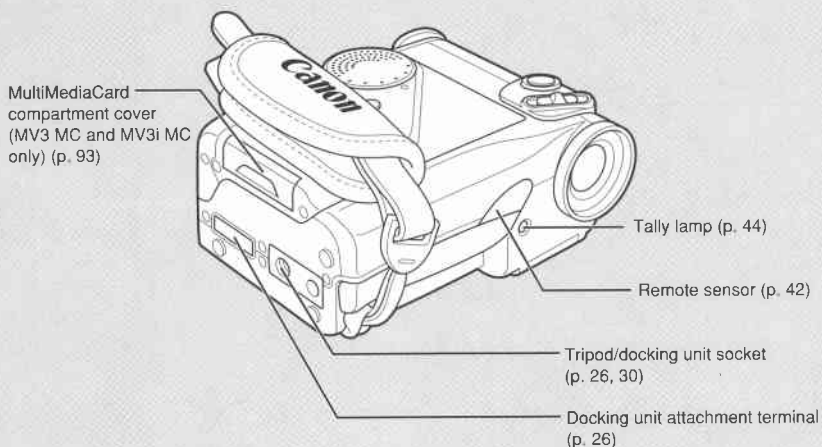

Powering Your Camcorder

Before operating your camera, you will need to use the power adapter to:

Provide power from a mains outlet


or

Charge a battery pack



- The power adapter converts current from a household power socket (100–240 V AC, 50/60 Hz) to the DC current used by your camera.
- If the adapter is used next to a TV, it may cause bars to appear on the TV — move the adapter away from the TV — move the adapter away from the TV or the aerial cable.


Connecting the camera to a mains outlet

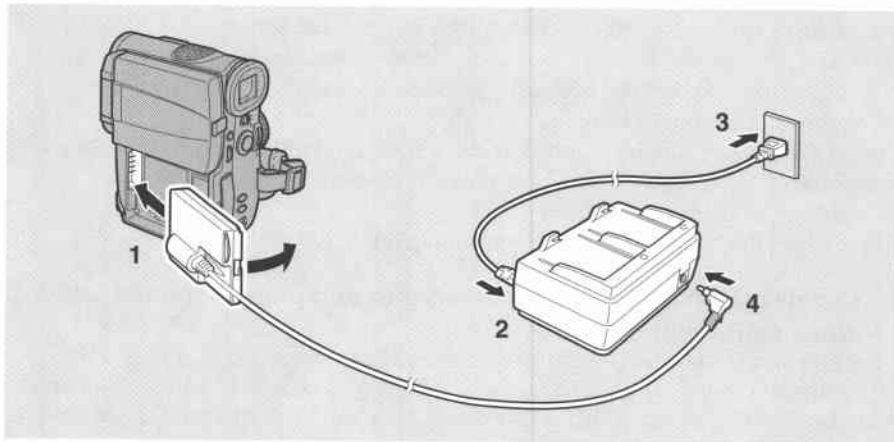

Use the power adapter to provide your camera with instant power from a mains outlet. Always turn the camera off before connecting/removing the power source.

- 1. Insert the DC coupler's terminals into the camera and press the other end until it clicks into place.**
- 2. Connect the power cable to the adapter.**
- 3. Plug the power cable into a mains outlet.**
- 4. Connect the DC coupler to the adapter.**
- 5. Remove the DC coupler from the camera after use, then disconnect it from the adapter. Then unplug the power cable from the mains outlet and disconnect it from the adapter.**
 - Press the BATT. release button and remove the coupler.

Charging and attaching the battery packs

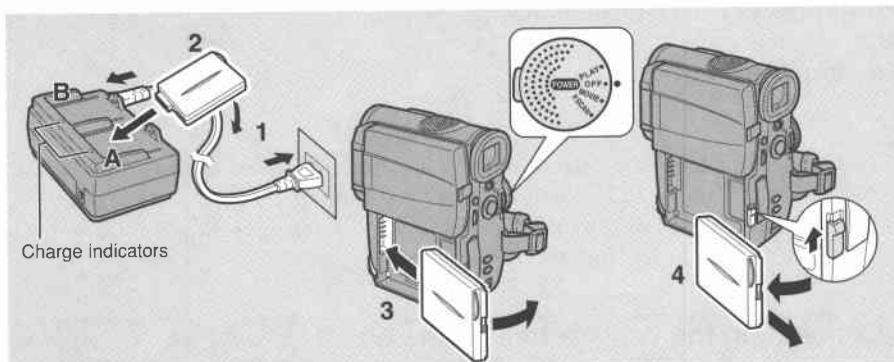

Your battery pack was partially charged before it left the factory. It should have enough power for you to check that your camera is working properly. However, you must charge the battery pack fully if you want it to power the camera for more than a few minutes.

The power adapter supplied with your camcorder can hold two battery packs and is capable of charging them one after another. Additional battery packs are available as an optional accessory (□ 129).

Always turn the camera off before connecting/removing the battery.

1. Connect the power cable to the adapter and plug the power cable into a mains outlet.

- One of the two charge indicators flashes red to show that charging is in progress. Single flashes mean that the battery pack is less than 50% charged. Double flashes mean that it is between 50% and 75% charged. Triple flashes mean that it is more than 75% charged.
- The indicator glows steadily when the battery pack is fully charged.
- If the indicator blinks twice a second, the battery pack may be defective.
- If you attached 2 battery packs, the second battery pack now begins to charge: its indicator flashes red to show that charging is in progress.

2. Attach one or two battery packs to the power adapter.

- Remove the battery pack's terminal cover.
- Make sure the DC coupler is not connected.
- Insert the battery's terminals into the adapter and press the other end until it clicks into place.

3. Take the battery pack off the adapter and attach it to the camera.


4. Remove the battery pack after use.

- Press the BATT. release button and remove the battery.
- Be careful that the battery does not fall when you release it.



- The adapter can charge a single battery pack from either side, A or B. If you attach two battery packs, charging begins from the battery you first attach to the adapter, or, if the batteries are already attached to the adapter when you plug it into a mains outlet, from the side labelled “A”.
- When powering your camcorder from a mains outlet, you do not need to remove battery packs attached to the adapter, but charging will not take place until you remove the DC coupler from the adapter.
- Do not connect the power adapter to an unspecified product.
- You can find detailed notes for using the batteries in the “Notes on Using the Batteries” (□ 117). These notes include charging and recording times and how to install the backup battery.

CA-400 Compact Power Adapter

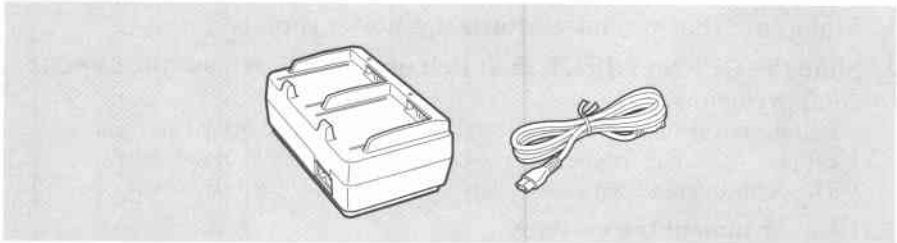


Specifications

Power supply	100–240 V AC, 50/60 Hz
Power consumption	40 W
Rated output	Adapter mode : 7.2 V, 2.0 A DC Charger mode : 8.4 V, 1.0/2.5 A DC
Operating temperature range	0°C–40°C (32°F–104°F)
Dimensions	75 × 120 × 53 mm (3 × 4 3/4 × 2 1/8 in)
Weight	250 g (8 7/8 oz) (without power cable)

Weight and dimensions are approximate.
 Errors and omissions excepted.
 Subject to change without notice.

Loading a Cassette

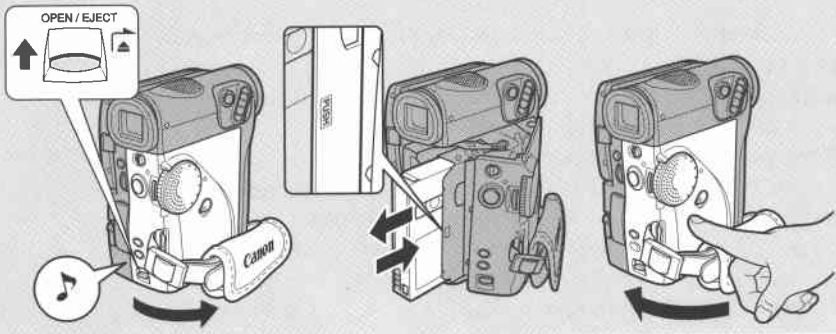

Only use videocassettes marked with the ^{Mini} DV logo.*

Loading and unloading

1. **Make sure that you have attached a power source.**
2. **Slide the OPEN / EJECT ▲ switch upwards to release the cassette compartment cover.**
 - Pull the cover fully open (while holding the button upwards) and wait a couple of seconds for the cassette compartment to open automatically.
 - The confirmation beep sounds when the cassette cover fully opens.
3. **Load or unload the cassette.**
 - Insert the cassette gently with the window facing out, and the REC/SAVE tab on the lower outer corner.
 - Remove the cassette by pulling it straight out.
4. **Press the **[PUSH]** mark on the compartment until it clicks, and wait for it to close.**
5. **Click the cover back into place.**


* ^{Mini} DV is a trade mark.





- After loading a cassette, use record search ([] 52) to find the point where you want to start recording.
- Do not interfere with the cassette compartment while it is opening or closing automatically, or attempt to close the cover.
- Be careful not to get your fingers caught in the cassette compartment cover.
- Do not leave the cassette in the camera after use — return it to its case and store it in a cool, clean, dry place.
- When you turn the camera's power on, [] flashes in the display until you load a cassette.
- With some types of tapes, the remaining tape display may not give an accurate reading ([] 133).

Protecting tapes from accidental erasure

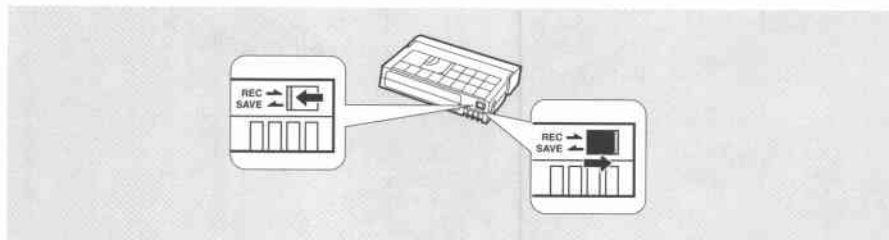E



To protect your recording from accidental erasure, slide the tab on the cassette so that it exposes the hole. (This switch position is usually labelled SAVE or ERASE OFF.)

If you load this cassette and put the camera in record pause mode ( 14), “THE TAPE IS SET FOR ERASURE PREVENTION” is displayed for approx. 4 seconds and then the  mark flashes in the display. (The MV3i and MV3i MC also show the above phrase if you accidentally press the REC PAUSE button on the camera or the wireless controller with the camera switched to VCR mode.)


If you want to record on the cassette again, slide the tab back so the hole is closed.

Handling cassettes

- To protect the tape heads, transfer cassettes directly from the tape case to the camcorder — do not open the tape protect cover or touch the tape itself.
- Do not use cassettes where the tape has been damaged or spliced — they may damage the camcorder.
- Do not insert anything into the small holes on the cassette or cover them with cellophane tape.
- Handle cassettes with care — dropping them or exposing them to external shocks may cause internal damage.
- Store cassettes in the provided case, first rewinding them to the start of the tape and then storing them upright.
- A cassette with metal plated terminals may become dirty with use, affecting information transfer. Therefore, after using a tape about 10 times, be sure to clean the terminals with a cotton bud.

Cassette memory

You are unable to use the cassette memory function with this camcorder.

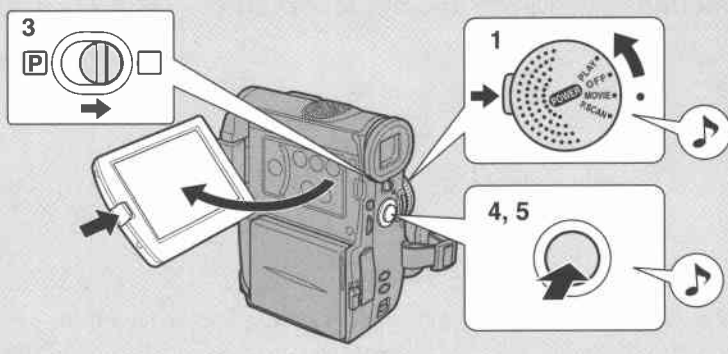

Before you start recording

Have you completed the following steps?

- Attached a power source (9).
- Removed the lens cap (116).
- Chosen the display: viewfinder (116) or LCD screen (19).
- Extended the viewfinder (116)/adjusted the LCD screen (19).





- When you're using the viewfinder, fully close the LCD or rotate the LCD so that it faces the same direction as the lens (21).

You may also want to install the backup battery (119) in order to set the date and time display (45).

To record

- 1. Press the button next to the POWER dial and hold, turn the POWER dial to MOVIE.**

 - The camera automatically sets to record pause mode. PAUSE appears in the display.
 - The camera power indicator lights up red.
 - The confirmation beep sounds.
 - The camera will turn itself off if you leave it in record pause mode for more than about 5 minutes. To return to record pause mode, turn the POWER dial to OFF and then back to MOVIE.
 - For Progressive Scan recording, see p. 48. MV3 MC and MV3i MC only: for still image recording to a MultiMediaCard, see p. 92.
- 2. Load a cassette (12).**

3. **Slide the program selector to .**
 - This selects the camera's Easy Recording program. It allows you to simply point and shoot without making any manual adjustments ( 55).
4. **Press and release the start/stop button once to begin recording.**
 - For still image recording to a cassette, see p. 49.
5. **Press and release the start/stop button again to pause recording.**
 - The camera returns to record pause mode and PAUSE reappears in the display.
 - You can stop and restart recording as often as you like by pressing the start/stop button.




- After loading a cassette, start recording when the tape counter has stopped.

When you have finished recording

- Replace the lens cap.
- Return the viewfinder to its retracted position.
- Return the LCD screen flush to the camera body.
- Unload the cassette.
- Turn the POWER dial to OFF.
- Disconnect the power source.



- To check that the camera is recording correctly, make a test recording first.
- Before making important recordings, clean the video heads using a Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available digital video head cleaning cassette.
- To close the LCD panel, rotate it vertically until the screen faces you, then push it in flat against the side of the camera until it clicks securely.
- You cannot monitor the sound from the speaker when recording.
- For tips on how to make better videos, see p. 30.
- For extra recording time, set REC MODE to LP ( 16).

Changing the recording mode (SP/LP)



You can record and play back a tape in SP (standard play) and LP (long play) modes. LP extends tape usage by 1.5 times.

You can't add sound (audio dubbing) or images (A/V insert: MV3i and MV3i MC only) to a tape that has been recorded in LP mode. If you plan to use either of these functions later, record in SP mode.



MENU

(33)

▶ VCR SET UP

▶ REC MODE...SP

To change to LP mode, open the menu and select VCR SET UP. Then select REC MODE, set it to LP and close the menu.



- When recording and playing back tapes in LP mode, the nature of the tape and usage conditions may affect recording, mosaic-like noise may appear in the image and the sound may be distorted during playback. For important recordings, therefore, set the camera to SP mode.
- If you record in both modes on the same tape, the picture may become distorted during playback and the time code may not be written correctly.
- A tape recorded in LP mode on other digital equipment may produce mosaic-like noise and the sound may become distorted when played back on this camcorder, and vice versa.

16:9 (Widescreen TV recording)



Produces images in the 16:9 format for playback on widescreen TVs.




MENU

(33)

▶ CAM.SET UP

▶ 16:9.....OFF

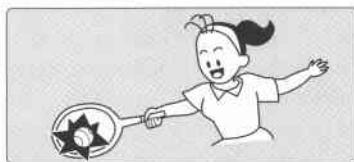


To switch 16:9 to ON, open the menu and select CAM.SET UP. Then select 16:9, set it to ON and close the menu.



- "16:9" is shown in the display when you switch the 16:9 mode on.
- You cannot use the 16:9 mode with the Easy Recording program.
- You cannot use the 16:9 mode when the multi-image screen is set. The 16:9 display becomes set to "--".
- If you play back a recording made for 16:9 on a normal TV screen, the image will appear to be vertically "squashed" (compressed).

Confirmation/Warning beeps



The camera's short operation confirmation beeps are indicated by  in the illustrations. Beeps sound upon certain camera operations such as when you turn the camera on, during the self-timer countdown, right before the camera's automatic shut-off, and also upon any unusual condition of the camera. Beeps are not recorded on the tape.





MENU

( 33)




To turn the beep off, open the menu and select SYSTEM. Then select BEEP, set it to OFF and close the menu.

About the POWER dial lock lever

The POWER dial lock lever has been preset to the ● position. Switch it to the ●● position when you want to use the P.SCAN ( 48) and CARD REC (MV3 MC and MV3i MC only,  97) modes. We recommend that you return the lock lever to the ● position when you finish recording.

- | | |
|---------|--|
| MV3 | ● : PLAY, OFF, MOVIE |
| | ●● : PLAY, OFF, MOVIE, P.SCAN |
| MV3i | ● : VCR, OFF, MOVIE |
| | ●● : VCR, OFF, MOVIE, P.SCAN |
| MV3 MC | ● : CARD PLAY, PLAY, OFF, MOVIE |
| | ●● : CARD PLAY, PLAY, OFF, MOVIE, P.SCAN, CARD REC |
| MV3i MC | ● : CARD PLAY, VCR, OFF, MOVIE |
| | ●● : CARD PLAY, VCR, OFF, MOVIE, P.SCAN, CARD REC |

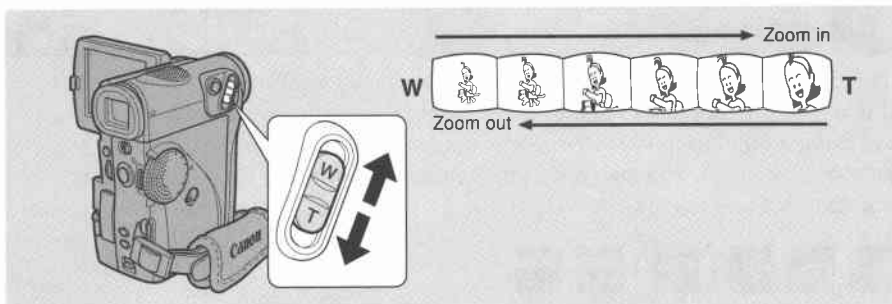

10× optical zoom

The camera's 10× zoom lens allows you to choose the best picture angle for each scene:

- Move the zoom control towards W to zoom out to wide-angle.
- Move it towards T to zoom in to telephoto.

You can also control the speed of zooming:

- Move the control slightly to zoom slowly.
- Move it farther to zoom more quickly. (The farther you move the zoom control, the faster the zoom speed.)

The T and W buttons on the wireless controller adjust the picture angle, but not the zoom speed.

40× digital zoom

Magnifies the camera's zoom range by up to 4×.

The zoom control continues to work as usual. You can freely zoom in and out between 1× and 40× magnification — the camera automatically switches between optical zooming (up to 10×) and digital zooming (10× to 40×). A zoom bar shows up in the display. The digital zoom area is in blue.



MENU

(33)

▶ CAM.SET UP

▶ D.ZOOM.....ON

To turn the digital zoom off, open the menu and select CAM.SET UP. Then select D.ZOOM, set it to OFF and close the menu.




- When zooming, as a rule, keep at least 1 m (3 ft 3³/₈ in) between you and your subject. However when the zoom is at the wide-angle position, you can focus on a subject as close as 1 cm (³/₈ in).
- Image resolution is slightly lower when the magnification is greater than 10×.
- You cannot use digital zoom when the multi-image screen is set. The display becomes “ — ”

Using the LCD Screen


Open the LCD screen

Push the LCD panel OPEN button and open the panel by pulling it away from the camera. This automatically switches the LCD screen on and the viewfinder off. When you close the LCD panel, the LCD screen automatically switches off and the viewfinder switches back on.

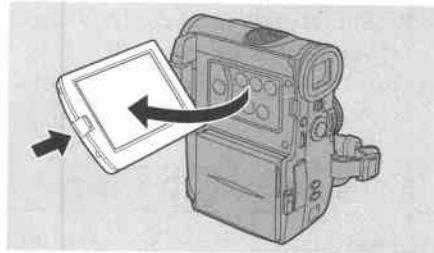

Changing the angle of the LCD screen

You can choose the angle of the screen that suits you best by opening and rotating the screen, also you can rotate the LCD screen so that faces in the direction of the lens (□ 21).

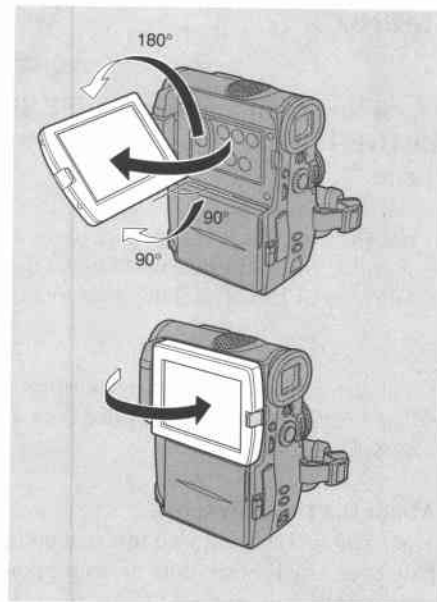

You can also push the panel flat against the camera until it is flush with the side, with the screen facing outwards.



- Avoid touching the LCD screen when moving the LCD panel.
- Do not hold the camera by the LCD panel or the viewfinder.
- Make sure you open the LCD panel at 90°, before attempting to rotate it.
- Always rotate the LCD panel vertically into place, before closing it or pushing it flat against the side of the camera.
- Always fully close the LCD panel until it clicks securely.

- Be careful not to leave the LCD, viewfinder or lens exposed to direct sunlight outdoors or in a window. Doing so could cause damage.
- Bright light falling on the LCD screen may cause glare that makes it difficult for you to view the image. In this case, switch to using the viewfinder. You are also able to adjust the brightness of the screen (see “Adjusting the LCD screen” below).

Adjusting the LCD screen



You can adjust the brightness of the LCD screen.



MENU

(33)

▶ DISP.SET UP

▶ BRIGHTNESS ··· ———+

Open the menu and select DISP.SET UP from the menu. Then select BRIGHTNESS, adjust the level with the SELECT dial and close the menu.

A bar showing the level appears in the display for 4 seconds.

- Turn the SELECT dial up to make the display brighter.
- Turn the SELECT dial down to make the display darker.



- The camera will remember your brightness setting even after you turn it off.
- The brightness of the LCD does not affect that of the recorded images or the viewfinder.

About the LCD Screen


The LCD screen built into this camcorder is a high precision product. However, small black dots or bright points of light (red, blue or green) may appear constantly on the LCD screen. This is not a malfunction of the LCD screen and they are not recorded on the tape. (Effective dots: more than 99.99%)

Allowing the subject to monitor recording



E

When you turn the LCD panel so that it faces the same direction as the lens, you can watch yourself during recording or let your subject monitor recording. The viewfinder is also activated when the panel is in this position. Extend the viewfinder.

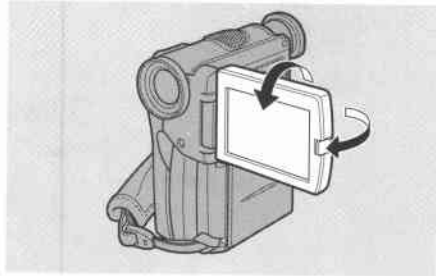

- You can choose the display style, reversed (mirror on) or not (mirror off). The recording itself is unaffected regardless of which one you choose.



MENU


(33)

▶ DISP. SET UP

▶ MIRROR.....ON


To turn the mirror mode off, open the menu and select DISP.SET UP. Then select MIRROR, set it to OFF and close the menu.


The indicators that appear in the LCD display when MIRROR is turned on:

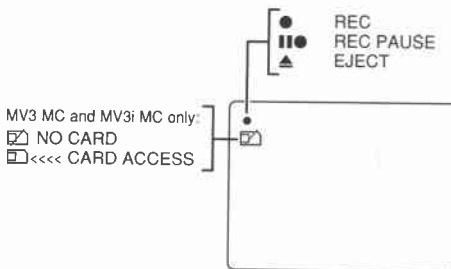

- These and all other indicators appear normally in the viewfinder.

Playing Back a Cassette

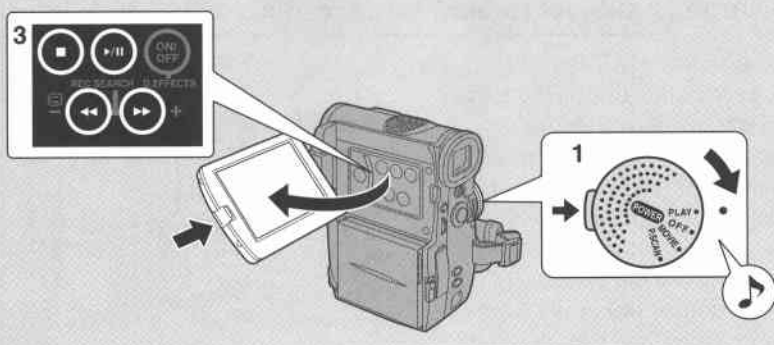

You can use the LCD screen for instant, on-the-spot playback. The camera also plays back the sound track via the built-in speaker ( 25).

- When you play back a tape, you can also close the LCD panel with its screen side facing up. Operate the camera with the wireless controller when the LCD panel is in this position.
- When you're using the viewfinder to view playback, close the LCD panel.

To play back your recordings on a TV, see p. 26.

To use the wireless controller, see p. 42.



- To avoid accidental recording, make sure that you slide the tab on the cassette so that it exposes the hole (the switch position is usually labelled SAVE or ERASE OFF).

1. Attach a power source and turn the POWER dial to PLAY (MV3i and MV3i MC: VCR).

- The power indicator lights up green.

2. Load the cassette.

3. Press the ► (play) button to start playback.



- To end playback, press the ■ (stop) button.
- To wind the tape forwards, stop playback and press the ►► (fast forward) button.
- To wind the tape backwards, stop playback and press the ◀◀ (rewind) button.
- If the playback picture is rough (mosaic-like noise), clean the video heads using a Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available digital video head cleaning cassette.

Other playback modes





E



Playback pause

Press the  (pause) button. To resume normal playback, press it again, or press the  (play) button. The camera automatically goes into stop mode after about 5 minutes' playback pause.

Fast forward playback

To play back the recording at about 11.5 times normal speed, press and hold the  (fast forward) button during normal playback or press and hold the  (fast forward) button during normal fast forward.


Rewind playback

For reverse playback at about 11.5 times normal speed, press and hold the  (rewind) button during normal playback or press and hold the  (rewind) button during normal rewind.

Special playback

 


Frame Advance

To play back frame by frame, press the +/  button repeatedly during playback pause.


Press and hold to play back continuous frame advance.

Frame Reverse

To play back in reverse frame by frame, press the -/  button repeatedly during playback pause.

Press and hold to play back continuous frame reverse.



Slow Forward Playback

To play back at about 1/5 normal speed, press the SLOW  button during normal playback.

Press the PLAY  button to return to normal playback.

- The camera automatically returns to playback after about 30 seconds of slow playback.


Slow Reverse Playback

To play back in reverse at about 1/5 normal speed, press the -/  button and then the SLOW  button during normal playback.

Press the PLAY  button to return to normal playback.

- The camera automatically returns to $\times 1$ reverse playback after about 30 seconds of slow playback.


Reverse Playback

To play back in reverse at normal speed, press the -/  button during normal forward playback.


Press the PLAY  button to return to normal forward playback.

Forward $\times 2$ Playback

Press the $\times 2$ button during normal playback.

Press the PLAY  button to return to normal playback.


Reverse $\times 2$ Playback

Press the -/  button and then the $\times 2$ button during normal playback.

Press the PLAY  button to return to normal playback.




- Mosaic-like noise appears on the screen during some of the special playback modes.
- There's no audio during special playback.

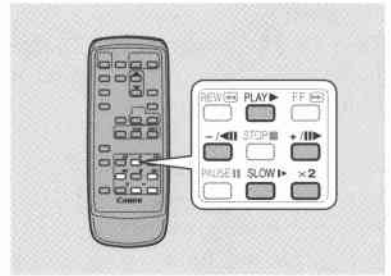

Built-in speaker



The camcorder has a built-in speaker so you can review the sound track alongside the picture during playback.

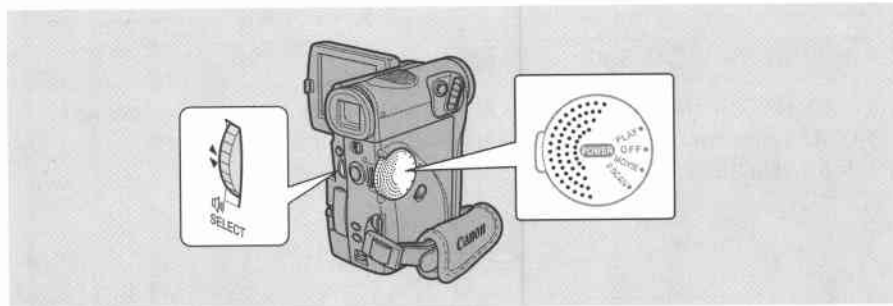

Adjust the speaker volume by turning the SELECT dial.

- Turn the SELECT dial up to increase the volume, and down to lower the volume.
- A VOLUME bar appears in the display to indicate the current volume. It disappears in 4 seconds.
- You can turn off the volume completely by turning the SELECT dial down until OFF appears.
- You can also adjust the headphone volume separately from the built-in speaker. (Use the DU-300 Docking Unit to connect the headphones, p. 65.)
- The levels you adjust for the built-in speaker and headphones are memorized separately. The camera remembers your levels even if you turn the camera off and back on again.



- The speaker turns off when the camera is set to any mode other than PLAY (MV3i and MV3i MC: VCR) or when you use headphones.
- Sometimes audio may sound distorted when the volume is turned up high. If this happens, turn down the volume.

Connections for Playback on a TV Screen


E

You can connect the camera to a TV or VCR in order to play back your recordings. You will need to attach a power source to the camera (9). Power off all devices before starting the connections.

See your TV or VCR instruction manual for further details.


Attaching the DU-300 Docking Unit

The DU-300 Docking Unit is fitted with microphone, headphone, S-video and LANC terminals. Connect it to the base of the MV3/MV3 MC/MV3i/MV3i MC via the docking unit attachment terminal.

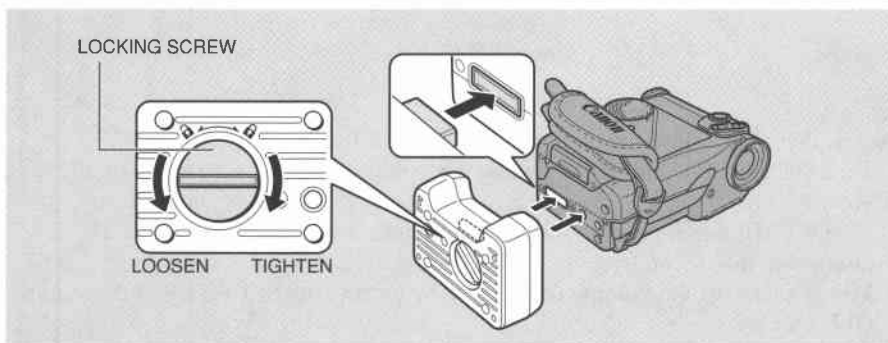


1. Make sure that the camera is switched off.
2. Align the terminals of the docking unit and the camera.
3. Push the docking unit onto the camera and turn the locking screw clockwise to fix it securely onto the base.
 - To remove, turn the locking screw anticlockwise and pull the docking unit from the base of the camera.

DU-300 Docking Unit

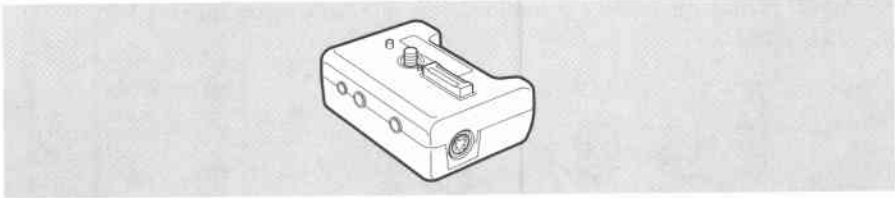

Specifications


S-video terminal output	1 Vp-p (Y signal), 0.3 Vp-p (C signal)
Microphone terminal	ø 3.5 mm stereo minijack – 57 dBV (with 600 ohm mic)/ at least 5 kohms
Headphone terminal	ø 3.5 mm stereo minijack
LANC  terminal	ø 2.5 mm mini minijack
Dimensions	77 × 29 × 56 mm (3 × 1 1/8 × 2 1/4 in)
Weight	50 g (1 3/4 oz)

Weight and dimensions are approximate.

Errors and omissions excepted.

Subject to change without notice.


If your TV (or VCR) has a SCART terminal (without S (S1)-video)

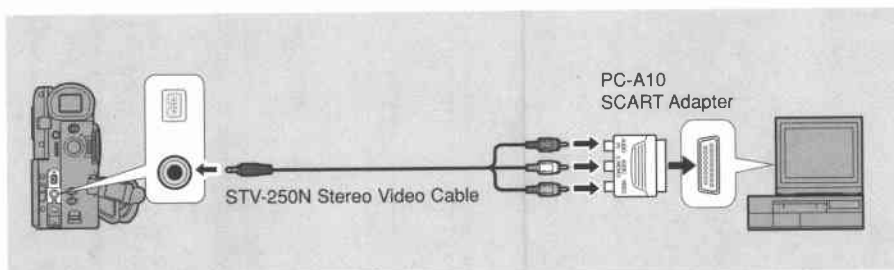

- Connect the PC-A10 SCART adapter to the TV or VCR's SCART terminal.
- Connect the camera to the adapter. Connect the camera using the STV-250N Stereo Video Cable. Connect the white plug to the white audio terminal **L** (left). Connect the red plug to the red audio terminal **R** (right). Connect the yellow plug to the yellow video terminal **VIDEO**.
- If you are connecting the camera to a TV, set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.


If your TV (or VCR) has an S (S1) -video input terminal

For higher picture quality, we recommend playing back recordings on a TV with an S (S1) terminal.

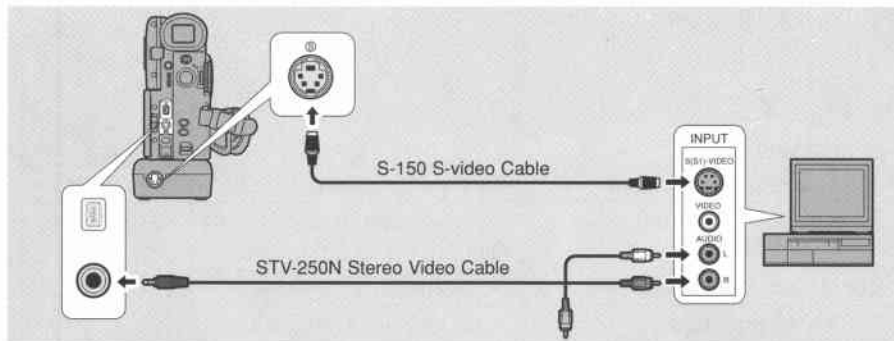

- Attach the DU-300 Docking Unit in order to use the S-video terminal (□ 26).
- Use the S-150 S-video Cable to connect the S-video terminals. Use the STV-250N Stereo Video Cable to connect the AUDIO terminals. Connect the white plug to the white AUDIO terminal **L** (left). Connect the red plug to the red AUDIO terminal **R** (right). Do not connect the yellow plug.
- If you are connecting the camera to a TV, set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

If your TV (or VCR) has audio/video input terminals

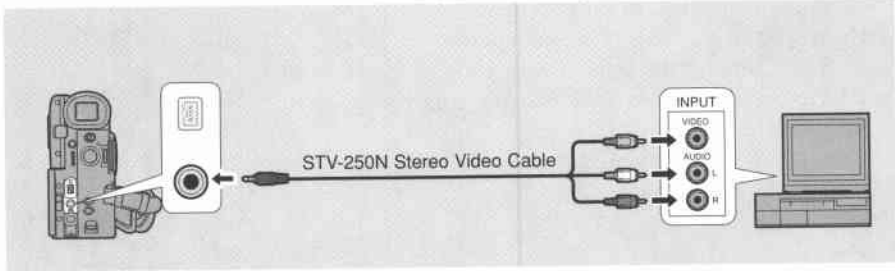

- Connect the camera using the STV-250N Stereo Video Cable. Connect the white plug to the white audio terminal **L** (left). Connect the red plug to the red audio terminal **R** (right). Connect the yellow plug to the yellow video terminal **VIDEO**.
- If you are connecting the camera to a TV, set the TV/VIDEO selector on the television to **VIDEO**.
- If you are connecting the camera to a VCR, set the input selector on the VCR to **LINE**.



- If you are going to use the TV as a monitor while you are shooting, remember to keep the TV volume turned down as long as the camera's audio terminals are connected. If the sound from the TV speakers is picked up by the microphone, an unpleasant high-pitched squeal, called feedback, may be produced.

Tips for Making Better Videos

E

Holding the camera

For maximum stability, grip the camera in your right hand and keep your right elbow pressed against your body. If necessary support the camera with your left hand. With practice, you will be able to operate the controls by touch, without taking your eye off the action.

- When holding the camera, be sure to avoid touching the lens and the microphone.



Using a tripod

To prevent any unwanted movement, you can mount the camera on a tripod, (or any flat surface at a suitable height) and operate it with the wireless controller.

- When you are using a tripod, be careful not to leave the viewfinder exposed to bright sunlight or it may melt. (The light is concentrated by the viewfinder lens.)
- Make sure that the fastening screw of the tripod is no longer than 5.5 mm (1/4 inch), or it will damage the camera.



Composition

The most important element in the scene does not have to be in the centre. For a more interesting picture, try to position your subject so it is slightly to one side. Leave some space on the side of the frame that the subject is facing or moving towards.

Don't cut off the top of the subject's head, and don't cut people off at the neck, hips or knees (move a little bit above or below).

Watch out for distracting objects in the background.



Picture angle

Instead of zooming while recording, try to choose your picture angle before you begin. A good way to tell a story with video is to begin with a long shot that establishes the situation, and then move in with medium shots and close-ups to show the details. Remember to change your viewpoint for each shot.



Long shot



Medium shot




Close-up

Remember that any camera movement or change in picture angle should have a definite purpose. Avoid unnecessary or half-hearted movements.

Camera moves

Use pans to record a landscape or follow a moving subject. Decide the area you want to cover and stand facing the end of your panning angle. Without moving your feet, turn your waist to the starting position. Start recording, and after a few seconds begin to turn slowly from the waist. Hold the final image for a few seconds before you stop recording.

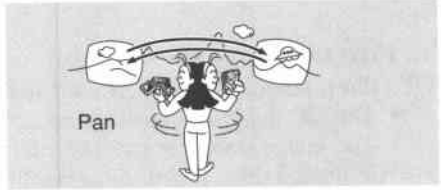


Tilt the camera up to exaggerate the height of the subject. Tilt down from the top of a building, for example, as an introduction to subjects at the bottom.



Turning the Image Stabilizer Off



E

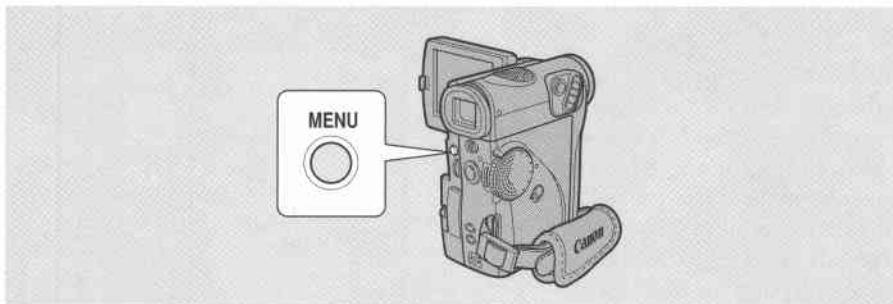

With most camcorders, even the slightest hand movements will be noticeable during telephoto recording. However, the MV3/MV3 MC/MV3i/MV3i MC's image stabilizer allows you to obtain steady recordings even at high magnification.



MENU

(33)

▶ CAM. SET UP

▶ IMAGE S. () - ON

Using the Full
Range of Features

To turn the image stabilizer off, open the menu and select CAM.SET UP. Then select IMAGE S., set it to OFF and close the menu.

- The () mark disappears from the display when the stabilizer is off.
- The image stabilizer cannot be turned off when the program selector is set to the □ (Easy Recording) position.




- The image stabilizer is designed to deal with a normal degree of camera shake.
- Keep the image stabilizer turned off when the camera is mounted on a tripod.
- The image stabilizer is not as effective as usual during the Low Light mode.




The following icons are used throughout this manual to show the setting for the POWER dial.


MV3

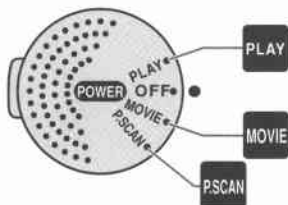


MV3 MC

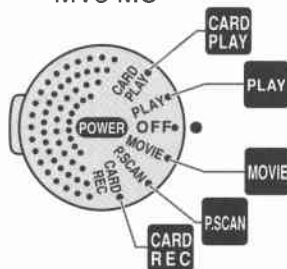


MV3i

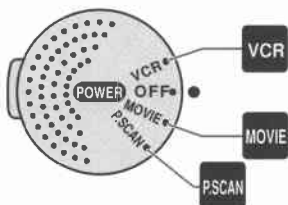

MV3i MC

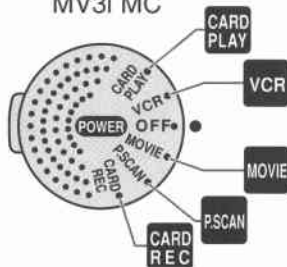

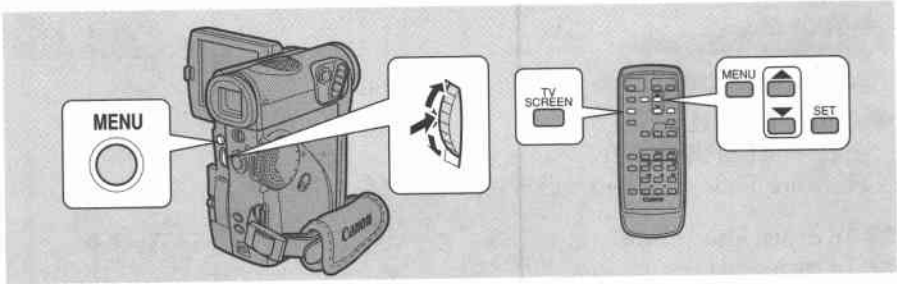

1. Turn the **POWER** dial to the appropriate setting.
2. Press the **MENU** button to open the menu.
 - One of the main menus appears, according to the **POWER** dial setting.
3. Turn the **SELECT** dial and move the arrow to the desired submenu.
4. Press the **SELECT** dial in to select.
 - The submenu appears.
5. Turn the **SELECT** dial and move the arrow to the desired function.
6. Press the **SELECT** dial in to select.
 - The function and its settings only appear.
7. Turn the **SELECT** dial and move the arrow to the desired setting.
 - If you are setting a function other than the white balance or shutter speed, the function will be set if you close the menu here.
8. Press the **SELECT** dial in to select.
 - The function is set and you return to the submenu.
9. Turn the **SELECT** dial and move the arrow to **← RETURN**.
10. Press the **SELECT** dial in to select.
 - You return to the main menu.
11. Press the **MENU** button.
 - The main menu disappears.



- Pressing the **MENU** button at any time closes the menu.
- Selecting **← RETURN** takes you back one menu, or closes the main menu.
- Available menu items appear in yellow. Items that are unavailable, due to the tape or card situation or the settings of other menu items, appear in purple.
- You may often find it convenient to use the wireless controller to move around the menus. Press its **MENU** button to open/close the menu and use the arrow keys in place of turning the **SELECT** dial. Push the **SET** button to select.
- Pressing the start/stop button or the **PHOTO** button will close the menu and start recording.
- You can display the menus on a connected TV screen by turning **TV SCREEN** (📺 132) on through the menu or using the wireless controller's **TV SCREEN** button. See p. 26 for TV hookup instructions.

List of Menu




Turn to appropriate page for a detailed explanation of each function.

● CAM. MENU

Appears when the POWER dial is set to **MOVIE** or **PCAM**.


There are 5(+1) submenus within the CAM. MENU.

- ① To digital effects submenu
- ② To camera set up submenu
- ③ To VCR set up submenu
- ④ To display set up submenu
- ⑤ To system menu
- ⑥ Close main menu

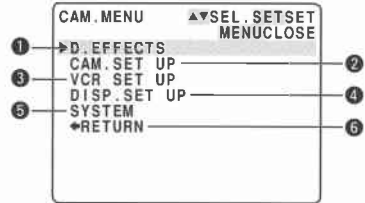

① Digital effects submenu


- ① Digital effects select 61
- ② Fader 61
- ③ Effect 62
- ④ Multi-image screen speed 63
- ⑤ Multi-image screen split 63
- ⑥ To card mix menu (MV3 MC and MV3i MC only) 107
- ⑦ Return

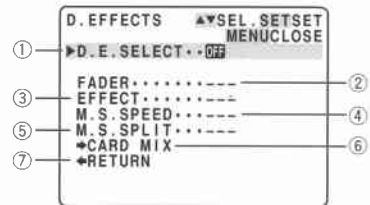

Card mix submenu (⑥)


(MV3 MC and MV3i MC only)

- ⑧ Mix type 106
- ⑨ Mix level 107
- ⑩ Return

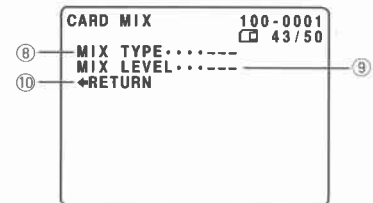


② Camera set up submenu

- ⑪ Shutter speed 70
- ⑫ Digital zoom 18
- ⑬ Image stabilizer 32
- ⑭ 16:9 effect 16
- ⑮ White balance 73
- ⑯ Return

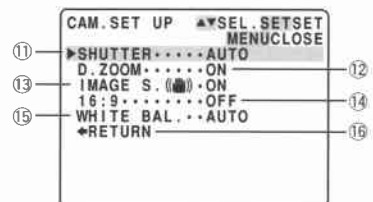


3 VCR set up submenu

- 17 Record mode..... 16
- 18 Wind screen 66
- 19 Audio mode 65
- 20 Return

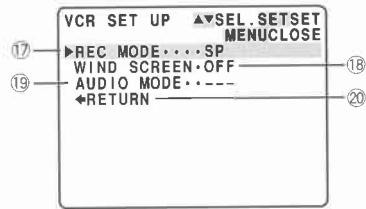


4 Display set up submenu

- 21 Brightness 20
- 22 Mirror mode..... 21
- 23 TV screen..... 132
- 24 Date/time display 47
- 25 Return

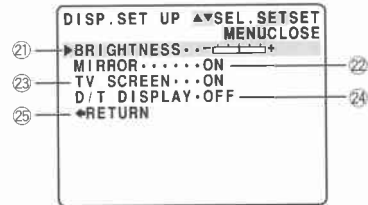

5 System submenu


- 26 Wireless controller 43
- 27 Tally lamp 44
- 28 Beep 17
- 29 Time zone/
Daylight saving time..... 45
- 30 Date/time set 47
- 31 Return

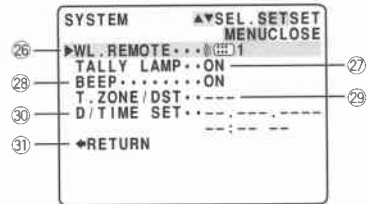

● PLAY (MV3i and MV3i MC: VCR) MENU


Appears when the POWER dial is set to **PLAY** (**VCR** for the MV3i and MV3i MC)
There are 6 submenus.

- 1 To digital effects submenu
- 2 To VCR set up submenu
- 3 To card set up submenu
(MV3 MC and MV3i MC only)
- 4 To card operations submenu
(MV3 MC and MV3i MC only)
- 5 To display set up submenu
- 6 To system submenu
- 7 Close main menu

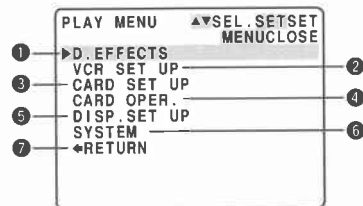


1 Digital effects submenu


- ① Digital effects select 61
- ② Fader 61
- ③ Effect 62
- ④ Multi-image screen speed 63
- ⑤ Multi-image screen split 63
- ⑥ Return

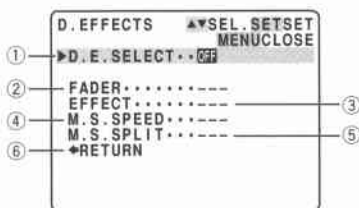**2 VCR set up submenu**


- ⑦ Record mode (MV3i and MV3i MC only) 16
- ⑧ Output channel 91
- ⑨ Wind screen 66
- ⑩ Return

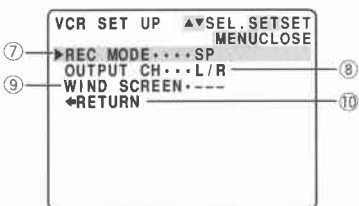**3 Card set up submenu (MV3 MC and MV3i MC only)**

- ⑪ Image quality 93
- ⑫ File numbers 95
- ⑬ Return

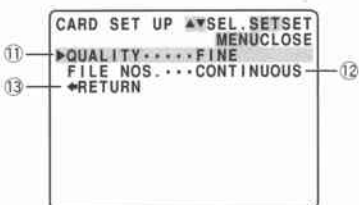**4 Card operations submenu (MV3 MC and MV3i MC only)**

- ⑭ Copy from cassette to card 109
- ⑮ Return

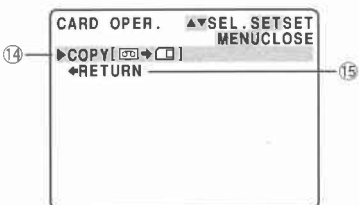
**5 Display set up submenu**

- ⑯ Brightness 20
- ⑰ Displays 132
- ⑱ 6-second auto date 77
- ⑲ Data code 76
- ⑳ Date/time select 75
- ㉑ Return



6 System submenu


- 22 Wireless controller..... 43
- 23 Beep..... 17
- 24 Return

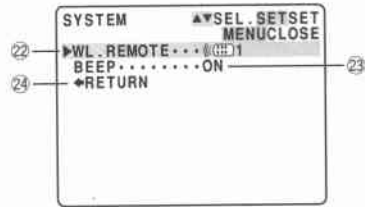

● C. REC MENU (MV3 MC and MV3i MC only)


Appears when the POWER dial is set to **CARD REC**. There are 5 submenus within the C. REC MENU.

- 1 To digital effects submenu
- 2 To camera set up submenu
- 3 To card set up submenu
- 4 To display set up menu
- 5 To system menu
- 6 Close main menu

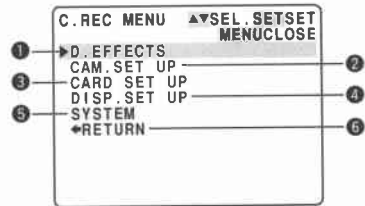


1 Digital effects submenu

- 1 Digital effects select 61
- 2 Effect..... 62
- 3 Multi-image screen speed..... 63
- 4 Multi-image screen split..... 63
- 5 Return

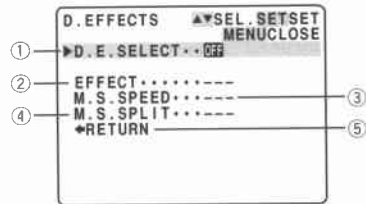


2 Camera set up submenu

- 6 Shutter speed..... 70
- 7 Digital zoom 18
- 8 Image stabilizer..... 32
- 9 White balance 73
- 10 Return

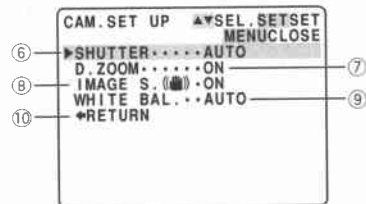


3 Card set up submenu

- 11 Image quality 93
- 12 File numbers 95
- 13 Shutter sound 96
- 14 Return

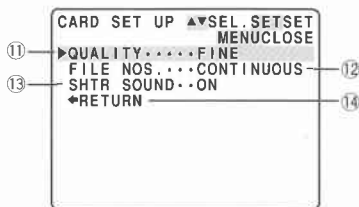


4 Display set up submenu

- 15 Brightness 20
- 16 Mirror mode 21
- 17 TV screen 132
- 18 Date/time display 47
- 19 Return

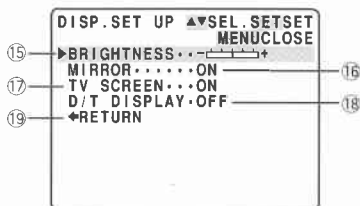

5 System submenu

- 20 Wireless controller 43
- 21 Beep 17
- 22 Time zone/
Daylight saving time 45
- 23 Date/time set 47
- 24 Return

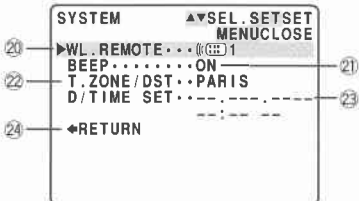

● C. PLAY MENU (MV3 MC and MV3i MC only)

Appears when the POWER dial is set to **CARD PLAY**.


There are 4 submenus within the C. PLAY MENU.

- 1 To card operations submenu
- 2 To VCR set up submenu
- 3 To display set up submenu
- 4 To system submenu
- 5 Close main menu




1 Card operations submenu

- ① To index 102
- ② To image protect 103
- ③ To print mark 111
- ④ Copy from card to cassette ... 110
- ⑤ Image erase 104
- ⑥ Format 112
- ⑦ Return

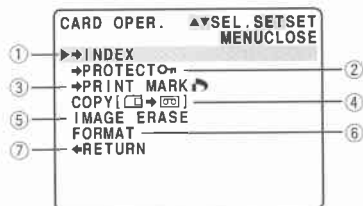


2 VCR set up submenu

- ⑧ Record mode 16
- ⑨ Return

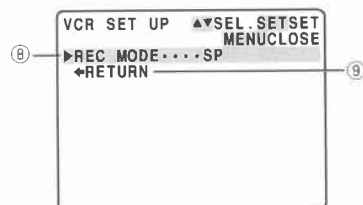


3 Display set up submenu

- ⑩ Brightness 20
- ⑪ Displays 132
- ⑫ Date/time select 75
- ⑬ Return

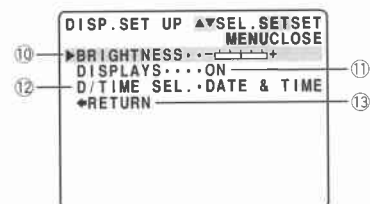

4 System submenu

- ⑭ Wireless controller 43
- ⑮ Beep 17
- ⑯ Return

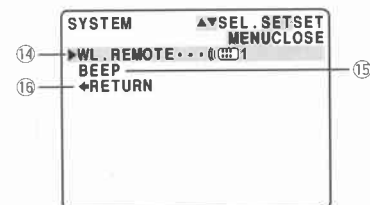


Using the Wireless Controller/Tally Lamp

E

The supplied wireless controller can operate the camera from a distance of up to 5 m (16 feet). Point it at the camera's remote sensor while you press the buttons. The camera's tally lamp will light up when it receives signals from the wireless controller.

There are some functions that cannot be operated without the wireless controller:


- Special playback (□ 24)
- Photo/date search (□ 78)
- Zero set memory (□ 79)
- Audio mix (□ 90)
- A/V insert (□ 84: MV3i and MV3i MC only)
- Audio dubbing (□ 87)

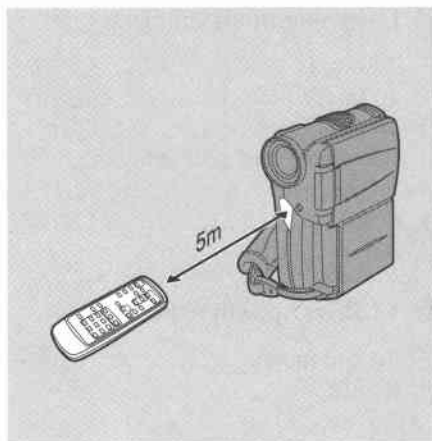

Using the Full
Range of Features

Inserting batteries


Insert two AA batteries, following the ⊕ and ⊖ markings. Be careful not to reverse the polarity of the batteries.

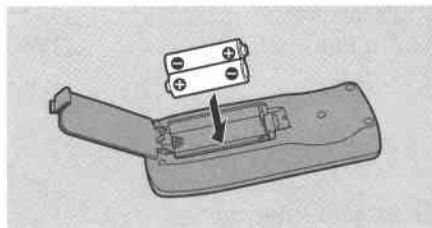

- When using the wireless controller in brightly lit places or outdoors, the effective range will be less.
- The camera may have difficulty picking up the remote control signals at extremely close range.
- Do not leave the controller exposed to direct sunlight, or in hot or humid places.
- When the batteries run out, replace them both together.
- If the wireless controller doesn't work, see p. 43.

When Operating 2 Canon DV Camcorders (Remote Sensor Mode)

To prevent interference from other Canon wireless controllers being used nearby, there are 2 remote sensor modes and an off setting. The wireless controller and the camera have to be set to the same mode in order to be compatible.

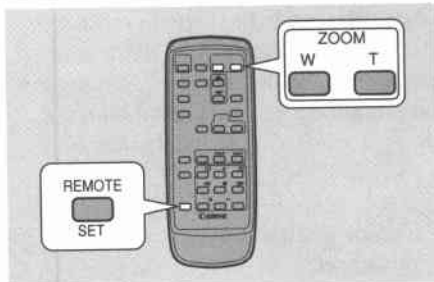

The wireless controller and the camera have been preset to mode 1. If you change the mode on the camera, be sure to change the mode on the wireless controller to the same mode.



MENU

([] 33)



1 : Mode 1
 2 : Mode 2
OFF : Sensor off

To turn the remote sensor off:

Open the menu and select SYSTEM. Then select WL.REMOTE, set it to OFF and close the menu.

- appears in the display.

To change the mode...

...on the camera:

Open the menu and select SYSTEM. Then select WL.REMOTE, set it to 1 or 2 and close the menu.

- The selected mode will appear on the display for 4 seconds.

...on the wireless controller:

Press and hold the REMOTE SET button on the wireless controller.

Simultaneously press the ZOOM W button for mode 1 or the ZOOM T button for mode 2. Continue to press simultaneously for over 2 seconds.

- Be sure to set the wireless controller to the same mode as the camera.

If your wireless controller isn't working:

Make sure the camera and the wireless controller are both set to the same mode. Check the mode the camera is set to by pushing any button other than the REMOTE SET button on the wireless controller. The camera's mode appears in purple for about 4 seconds. Set the wireless controller's mode accordingly by pressing the aforementioned button combinations. If the wireless controller still doesn't work, change the batteries.



- The mode the camera is set to also appears for 4 seconds when you turn the power on.

Turning off the tally lamp




The tally lamp lets you know that the camera is recording, receiving signals from the wireless controller or counting down for the self-timer. However, its flashing may be reflected into the lens during close-up recording, or when recording through glass.

You may therefore decide to turn it off.

MOVIE

PSCAN

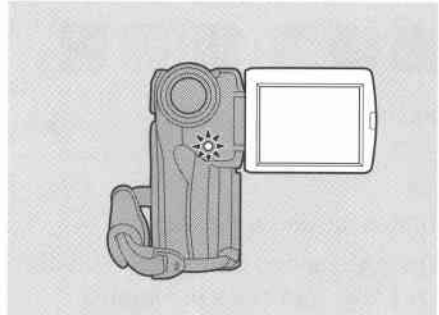

MENU

(33)


▶ SYSTEM

▶ TALLY LAMP · · ON

To turn the tally lamp off, open the menu and select SYSTEM. Then select TALLY LAMP, set it to OFF and close the menu.

- The tally lamp no longer flashes during recording, but it will still light up when the camera receives a signal from the wireless controller and during the self-timer countdown.

Setting the Date and Time

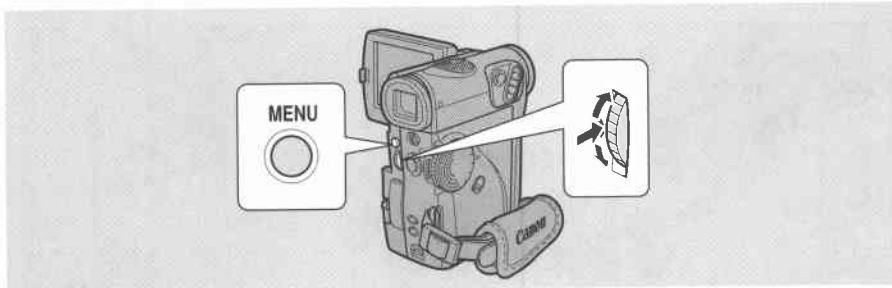

The date and/or time display forms part of the data code. You can choose to display or hide it during playback (75).

Set the date and time display when you first start using your camera. Install the backup battery before you begin (119).

- Before you start setting the date and time, select your home time zone from the menu.

Setting the time zone/daylight saving time




MENU
(33)

▶ SYSTEM

▶ T. ZONE / DST · PARIS

1. Open the menu and select **SYSTEM**.
2. Select **T.ZONE/DST**.
 - The time zone display appears on the screen.
 - Your camcorder's time zone is factory-preset to Paris. If you are at another time zone, select your time zone first and daylight saving time (DST) setting if necessary.
3. Move up or down the list of time zones with the **SELECT** dial. Select the option that represents your time zone.
 - If you are now in daylight saving time, select the time zone with the daylight saving time mark next to the area.
4. Close the menu.

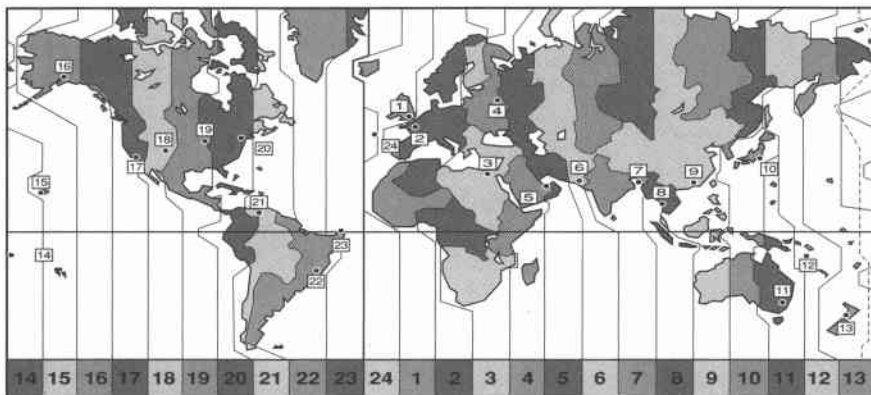

No.	Time zone	No.	Time zone
1	LONDON	13	WELLGTN (Wellington)
2	PARIS	14	SAMOA
3	CAIRO	15	HONOLU (Honolulu)
4	MOSCOW	16	ANCHOR (Anchorage)
5	DUBAI	17	L.A. (Los Angeles)
6	KARACHI	18	DENVER
7	DACCA	19	CHICAGO
8	BANGKOK	20	N.Y. (New York)
9	H. KONG (Hong Kong)	21	CARACAS
10	TOKYO	22	RIO (Rio de Janeiro)
11	SYDNEY	23	FERNAN. (Fernando de Noronha)
12	SOLOMON	24	AZORES



- After you have selected your time zone and set the date and time, when you travel to another time zone, there is no need to reset the date and time. Just set the time zone to your destination and the camera's clock will automatically change to display the correct time for your destination.
- The camera automatically accounts for the number of days in a month and leap year.

Setting the clock



E

After you set the date and time, the date/time and home time zone will be displayed for about 4 seconds each time you turn the power on.



MENU
(33)

▶ SYSTEM

▶ D/TIME SET · 1.JAN.2000
12:00 AM

1. Open the menu and select **SYSTEM**.
2. Select **D/TIME SET**.
 - The year display starts to flash.
3. Turn the **SELECT** dial up and down to change the year. Press the dial in to move to another part of the display.
 - Once you move from the year, the next part of the display starts flashing.
4. Set the month, day, hours, and minutes in the same way.
5. Press the **MENU** button when finished, and to start the clock.



- To make a change to part of the date and time, press the **SELECT** dial in at step 3 to move to the part to be changed. Turn the dial to make the change, then close the menu.
- The date can be set to any year between 2000 and 2030.
- If you press the **MENU** button in the middle of setting the date and time, you leave the menu, and the clock starts.
- If you press the **SELECT** dial in after setting the minutes you can set the date and time again from the start.

Using the Full
Range of Features

Date and time display



You can choose to display or hide the date and time display during recording. When the date and time display is set to **ON**, the date and time show in the lower left-hand corner of the display but the time zone disappears in about 4 seconds. The large, 4-second display will no longer appear when you turn on the power. It is not automatically superimposed on your recordings.



MENU
(33)

▶ DISP.SET UP

▶ D/T DISPLAY·OFF

To turn it on, open the menu and select **DISP.SET UP**. Then select **D/T DISPLAY**, set it to **ON** and close the menu.

Recording in Progressive Scan Mode




E

In Progressive Scan Mode, the MV3/MV3 MC/MV3i/MV3i MC records 25 full frame images per second, continuously, for superior quality frames. Use Progressive Scan Mode for fast moving scenes and moments that are hard to capture just taking a still photo. Check your tennis or golf swing, for example, or capture the smile of a baby. MV3 and MV3i: You can then record selected still images onto a floppy disk with the Floppy Disk Still Image Recorder FR-100 (optional) and easily transfer them to a personal computer for print out, making personalized postcards, calendars, etc. MV3 MC and MV3i MC only: If you plan on copying still images to a MultiMediaCard later, we recommend recording in Progressive Scan Mode.



Using the Full
Range of Features

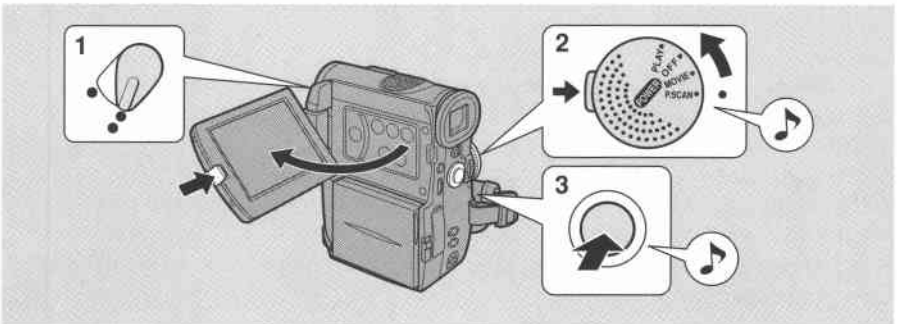

1. Set the **POWER** dial lock lever to the ●● position.
2. Turn the **POWER** dial to **P.SCAN**.
 - The power indicator lights up red.
 - **PRO.SCAN** appears in the display.
3. Press the **start/stop** button to begin recording.
 - When you finish recording, return the lock lever to the ● position.




- Progressive scan video may appear slightly jerky during normal playback. Some recording conditions may be more suitable for **MOVIE** than **P. SCAN**.
- The camera will turn itself off if you leave it in record pause mode for more than about 5 minutes. To return to record pause mode, set the **POWER** dial to **OFF** and then back to **P. SCAN**.

Taking Still Pictures to a Cassette



MV3 MC and MV3i MC: To take still images on a MultiMediaCard, see p. 97.

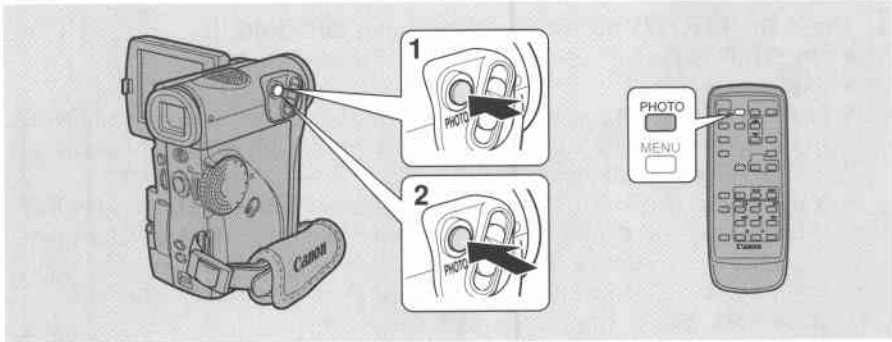

You can record still pictures like a photograph. The camera records the picture and sound to tape for approximately 6 seconds. The exposure is automatically adjusted.

Your still photos can be transferred to a PC for image enhancement and printout. MV3 and MV3i: Record still photos onto a floppy disk with the optional Floppy Disk Still Image Recorder FR-100 (□ 51) for transfer to a PC. MV3 MC and MV3i MC only: Copy still photos automatically to a MultiMediaCard for transfer to a PC (□ 109). Also, starting your shooting with a still photo makes it easy to find the beginning again later with the Photo Search function(□ 78).

You can take a still picture at any time during regular video recording, or you can put the camcorder into record pause mode first, then take a still picture.

MOVIE

PSCAN

During record mode

Press the PHOTO button fully down and the still picture will be taken immediately.

- The camera takes the image immediately, and then records the “photo” to the tape for approximately 6 seconds. During this time the camera also records the sound, and the display shows the still picture.
- A counter display appears, and counts up to 6 seconds as the camcorder records the picture.
- The camera returns to record pause mode.

E

Using the Full
Range of Features

During record pause mode**1. Press the PHOTO button halfway down and hold it:**

- “PHOTO” flashes at the bottom right of display.
- Exposure is locked.
- During autofocus ● flashes white in the display as the camcorder adjusts the focus and it is displayed continuously as a green mark when the camera is ready to take the still picture.
- If the subject is unsuitable for autofocus (125), the camera may not be able to focus, and ● may continue to flash white in the display. Adjust the focus manually with the SELECT dial.
- If you are using manual focus (72), the ● mark starts as a continuous green mark. Focus with the SELECT dial.

2. Press the PHOTO button fully down to take the still picture.

- The camera takes the image immediately, and then records the “photo” to the tape for approximately 6 seconds. During this time the camera also records the sound, and the display shows the still picture.
- A counter display appears, and counts up to 6 seconds as the camcorder records the picture. ● disappears from the display.
- The camera returns to record pause mode.




- The camera automatically returns to record pause mode after recording a still image for approximately 6 seconds. If a cassette is inserted and you turn the POWER dial to OFF during those approximately 6 seconds, the camera will respond only after recording is complete.
- The wireless controller’s PHOTO button has no half-way setting. Press the button fully and the camera immediately takes the “photo”.
- Only take “photos” where it is bright enough to see the image in the display.
- If you want to use an effect, make sure you set it before you take your picture.

Transferring Still Pictures to a PC with the FR-100 (optional)

-For MV3 and MV3i-

The Floppy Disk Still Image Recorder FR-100 captures images taken with the camera, compressing them in JPEG format and recording them as still images onto a floppy disk.

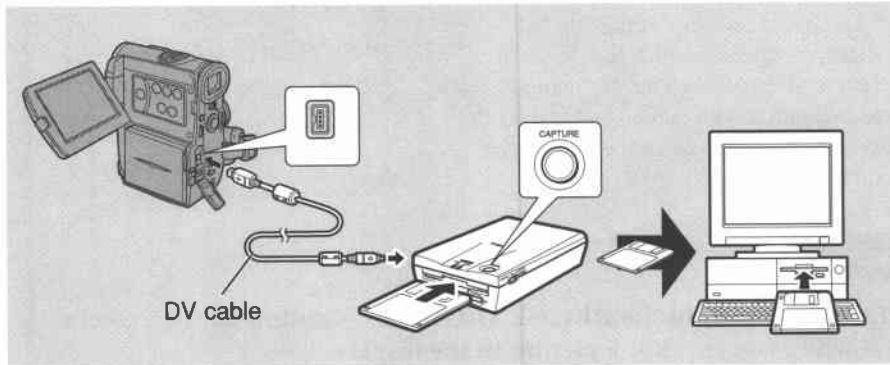

1. Connect the power sources for the camera and the FR-100.
2. Turn the camera's POWER dial to PLAY (MV3i: VCR), and connect the camera and the FR-100 with the DV cable (supplied with the FR-100).
3. Insert a floppy disk into the FR-100.
4. Play back your cassette in the camera and search for the image you want to capture. Find exactly the frame you want by using frame advance/reverse (24).
5. Press the FR-100's CAPTURE button to record the image onto the floppy disk.
6. After you have finished recording images, remove the floppy disk and insert it into your PC's disk drive.



- For full details of how to use the FR-100, refer to its instruction manual.


Searching and Reviewing While Recording

E

Record search



When the camera is in record pause mode, you can use record search to play the tape forwards or backwards to find the point where you want to start or resume recording. This is useful when you want to add a new scene to a previously used cassette. By using record search, you can ensure a smooth, noise-free join between the new scene and the old one.

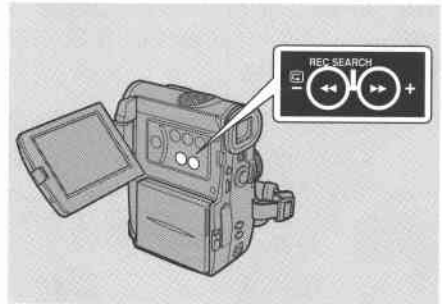

MOVIE

P.SCAN

1. **Press and hold the REC SEARCH + or – button on the camera while you check the picture in the display.**
 - The + button plays the recording forwards and the – button plays it backwards.
2. **Release the button when you find the point where you want to start recording.**
 - The camera returns to record pause mode.


Record review



When the camera is in record pause mode, you can use record review to play back the last few seconds of your recording and then return automatically to record pause mode. You can quickly make sure that a scene has recorded properly and then go on to shoot the next scene, without producing any noise in the picture.

MOVIE


P.SCAN

1. **Press and release the  (record review) button while you check the picture in the display.**
 - The camera rewinds the tape, plays back the last few seconds, and returns to record pause mode.



- Noise may appear on the screen when you play the tape backwards.

Using the Various Recording Programs

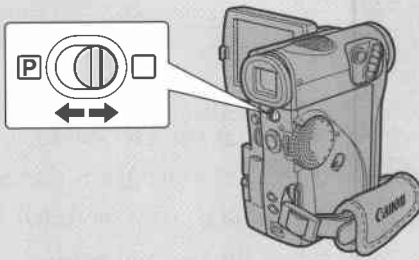

The camera provides you with a choice of 7 recording programs. They use different combinations of camera settings in order to adjust the exposure and other functions to match the recording situation.


- For simple point-and-shoot operation, select the Easy Recording program. Slide the program selector to the □ position.
- For normal shooting conditions, slide the program selector to P (program AE) mode. Open the program menu and select AUTO (□ 54).
- For various other recording conditions, the camera has 5 more specialised AE (auto exposure) programs.

Availability of functions in each recording program



Position of program selector							
Recording Program	□ (Easy Recording)	Auto	Sports	Portrait	Spotlight	Sand & Snow	Low Light
Shutter Speed	A	○	A				
Focus		○					
Exposure		○					
White balance		○					
Image stabilizer (ON/OFF)		ON	○				
Digital effects	×	○					
16:9	×	○					

○ : Available × : Not available A : Automatic function only




1. Slide the program selector to  (program AE) mode.
2. Press the SELECT dial in to display the program menu.
3. Turn the SELECT dial to move the arrow up or down the display.
4. Press the SELECT dial in to select the desired program.
 - The program will appear in the display.
5. Press the start/stop button to begin recording.



- The name of your selected recording program appears constantly on the left of the display, with the exception of Auto, which is displayed and then disappears after 4 seconds.
- Avoid changing programs during recording as the brightness of the image may change suddenly.
- The specialised AE programs are not suitable for all kinds of lighting. The image may flicker, or a bright line may appear on the screen if you use them in the wrong lighting conditions.
- If you switch the camera from the  program to the  program, the camera returns to the Auto mode.
- When recording in dark places a bright light in the scene may cause a vertical light bar (“smear”) to appear. This is a normal feature of camcorders.



Easy Recording

The simplest way to use the camera is with the program selector set to the  position. The camera will take care of focus, exposure and other adjustments, leaving you free to point and shoot.



Auto

This is the same as the Easy Recording program, except that you now have the option of using any of the camera's manual functions.



Sports

This program is useful for recording high-speed sports scenes in brightly lit conditions. Normal playback will be slightly jerky, but you will get clear images which can be analysed frame by frame during slow or paused playback.



Portrait

Use this program outdoors to make subjects stand out from a softened foreground and background. It works well for still-lives and close-ups. The effect is most noticeable when the zoom position is between the middle range and the telephoto end. Focus manually for maximum accuracy, and be careful when recording action scenes, as this program may cause fast moving objects to shudder.



Spotlight

This program is designed for recording spotlight scenes, such as on a stage. The exposure is automatically adjusted for glare-free recordings of subjects lit by a concentrated light source.



Sand & Snow

Use this program in places where the background is so bright that the subject appears underexposed in the display — a sunny beach or ski resort, for example. You may notice some shudder when recording moving subjects.



Low Light




This program allows you to record in dimly lit places. It is generally best used for close-ups of slow or stationary subjects, as moving subjects may leave a trailing after-image. However, you can take advantage of this to create special effects, by rapid zooming or by panning along with a moving subject. Picture quality will not be as good as in normal lighting conditions, and autofocus may not work as well as usual.



Using Digital Effects

E

Use the camera's digital effects for more interesting productions. (MV3 MC and MV3i MC only: See p. 106 for CARD MIX)

- **Faders:** Start or end scenes on a tape with a fade to or from black ( 59). Fade Trigger, Wipe, Scroll, Mosaic Fade
- **Effects:** Add flavor to your recordings ( 60). Art, Black and White, Sepia, Mosaic
- **Multi-image Screen:** Divides the display to show 4, 9 or 16 still photos. Has 4 transition speed options: fast, moderate, slow and manual ( 63).

Availability of digital effects by mode

*MV3 MC and MV3i MC only

	MOVIE	P. SCAN	PHOTO	PLAY (VCR)	CARD REC*	CARD PLAY*
Faders		○	×	○	×	×
Effects		○	○	○	○	×
Multi-image Screen		○	○	○	○	×

○ : Available × : Not available

- The types of digital effects you are able to use depends on the setting of the POWER dial and the recording program.

Using the Full
Range of Features




- When you do not want to use digital effects, set D.E.SELECT to OFF through the menu.
- The camera remembers your chosen digital effect setting until you change it.
- Digital effects can be selected but not operated on a blank blue screen (appears in PLAY mode (MV3i and MV3i MC: in VCR mode)). The display continues to flash.
- Digital effects operated during PLAY (MV3i and MV3i MC: VCR) mode are not recorded onto the original tape.
- Digital effects can be added to another tape when dubbing using the A/V out terminal (PLAY (MV3i and MV3i MC: VCR) mode), but not the DV out terminal.
- You cannot operate digital effects while photo/date searching.
- If you slide the program selector to (Easy Recording) while the digital effect display is flashing, it will disappear from the display and reappear when you return to (program AE) mode.
- The digital effect display will flash for 2 seconds after setting, even if DISPLAYS is set to OFF in the menu.

● Faders

Fade Trigger (FADE-T)

When you start recording, the scene gradually fades in from a black screen. When you stop recording, it gradually fades out.

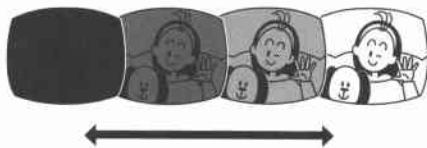


Wipe (WIPE)

When you start recording, the picture begins as a thin vertical line in the centre of the screen which gradually expands sideways until it fills the whole of the screen. When you end a scene, the image is wiped from both sides of the screen.




Scroll (SCROLL)

When you start recording the picture appears from the right hand side of the screen and expands sideways until it fills the whole screen. When you end a scene, the image is wiped back off.

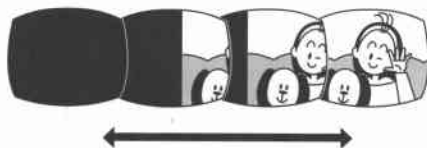

Mosaic Fade (M. FADE)


Blurs the image by enlarging the size of some pixels. The image appears as increasingly large squares of colour as it fades out, and smaller squares when it fades in.

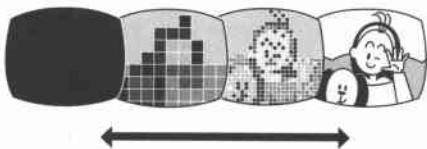

● Effects


Art (ART)

Adds a paint-like effect, called solarization, to the image.

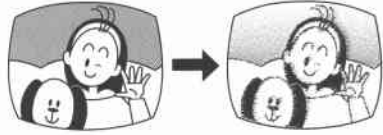


Black and White (BLK & WHT)

Makes the image black and white.

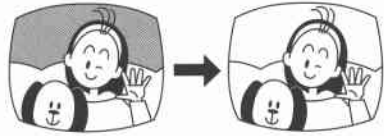


Sepia (SEPIA)

Makes a monochrome image with a brownish tint.

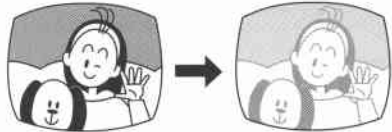


Mosaic (MOSAIC)

Blurs the image by enlarging the size of some pixels.

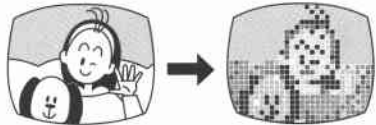

Digital effects can be set with the controls on the body of the camera or the wireless controller. Pressing the ▲/▼ buttons on the wireless controller correspond to turning the SELECT dial up and down, and pressing the SET button corresponds to pressing the SELECT dial in.

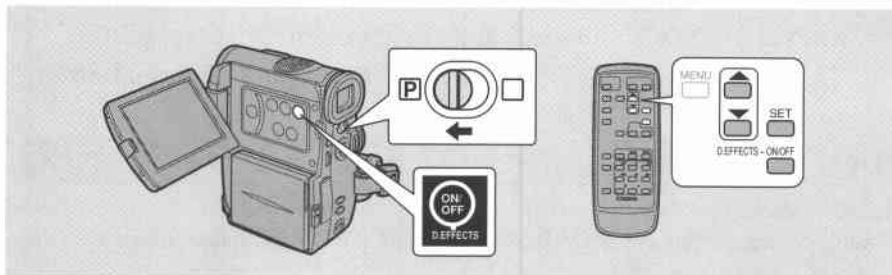

Operating faders

Sound and image fade together.

When operating faders in MOVIE or P.SCAN mode, make sure the program selector is set to **P**.



MENU
(33)

► D.EFFECTS

► D.E.SELECT..FADER

► FADER.....FADE-T

Select fader

1. **Open the menu and select D.EFFECTS.**
2. **Select D.E.SELECT.**
3. **Select FADER.**
 - You return to the D.EFFECTS submenu.
4. **Select FADER again (the name of the previously selected fader also appears).**
 - FADE-T, WIPE, SCROLL, M.FADE settings appear.
5. **Select the desired setting.**
 - The menu returns to the submenu.
6. **Close the menu.**
 - The name of your selected fader flashes in the display.

Fader on/off

7. **Press the D.EFFECTS ON/OFF button.**
 - The name of your selection stops flashing.
 - Each time you press the ON/OFF button, the chosen fader is activated (display lights continuously) or deactivated (display flashes).

8. If you're in **MOVIE** or **P.SCAN** mode:

Fade in- Press the start/stop button.

Fade out- Press the start/stop button.

- If you're in **PLAY (MV3i or MV3i MC:VCR)** mode:

Fade in- Press the ► (play) button.

Fade out- Press the || (pause) button.

Operating effects



Sound records/plays back normally.

When operating effects in **MOVIE**, **P.SCAN** or **CARD REC** mode, make sure the program selector is set to [P].



MENU
([] 33)

► D.EFFECTS

►► D.E.SELECT..EFFECT

►►► EFFECT.....ART

Select effect

1. **Open the menu and select D.EFFECTS.**
2. **Select D.E.SELECT.**
3. **Select EFFECT.**
 - You return to the D.EFFECTS submenu.
4. **Select EFFECT again (the name of the previously selected effect also appears).**
 - ART, BLK&WHT, SEPIA, MOSAIC settings appear.
5. **Select the desired setting.**
 - The menu returns to the submenu.
6. **Close the menu.**
 - The menu disappears and the name of your selected setting flashes in the display.

Effect on/off

7. **If you're in PLAY (MV3i and MV3i MC:VCR) mode, press the ► (play) button.**
8. **Press the D.EFFECTS ON/OFF button.**
 - The name of your selection stops flashing and takes effect on the display.
 - Each time you press the ON/OFF button, the chosen effect is activated or deactivated.

Using the Multi-Image Screen

Divides your display image into 4, 9 or 16 smaller images with the Image Capture feature. With this feature, the camera captures the current scene being shot or replayed. Choose the transition speed — manual, fast (every 4 frames), moderate (every 6 frames) or slow (every 8 frames) — at which to capture a moving subject, such as a person playing tennis or golf. Sound is recorded normally.



4 images




9 images



16 images

Operating the multi-image screen



When operating the multi-image screen in MOVIE, P.SCAN or CARD REC mode, make sure the program selector is set to .


In PLAY (MV3i and MV3i MC: VCR) mode, you can only operate the multi-image screen in the following playback modes:

When M.S.SPEED is set to MANUAL: Still picture playback, slow forward/reverse playback

When M.S.SPEED is set to FAST, MODERATE or SLOW: Still picture playback



MENU
( 33)

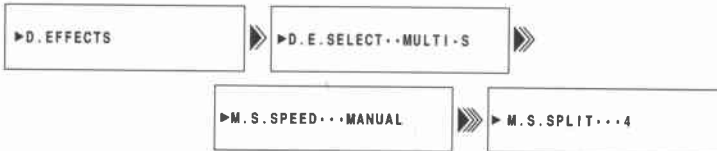

Select multi-image screen

1. **Open the menu and select D.EFFECTS.**
2. **Select D.E.SELECT.**
3. **Select MULTI-S.**
 - You return to the D.EFFECTS submenu.
4. **Select M.S. SPEED.**
 - MANUAL, FAST, MODERATE and SLOW settings appear.
5. **Select the desired setting.**
6. **Select M.S. SPLIT.**
 - 4, 9, 16 settings appear.

7. Select the desired setting.**8. Close the menu.**

- The digital effects menu disappears.
- MULTI-S flashes in the display.

Multi-image screen on/off**9. Push the D.EFFECTS ON/OFF button.**

- Manual: As you press the ON/OFF button, scenes will be captured one after another the indicated number of times. If you push and hold the ON/OFF button for more than a second, the last image captured will be erased.
- The currently recording image is framed in blue. The frame disappears after the last image is captured.
- Automatic: The camera will capture the indicated number of images at the indicated speed.

10. If you're in MOVIE or P.SCAN, push the start/stop button to begin recording.

- The multi-image screen is recorded to the tape.
- MV3 MC and MV3i MC: If you're in CARD REC mode, push the PHOTO button to record the multi-image screen to the MultiMediaCard.



- You cannot use the multi-image screen with digital zoom or the 16:9 mode.
- You can operate the multi-image screen from record or record pause mode.
- After all the images have been captured, push the ON/OFF button quickly to cancel the multi-image screen.
- If you are operating the multi-image screen in PLAY (MV3i and MV3i MC: VCR) mode and you stop or pause the tape, or press any other playback button or the date/photo search button, the multi-image screen will be cancelled. (This does not apply with the MANUAL multi-image speed.)
- You cannot use digital zoom when the multi-image screen is set. The display becomes “---”.

Audio Recording

Selecting the audio mode



MV3/MV3 MC/MV3i/MV3i MC can record sound in two audio modes — 16 bit and 12 bit. The 16 bit mode produces the higher sound quality (slightly superior to CD) while the 12 bit mode records on 2 channels (stereo 1), leaving 2 channels free (stereo 2) for you to add new sound at a later date.

MOVIE PSCAN

MENU

(33)

▶VCR SET UP

▶AUDIO MODE··12bit


To switch to the 16 bit mode, open the menu and select **VCR SET UP**. Then select **AUDIO MODE**, set it to **16 bit** and close the menu.

- “16 bit” is shown in the display for approximately 4 seconds.




- For details on adding new sound, see p. 87.
- For details of playing back a tape that has new sound on stereo 2, see p. 90.

External microphone and headphones

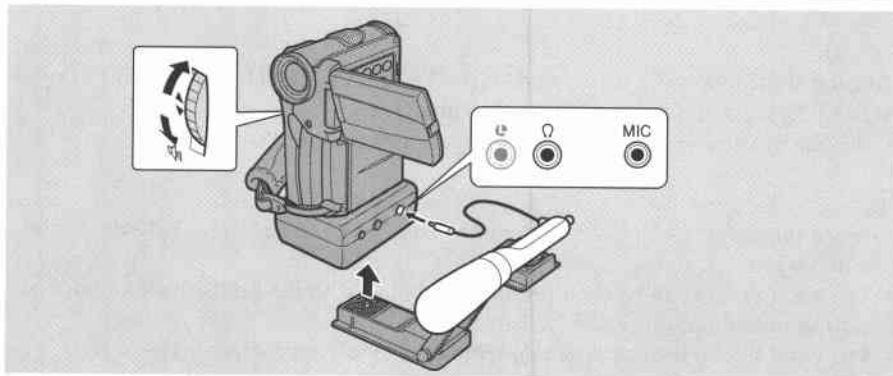


For greater creative control over audio recording, you can connect an external microphone to the camera via the DU-300 Docking Unit's MIC terminal. Attach the microphone to the optional SA-1 Adapter Bracket.

1. **Attach the microphone to the adapter bracket.**
 - Extend the adapter bracket open until it locks.
2. **Attach the adapter bracket to the docking unit.**
3. **Connect the microphone.**

You can monitor the sound while recording and playing back by attaching stereo headphones to the  terminal on the docking unit.

You can adjust the volume of attached headphones by turning the SELECT dial.

- A VOLUME bar appears in the display to indicate the current volume. The volume level is the same regardless of mode.
- The SELECT dial also controls the speaker volume once you remove the headphones from the headphone socket ( 25).
- The levels you adjust for the built-in speaker and headphones are memorized separately. The camera remembers your levels even if you turn the camera off and back on again.

Wind screen



The camera has an automatic wind screen to prevent wind noise from interfering with the sound track of a tape. As a rule, use the wind screen when recording outdoors. Make sure it's off when recording indoors, where there is no wind to affect your recording.



MENU
( 33)

▶VCR SET UP


▶▶WIND SCREEN · ON

To turn it off, open the menu and select VCR SET UP. Then select WIND SCREEN, set it to OFF and close the menu.

- WS **OFF** is shown in the display when you turn the wind screen off.



- When the wind screen is on, some low sounds are cut out along with the sound of the wind.
- The wind screen can be used for audio dubbing with the built-in microphone as well as recording.
- The wind screen does not operate with an external microphone. The WIND SCREEN menu options disappear (“— —”) when an external microphone is connected to the MIC terminal (on the DU-300). Note that WS **OFF** will not appear in the display when an external microphone is attached.

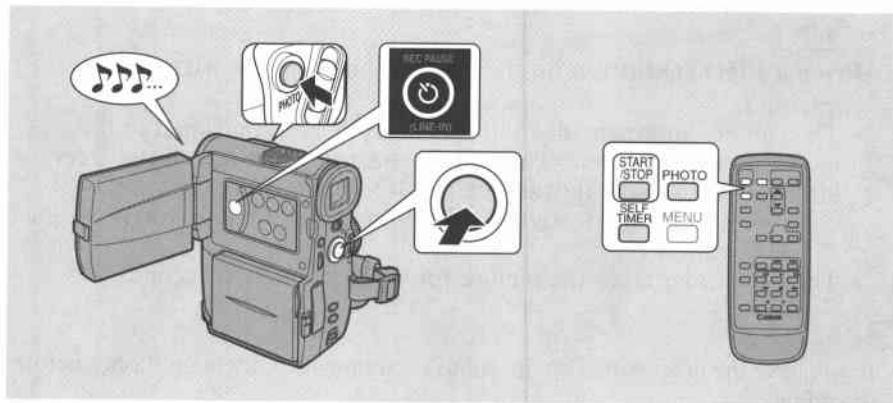


This is useful when you want to include yourself in the picture when recording movies or still photographs.



1. Press the  self-timer button on the body of the camera
or

the SELF TIMER button on the wireless controller.

- SELF-T appears in the display.
- To have the subject monitor recording, rotate the LCD panel 180° ( 21).

For movies

2. Press the start/stop button.

- The camera starts to record after a 10-second countdown period (or after 2 seconds when you use the wireless controller). The time remaining counts down in the display (e.g. “5 SEC”).
- SELF-T disappears from the display when recording begins.
- The tally lamp starts flashing.

3. Press the start/stop button to end recording.

For stills

2. Press a PHOTO button on the camera body or the wireless controller.

- The camera automatically adjusts the focus 2 seconds before the countdown is complete. The ● mark flashes white then turns green after the focus and exposure are set. If you are using the wireless controller, the ● mark starts flashing immediately after you press the PHOTO button.
- The camcorder takes the picture for approximately 6 seconds.




- If you have the beep turned on, it sounds each time the tally lamp flashes before recording.
- To cancel the self-timer before the countdown has begun, press the ⏸ SELF TIMER button.
- To cancel the self-timer once the countdown has begun, press the ⏸ SELF TIMER button, start/stop if you're shooting movies, or PHOTO if you're taking a still image.

Adjusting Exposure Manually

Exposure lock



When you are recording in situations where the lighting may change suddenly, you can lock the exposure at the current level in order to control the brightness of the image.

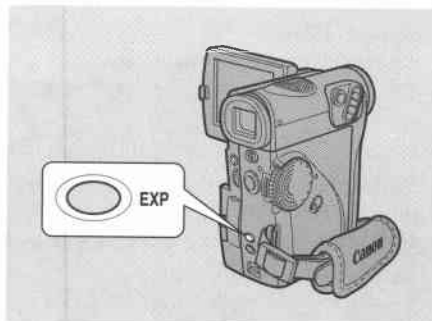


To lock the exposure, press the EXP button. Press it again to return to auto exposure.


Exposure adjustment



When the exposure is locked, you can adjust it manually, making the picture brighter or darker in order to deal with difficult lighting conditions. The camera's iris can be manually set to any position from fully closed to fully open.

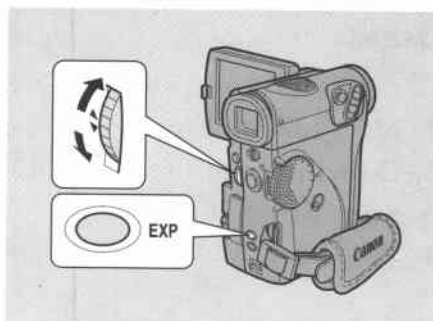

To make the recorded image brighter, turn the SELECT dial upwards (to a maximum of +11). This may be necessary if the background is very bright, or if the subject is lit from behind.

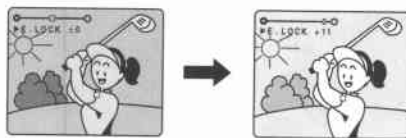

To make the recorded image darker, turn the SELECT dial downwards (to a minimum of -11). This may be necessary if the background is very dark, or if the subject is spotlighted.





- You cannot adjust the exposure without the ► mark before E.LOCK in the display. Push the EXP button so that ► appears before E.LOCK. Then you can adjust the exposure manually.
- The standard exposure level depends on which recording program you have selected.
- Exposure lock is cancelled if you change recording programs.
- You cannot use exposure lock or adjustment when the program selector is set to the □ (Easy Recording) position.
- If you zoom while the exposure is locked, the brightness of the scene may change.

Shutter speed



Set the shutter speed manually to take stable shots of quickly moving subjects.



MENU
(□ 33)

►CAM.SET UP

►SHUTTER.....AUTO

1. Make sure the camera is set the (program AE) mode.
2. Open the menu and select CAM.SET UP.
3. Select SHUTTER.
4. Press the SELECT dial in to select the desired shutter speed.

AUTO
1/50 ↑ slower
1/120
1/250
1/500
1/1000
1/2000 ↓ faster

5. Close the menu.

- The camera returns to the auto shutter setting when you slide the program selector to □ (Easy Recording), or change the recording program.

Guidelines for shooting using high shutter speeds

- When shooting with a shutter speed of 1/1000 or higher, do not shoot the sun directly.

Recommended shutter speeds when shooting:

- People doing outdoor sports such as golf or tennis



1/2000

- Moving cars or trains or other rapidly moving vehicles such as roller coasters



1/1000, 1/500 or
1/250

- People doing indoor sports such as basketball



1/120



- You are unable to set the shutter speed when exposure lock is set in any recording program other than AUTO. The SHUTTER display becomes set to “_ _ _ _”
- The image may not appear smooth when a high shutter speed is set.

Adjusting Focus Manually

E

The camera can focus automatically. All you have to do is point it, and whatever is in the centre of the display will usually be in sharp focus. If it does not seem to be focusing well, it may be because the subject is not suitable for autofocus.

You can use the manual focusing function for more control over focusing.

Focus lock




Press the FOCUS button to turn off autofocus. The focus remains locked at the point set by autofocus.

(▶M.FOCUS appears in the display.)

You can now adjust the focus manually with the SELECT dial. Press the FOCUS button again when you want to return to autofocus.

- If you zoom in on your subject after turning off autofocus, it may not stay in focus. It is generally best to adjust the zoom first, and then the focus.

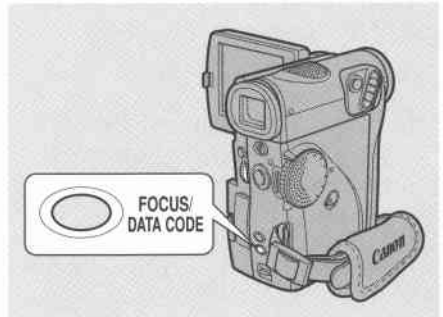


Manual focus



Use the SELECT dial to set the focus.

- Turn the SELECT dial downward to move the focus farther away.
- Turn the SELECT dial upwards to bring the focus nearer.

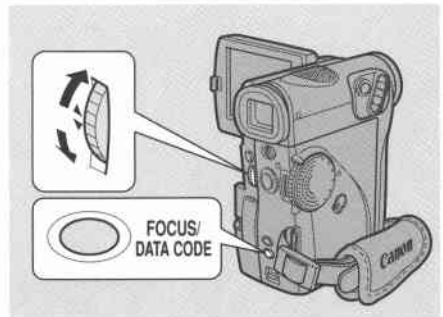

- You cannot adjust the focus without the ▶ mark before M.FOCUS in the display. Push the FOCUS button so that ▶ appears before M.FOCUS. Then you can adjust the focus manually.
- The manual focus setting is cancelled if you select the □ (Easy Recording) program.
- When you are using the □ (Easy Recording) program, autofocus cannot be turned off.
- See “Troubleshooting” on p. 124 for a list of subjects which may not be suitable for autofocus.

Setting the White Balance



The camera's auto white balance system compensates for a wide range of lighting conditions. Although slight variations are unavoidable, colours will appear natural in virtually every situation.


In some cases, you will get better results by setting the white balance yourself, or using one of the two preset modes:

☑ Indoor Mode

- Under halogen or studio/video lighting
- Subject is of one dominant colour
- Close ups

☀ Outdoor mode

- In daylight, especially for close-ups and where the subject is of one dominant colour

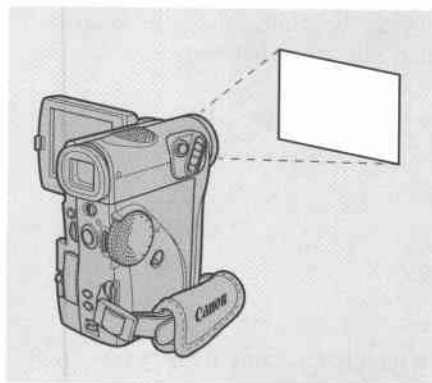

E







MENU

(33)

▶CAM.SET UP

▶WHITE BAL...AUTO

1. Make sure the camera is set to the  (program AE) mode.
 2. Open the menu and select CAM.SET UP.
 3. Select WHITE BAL.
 4. a) For the indoor, outdoor or auto settings, press the SELECT dial in to choose the setting.
 - /☀ appears in the display when you set the white balance to indoor/outdoor mode.
 - b) To set the white balance yourself, point the camera at a white object (such as a sheet of paper) and zoom in until it fills the display. Then press the SELECT dial in to select SET .
 - Make sure to continue pointing the camera at the white object until you have finished setting the white balance.
 - The  display flashes then remains lit.
 - Depending on the light source, the flashing may at times continue. The result will remain better than with the auto setting and you can continue recording.
5. Close the menu.

Setting the white balance manually will probably work better than auto white balance when shooting:

Subjects with one dominant colour, such as sky, sea or forest



Close-ups



In rapidly changing lighting conditions



In places lit by certain types of fluorescent or mercury vapour lights




- Turn the digital zoom off (if necessary) to set a more accurate white balance.
- If you have set the white balance and lighting conditions change, reset the white balance.
- Try to record with light from a single source. Correct white balance cannot be obtained for two types of lighting at once.
- You cannot set the white balance or choose the indoor/outdoor mode when the program selector is set to the (Easy Recording) program.
- The white balance returns to the AUTO setting when you slide the program selector to (Easy Recording).
- When you turn the camera on, the white balance returns to AUTO. If you then switch the white balance to SET, the camera will remember your last setting.
- During normal outdoor shooting, setting to AUTO may provide better results.

Displaying Date, Time and Camera Data (Data Code)

The data code contains the date and time the recording was made. Cassette data codes can also display camera data (shutter speed and exposure settings).

E

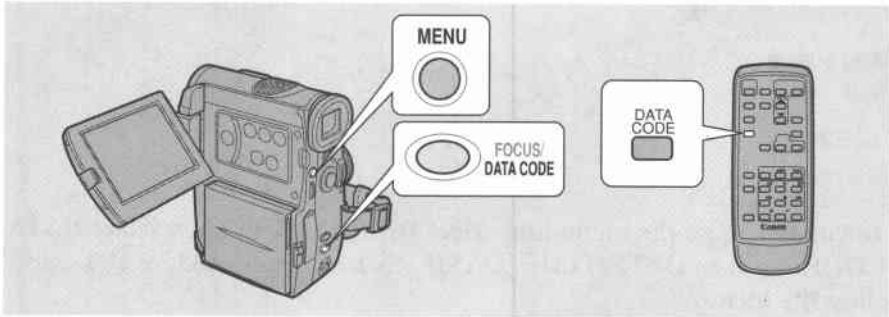

During PLAY (MV3i and MV3i MC: VCR) mode, the data code can be displayed or hidden while the camera is in play, slow or still mode.

Camera data may be displayed as “-- --” during fast forward, rewind, reverse playback, forward and reverse $\times 2$ playback.

Press the DATA CODE button while the camera is in play, slow or still mode.

- Press it once to display, once more to hide it.

Using the Full
Range of Features

Selecting date/time



Select whether you want the date, the time, or both to show up on your data code display (76).



MENU
(33)

▶ DISP.SET UP

▶ D/TIME SEL. DATE & TIME

To change the date and time combination, open the menu and select DISP.SET UP. Then select D/TIME SEL., set it to DATE, TIME or DATE & TIME and close the menu.

Setting the data code



You can also choose to display camera data (shutter speed and exposure settings) in cassette data codes.

PLAY (VCR)

MENU

(33)

▶ DISP. SET UP

▶ DATA CODE...DATE/TIME

To change, open the menu and select **DISP.SET UP**. Then select **DATA CODE**, set it to **DATE/TIME**, **CAMERA DATA** or **CAM. & D/T** and close the menu.

Possible data code combinations:

DATA CODE (cassette only) D/TIME SEL.	Date/Time	Camera data	Date/Time & Camera data
Date	1. JAN. 2000	F32 1/2000	F32 1/2000 1. JAN. 2000
Time	12:00:00 AM	F32 1/2000	F32 1/2000 12:00:00 AM
Date & Time	12:00 AM 1. JAN. 2000	F32 1/2000	F32 1/2000 12:00 AM 1. JAN. 2000



- The data code will read “--” in the following situations:
 - During playback of a blank section of tape.
 - If the tape was recorded before entering the date and time in the camera’s memory.
 - If the tape was recorded on a camera without a data code function.
 - If noise or tape damage prevents the data code from being read.
- If a recording made on MV3/MV3 MC/MV3i/MV3i MC is played back on a different DV camcorder, the data code may not be displayed correctly.
- The data code will appear in the display even if DISPLAYS (132) has been set to OFF through the menu.

Six-second auto date



E

The 6-second auto date appears for 6 seconds to mark the changeover of a day if the tape was being recorded at 12:00 midnight. It also appears for 6 seconds when you start playback and have the data code turned off. The 6-second auto date will adjust for any time zone changes you have indicated.



MENU
(33)

▶ DISP. SET UP

▶▶ 6SEC. DATE...OFF

To turn the 6-second auto date on, open the menu and select DISP.SET UP. Then select 6SEC. DATE, set it to ON and close the menu.




- When 6SEC.DATE is turned on but DISPLAYS (132) is turned off, the six-second auto date will still appear for 6 seconds.

Searching the Tape (Photo Search/Date Search)



E

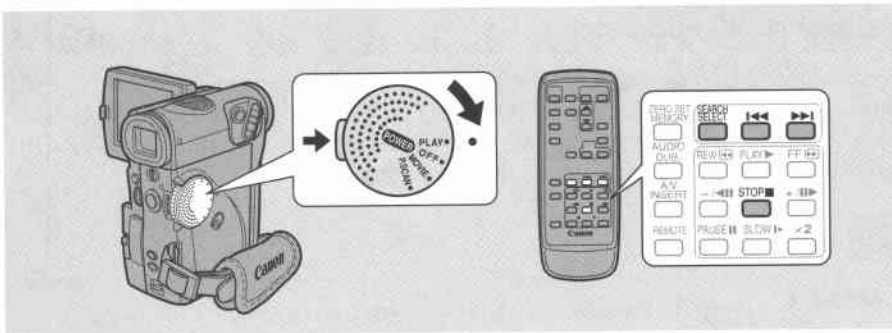

This allows you to move quickly through still pictures recorded anywhere on a tape (photo search) or between different days or areas of recording (date search) on a tape.

PLAY (VCR)

1. Press the **SEARCH SELECT** button to choose between photo/date search.


- PHOTO SEARCH or DATE SEARCH is shown in the display for 4 seconds.

2. Press the **◀◀** and **▶▶** buttons to move backwards or forwards through the still pictures or between different days of recording.

- Press once to move to the start of the previous/next still picture or day on the tape.
- You can press more than once to move to the corresponding still picture or day (up to a maximum of 10 times), e.g. press the **▶▶** button 5 times to move forward 5 still pictures or days.
- PHOTO SEARCH/DATE SEARCH appears in the middle of the display alongside the **◀◀** or **▶▶** mark and number to search through. The recording mode is also shown (SP/LP).



- Press **■** (stop) to stop mid-search.
- If you begin a search very close to the start of a recorded still picture during photo search, the camera may skip straight past it.
- When you have set the area for the World Clock, date search also looks for the change in date based on the adjusted time.
- A date/area cannot be identified if the total recording time on that day/area was less than 1 minute.
- Date search playback may start just before or after the beginning of the located section.
- If the data code is not displayed correctly you will not be able to operate the date search correctly.

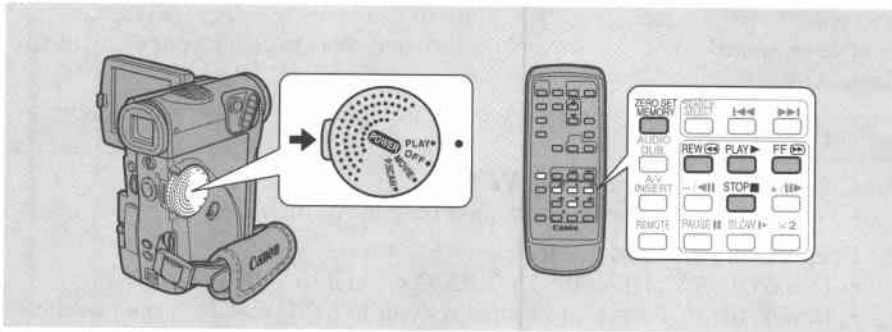

Use the wireless controller to mark a point on a tape that you want to return to following playback.



1. **Press the ZERO SET MEMORY button on the wireless controller during playback at a point you want to return to later.**
 - The time code is replaced by a tape counter that is set to zero with the **M** indication.
 - Press the ZERO SET MEMORY button once more to cancel the zero set memory.
2. **When you have finished playback, fast forward or rewind the tape. The tape stops automatically when it reaches the zero set position.**
 - **RTN▶▶** or **◀◀RTN** appears in the display.
 - The tape counter with **M** indication disappears from the display and the time code reappears.



- The zero set memory may not function correctly where there is a break between recordings on the tape.
- You can also use zero set memory to mark a position on a tape in camera mode. When you then play back the tape, pressing rewind will take you back to the pre-marked position.
- If you remove the tape while the zero set memory is set, the memory is cancelled and the tape counter reverts to time code.
- The camera remembers your setting even if you turn it off and back on again or move the program selector.

Editing to a VCR

E

By connecting the camera to a VCR, you can edit your recordings in order to remove unwanted scenes — or combine different shots to create your own video productions.

Preparations

1. **Connect the camera to the VCR.**
 - See “Connections for Playback on a TV Screen” on p. 26.
2. **Prepare the TV and VCR.**
 - Turn on the TV and set the TV/VIDEO selector to VIDEO.
 - Turn on the VCR, and set its input selector to LINE. Load a blank cassette, and put the VCR in record pause mode.
 - See your TV and VCR instruction manuals for details.
3. **Turn the camera’s POWER dial to PLAY (MV3i and MV3i MC: VCR), and load your recorded cassette.**

Editing




1. Find a point on your recorded cassette slightly before the section you want to copy.
2. Start to play it back while you monitor the picture on the TV.
3. Start recording on the VCR as soon as the section you want to copy appears on the screen.
4. Pause the VCR at the end of the section you want to copy, then stop playback on the camera.
5. Repeat steps 1 to 4 until your edited recording is complete.



- The quality of the edited tape will be slightly lower than that of the original.

☪ (LANC) terminal

The ☪ terminal allows you to connect the camera to equipment. Some buttons on editing equipment may operate differently from those on the camera.

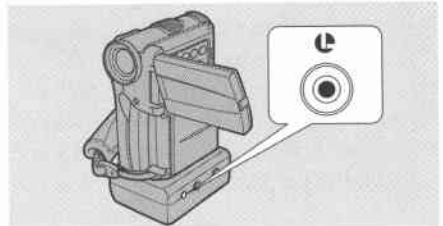


- ☪ (LANC) is a trademark. It stands for Local Application Control Bus System.
- We cannot guarantee the results when connecting to equipment not bearing the LANC ☪ symbol.

Dubbing with Digital Video Equipment

MV3 and MV3 MC

Digital video equipment fitted with the DV terminal lets you edit, copy and transfer data digitally, with virtually no generation loss in image and sound quality.

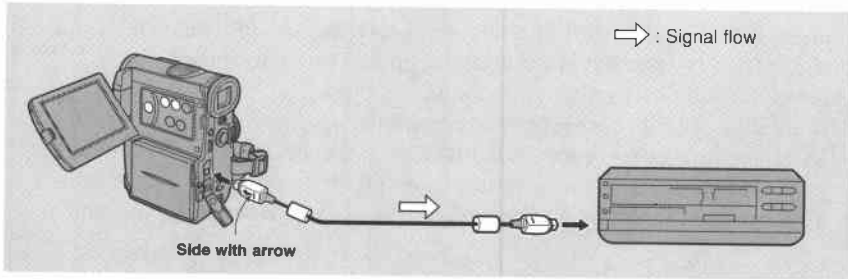

Preparations

1. **Connect the camera and the other digital device.**
 - Connect the Canon CV-150F DV cable (optional) with the side of the plug marked with the arrow facing as shown above.
2. **Prepare the other device.**
 - Load a blank cassette, and put the other device in record pause mode.
 - See its instruction manual for details.
3. **Turn the camera's POWER dial to PLAY and load a recorded cassette.**

Dubbing



1. **Find a point on your recorded cassette slightly before the section you want to dub.**
2. **Press the camera's play button.**
 - Playback starts.
3. **Start recording on the other device as the section you want to copy appears on the screen.**
4. **When you get to the point where you want to stop dubbing, press the stop button or the pause button.**
 - Playback stops.



- Blanks between recordings on the playback tape are recorded as anomalous images on the tape that is being recorded to.
- During DV dubbing, you cannot add digital effects.

E


Editing

MV3i and MV3i MC

The MV3i and MV3i MC are equipped with the DV Recording function. The MV3i and MV3i MC are only available in certain areas.

Digital video equipment fitted with the DV terminal lets you edit, copy and transfer data digitally, with virtually no generation loss in image and sound quality. The DV terminal is for both line-in and line-out, since a single DV cable can handle data in both directions.

- If a digital VCR is connected and an anomalous signal is sent from the VCR, the images recorded on the tape may also be anomalous (although it may not appear so on the TV image), or not recorded at all.
- You are unable to dub tapes recorded with the copyright protective signal.

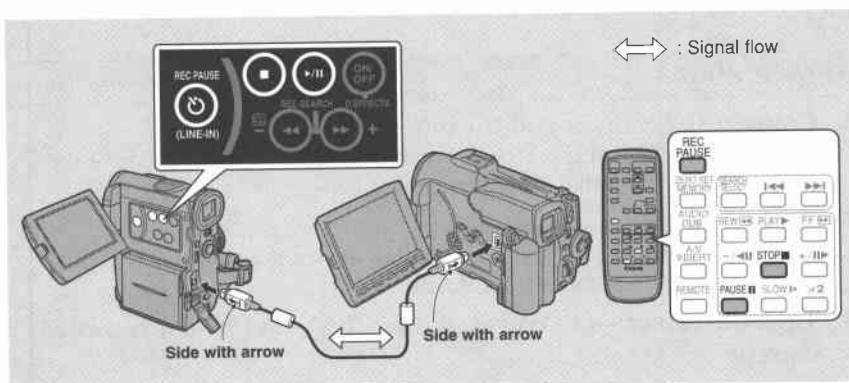

Preparations

Example dubbing to the camera

1. **Connect the camera and the other digital device.**
 - Connect the Canon CV-150F DV cable (optional) with the sides of the plugs marked with the arrows facing as shown above.
2. **Prepare the other device.**
 - Turn on the power and load a recorded cassette.
3. **Turn the camera's POWER dial to VCR and load a blank cassette.**
 - DV IN appears in the display.

Dubbing



1. **Find a point on your recorded cassette slightly before the section you want to copy and set it to playback pause mode.**
2. **Press the camera's REC PAUSE button.**
 - The camera enters record pause mode.
3. **Start playback on the other digital device while you monitor the picture.**
4. **Press the pause button.**
 - Recording starts.
5. **When you get to the point where you want to stop recording, press the stop button or the pause button.**
 - Recording stops.
6. **Stop playback on the other device.**



- If the cable is not connected properly, or if the cable is unconnected when you press REC PAUSE, the camera displays the caution "CHECK THE DV INPUT." An anomalous image may also flash onto the screen.
- Blanks between recordings on the playback tape are recorded as anomalous images on the tape that is being recorded to.
- During DV dubbing, you cannot add digital effects.


Copyright signal

Certain pre-recorded software tapes are copyright protected. If you try to play back such a cassette, "COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED" appears in the display for a few seconds and then the camera displays a blank blue screen; you cannot view the contents of the cassette. If you try to record from such a tape via the digital cable "COPYRIGHT PROTECTED DUBBING RESTRICTED" appears in the display; you cannot record the contents of the tape.


Recording Over Existing Scenes — A/V Insert Editing (MV3i and MV3i MC only)

E

You can insert new scenes from another DV camcorder onto your pre-recorded tape using the camera's DV in terminal. Original video and audio will be replaced with the new video and audio.

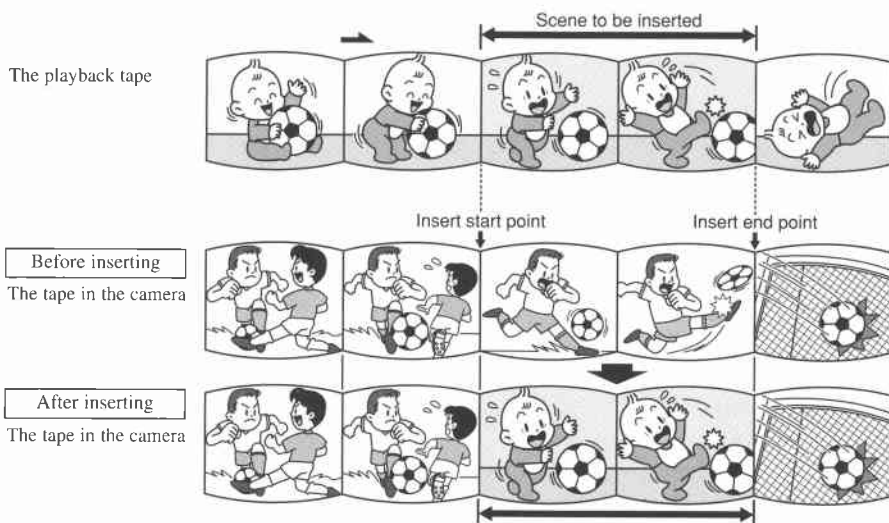

The video and audio of the new scene replace that of the old.

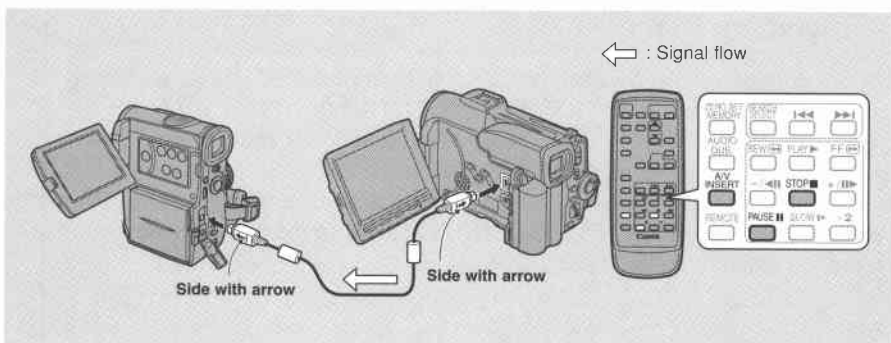

Preparations

E

The tape in the MV3i/MV3i MC:

When using the MV3i/MV3i MC's A/V insert function, only record to tapes recorded in SP mode with continuously recorded time codes.

If there are non-recorded portions or portions recorded in LP mode on the tape, recording will stop.

The playback tape:

Use only tapes without non-recorded portions.

If there are non-recorded portions or changes in the recording mode, you may not be able to insert A/V correctly.

You cannot insert A/V when the playback tape has been poorly recorded.

Example recording from another camcorder

1. **Connect the MV3i/MV3i MC to the other camcorder.**
2. **Prepare the other camcorder.**
 - Turn on the power and load a recorded cassette.
 - See its instruction manuals for details.
3. **Turn the MV3i/MV3i MC's POWER dial to VCR and load a recorded cassette.**
 - Make sure the REC/SAVE tab on the cassette has been slid to REC (closed position).

Editing

Editing



1. **On the other camcorder, locate a point 3 seconds before the scene to be inserted. Set the other camcorder to playback pause mode.**
2. **On the MV3i/MV3i MC, press PLAY and locate the recording start point. Set the camera to playback pause mode.**
 - You can use the playback buttons on the body of the camera or the special playback functions on the wireless controller in the same way as in playback mode.
3. **Press the A/V INSERT button.**
 - A/V INSERT and ●|| appear in the display.
4. **Play back the cassette in the other camcorder.**
5. **To start inserting, press the PAUSE button of the MV3i/MV3i MC.**
 - ●|| changes to ●.


6. **To stop inserting, press the STOP button of the MV3i/MV3i MC.**
 - Inserting stops and A/V INSERT disappears from the display. The camera returns to stop mode.
 - If instead of pressing STOP you press PAUSE, the camera returns to the A/V insert pause mode.
 - If you set the zero set memory at the position on the tape where you want to stop inserting, every time you return to that point, the camera will cancel its A/V inserting and enter stop mode.
7. **Stop playback on the other camcorder.**

Audio Dubbing

You can add sound to the original sound on a prerecorded tape recorded in the SP mode with 12 bit sound. Use the internal or an external microphone. The original sound will not be erased.

For best results, add sound to tapes that have been recorded with this camera in SP mode with 12 bit sound. If there are non-recorded portions on the tape, or portions recorded in LP mode, or with 16 bit or 12 bit, 4-channel sound, dubbing will stop. You cannot dub audio onto a tape recorded with 12 bit and 16 bit sound intermingled.

To connect an external microphone:

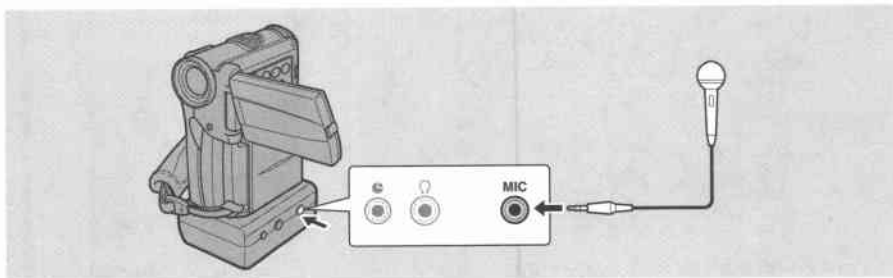

Connect the DU-300 Docking Unit (26) and the optional SA-1 Adapter Bracket (65) in order to use an external microphone.




- When you add sound using the built-in microphone make sure not to connect any cables to the MIC terminal (on the DU-300).
- To use your TV to monitor video, connect the S-video terminal (28) or the A/V terminal (use only the video plug) to your TV. You can monitor the sound with headphones (65).

Preparations

Turn the camera's POWER dial to PLAY (MV3i and MV3i MC: VCR) and load a recorded cassette.



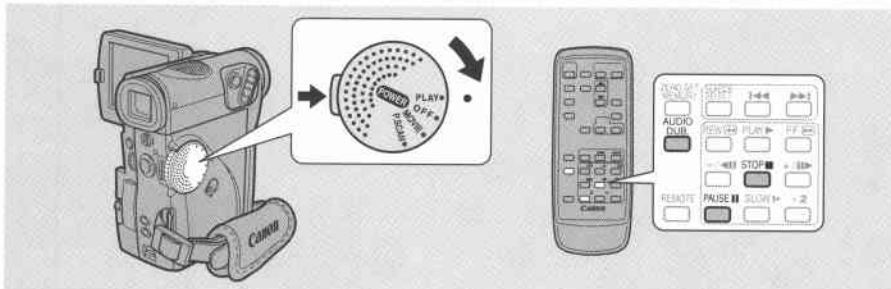

- Make sure the REC/SAVE tab on the cassette has been slid to REC (closed position).

Dubbing



Do not connect/disconnect any cables to/from the camera when dubbing audio or preparing to dub audio.

PLAY (VCR)


1. **Locate the point where you want to start audio dubbing, then press the PAUSE button.**
 - You can use the playback buttons on the body of the camera or the special playback functions on the wireless controller in the same way as in playback mode.
 - The camera becomes set to playback pause mode.
2. **Press AUDIO DUB.**
 - AUDIO DUB. and  appear on the display.
3. **Press the PAUSE button.**
 - Audio dubbing starts.
 - Direct your voice into the microphone.
 -  changes to .
4. **When you get to the point where you want to stop dubbing, press the STOP button.**
 - Audio dubbing stops and AUDIO DUB. disappears from the display.
 - The camera returns to stop mode.
 - You can also set zero set memory ( 79) at the place you want to stop audio dubbing, then every time you return to that position, audio dubbing will cancel.
 - If instead of pressing STOP you press PAUSE, the camera will return to the playback pause mode.



- You can not use the DV terminal while adding sound.
- You might want to adjust the audio mix (□ 90) when playing back a tape with added sound.
- There may be a loss of sound quality if you add sound to a tape recorded on a camcorder other than the MV3/MV3 MC/MV3i/MV3i MC.
- After adding sound 3 or more times to the same place on a tape, there may be some loss in sound quality.



E

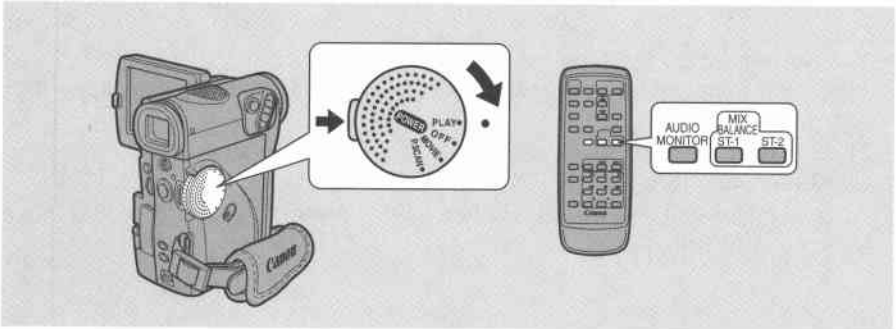

When you play back a tape that was recorded in 12 bit mode, you can set the audio output to play: stereo 1 (the original sound), stereo 2 (any new sound, dubbed to the tape after recording), or mix the balance between the two.

- Audio from the 16-bit mode only contains stereo 1 sound and so you cannot/ do not need to select the audio mix. The same is true for the 12 bit stereo 1 mode, unless new sound has been added post-recording.

PLAY (VCR)

1. Choose the output.

- Press **AUDIO MONITOR** on the wireless controller.
- Starting with the last selected setting, 4 settings appear as you push the button:
 - **STEREO1** for just stereo 1.
 - **STEREO2** for just stereo 2.
 - **MIX/FIXED** for an equal mix of stereo 1 and 2.
 - **MIX/VARI.** (mix variable) for when you want to mix the balance between stereo 1 and 2.
- To simply choose **STEREO1**, **STEREO2** or **MIX/FIXED**, make sure your choice appears on the display.
- If you choose **MIX/VARI.**, you can go on to mix the balance.
- Use the **ST-1/ST-2** keys to mix the balance. A bar showing the mix appears on the screen for 4 seconds.



- When you have chosen the output, **STEREO1**, **STEREO2**, **MIX/FIXED** or **MIX/VARI.** is shown in the top left of the display for a few seconds. If you turn the power off the output is set to **STEREO1**.

Selecting audio output channels



E

When you play back a tape whose audio has been recorded on multiple channels, you can change the output channels of that sound.

PLAY (VCR)

MENU
(33)

▶ VCR SET UP



▶ OUTPUT CH...L/R

1. Load a tape recorded with multiple-channel audio.
2. Open the menu and select **VCR SET UP**. Then select **OUTPUT CH**, set it to the desired setting and close the menu.
 - Refer to the following list.

OUTPUT CH setting	Played back sound	
	Tape recorded with stereo sound	Tape recorded on multiple channels
L/R	L+R channels	main + sub
L/L	L channel only	main only
R/R	R channel only	sub only

Editing


MultiMediaCard Introduction -MV3 MC and MV3i MC only-



E

The MultiMediaCard (MMC), a type of Memory Card, stores and manages still images taken by the camera.

You can do the following with the MultiMediaCard:

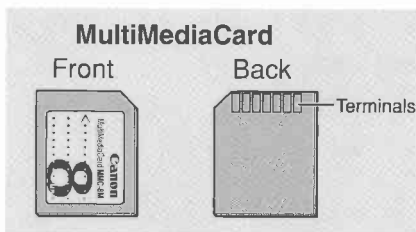- Record still images (97)
- View still images 3 ways: Single (101), Slide show (102), Index (102)
- Select the quality of images recorded on the card (93)
- Protect important images against accidental erasure (103)
- Erase (104) and print mark (111) still images
- Create interesting effects by combining images (106)
- Record a still image from a cassette (99)
- Copy multiple still images automatically to and from a cassette (109, 110)




You can use most of the camera's functions when recording to a MultiMediaCard, such as the various recording programs (53), self-timer (67), shutter speed (70), white balance (73) and other manual adjustments. Available functions are marked with a  or  icon.

- While the camera is recording the still image, >>>> appears red in the display. (It appears white when in mirror mode and on the screen of a connected TV.)
 - While >>>> appears red in the display, do not remove the MultiMediaCard or disconnect the power source. Doing so could result in data damage.
- While the camera is retrieving a still image, <<<< appears green in the display.
 - While <<<< appears green in the display, do not remove the MultiMediaCard. Doing so could result in data damage.

Important

- Inserting or removing the MultiMediaCard without first setting the POWER dial to OFF can result in data damage.
- This camera uses only MultiMediaCards. You cannot use any other types of Memory Cards.

Inserting and removing the MultiMediaCard

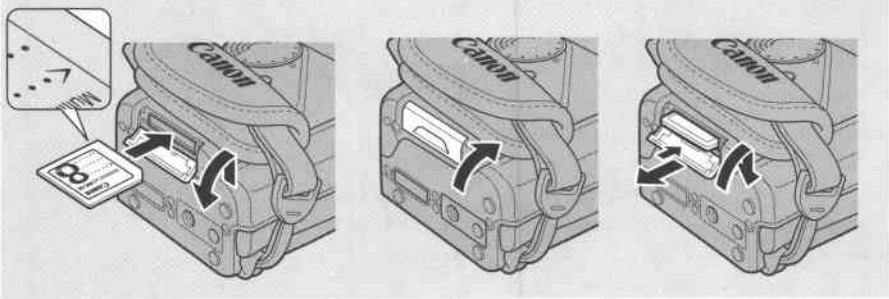

1. Turn the **POWER** dial to **OFF**.
2. Slide the **MultiMediaCard** compartment cover in the direction of the arrow and open.
3. **Insert or remove the MultiMediaCard.**
 - Push the MultiMediaCard all the way in.
 - Remove the MultiMediaCard by pushing the card in and letting it spring out.

Do not attempt to pull the MultiMediaCard out without first pushing it in.

4. **Close the cover.**



- When you set the **POWER** dial to **CARD PLAY**, the last image recorded appears. If there are no images recorded on the MultiMediaCard, **NO IMAGES** appears in the display.
- Do not touch the MultiMediaCard terminals.

Selecting the recording image quality



Select the quality of a still image to be recorded.



MENU

(33)

▶ CARD SET UP

▶ QUALITY.....FINE

Make sure the **POWER** dial lock lever is switched to the ●● position. Open the menu and select **CARD SET UP**. Then select **QUALITY**, set it to **STANDARD** and close the menu.



- Depending on the image you are recording, sometimes there will be no difference in image quality between settings.
- Images are compressed and recorded in the JPEG (Joint Photographic Experts Group) format.
- The number of pixels is 640×480 (VGA) in both FINE and STANDARD modes.

Image quality	Necessary memory per image	Number of images per 8MB MMC*	Use when you want to...
FINE	Approx. 124KB	Approx. 60 images	...save high quality images, print out, etc.
STANDARD	Approx. 70KB	Approx. 105 images	...attach images to Emails, include them in your own home page, etc.

- * These figures are approximate. The actual number you will be able to record varies depending on the images. Remember that the sample images already recorded on the supplied MultiMediaCard are included in the total number.
- The number of images that can still be recorded on a MultiMediaCard may sometimes decrease by 2 images at once.
 - Refer to p. 135 for the MultiMediaCard displays.

File numbers



E


The images you take are automatically assigned file numbers from 0001-9900 and stored in folders of 100 images each. Each folder is numbered from 100 to 998 and recorded on the MultiMediaCard. Sample images have been pre-recorded on the supplied MultiMediaCard, entering folder number 100.

Set the image file numbers so that they reset each time a new MultiMediaCard is inserted, or so that they count up continuously.

1 CONTINUOUS

Numbering is continuous between cards, so that the first file number assigned on a new MultiMediaCard is 1 more than the last file number assigned on the previous MultiMediaCard. When the file numbers are set to CONTINUOUS, each image taken is assigned a different number, avoiding duplication of numbers. This is convenient when you want to manage your images on a PC. We recommend keeping the file numbers set to CONTINUOUS.

Three images are recorded on the card.

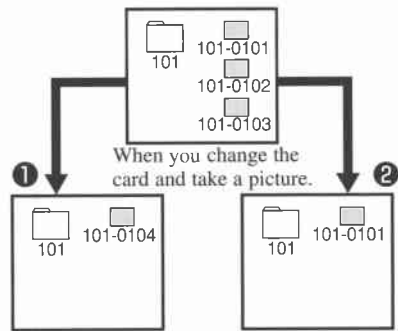

2 RESET

Each time you insert a new MultiMediaCard, the file number resets to its default value (101-0101). If the card already contains files, the next available number is assigned.



MENU

(33)



To change the file numbering, open the menu and select **CARD SET UP**. Then select **FILE NOS.**, set it to **RESET** and close the menu.

Turning the shutter sound off



Makes the sound of a shutter being released when a still image is recorded to a MultiMediaCard.

CARD
REC

MENU

(33)

▶CARD SET UP

▶▶SHTR SOUND.....ON


To turn the shutter sound off, open the menu and select CARD SET UP. Then select SHTR SOUND, set it to OFF and close the menu.

Recording Still Images to a MultiMediaCard



-MV3 MC and MV3i MC only-

E

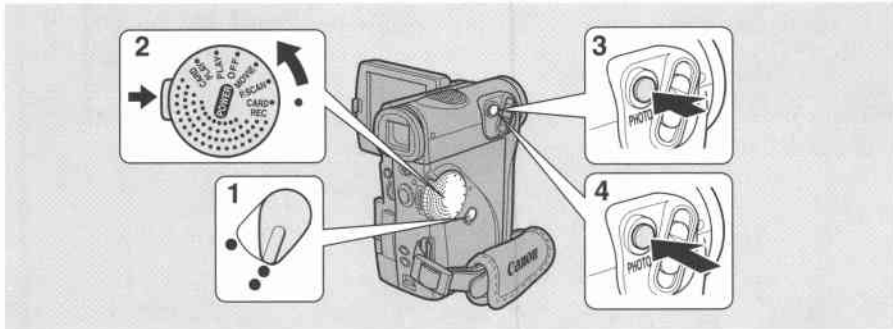

Take still images to a MultiMediaCard. You can also record onto a MultiMediaCard images from a tape in the camera, or images input through the DV in terminal (MV3i MC only).


- Moving pictures cannot be recorded onto a MultiMediaCard.
- MultiMediaCards cannot record audio.

Make sure a MultiMediaCard that has enough memory available is inserted into the camera.

- 1. Set the POWER dial lock lever to the ●● position.**
- 2. Press the button next to the POWER dial and hold, turn the POWER dial to CARD REC.**
 - The number of images that can still be recorded on the MultiMediaCard appears in the display.
 - The camera will turn itself off if you are using a battery and do not operate the camera for more than about 5 minutes. Set the POWER dial to OFF and then back to CARD REC.
- 3. Press the PHOTO button halfway and hold it.**
 - Exposure is locked.
 - During autofocus ● flashes white in the display as the camcorder adjust the focus and it is displayed continuously as a green mark when the camera is ready to take the still image.
- 4. Press the PHOTO button fully down to record the still picture.**
 - ● disappears from the display.
 - The shutter sound (□□96) sounds if you have it turned on.
 - The image appears in the display and is recorded to the MultiMediaCard.
 - While the camera is recording the still image, >>>> appears red in the display. (It appears white when in mirror mode and on the screen of a connected TV.)

Using the MultiMediaCard
(MV3 MC and MV3i MC only)




- To use the self-timer, press the  button before step 3, and then press the PHOTO button fully down. For full details of how to use the self-timer, refer to p. 67.
- The wireless controller's PHOTO button has no half-way setting. Press the button fully and the camera immediately takes the image.


Recording an Image from a Cassette as a Still Image




-MV3 MC and MV3i MC only-

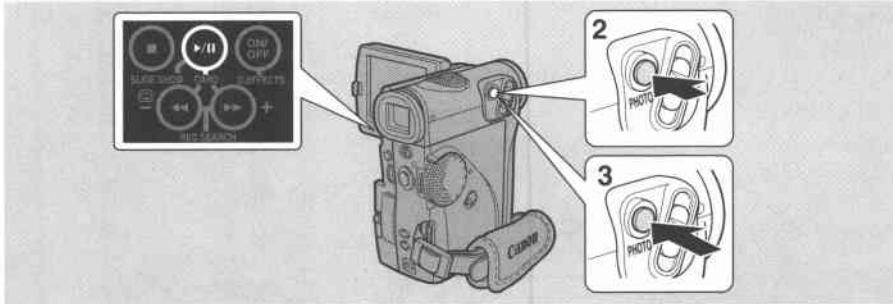

Record an image from a cassette onto a MultiMediaCard. To automatically record multiple still images from a cassette to a MultiMediaCard, refer to “Copying Still Images from a Cassette” on p. 109.

- For highest image quality, we recommend using an image recorded in Progressive Scan mode ( 48).
- The still image's data code will show the date and time it was originally recorded on the cassette.

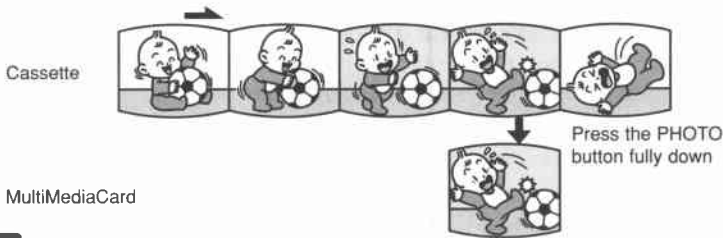

PLAY (VCR)

1. **Play back the cassette.**
2. **When the image you want to record appears in the display, press the PHOTO button halfway down and hold it.**
 - The tape is set to playback pause mode and the number of image that can still be recorded on the MultiMediaCard appears in the display.
 - The display appears to close for an instant as if it were a shutter releasing (except when you are operating the multi-image screen).
3. **Press the PHOTO button fully down to record the image to the MultiMediaCard.**



- You can also set the cassette to playback pause mode in step 1 and record the image with only 1 full press of PHOTO button.
- If you record an image onto a MultiMediaCard that was originally recorded in the 16:9 mode for widescreen TV's, the image will appear to be vertically “squashed” (compressed).
- The shutter sound does not sound in PLAY (MV3i MC: VCR) mode.

Download from www.Somanuals.com. All Manuals Search And Download.

E

Using the MultiMediaCard
(MV3 MC and MV3i MC only)


Recording from Another DV Device as a Still Image

-MV3i MC only-

E

Record images input through the DV in terminal onto the MultiMediaCard as still images.

- The still image's data code will show the date and time it was originally recorded.

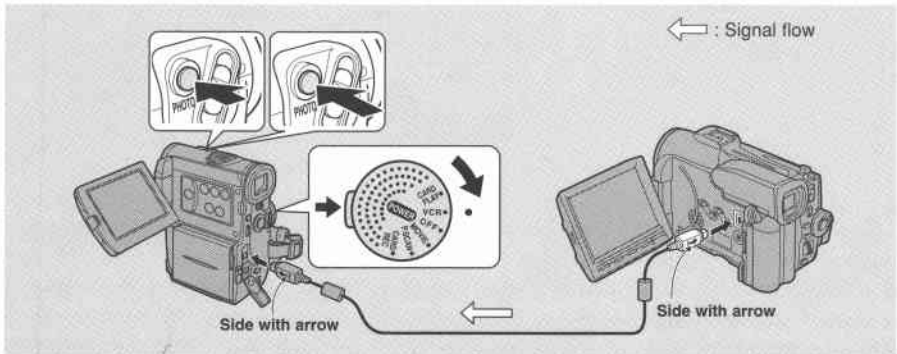

Preparations

- 1. Connect the camera to the other digital device.**
 - Connect the Canon CV-150F DV cable (optional) with the sides of the plugs marked with the arrows facing as shown above.
- 2. Prepare the other device.**
 - Turn on the power and load a recorded cassette.
- 3. Load a MultiMediaCard. Then push the button next to the POWER dial and hold, and turn the POWER dial to VCR.**
 - DV IN appears in the display.
 - If you have a cassette inserted, make sure it is in stop mode.

Recording



- 1. Start playback on the other device.**
- 2. When the image you want to record appears in the display, press the PHOTO button halfway down and hold it.**
 - The image appears as a still image in the display.
 - The number of images that can still be recorded on the MultiMediaCard appears in the display.
- 3. Press the PHOTO button fully down to record the image to the MultiMediaCard.**



- If you record an image onto a MultiMediaCard that was originally recorded in the 16:9 mode for widescreen TV's, the image will appear to be vertically "squashed" (compressed).


- The shutter sound does not sound in VCR mode.

Download from www.Somanuals.com. All Manuals Search And Download.



-MV3 MC and MV3i MC only-

E

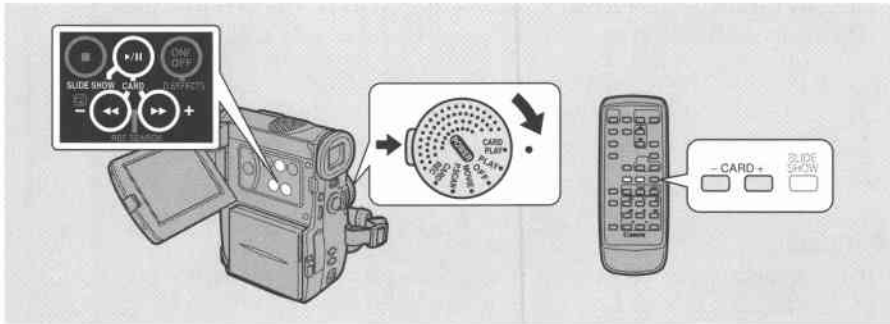

Play back and view still images recorded on a MultiMediaCard. (For details on connecting to a TV, see “Connections for Playback on a TV Screen” on p. 26) The camera may not be able to copy or play, etc., images recorded on a non-Canon camera or enhanced on a PC.

There are 3 ways to view still images:

- Single image
- Slide show: One after the other automatically in order of recording
- Index: Six images at once

Make sure a MultiMediaCard that has images recorded on it is inserted into the camera.

● Single Image

1. **Push the button next to the POWER dial and hold, turn the POWER dial to CARD PLAY.**
 - The last image recorded appears in the display.
2. **Search for the desired still image by pressing the CARD +/- buttons.**
 - Press + to view the next image and – to view the previous image.
 - Pressing + at the last image will take you to the first image. Pressing – at the first image will take you to the last image.

Using the MultiMediaCard
(MV3 MC and MV3i MC only)

● Slide Show

With an image in the display, press the SLIDE SHOW button.


- The images play back one after the other for 5 seconds each.

To stop the slide show, press the SLIDE SHOW button.

- The slide show starts or stops each time you press the SLIDE SHOW button.
- The slide show stops with the last image appearing in the display.

● Index

Up to 6 images appear at once so you can search quickly for an image.

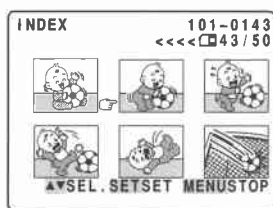


CARD
PLAY

MENU
(33)

▶CARD OPER.

▶▶INDEX


1. **Open the menu and select CARD OPER. from the menu.**
2. **Select INDEX.**
 - Up to 6 images appear in the display.
3. **Move the  mark to the image you want to view.**
 - Turn the SELECT dial downwards to go to the previous image and upwards to go to the next image.
 - Turning the dial upwards at the last image will take you to the next image. Turning the dial downwards at the first image will take you to the previous image.
 - Jump to the next/previous index screen with the CARD +/- buttons.
4. **Press the SELECT dial in.**
 - The image you have marked fills the whole display.

Preventing Accidental Erasure (Protect)



-MV3 MC and MV3i MC only-

E

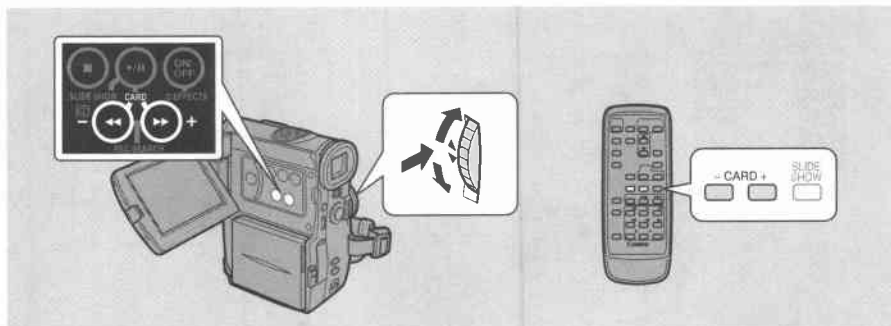

Select important images and protect them from accidental erasure. If a MultiMediaCard is formatted, however, all images, including protected images, will be permanently erased (112).

- The pre-recorded sample images provided on the MultiMediaCard are already protected.

CARD
PLAY

MENU
(33)



Make sure a MultiMediaCard that has images recorded on it is inserted into the camera.

- 1. Open the menu and select CARD OPER.**
- 2. Select PROTECT O-n.**
 - Up to 6 images appear in the display.
- 3. Move the mark to the image you want to protect.**
 - Turning the SELECT dial downwards takes you to the previous image and upwards takes you to the next image.
 - Turning the dial upwards at the last image will take you to the next image. Turning the dial downwards at the first image will take you to the previous image.
 - Jump to the next/previous index screen with the CARD +/- buttons.
- 4. Press the SELECT dial in.**
 - The O-n protect mark appears on the image.
 - Now you are unable to erase this image.
- 5. Close the menu.**



- To cancel image protection, move the mark to the protected image and press the SELECT dial in. The O-n protect mark disappears.


Using the MultiMediaCard
(MV3 MC and MV3i MC only)

Erasing Still Images



-MV3 MC and MV3i MC only-

E

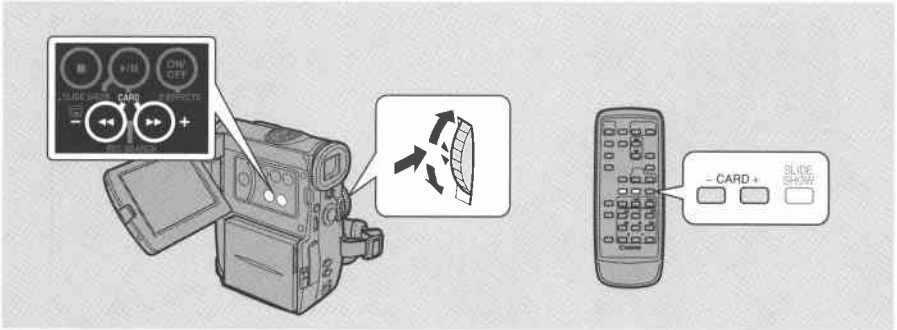

Erase images singly or all at once.

- You cannot erase protected images. Cancel image protection (103) first in order to erase an image.
- Erase images with caution. Once an image has been erased it cannot be restored.

CARD
PLAY

MENU

(33)

►CARD OPER.

►IMAGE ERASE

Make sure a MultiMediaCard that has images recorded on it is inserted into the camera.

1. Move to the image you want to erase with the **CARD +/-** buttons.
2. Open the menu and select **CARD OPER.**
3. Select **IMAGE ERASE.**
 - CANCEL, SINGLE and ALL settings appear.
 - To cancel erasing, select CANCEL and close the menu.

To erase images one at a time

4. Select **SINGLE.**
 - ERASE THIS IMAGE? NO YES appears in the display.
5. Select **YES.**
 - The image erases and the previous image appears for erasing.
 - If the image you are trying to erase is a protected image, YES appears in purple and is unselectable.
 - If you select NO, you return to step 4.
6. Close the menu.

To erase all images on the MultiMediaCard at once

4. Select ALL.

- ERASE ALL IMAGES? [EXCEPT FOR  IMAGES] NO YES appears in the display.

5. Select YES.

- All images except the protected ones are erased.
- If you select NO, you return to step 3.

6. Close the menu.



-MV3 MC and MV3i MC only-

E

Liven up your productions by superimposing one image on top of the other. Combine 2 still images or a still image and a moving image. Choose a still image from the MultiMediaCard, either one of the pre-recorded sample images (📷 114) or one you have recorded yourself, then combine it with the currently recording image, moving or still.

Availability of Card Mix by mode

	MOVIE	P.SCAN	PHOTO	PLAY (VCR)	CARD REC	CARD PLAY
CARD MIX	○	○	○	×	×	×

Select from 3 types of Card Mix effects:

CARD CHROMA (Card chroma key)- 8 pre-recorded sample images

The currently recording image appears in place of the blue area of a pre-recorded still image such as a picture frame. When recording your own still image for overlapping, make sure to record the area in which you want the new image to appear blue, with a blue curtain as a background, for example. Adjust the mix level in the blue area of the pre-recorded image.

Image being recorded by the camera



Still image



CARD LUMI (Card luminance key)- 5 pre-recorded sample images

The currently recording image appears in place of the light area of a still picture such as a hand-written illustration or title. Make your own by drawing or writing on a white piece of paper. Adjust the mix level in the light area of the still image.

Image being recorded by the camera



Still image



CAM. CHROMA (Camera chroma key)- 2 pre-recorded sample images
Superimpose the currently recording image on top of a still image, which becomes its background. Shoot the subject of the currently recording image against a blue background, such as a blue curtain. The original still image will appear in place of the blue area. Adjust the mix level in the blue area.

Image being recorded
by the camera



+

Still image




→



Mix level

The mix level bar appears. Adjust the mix level using the – and + at the ends of the bar as guides.

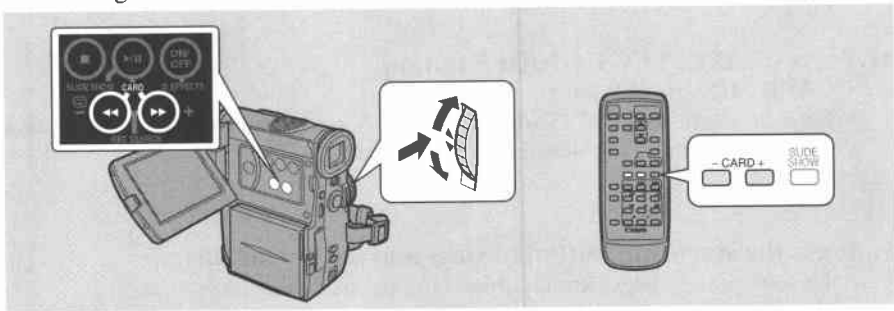

MOVIE

P.SCAN

MENU

(33)

▶ D. EFFECTS

▶ D.E.SELECT • CARD MIX

▶ MIX TYPE

▶ MIX LEVEL... ———+

Make sure a MultiMediaCard that has images recorded on it and a cassette have been inserted into the camera.

Make sure the program selector is set to **P**.

Select

1. Open the menu and select **D. EFFECTS**.
2. Select **D.E.SELECT**.
3. Select **CARD MIX**.
 - You return to the D.EFFECTS submenu.
4. Select **→CARD MIX again**.

Download from www.Somanuals.com. All Manuals Search And Download.

5. **Press the CARD +/- buttons to select the still image to be combined.**
 - Your currently recording image is combined with the pre-recorded still image.
6. **Select MIX TYPE.**
 - CARD CHROMA, CARD LUMI., CAM. CHROMA settings appear.
7. **Select the desired setting.**
8. **Select MIX LEVEL.**
9. **Adjust the mix level.**
 - Turning the SELECT dial upwards adjusts to the right and turning downwards adjusts to the left.
10. **Close the menu.**
 - CARD MIX flashes in the display.



On/Off

11. **Press the D.EFFECT ON/OFF button.**
 - CARD MIX stops flashing.
 - Each time you press the ON/OFF button, your selection is activated (display lights continuously) or deactivated (display flashes).



For a moving image

1. **Press the start/stop button to start and stop recording.**
 - The combined images are recorded onto the cassette.

For a still image

1. **Press the PHOTO button halfway down and hold it.**
 -  flashes white in the display as the camcorder adjusts the focus and it is displayed continuously as a green mark when the camera is ready to take the image.
2. **Press the PHOTO button fully down to record the image to the cassette.**
 -  disappears from the display.
 - The combined images are recorded onto the cassette for approximately 6 seconds.




- You can not use Card Mix in the Low Light recording program (in MOVIE and P.SCAN modes).
- If you change the position of the POWER dial or move the program selector from  to  Easy Recording mode, select your still image for Card Mix again.
- When setting Card Mix, you must carry out steps 1 to 5.

Copying Still Images from a Cassette



-MV3 MC and MV3i MC only-

E

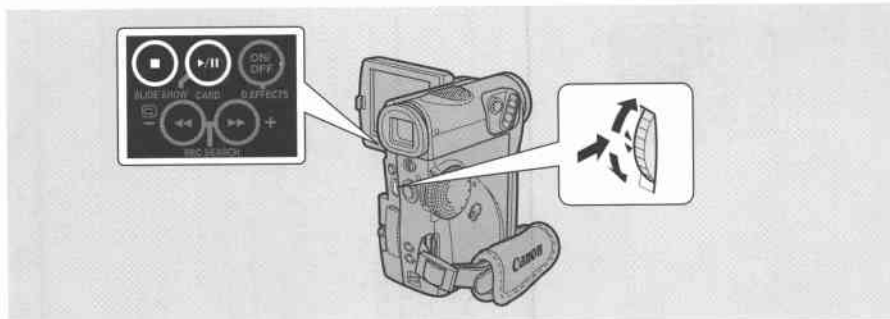

Copies multiple still images from a tape to the MultiMediaCard, using the Photo Search function.

- The still images' data codes will reflect the date and time the copies are made.



MENU
(33)



Make sure a MultiMediaCard that has enough memory available and a recorded cassette have been inserted into the camera.

- 1. Locate the first still image on the cassette that you want to copy and stop the cassette at a point before that image.**
 - All the still images on the cassette after that point will be copied onto the MultiMediaCard.
 - If you want to copy all the images on a cassette, rewind the cassette to the beginning.
- 2. Open the menu and select CARD OPER.**
- 3. Select COPY [MC] -> [MC] .**
- 4. Select EXECUTE.**
 - Select CANCEL to stop copying.
 - Cassette and card information appear in the display and copying starts.
 - NOW COPYING [MC] -> [MC] appears in the display.
 - The camera automatically performs the Photo Search function to locate still images and copying starts. The currently copying image appears in the display.
 - Copying stops when the cassette is finished or the MultiMediaCard is full. When the MultiMediaCard is full, CARD FULL will appear in the display.
- 5. Press the stop button when your desired images have finished copying.**


Using the MultiMediaCard
(MV3 MC and MV3i MC only)

Copying MMC Still Images to a Cassette



-MV3 MC and MV3i MC only-

E

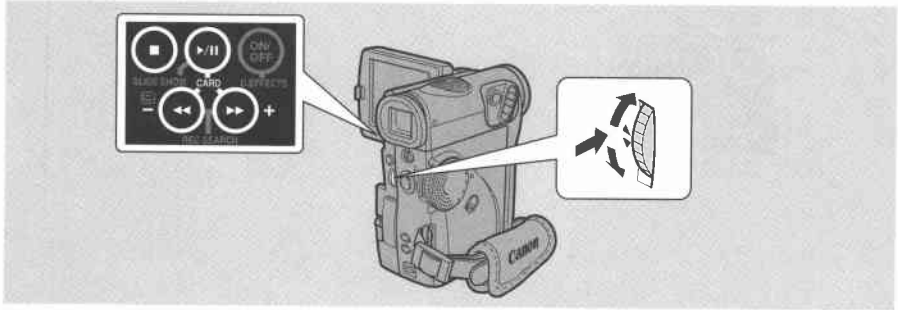

Copies multiple still images from the MultiMediaCard to a cassette.

- The still images' data codes will reflect the date and time the copies are made.

MENU

(33)

▶ CARD OPER.



▶ COPY [→]

Make sure a MultiMediaCard that has images recorded on it and a cassette that has enough recordable space have been inserted into the camera.

PLAY ()

1. Locate the point on the cassette where you want to start copying and set it to stop.

CARD
PLAY

2. Select the first image you want to copy by using the CARD +/- buttons.

- Still images on the MultiMediaCard including and after that image will be copied onto the cassette.
- If you want to copy all the still images on the MultiMediaCard, select the first image.

3. Open the menu and select CARD OPER.

4. Select COPY [→] .

5. Select EXECUTE.


- Select CANCEL to stop copying.
- Cassette and card information appear in the display and copying starts.
- NOW COPYING [→] appears in the display.
- Each image is copied for about 6 seconds on the cassette.
- Copying stops when all the images have been copied or the tape is full.


6. Press the stop button when your desired images have finished copying.

Marking a Still Image for Printing (Print Mark)



-MV3 MC and MV3i MC only-

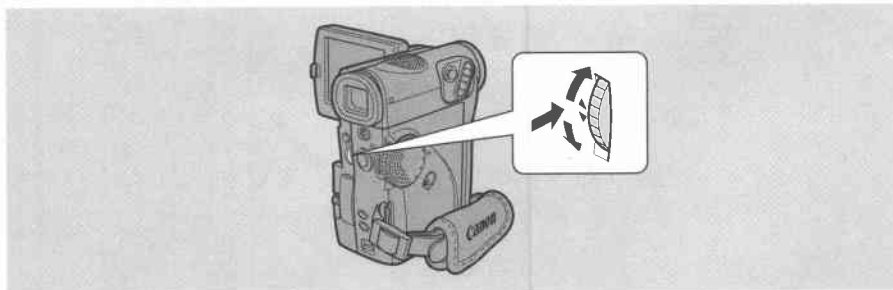

An image on a MultiMediaCard must be marked before it can be printed. The camera supports the  DPOF (Digital Print Order Format) print format. Images can be automatically printed on a DPOF-supporting Canon printer. Up to 50 images per MultiMediaCard can be print marked.

CARD
PLAY

MENU

( 33)

▶ CARD OPER.

▶▶ PRINT MARK 

Make sure a MultiMediaCard that has images recorded on it has been inserted into the camera.

1. Open the menu and select **CARD OPER.**

2. Select **PRINT MARK** .

- Up to 6 images appear in the display.

3. Move to the image you want to mark.



- Turning the SELECT dial downwards takes you to the previous image and upwards takes you to the next image.
- Turning the dial upwards at the last image will take you to the next image. Turning the dial downwards at the first image will take you to the previous image.
- Jump to the next/previous index screen with the CARD +/- buttons.

4. Press the **SELECT** dial in.

- The  print mark appears next to the image.

5. Close the menu.



- To cancel a print mark, move  to the print-marked image and press the SELECT dial in. The  print mark disappears.
- If there are a large number of images recorded on the MultiMediaCard, it may take time for a print mark to appear on an image.


Using the MultiMediaCard
(MV3 MC and MV3i MC only)

Formatting a MultiMediaCard



E

-MV3 MC and MV3i MC only-

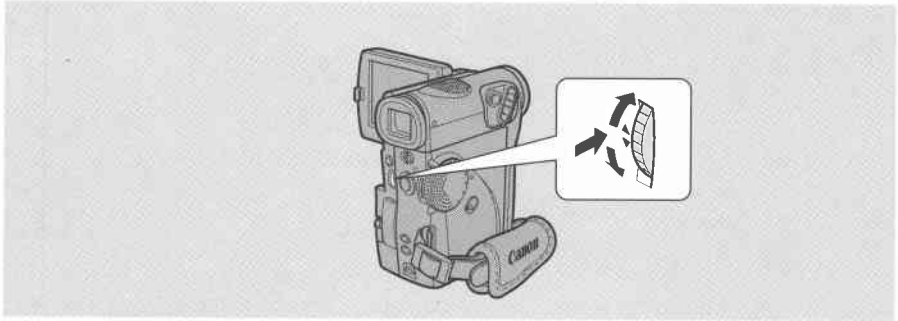

Format new MultiMediaCards, if you get the message **CARD ERROR**, or to permanently and quickly erase all the images on a MultiMediaCard, including protected images (this includes the pre-recorded card mix sample images). The MultiMediaCard supplied with this camera has already been formatted for you.

- Be cautious when formatting recorded MultiMediaCards. All images will be permanently erased.

CARD
PLAY

MENU

(33)

▶CARD OPER.



▶FORMAT

Make sure a MultiMediaCard is inserted into the camera.

1. **Open the menu and select CARD OPER.**
2. **Select FORMAT.**
3. **Select EXECUTE.**
 - Select **CANCEL** to cancel formatting.
 - **FORMAT THIS CARD? NO YES** appears to confirm.
4. **Select YES.**
 - Formatting starts and **NOW FORMATTING** appears in the display.
 - If you select **NO**, you return to step 3.
5. **Close the menu.**

Using the MultiMediaCard
(MV3 MC and MV3i MC only)

Other Information and Precautions

The camera formats MultiMediaCards in DCF (Design rule for Camera File system).

Images recorded on a MultiMediaCard with this camera can be transferred to a PC with the use of the following products:

PC Card Adapter: Holds a MultiMediaCard then inserts into the PC card slot found on most types of laptop PCs.

MultiMediaCard Reader: Connects to a PC, then accepts a MultiMediaCard.

FD Adapter: Holds a MultiMediaCard then inserts into a PC's floppy disk drive.

If you need extra MultiMediaCards in addition to the supplied one, use cards made by SanDisk Corporation.

If you mistakenly erase the card mix sample images provided on the MultiMediaCard, they can be downloaded from the following home pages:*

<http://www.canon-europa.com/products/products.html>

<http://www.canon-asia.com/>

<http://www.canon.com.au>

* You will need a PC Card Adapter or MultiMediaCard Reader to be able to download to a MultiMediaCard.

MultiMediaCard operating precautions

- If you purchase additional MultiMediaCards, format them with the camera, not a PC or other device. There have been cases where MultiMediaCards formatted with a PC or other device do not function properly.
- We recommend saving backups of MultiMediaCard images on your PC's hard drive or other external memory device. Image data may be damaged or lost due to a defect in a MultiMediaCard, or if a MultiMediaCard is exposed to static electricity. Contents of a MultiMediaCard can not be compensated for should data become damaged or lost.
- Do not remove the power source or the MultiMediaCard while the camera is accessing (recording to, reading, erasing files from or formatting) the MultiMediaCard card.
- Do not use MultiMediaCards in places subject to strong magnetic fields.
- Do not disassemble MultiMediaCards.
- Do not bend or drop MultiMediaCards, or expose them to strong vibrations or external shocks.
- Do not get MultiMediaCards wet.
- Do not remove the MultiMediaCard's label or affix other labels. Affix labels to the MultiMediaCard's case.

- Do not leave MultiMediaCards in places subject to high temperature or high humidity.
- Moving a MultiMediaCard rapidly between hot and cold temperatures may cause condensation to form on it, leading to malfunctions. Avoid this problem by placing the MultiMediaCard in a plastic bag and letting it slowly adjust to temperature changes before removing it from the bag. If condensation should occur, maintain the MultiMediaCard at a constant temperature and let the moisture evaporate naturally.
- Do not touch the MultiMediaCard's terminals or let dust or dirt come in contact with the terminals. Store and carry MultiMediaCards in their case to protect the terminal area.
- There is only one correct way to insert MultiMediaCards into the camera. Do not forcefully insert the MultiMediaCards backwards or upside down. This could damage the MultiMediaCard or the camera.
- The pre-recorded sample images on the MultiMediaCard included with this camera are intended solely for the personal enjoyment gained from combining them with personal videos taken with this camera. Do not use the pre-recorded sample images for any other purpose.

PhotoEssentials - Royalty Free Stock Photography



The PhotoEssentials suite of royalty-free images on CD-ROM features premium quality assignment photography and is ideally suited for use in advertising, brochures, reports, multimedia, websites, books, packaging and more.

For more information, please visit their website www.photoessentials.com


Sample images

- The following are the sample images that have been pre-recorded on the included MultiMediaCard. There are a total of 15 images: 8 Card chroma key images, 5 Card luminance key images and 2 Camera chroma key images.

Card chroma key

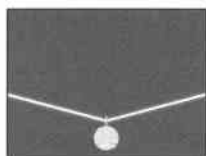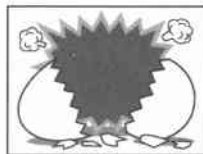

Card luminance key

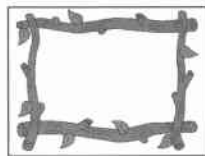

Camera chroma key



MultiMediaCard Specifications

Capacity	8 MB
Interface	MultiMediaCard standard
Operating temperature range	0°C–40°C (32°F–140°F)
Dimensions	32 × 24 × 1.4 mm
Weight	1.5 g


Weight and dimensions are approximate.
 Errors and omissions excepted.
 Subject to change without notice.

Preparing the Camera

E


Adjust the viewfinder

- Turn the POWER dial to MOVIE mode. Extend the viewfinder straight out, then adjust the viewfinder focusing lever to suit your eyesight.
- The viewfinder extends straight out for comfortable viewing. Store the camera with the viewfinder flush with the body of the camera.
- To view with the viewfinder, make sure the LCD panel is either turned so that the subject can monitor viewing, or totally closed with the screen facing inwards.

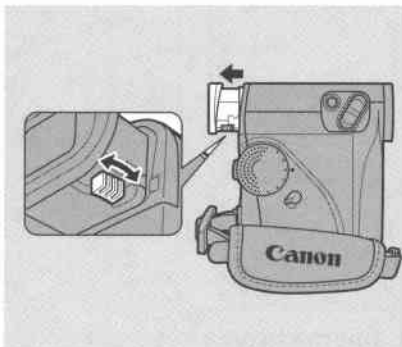


Prepare the lens cap

- Attach the cord to the lens cap, and pass the grip belt through the loop on the cord.
- Hook the lens cap on to the grip belt while you are recording, and place it over the lens when you have finished.

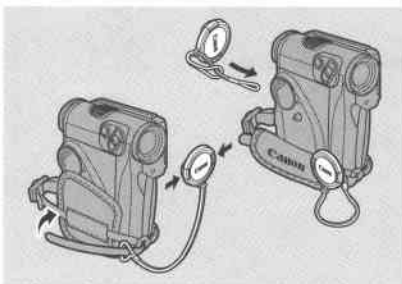

Fasten the grip belt

- Release the Velcro fastening and hold the camera with your right hand while you adjust the belt with your left. Your index finger should reach the zoom control and photo button, and your thumb should reach the start/stop button comfortably.
- When holding the camera, be sure to avoid touching the lens and the microphone.

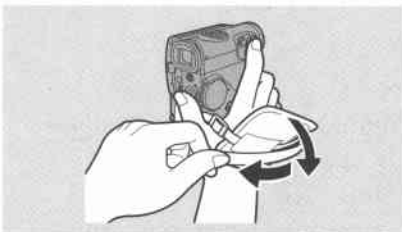

Be careful not to leave the viewfinder exposed to bright sunlight, or it will melt. (The light is concentrated by the viewfinder lens.) When not using the viewfinder, return it to its retracted position.

Notes on Using the Batteries

E

Charging and recording times

- These times vary — the safest policy is always to have 2 or 3 times as many battery packs as you think you will need.
- You will get more recording time if you turn the camera off between shots, instead of leaving it in record pause mode.

Battery pack	BP-406	BP-422 (optional)
Time needed for full recharge	1 hr. 10 min.	1 hr. 50 min.
Maximum recording time	Using the viewfinder: 55 min. Using the LCD screen: 45 min.	3 hr. 20 min. 2 hr. 45 min.

- Recording time will be shorter than usual at low temperatures. You can use the battery pack between 0° to 40°C (32° and 104°F), but it works best between 10° to 30°C (50° and 86°F).
- If the battery pack starts to give you much less recording time than usual, it has reached the end of its life and must be replaced.





- These figures show how long you can view playback with the LCD, after attaching a fully-charged battery pack. Playback time will be shortened at low temperatures.

Battery pack	Playback time (using the LCD screen)
BP-406	55 min.
BP-422	3 hr. 20 min.

How much power is left?

The indicator in the display shows you approximately how much charge the battery pack has left:

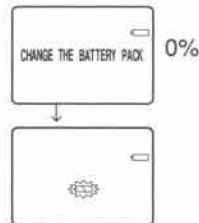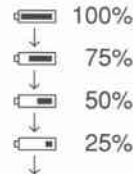

- “CHANGE THE BATTERY PACK” appears in the display for 4 seconds when the power is completely exhausted. The empty battery mark then appears and starts to flash. The power indicator light also flashes.
- The indicator is not constant — different levels will be shown when you subject the battery pack and camcorder to different conditions.


When to recharge

You can recharge a lithium ion battery pack whenever it is convenient. Unlike a conventional battery pack, it does not have to be fully discharged first. However, as the battery pack will naturally discharge itself over time, it is best to charge it the same day you plan to use it, or the day before.

Taking care of the battery pack

Always attach the terminal cover.

- Do not allow any metal objects to touch the terminals, as this can cause a short circuit and damage the battery pack. Attach the terminal cover whenever the battery pack is not being used.

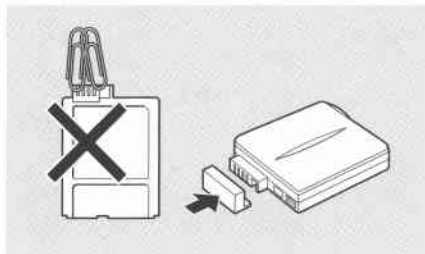

Keep the terminals clean.


- Make sure no foreign objects get between the terminals as this can cause a short circuit and damage the battery pack. Attach the terminal cover whenever the battery pack is not being used.


Storing the battery pack

- If you do not use a battery pack for a period of more than a few months any remaining charge may cause damage to the battery pack, and reduce usage time. To prevent damage therefore, aim to use a battery pack's complete charge before storage. See the optional battery pack's instructions for further details.

Installing the backup battery

Open the cassette compartment cover. The cassette compartment will open automatically. If necessary, close it to give yourself more room to install the backup battery. Insert the CR1616 lithium battery as far as it will go with the + side facing outwards. Make sure the cassette compartment is closed and close the cassette compartment cover.

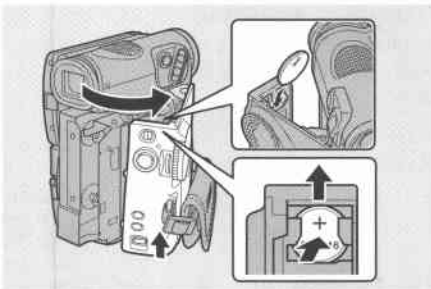

This backup battery allows the camera to remember the date and time and other settings when main power source is removed. It has a life span of about a year. When it needs replacing (or if it has not been installed), the  mark flashes in the display. Press the old battery and slide it up to remove.

DANGER!

Treat the battery pack with care.

- Keep it away from fire (or it might explode).
- Do not expose the battery pack to temperatures greater than 60°C (140°F). Do not leave it near a heater, or inside a car in hot weather, for example.
- Do not try to disassemble or modify it.
- Do not drop or knock it.
- Do not get it wet.

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C (212°F) or incinerate.
- Replace the battery with a with a CR1616, made by one of the following companies: Panasonic, Hitachi Maxell, Sony, Toshiba, Varta, Renata. Use of another battery may present a risk of fire or explosion.
- The used battery should be returned to the supplier for safe disposal.

Cautions:


- Do not pick up the battery using tweezers or other metal tools — this will cause a short circuit.
- Wipe the battery with a clean, dry cloth to ensure proper contact.
- Keep the battery pack out of reach of children — if it is swallowed, contact a physician immediately, as the battery case may break down and the battery fluids damage the stomach and intestines.
- Do not disassemble, heat or immerse the battery in water, to avoid the risk of explosion.

Cautions

Avoid high temperatures and high humidity.

- Do not leave the camera inside a car in hot weather, for example.
- Be careful of heat radiating from video lighting equipment.
- Do not take the camera into a humid room.

Avoid sudden changes in temperature.

- If you take the camera from a cold place to a warm place, condensation may form on the lens and internal parts ( 123).

Do not point the lens or viewfinder at strong light sources.

- Never point it at the sun, and do not leave it aimed at a bright subject.
- Be especially careful when leaving the camera on a tripod.

Avoid magnetic or electric fields.

- Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.

Do not expose the camera to water.

- Cover the camera when you are recording in rain or mist.
- There is a risk of electric shock if water gets inside the camera — contact qualified service personnel as soon as possible.

Protect the lens.

- Sand and dust can damage the lens — be especially careful on windy days.

Handle the camera gently.

- Vibration or shock can cause damage.
- Do not use the viewfinder or LCD panel as a carrying handle.

Do not disassemble the camera.

- This is very dangerous as there is a risk of electric shock — if the camera does not function properly, take it to qualified service personnel.

Storage

If you do not intend to use the camera for some time, store it in an area which is free of dust and moisture, and where the temperature is no higher than 30°C (86°F). After storage, check each part and function of your camera to make sure everything is still working properly.




- These cautions also apply to accessories such as battery packs and cassettes.

Maintenance

Viewfinder

- Clean the viewfinder screen using a cotton swab. First, pull the viewfinder out until it stops. Then, press and hold the finder release button with a sharp object and pull the viewfinder all the way out. To reattach the viewfinder, first position the base horizontally and align it with the viewfinder's base. Then press it until it clicks back into place. Don't touch anyplace other than the glass screen.
- The viewfinder screen scratches easily. Take care when cleaning.

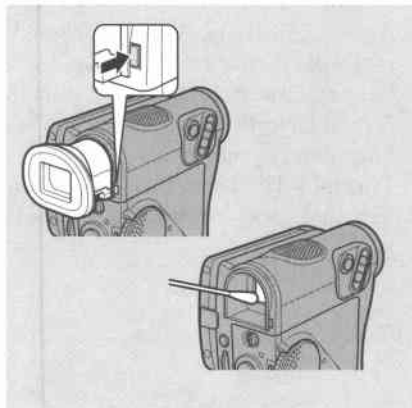

LCD

- Clean the LCD screen using a commercially available cleaning cloth for glasses.
- Where there is a big change in temperature, moisture may form on the surface of the screen. Wipe clean with a soft, dry cloth.
- At low temperatures the display may appear to be much darker than usual. This is not a fault, and as the screen warms up the display will return to normal.

Camera body and lens

- Use a soft, dry cloth to clean the camera body or lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

Video heads

- When mosaic-like noise appears on the playback picture, the video heads may be dirty. When the video heads are badly contaminated, the camera may show a blank blue screen or a warning.
- For the best picture possible, after using the camera for approximately 20 hours, clean the video heads using Canon's DVM-CL Digital Video Head Cleaning Cassette. If the "noise" remains, repeat the cleaning (up to maximum of 5 times).
- Do not use a wet-type cleaning cassette, as this can cause damage.



Using the camera abroad

Power sources

- You can use the compact power adapter to operate your camera and charge battery packs in any country where the electricity supply is between 100 and 240 V AC, 50/60 Hz. Contact your Canon dealer for information about plug adapters for overseas use.

TV playback


- Although you can always play back your recordings on the LCD screen, your camera can only be connected to TVs which use its PAL system. This TV system is used in the following countries:
Algeria, Australia, Austria, Bangladesh, Belgium, Brunei, China, Denmark, Finland, Germany, HongKong, Iceland, India, Indonesia, Ireland, Italy, Jordan, Kenya, Kuwait, Liberia, Malaysia, Malta, Mozambique, the Netherlands, New Zealand, North Korea, Norway, Oman, Pakistan, Portugal, Qatar, Sierra Leone, Singapore, South Africa, Spain, Sri Lanka, Swaziland, Sweden, Switzerland, Tanzania, Thailand, Turkey, Uganda, United Arab Emirates, United Kingdom, Yemen, former Yugoslavia, Zambia.

Condensation

E

Condensation may form on the camera when it is moved from a cold place to a warm place. Using the camera while condensation is present can damage both the tape and the camera.


Condensation may become a problem:

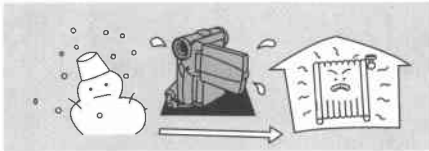


When you take the camera from a cold place to a warm room



When a cold room is heated rapidly

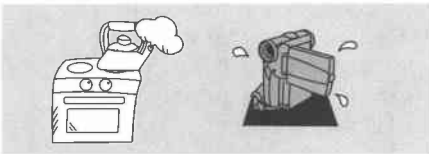

When the camera is left in a humid room

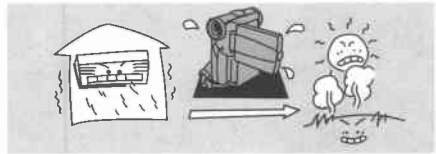



When the camera is taken from an air-conditioned room to a warm, humid place

Protecting the camera from condensation

- Before you take the camera to a warm or humid place where condensation is likely to be a problem, unload the cassette and put the camera in a plastic bag. Wait until the camera reaches room temperature before you take it out of the bag.

What happens when condensation is detected

- “CONDENSATION HAS BEEN DETECTED” is displayed for approximately four seconds. Then, the power indicator flashes and the  mark flashes in the display. If there is a cassette in the camera, it stops automatically and “REMOVE THE CASSETTE” is displayed for approximately 4 seconds and then  flashes in the display. If you have the beep turned on, it will sound.
- The camera may not detect the condensation immediately — the condensation warning may not start flashing for 10 to 15 minutes.
- You cannot load a cassette when condensation is detected.

What you should do

- Remove the cassette, leave the cassette compartment open, and turn the camera off.
- Leave it in a dry place until the condensation evaporates. After the condensation warning stops flashing, wait at least another hour before trying to use the camera.

Troubleshooting

E

Refer to this checklist first if you have any problems with your camcorder. Possible explanations are given for each problem on the list — turn to the page numbers in parentheses for more information.

Make sure that the camera is properly connected if you are using it with a TV or VCR. Consult your dealer or service outlet if problems persist.

Recording/Playback

Problem

❑ Nothing happens when I press the buttons.

❑ The camera turned itself off.

❑ The cassette compartment stopped mid-operation while loading/unloading a cassette.

❑ The start/stop button doesn't work.

❑ There's no picture in the display.

❑ There's a blank blue screen in the display.

❑ The camera won't focus.

Cause and/or what to do about it

- The POWER dial is not set to the appropriate mode (□ 14, 22).
- The cassette is not loaded or is set for erasure prevention (□ 12-13).
- The cassette has reached the end.
- The power source is not properly connected, or the battery pack is exhausted or not properly attached (□ 9-11, 117).
- The function cannot be used in that recording program (□ 53).
- The camera was in record pause mode for more than about 5 minutes (□ 14, 97).
- The battery pack is exhausted (□ 9-11, 117).
- The battery pack's power is exhausted. Recharge or change to a new battery pack (□ 10).
- The cassette is not loaded or is set for erasure prevention (□ 12-13).
- The cassette has reached the end.
- The POWER dial is not set to the appropriate mode (□ 14, 97).
- You are attempting to play back or record copyright protected material (□ 83).
- The video heads are badly contaminated (□ 121).
- The camera is on manual focus (□ 72).
- The viewfinder lens needs adjusting (□ 116).
- The lens is dirty (□ 121).



- Some subjects are not suitable for autofocus. In these situations, you will often get better results using manual focus (72). Focus on something which is about the same distance away, lock the focus, and then point the camera at your original, hard-to-focus subject.



Horizontal stripes



Many subjects at different distances



Behind glass



Without much contrast (e.g. a white wall)

Reflective surfaces
(e.g. shiny car surfaces)

Fast moving objects



Slanted subjects



Dark subjects



Night scenes

Recording/Playback (Contd.)

Problem

- ❓ **Some/all of the digital effects don't work.**
- ❓ **The ► (play) button doesn't work.**
- ❓ **There's a bright stripe on the screen.**



Cause and/or what to do about it

- There are a number of restrictions on using the digital effects (57-64).
- The POWER dial is not set to PLAY (MV3i and MV3i MC: VCR) (22).
- The cassette is not loaded (12).
- The cassette has reached the end.
- When recording in dark places a bright light in the scene may cause a vertical light bar ("smear") to appear. This is a normal feature of camcorders.

- ❓ **The playback picture is rough (with mosaic-like noise).**
- ❓ **There's no picture on the TV screen, even though the tape is moving.**
- ❓ **There's no sound coming from the speaker during playback.**
- The video heads need cleaning (□ 121).
- The video heads need cleaning (□ 121).
- The TV/VIDEO selector on the TV isn't set to VIDEO (□ 26).
- The speaker has been turned off with the SELECT dial (□ 25).
- Headphones are being used.

MultiMediaCard operations MV3 MC and MV3i MC only

Problem

- ❓ **The MultiMediaCard will not insert.**
- ❓ **The □ mark flashes red in the display even though a MultiMediaCard has been inserted.**
- ❓ **Nothing happens when I press the buttons.**

Cause and/or what to do about it

- It is not turned the right way (□ 93). Turn it the right way and try inserting again.
- Turn the camera's power off and back on again and remove and reinsert the card if necessary.
- The POWER dial is not set to CARD REC or CARD PLAY (□ 97, 101).
- The MultiMediaCard is not inserted (□ 93).
- The MultiMediaCard is full. Erase images (□ 104) or insert a new MultiMediaCard.
- The power source is not properly connected (□ 9), or the battery pack is exhausted or not properly attached (□ 10).
- The function can not be used in that recording program (□ 53).

? The PHOTO button doesn't work.

- The MultiMediaCard is not loaded (□ 93).
- The MultiMediaCard is full. Erase images (□ 104) or insert a new MultiMediaCard.
- You have reached the maximum file number. Set the file numbering to RESET through the menu (□ 95) and insert a new MultiMediaCard.
- You are using an unformatted MultiMediaCard. Format the card (□ 112).

? The image cannot be erased.

- The image is protected (□ 103).

Miscellaneous**Problem****? The wireless controller doesn't work.****Cause and/or what to do about it**

- The remote sensor mode is set to OFF (OFF) in the menu (□ 43).
- The remote sensor modes of the wireless controller and the camera itself are different (□ 43).
- The batteries are dead or not inserted.

? The power indicator is flashing.

- Check the screen displays (□ 132).

? The camera malfunctions.

- External interference may cause the camera's microprocessor to malfunction temporarily. If random letters appear in the display or if normal operation is interrupted, remove and then replace the power source.

? The DV cable is connected correctly, but there's nothing in the display.


- Remove the cable and then reconnect it or turn the power off and back on again.

? The camera becomes warm during use.

- This is not a malfunction.

The MV3/MV3 MC/MV3i/MV3i MC System Diagram (Availability differs from area to area)

E

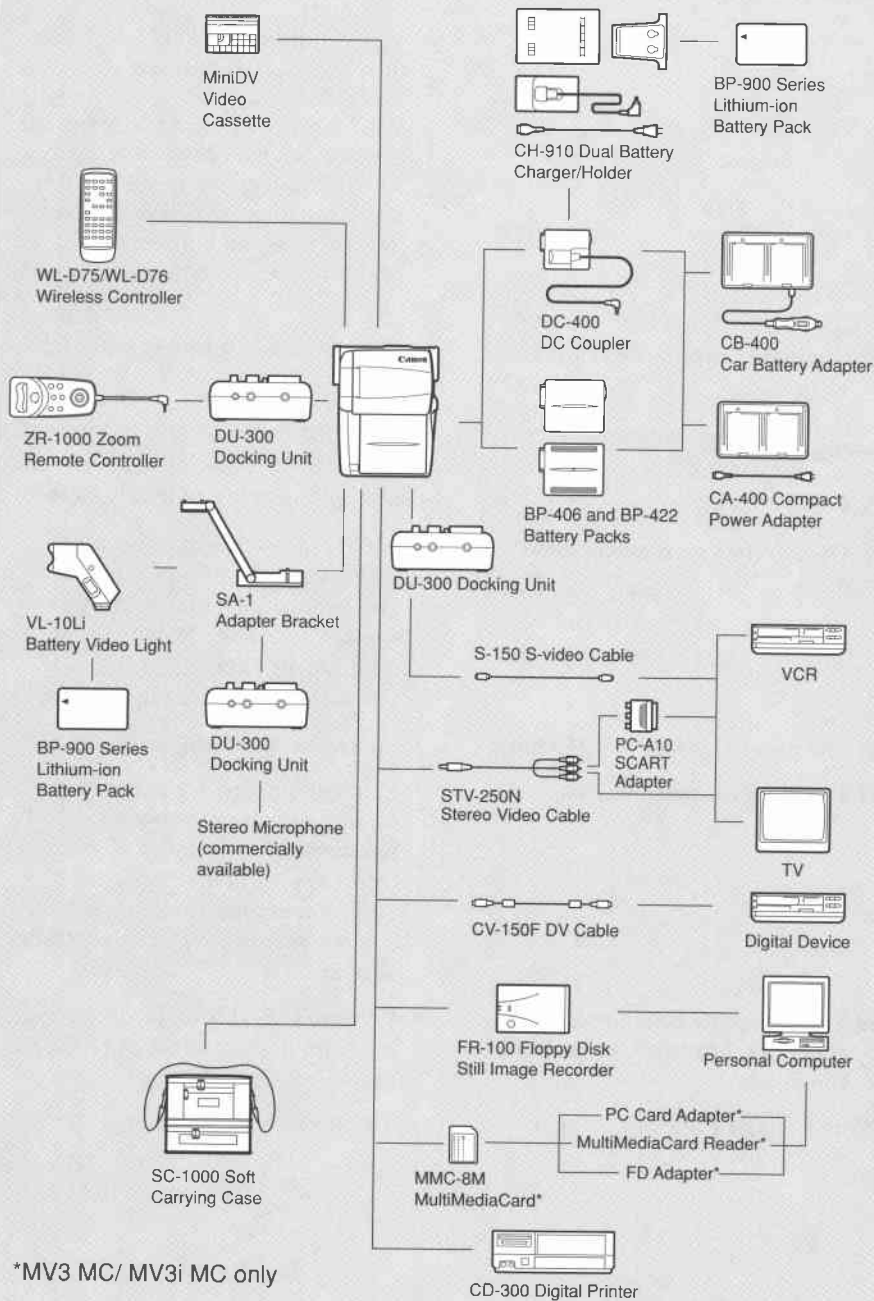


*MV3 MC/ MV3i MC only

Optional Accessories


BP-400 Series Battery Packs

Extra batteries for use with the MV3/
MV3 MC/MV3i/MV3i MC.

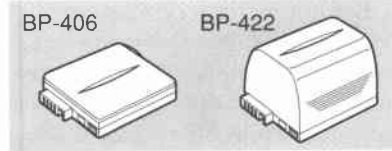

CH-910 Dual Battery Charger/Holder

This holds two battery packs and can charge them both consecutively. It can then be connected directly to the MV3/MV3 MC/MV3i/MV3i MC to give twice the playback time. It can also make use of the higher performance battery pack BP-945, to give up to 11 hours 40 min. recording time.

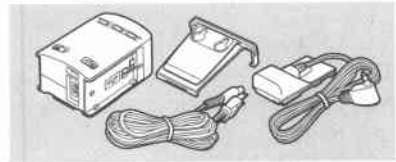

The lithium ion battery packs used with the CH-910 (BP-900 series Battery Pack) differ from the battery pack used with the camera, and can be purchased as optional accessories.

Note:

- The DC-400 DC Coupler (supplied with the MV3/MV3 MC/MV3i/MV3i MC) connects directly to the CH-910. Use it in place of the DC Coupler that is supplied with the CH-910.


Maximum recording time

		BP-915	BP-930/BP-930R	BP-945
One battery pack attached	Using LCD screen	1 hr. 30 min.	2 hr. 50 min.	4 hr. 40 min.
	Using viewfinder	1 hr. 55 min.	3 hr. 30 min.	5 hr. 50 min.
Two battery packs attached	Using LCD screen	3 hr.	5 hr. 40 min.	9 hr. 20 min.
	Using viewfinder	3 hr. 50 min.	7 hr.	11 hr. 40 min.

E

CB-400 Car Battery Adapter


Power your camera, or recharge battery packs on the move. The car battery adapter plugs into your car's cigarette lighter socket and runs off a 12-24 V DC negative ground battery. Available autumn 2000.

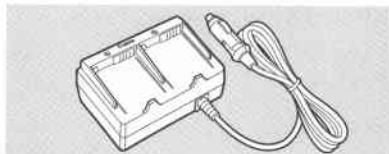**VL-10Li Battery Video Light**


This compact yet powerful video light can be used for both indoor and outdoor shooting.

- Use the BP-900 Series battery packs to power the light. Approximate usage times are as follows:
BP-915 60 min. BP-930 120 min.
BP-945 170 min.
- Charge the BP-900 Series battery packs with the CA-910 Compact Power Adapter or CH-910 Dual Battery Charger/ Holder (optional).


**Zoom Remote Controller ZR-1000**

When this product is plugged into the LANC  terminal of a Canon camcorder, it is possible to control functions such as the start and stop of recording and the zoom and focusing functions while the camcorder is mounted on a tripod, without touching the camcorder body itself.

- To use this product, first connect the DU-300 Docking Unit to the camera.

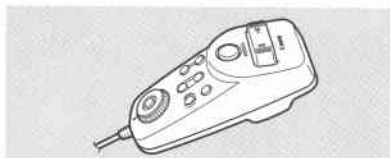**SA-1 Adapter Bracket**

Attaches a video light or microphone securely to the camera.

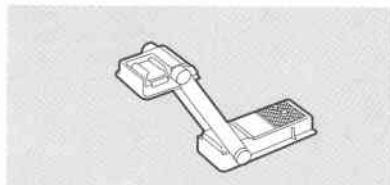

SC-1000 Soft Carrying Case


A handy camera bag with padded compartments and plenty of space for accessories.



E

CD-300 Digital Printer

This 300 dpi resolution printer is perfect for printing out the high quality images taken with digital camcorders. Print out panorama prints, pictures without a white border, multiple-picture index cards, and add titles to pictures. A clear overcoat adds luster to your prints and reduces colour fading.

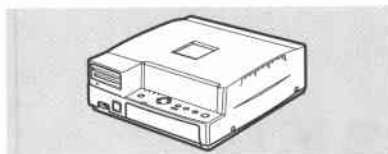

FR-100 Floppy Disk Still Image Recorder

The FR-100 captures images taken with your digital camcorder, compressing them in JPEG format and recording them as still images onto a floppy disk. Image files can then be easily opened and viewed on your computer.




This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.

Screen Displays

E

To display the date and time, press the DATA CODE button. See also p. 75.

Press the wireless controller's TV SCREEN button or turn TV SCREEN on through the menu to see the other displays on the TV screen. (The displays appear white on-screen.) They will not be added to any recordings you make with the camera.

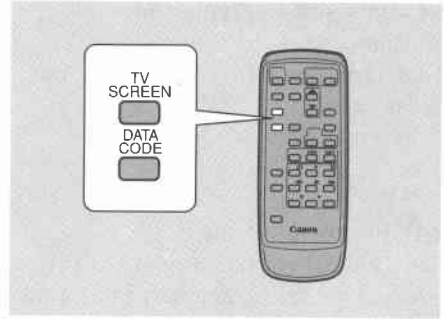

MENU

([] 33)

▶ DISP. SET UP

▶ TV SCREEN...ON

To turn TV SCREEN off, open the menu and select DISP. SET UP. Then select TV SCREEN, set it to OFF and close the menu.

For instructions on how to hook the camera up to your TV, see p. 26.

Turning off the LCD screen displays

You can turn off the displays to give you a clear screen for playback.



MENU

([] 33)

▶ DISP. SET UP

▶ DISPLAYS...ON

To turn the display off, open the menu and select DISP. SET UP. Then select DISPLAYS, set it to OFF and close the menu.

- If you turn the displays off, the LCD screen will be completely blank, but the camera will continue to show warning/caution displays when necessary.



indicates a flashing display.

Record pause mode
([] 14)



Recording ([] 15)



The backup battery is not properly installed, or needs replacing ([] 119).



Shows how much battery power remains (117).



 
The battery pack is exhausted (117).



No cassette is loaded, or it is set for erasure prevention (12, 13).



Remaining tape (Green: more than five minutes.



Yellow: less than five minutes.
Red: final few seconds.)


...finally, it tells you when you have completely run out of tape.



The camera is ejecting the tape (12).



The safety mechanism is activated. Unload the cassette and turn the camera off. Turn it on again and reload the cassette.

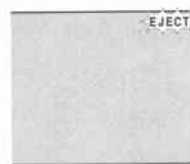

Recording mode (16)



Playback is stopped (22).



Normal playback (22)



Fast forward (22)



Rewind (22)



Fast forward playback (23)



Rewind playback (23)



Frame advance playback (24)



 
Frame reverse playback (24)




Playback pause (forward and reverse) (23)



Slow playback (forward and reverse) (24)




×2 playback (forward and reverse) (24)

 


×1 playback (forward and reverse) (24)



 
Photo Search (78)



Date Search (78)

 

 Zero set memory (forward and reverse) (79)



A/V Insert Editing (85)
(MV3i and MV3i MC only)



Audio Dubbing (87)



Zoom display (18):
Optical zoom



Optical plus 40× digital zoom



Zoom in




Zoom out




The image stabilizer is turned on (32).




CAM. MENU (36)

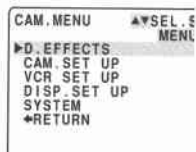

PLAY (MV3i and MV3i MC: VCR) menu (37)

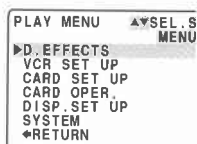

C.REC MENU (39)
(MV3 MC and MV3i MC only)

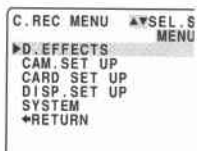

C.PLAY MENU (40)
(MV3 MC and MV3i MC only)



The remote sensor is turned off (43).



Self-timer countdown (67)



Zero set memory (79)



Audio mode (65)



Data code (75)




Progressive scan mode (48)



Photo mode (49)



 
- Setting the AF/AE. mark flashes white
- AF/AE locked. mark lights up green
- Timer



Recording programs (53).



 Manual exposure display (69):
Exposure locked



Brighter than standard exposure level



Darker than standard exposure level



Manual focus is selected (72).




Shutter speed (70)



White balance is (73)

Set
Indoor
Outdoor

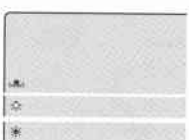

The 16:9 mode: the display flashes when the effect is being selected, and appears steadily when it is activated (16).




Digital effects. The display flashes when the function is being selected and appears steadily when it is activated (57)



The wind screen is turned off (66).



Volume level (25)

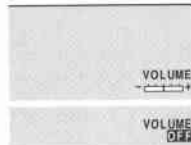

Audio output (90)



Mix balance (90)



Audio/visual insert (84) (MV3i and MV3i MC only)



Audio dubbing (87)



DV input (82, 100) (MV3i and MV3i MC only)



Condensation warning (123)




E

MultiMediaCard Displays (MV3 MC and MV3i MC only)


No MultiMediaCard is inserted (93)



 
Image quality (93) Standard




Fine

 


Folder number-File number (95)

 


Slide show in progress (102)

 

Recording to a MultiMediaCard (97)

 

 The number of still images that can still be recorded on the MultiMediaCard (97)



(Green: 6 or more images.

Yellow: Between 1 and 5 images

Red: No more images)


Accessing a MultiMediaCard (92)




Current still image/Total number of still images on the MultiMediaCard (97)



 Protect mark (103)



Card mix (106)

 


Print mark (111)



Data code (75)




 Time Code



This records counter information, including hour, minute, second, and frame number on a special data code area on the tape itself. It is reset automatically when a new tape is loaded. In camera mode, the frame number doesn't appear in the display.

Recording reminder

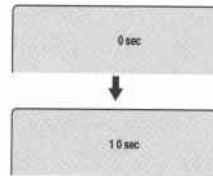


When you start recording, the camera counts from 0SEC to 10SEC. Shots which are shorter than ten seconds may be difficult to edit later. On the other hand, if you are not planning to edit the recording, remember that a shot which does not contain action should generally last no longer than 10 seconds.

Caution phrases

E


The camera displays various caution phrases — they appear for 4 seconds before disappearing.

Appears each time you turn the power on, until you set the time zone, date and time ( 45).

SET THE TIME ZONE,
DATE AND TIME

Appears as a warning to protect the tape and also when condensation is detected. Remove the tape as soon as possible after the camera has displayed the caution.

REMOVE THE CASSETTE

Appears when the battery pack is exhausted ( 10, 117).

CHANGE THE BATTERY PACK

Refer to p.83

Appears when the tape has reached the end.

TAPE END


COPYRIGHT PROTECTED
PLAYBACK IS RESTRICTED

Refer to p.13


THE TAPE IS SET FOR
ERASURE PREVENTION

Refer to p.83

COPYRIGHT PROTECTED
DUBBING RESTRICTED

Appears when you press the REC PAUSE button if the DV cable is not connected properly ( 82) (MV3i and MV3i MC only).


CHECK THE DV INPUT

Appears when you try to do audio dubbing or A/V insert (MV3i and MV3i MC only) on a tape recorded in LP mode ( 84, 87).


CHECK THE CASSETTE
[REC MODE]

Refer to p.123


CONDENSATION
HAS BEEN DETECTED

Appears when you try to do audio dubbing on a tape recorded in 16-bit audio or 12-bit, 4-channel mode ( 87-89).


CHECK THE CASSETTE
[AUDIO MODE]

Appears when the camera detects a blank section of a tape during audio dubbing or A/V insert (MV3i and MV3i MC only) ( 84, 87).

CHECK THE CASSETTE
[BLANK]



Appears when the video heads are badly contaminated
( 121)

HEADS DIRTY,
USE CLEANING CASSETTE


Appears if you have tried to mark 51 or more images for printing, or if a mark file cannot be edited.
( 111)

PRINT MARK ERROR

For MV3 MC and MV3i MC only

An error has occurred with the MultiMediaCard. The camera can not record or play back. A temporary card error is also possible. If **CARD ERROR** disappears after 4 seconds and  flashes red, format the MultiMediaCard. If  flashes green, playback is possible.

CARD ERROR

A MultiMediaCard has not been inserted into the camera.
( 93)


NO CARD

There are no images recorded on the MultiMediaCard.

NO IMAGES

There is no more remaining memory on the MultiMediaCard. Change the card or erase images.

CARD FULL

You have reached the maximum file or folder number.
( 95)

NAMING ERROR

The image has been recorded in an incompatible JPEG format or other format that the camera can not play back, or the image data has been damaged.

UNIDENTIFIABLE
IMAGE

Specifications

MV3/MV3 MC/MV3i/MV3i MC

Power Supply (rated): 7.4 V DC
Power Consumption (while recording with the AF turned on):
4.4 W (Using viewfinder),
5.4 W (Using LCD screen)
Television system:
CCIR standard (625 lines, 50 fields)
PAL colour signal
Video recording system:
2 rotary heads, helical scanning
DV system (Consumer digital VCR SD system)
Digital component recording
Audio recording system: PCM digital sound: 16 bit (48 kHz/ 2 ch),
12 bit (32 kHz/ 4 ch)
Image sensor: 1/4" Progressive Scan CCD (charge coupled device), approx. 800,000 pixels (approx. 420,000 effective pixels)
Tape format: Videocassettes bearing the Mini DV mark.
Tape speed:
SP: 3/4 ips (18.83 mm/s);
LP: 1/2 ips (12.57 mm/s)
Maximum recording time:
SP: 80 min. (with a 80 min. cassette);
LP: 120 min. (with a 80 min. cassette)
Fast forward/ rewind time:
Approx. 2 min. 20 sec. (with a 60 min. cassette)
Lens: F/1.6–2.6, 10× power zoom, 3.5–35.0 mm
Focusing system: TTL autofocus, manual focusing possible
Minimum focusing distance: 3ft 3/8 in (1 m) (3/8 in (1 cm) on maximum wide angle)
Maximum shutter speed:
1/2,000 sec.
Minimum illumination: 3.5 lx (using the low light program)
Recommended illumination:
More than 100 lx
Filter diameter: 27 mm
Viewfinder: 0.44 in, TFT colour LCD, approx. 113,000 pixels

LCD screen: 2.5 in measured diagonally, TFT colour, approx. 200,000 pixels
Microphone: Stereo electret condenser microphone
DV Terminal: Special 4-pin connector (conforms to IEEE1394)
(MV3/MV3 MC: Output only.
MV3i/MV3i MC: Input/output)
LANC terminal*: ø 2.5 mm mini minijack
Output levels:
Video terminal: 1 Vp-p/ 75 ohms unbalanced
Audio output: -10 dBV (47 kohm load)/ less than 3 kohms, unbalanced
S-video terminal*: 1 Vp-p (Y signal), 0.3 Vp-p (C signal)
Input level:
Microphone terminal*: ø 3.5 mm stereo minijack, -57 dBV (with 600 ohm mic)/ at least 5 kohms
Headphone terminal*: ø 3.5 mm stereo minijack
Operating temperature range:
0°–40°C (32°–104°F)
Dimensions: 48 × 106 × 86 mm (1 7/8 × 4 1/8 × 3 3/8 in)
Weight: 390 g (13 3/4 oz)

BP-406 Battery Pack

Battery type: Rechargeable lithium ion battery
Rated voltage: 7.4 V DC
Operating temperature: 0°–40°C (32°–104°F)
Battery capacity: 680 mAh
Dimensions: 49 × 60 × 11 mm (1 7/8 × 2 3/8 × 3/8 in)
Weight: 70 g (2 1/2 oz)

* Attach the DU-300 Docking Unit.

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

E

Index

E

16:9, 16

A

Abroad, Using the Camera, 122
Accessories, 4, 129
Adapter, AC, 9, 11
AE Programs, 53
Art, 60
Audio Dubbing, 87
Audio Mix, 90
Audio Mode, 65
Audio Output, 91
Audio Recording
 and Playback, 25, 65
Audio/Video Terminal, 29
Auto, 55
Autofocus, 72
A/V Insert, 84

B

Backup Battery, 119
Basic Recording, 14
Battery Charger, 10
Battery Pack, 10, 117
Beep, 17
Black and White, 60

C

Cables, 4, 26
Cassettes, 12
Charging the Battery Pack,
 10-11, 117
Choosing a Recording Program, 53
Cleaning the Camera, 121
Clock, 47
Combining Images*, 106
Condensation, 123
Connection to TV or VCR, 26
Copying from Cassette to
 MultiMediaCard*, 109
Copying from MultiMediaCard to
 Cassette*, 110

D

Data Code, 75
Date and Time, 45
Date Search, 78
Digital Effects, 57
Digital Video, 5
Digital Zoom, 18
Docking Unit, 26
DV Dubbing, 81, 100

E

Easy Recording, 55
Editing to a VCR, 80
Effects, 60
Erasing Still Images from a
 MultiMediaCard*, 104
Exposure, 69
External Microphone, 65, 87

F

Fade Trigger, 59
Faders, 59
Fast Forward, 22
Feedback, 29
File Numbers*, 95
Finding Your Way Around
 the Camera, 6
Floppy Disk Still Image Recorder, 51
Focusing, 72
Formatting a MultiMediaCard*, 112

H

Head Cleaning, 121
Headphones, 65

I

Image Stabilizer, 32
Image Quality*, 93
Index*, 102
Introducing the MV3/MV3
 MC/MV3i/MV3i MC, 5

*MV3 MC/MV3i MC only

L

LANC, 80
 LCD Screen, 19
 Lens Cap, 116
 Loading Cassettes, 12
 Lock lever, 7, 17
 Low Light, 56
 LP Mode, 16

M

Maintenance, 120
 Making Better Videos, 30
 Manual Exposure Control, 69
 Manual Focus, 72
 Menus, 33
 Microphone, 65, 87
 Monitor Recording, 21
 Mosaic, 59, 60
 Mosaic Fade, 59
 Multi-Image Screen, 63
 MultiMediaCard Introduction*, 92

O

Optional Accessories, 129

P

Pause, Record, 14
 Photo Search, 78
 Playback, 22
 Playback Connection, 26
 Playback Pause, 23
 Portrait, 55
 Power Adapter, 9, 11
 Powering Your Camcorder, 9
 Pre-Marked Position, 79
 Preparing the Camera, 116
 Preventing Accidental Erasure*, 103
 Print Mark*, 111
 Problems, 124
 Progressive Scan, 48
 Protect*, 103

R

Recharging the Battery Pack, 118
 Recording, 14, 97
 Recording from Cassette to
 MultiMediaCard*, 99
 Recording from DV Device to
 MultiMediaCard*, 100
 Recording Programs, 53
 Record Pause Mode, 14
 Record Review, 52
 Record Search, 52
 Remote Control, 42
 Remote Sensor, 43
 Rewind, 22

S

S1 video input terminal, 28
 Sample images*, 114
 Sand & Snow, 56
 Screen Displays, 132
 Scroll, 59
 Self-Timer, 67
 Sepia, 60
 Shutter Sound*, 96
 Shutter Speed, 70
 Slide Show*, 102
 Speaker, 25
 Specifications, 115, 139
 SP Mode, 16
 Sports, 55
 Spotlight, 56
 Still Picture, 49, 97
 Storage, 121
 S-video, 28
 System Diagram, 128

E

E**T**

Tally lamp, 44
Tape Protection, 13
Telephoto, 18
Temperature, 119, 121
Time Code, 136
Time Zone, 45
Tips for Making Better Videos, 30
Tripod, 30
Troubleshooting, 124
TV, 26, 132

U

Using the Camera Abroad, 122
Using the Menus, 33

V

VCR, 26
Videocassettes, 12
Video Heads, 121
Viewfinder, 116, 121
Viewing Still Images*, 101

W

White Balance, 73
Wide-angle, 18
Widescreen TV, 16
Wind Screen, 66
Wipe, 59
Wireless Controller, 42

Z

Zero Set Memory, 79
Zooming, 18

Menu at a Glance

Use the list below to quickly navigate the camera's menu. Functions are listed alphabetically.

E

Function	First make sure the POWER dial is set to...						Then select it from this submenu and set.
16:9 effect	MOVIE	PSCAN					CAM.SET UP
6-sec. Date			PLAY	VCR			DISP.SET UP
Audio Mode	MOVIE	PSCAN					VCR SET UP
Beep	MOVIE	PSCAN	PLAY	VCR	CARD REC	CARD PLAY	SYSTEM
Brightness	MOVIE	PSCAN	PLAY	VCR	CARD REC	CARD PLAY	DISP.SET UP
Card mix*	MOVIE	PSCAN					D.EFFECTS → D.E.SELECT → CARD MIX
Copy- card to cassette*						CARD PLAY	CARD OPER.
Copy- cassette to card*			PLAY	VCR			CARD OPER.
Data code			PLAY	VCR			DISP.SET UP
Date/time display	MOVIE	PSCAN			CARD REC		DISP.SET UP
Date/time select			PLAY	VCR		CARD PLAY	DISP.SET UP
Date/time set	MOVIE	PSCAN			CARD REC		SYSTEM
Digital effect select	MOVIE	PSCAN	PLAY	VCR	CARD REC		D.EFFECTS
Displays			PLAY	VCR		CARD PLAY	DISP.SET UP
Effect	MOVIE	PSCAN	PLAY	VCR	CARD REC		D.EFFECTS → D.E.SELECT → EFFECT
Erase*						CARD PLAY	CARD OPER.
Fader	MOVIE	PSCAN	PLAY	VCR			D.EFFECTS → D.E.SELECT → FADER
File numbers*			PLAY	VCR	CARD REC		CARD SET UP
Format*						CARD PLAY	CARD OPER.
Image stabilizer	MOVIE	PSCAN			CARD REC		CAM.SET UP

* MV3 MC/MV3i MC only

Function	First make sure the POWER dial is set to...					Then select it from this submenu and set.	
Index*						CARD PLAY	CARD OPER.
Multi-image screen speed	MOVIE	PSCAN	PLAY	VCR	CARD REC		D.EFFECTS → D.E.SELECT → MULTI-S
Multi-image screen split	MOVIE	PSCAN	PLAY	VCR	CARD REC		D.EFFECTS → D.E.SELECT → MULTI-S
Mirror mode	MOVIE	PSCAN			CARD REC		DISP.SET UP
Mix type*	MOVIE	PSCAN					D.EFFECTS → D.E.SELECT → CARD MIX → CARD MIX
Mix level*	MOVIE	PSCAN					D.EFFECTS → D.E.SELECT → CARD MIX → CARD MIX
Output channel			PLAY	VCR			VCR SET UP
Print mark*						CARD PLAY	CARD OPER.
Protect*						CARD PLAY	CARD OPER.
Quality*			PLAY	VCR	CARD REC		CARD SET UP
Record mode	MOVIE	PSCAN		VCR		CARD PLAY	VCR SET UP
Remote sensor code	MOVIE	PSCAN	PLAY	VCR	CARD REC	CARD PLAY	SYSTEM
Shutter speed	MOVIE	PSCAN			CARD REC		CAM.SET UP
Shutter sound*					CARD REC		CARD SET UP
Tally lamp	MOVIE	PSCAN					SYSTEM
Time zone/DST	MOVIE	PSCAN			CARD REC		SYSTEM
TV screen	MOVIE	PSCAN			CARD REC		DISP.SET UP
White balance	MOVIE	PSCAN			CARD REC		CAM.SET UP
Wind screen	MOVIE	PSCAN	PLAY	VCR			VCR SET UP
Zoom	MOVIE	PSCAN			CARD REC		CAM.SET UP

* MV3 MC/MV3i MC only

Canon

CANON INC.

Canon Europa N.V.

P.O. Box 2262, 1180 EG Amstelveen, the Netherlands

Canon Business Service UK Ltd.

Photographic Division, Units 4 & 5, Brent Trading Centre, North Circular Road,
Neasden London NW10 0JF
Telephone 0181-4513336

Canon Australia Pty. Ltd

1 Thomas Holt Drive, North Ryde, N.S.W. 2113, Australia
Telephone 805-2000, Fax 887-4484

Canon New Zealand Ltd

Fred Thomas Drive, Takapuna, P.O. Box 33-336, Auckland, New Zealand
Telephone 486-1570, Fax 486-6420

Canon Singapore Pte. Ltd

79 Anson Road #09-01/06, Singapore 079906
Telephone (65)-532-4400, Fax (65)-221-2939

Canon Hongkong Company Ltd

9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong

Canon Latin America, Inc.

Sales & Enquiries: 6505 Blue Lagoon Drive Suite 325 Miami FL 33126 USA



Printed on 70% reused paper.
Document réalisé avec du papier recyclé à 70%.
El papel aqui utilizado es 70% reciclado.

PUB.DIE-152B
1100A/AB30

© CANON INC. 2000
DY8-9020-091-000

PRINTED IN JAPAN
IMPRIME AU JAPON

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>