


34-887 to 34-934

10" Panel Scoring Saw

34-889

Model RT-31

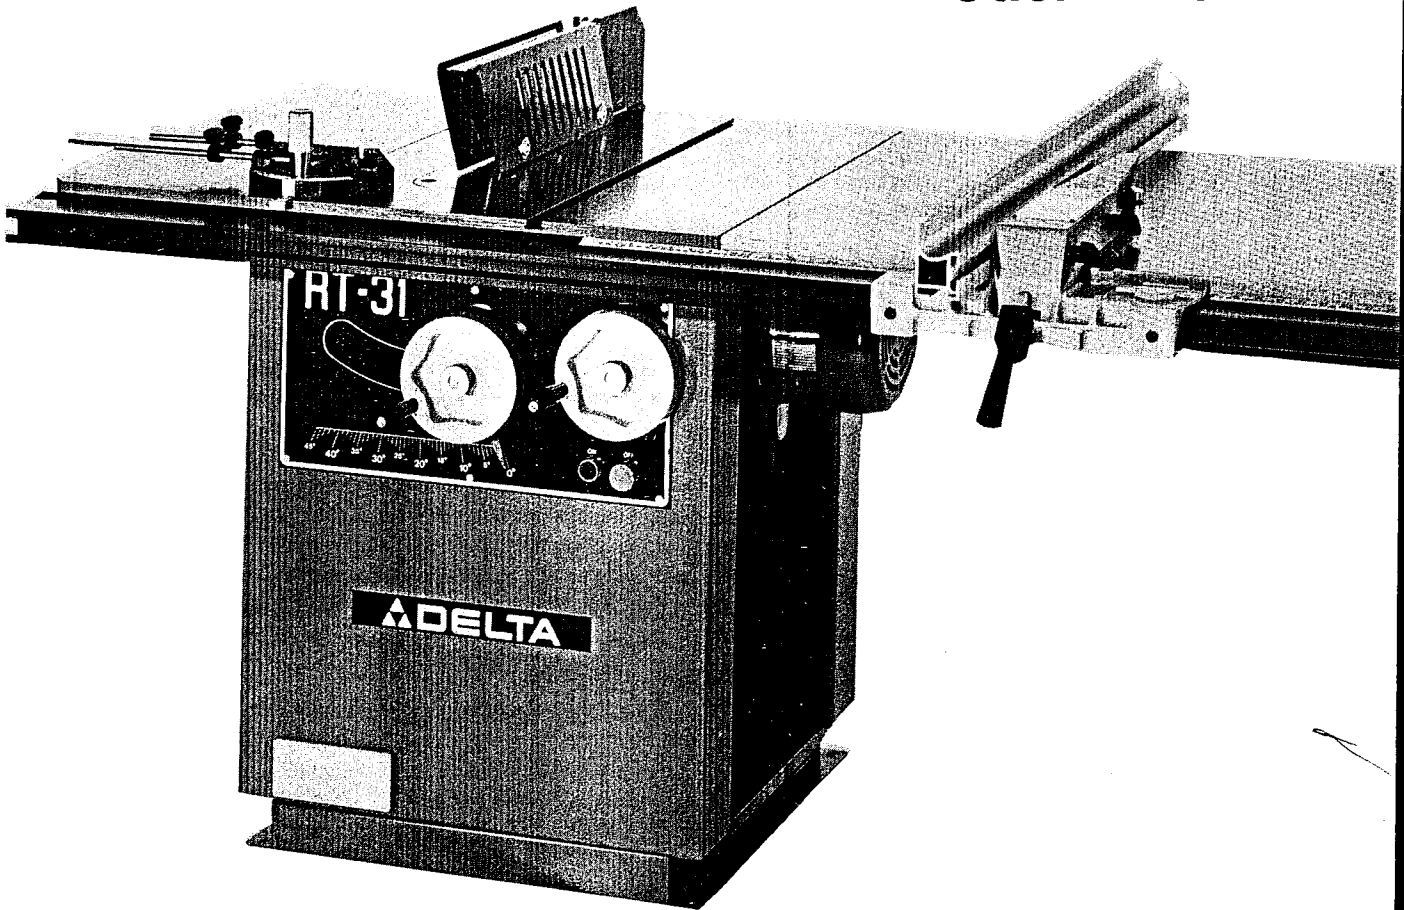

INSTRUCTION MANUAL

Dated 10-9-85

Part No. 422-29-651-0003

© Delta International Machinery Corp. 1985

34-889

DELTA

**WARNING: FAILURE TO FOLLOW THESE RULES MAY RESULT IN
SERIOUS PERSONAL INJURY.**

IMPORTANT

As with all machinery there are certain hazards involved with operation and use of the machine. Using the machine with respect and caution will considerably lessen the possibility of personal injury. However, if normal safety precautions are overlooked or ignored, personal injury to the operator may result.

This machine was designed for certain applications only. Delta Machinery strongly recommends that this machine NOT be modified and/or used for any application other than for which it was designed. If you have any questions relative to its application DO NOT use the machine until you have written Delta Machinery and we have advised you.

DELTA INTERNATIONAL MACHINERY CORP.
MANAGER OF TECHNICAL SERVICES
246 ALPHA DRIVE
PITTSBURGH, PENNSYLVANIA 15238

SAFETY RULES FOR ALL TOOLS

1. **FOR YOUR OWN SAFETY, READ INSTRUCTION MANUAL BEFORE OPERATING THE TOOL.** Learn the tool's application and limitations as well as the specific hazards peculiar to it.
2. **KEEP GUARDS IN PLACE** and in working order.
3. **GROUND ALL TOOLS.** If tool is equipped with three-prong plug, it should be plugged into a three-hole electrical receptacle. If an adapter is used to accommodate a two-prong receptacle, the adapter lug must be attached to a known ground. Never remove the third prong.
4. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it "on".
5. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
6. **DON'T USE IN DANGEROUS ENVIRONMENT.** Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.
7. **KEEP CHILDREN AND VISITORS AWAY.** All children and visitors should be kept a safe distance from work area.
8. **MAKE WORKSHOP CHILDPROOF** - with padlocks, master switches, or by removing starter keys.
9. **DON'T FORCE TOOL.** It will do the job better and be safer at the rate for which it was designed.
10. **USE RIGHT TOOL.** Don't force tool or attachment to do a job for which it was not designed.
11. **WEAR PROPER APPAREL.** No loose clothing, gloves, neckties, rings, bracelets, or other jewelry to get caught in moving parts. Non-slip foot wear is recommended. Wear protective hair covering to contain long hair.
12. **ALWAYS USE SAFETY GLASSES.** Also use face or dust mask if cutting operations is dusty. Everyday eyeglasses only have impact resistant lenses; they are NOT safety glasses.
13. **SECURE WORK.** Use clamps or a vise to hold work when practical. It's safer than using your hand and frees both hands to operate tool.
14. **DON'T OVERREACH.** Keep proper footing and balance at all times.
15. **MAINTAIN TOOLS IN TOP CONDITION.** Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
16. **DISCONNECT TOOLS** before servicing and when changing accessories such as blades, bits, cutters, etc.
17. **USE RECOMMENDED ACCESSORIES.** Consult the owner's manual for recommended accessories. The use of improper accessories may cause hazards.
18. **AVOID ACCIDENTAL STARTING.** Make sure switch is in "OFF" position before plugging in power cord.
19. **NEVER STAND ON TOOL.** Serious injury could occur if the tool is tipped or if the cutting tool is accidentally contacted.
20. **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to ensure that it will operate properly and perform its intended function - check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
21. **DIRECTION OF FEED.** Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
22. **NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF.** Don't leave tool until it comes to a complete stop.
23. **DRUGS, ALCOHOL, MEDICATION.** Do not operate tool while under the influence of drugs, alcohol or any medication.
24. **MAKE SURE TOOL IS DISCONNECTED FROM POWER SUPPLY** while motor is being mounted, connected or reconnected.

ADDITIONAL SAFETY RULES FOR CIRCULAR SAWS

1. ALWAYS use saw blade guard, splitter and anti-kickback fingers for every operation for which they can be used, including through-sawing. Through-sawing operations are those when the blade cuts completely through the work piece as in ripping or cross cutting.
2. ALWAYS hold the work firmly against the miter gage or fence.
3. USE push-stick when required. Always use a push-stick for ripping narrow stock.
4. NEVER perform any operation "free-hand" which means using your hands to support or guide the work piece. Always use either the fence or the miter gage to position and guide the work.
5. NEVER stand or have any part of your body in line with the path of the saw blade. Keep your hands out of the line of the saw blade.
6. NEVER reach behind or over the cutting tool with either hand for any reason.
7. MOVE the rip fence out of the way when cross cutting.
8. WHEN cutting mouldings, NEVER run the stock between the fence and the moulding cutterhead.
9. DIRECTION OF FEED. Feed work into a blade or cutter against the direction or rotation of the blade or cutter only.
10. NEVER attempt to free a stalled saw blade without first turning the saw OFF.
11. PROVIDE adequate support to the rear and sides of the saw table for wide or long workpieces.
12. AVOID KICKBACKS (work thrown back toward you) by keeping blade sharp; keeping rip fence parallel to the saw blade; keeping splitter and anti-kickback fingers and guard in place and operating; by not releasing work before it is pushed all the way past the saw blade, and by not ripping work that is twisted or warped, or does not have a straight edge to guide along the fence.
13. AVOID awkward operations and hand positions where a sudden slip could cause your hand to move into the cutting tool.

UNPACKING AND CLEANING

The RT-31, 10" Panel Scoring Saw is shipped in two containers: the basic saw in a crate; the Unifence in a carton. If the 34-876, Unifence Table is purchased, it is shipped in a separate carton. Remove the Unifence and all loose parts from the carton and the Unifence Table from its carton. Separate the shipping crate from the saw and unpack all loose items shipped with the saw. Fig. 1, illustrates the RT-31, 10" Panel Scoring Saw with the shipping crate removed.

Remove the protective coating from the machined surfaces of the saw using a soft cloth moistened with kerosene (do not use acetone, gasoline or lacquer thinner for this purpose). After cleaning, apply a good quality paste wax to all machined surfaces.

To avoid damage in transit, the motor is secured in place with a shipping strap (A) Fig. 2. This shipping strap must be removed before putting the saw into service.

ELECTRICAL CONNECTIONS


The electrical rating of the RT-31 10" Scoring Saw is either 230 volts, single phase or 200-220/440 volts, three phase.

Before connecting electrical power to your saw, be certain the voltage rating of the electrical power system agrees to the voltage rating of your machine within $\pm 10\%$.

Refer to the Electrical Instruction Manual supplied with your machine for instructions on how to connect electrical power.



Fig. 1

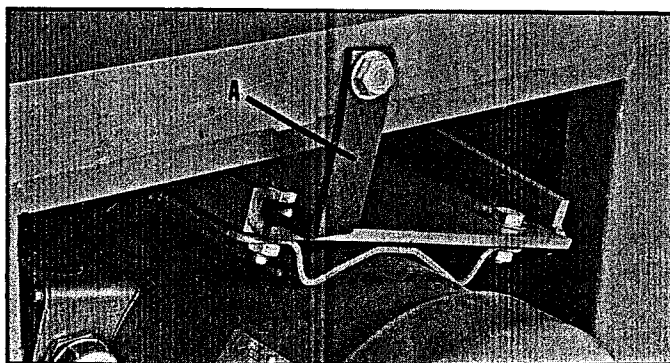

CHANGING VOLTAGE ON THE THREE PHASE SAW

The standard three phase RT-31 10" Scoring Saw is shipped wired for 220 volts. If you desire to operate the three phase saw at either 200 or 440 volts, refer to the "Changing Voltage of LVC Motor Starters" section in the electrical manual supplied with your saw.

The following steps must be completed to change the operating voltage on the saw:

1. Move the transformer primary pigtail to the proper terminal corresponding to the new input voltage.
2. Change the leads in the motor junction box for the proper line voltage as shown on the motor nameplate. The leads in motor junction box should be re-connected only when changing from 220 to 440 volts or 440 to 220 volts. The leads in the motor junction box are not changed when operating from either 200 or 220 volts. Refer to Fig. 3.
3. Change the heater elements in the overload block for the proper voltage/ampereage as shown on the motor nameplate. The heaters must be changed when going from 220 to 440 volts or 440 to 220 volts.

The heaters are not changed when switching from 220 to 200 volts or 200 to 220 volts because the same heaters are used for both 200 and 220 volts.

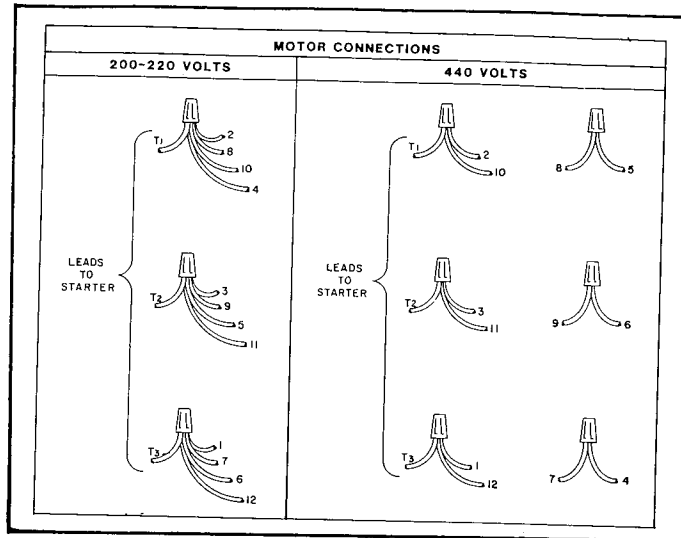


Fig. 3

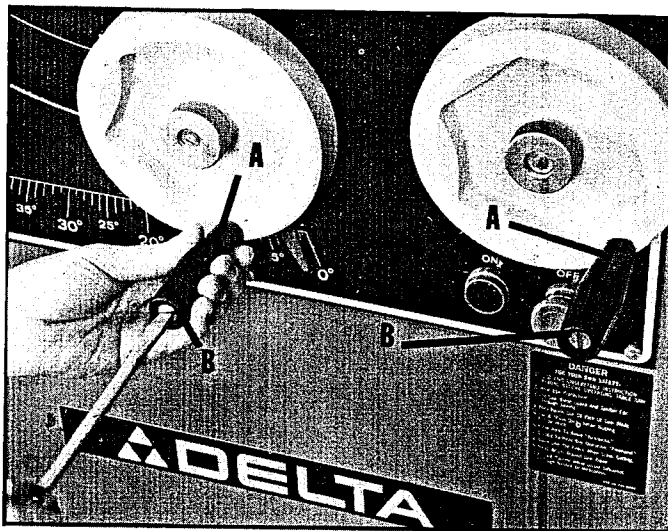


Fig. 4

ASSEMBLING BLADE RAISING AND BLADE TILTING HANDLES

1. Assemble the blade raising and blade tilting handles (A) and lock screws (B) Fig. 4, to the two handwheels, as shown.

ASSEMBLING EXTENSION WING TO THE SAW

The RT-31, is supplied with one extension wing which is to be assembled to the left side of the saw table. Assemble the extension wing (A) Fig. 5, to the left side of the saw table using the three screws and lockwashers (B) Use a straight edge to align the extension wing with the saw table before final tightening of the three screws (B)

Fig. 6, illustrates the extension wing (A) assembled to the saw table.

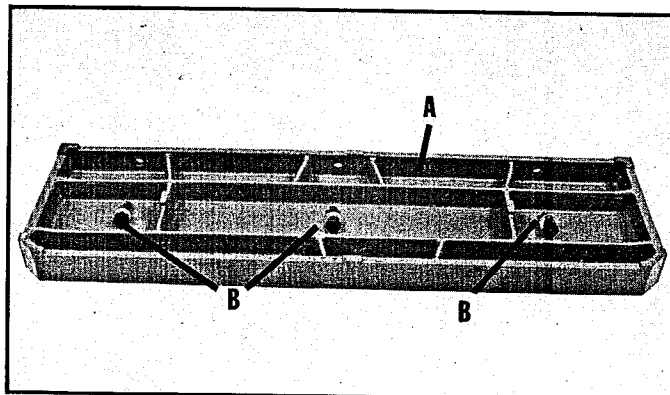


Fig. 5

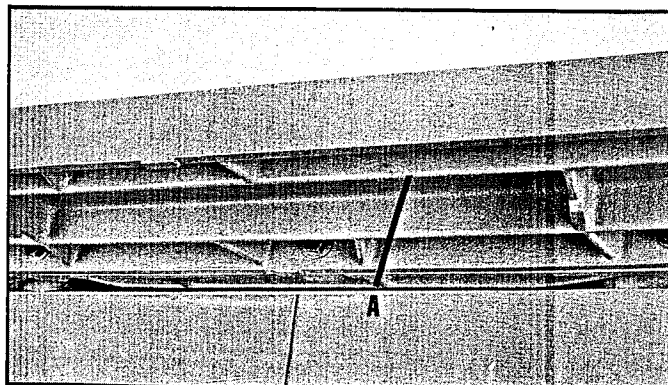


Fig. 6

ASSEMBLING SAW BLADE

NOTE: Saw blade is not included with machine. Maximum blade size is 10" when used with scoring blade.

Make certain the saw is disconnected from power source.

1. Remove arbor nut (A), blade flange (B) and bushing (C) Fig. 7 from the arbor shaft. The bushing (C) Fig. 7, is required to allow the use of saw blades with one-inch diameter arbor holes. If saw blades with 20mm diameter arbor holes are used, the bushing is not required.

2. Place saw blade (C) on arbor and reassemble blade flange (B) and arbor nut (A), as shown in Fig. 8. Teeth of saw blade must point down on front edge nearest to scoring blade arbor.

3. Tighten arbor nut with wrench (D) while holding arbor with allen wrench (E) inserted into end of arbor, as shown in Fig. 9.

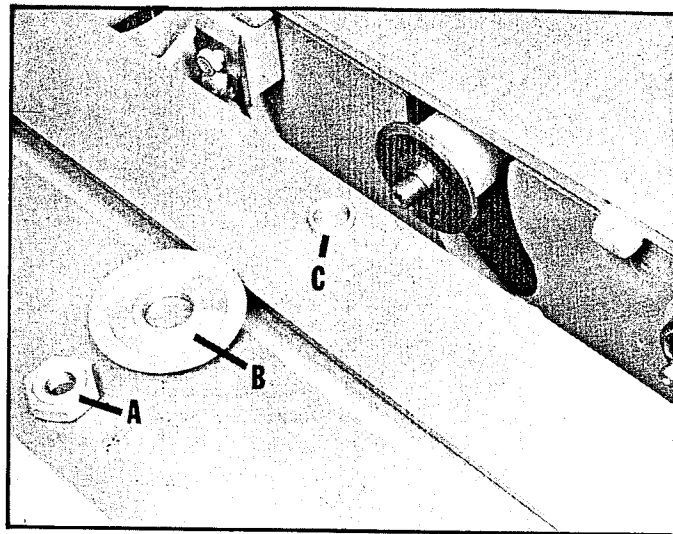


Fig. 7



Fig. 8

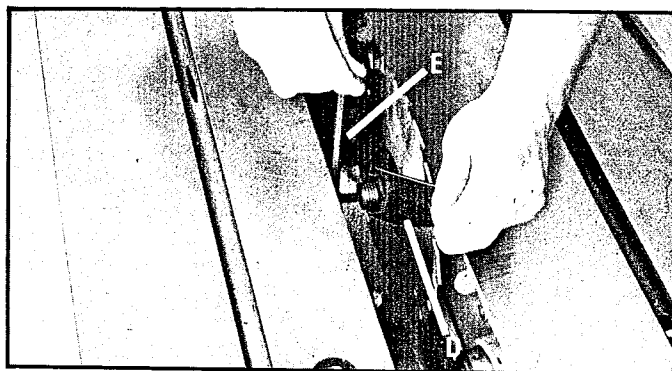


Fig. 9

ASSEMBLING SCORING BLADE

NOTE: Scoring blade is not included with the machine.

Make certain the saw is disconnected from the power source.

1. Remove arbor nut (A), blade flange (B) and bushing (C) Fig. 10 from the arbor shaft. The bushing (C) Fig. 10, is required to allow the use of scoring blades with one-inch diameter arbor holes. If scoring blades with 20mm diameter arbor holes are used, the bushing is not required.

2. Place scoring blade (C) on arbor and reassemble blade flange and arbor nut, as shown in Fig. 11. Teeth of scoring blade must point down on rear edge nearest to saw blade.

3. Tighten scoring arbor nut with wrench (D) while holding arbor with allen wrench (E) inserted into end of arbor, as shown in Fig. 12.

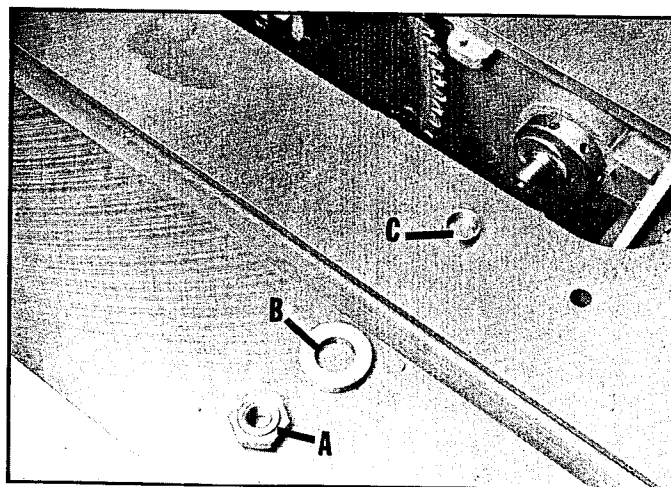


Fig. 10

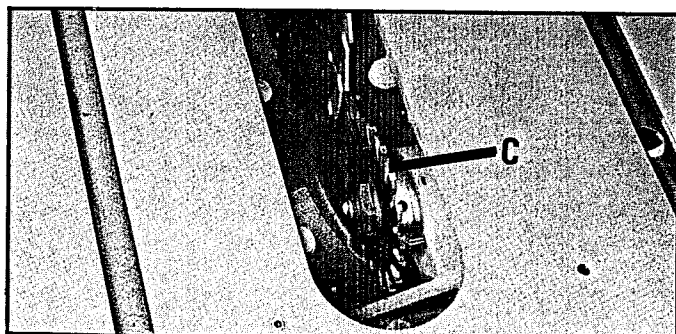


Fig. 11

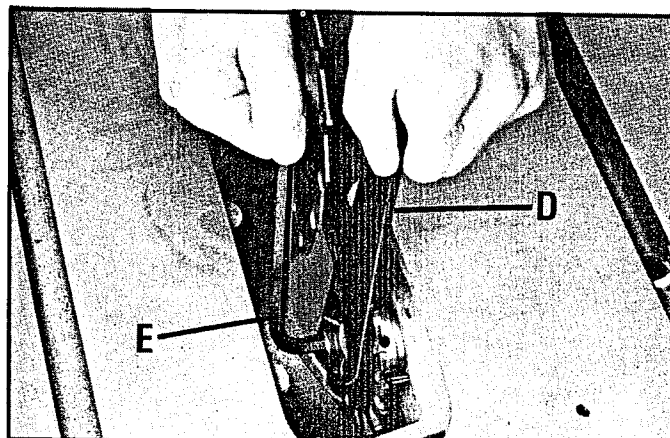


Fig. 12

ASSEMBLING SPLITTER, TABLE INSERT AND BLADE GUARD

1. Loosen two bolts (B) Fig. 13, and insert splitter (A) between the flange and block, as shown. NOTE: Allow $3/16''$ parallel gap between the bottom of the splitter and the table surface and securely tighten bolts (B).
2. Assemble splitter support bracket (C) Fig. 14, to bracket (D) using the two screws and washers (E). Do not tighten the screws (E) completely at this time. Fasten the other end of the splitter support bracket (C) to the rear of the splitter (A) using the four screws, nuts and washers (F). Make certain the rear of the splitter is aligned with the saw blade and securely tighten the six screws (E) and (F) and the set screw (H) Fig. 14.
3. If additional adjustment is necessary to align the saw blade with the splitter, loosen screw (J) Fig. 15, and tap the arbor and flange assembly (K) in or out to bring the saw blade into alignment with the splitter; then tighten screw (J).
4. Place the table insert (L) in position on the saw table, as shown in Fig. 16. Place a straight edge (M) across the saw table and insert to determine if the insert is flush with the saw table. If an adjustment is necessary, tighten or loosen the six screws (N) until the insert is flush with the table.
5. Assemble the blade basket guard (O) to top of splitter (A) using the two allen screws (P) and washers supplied, as shown in Fig. 17.

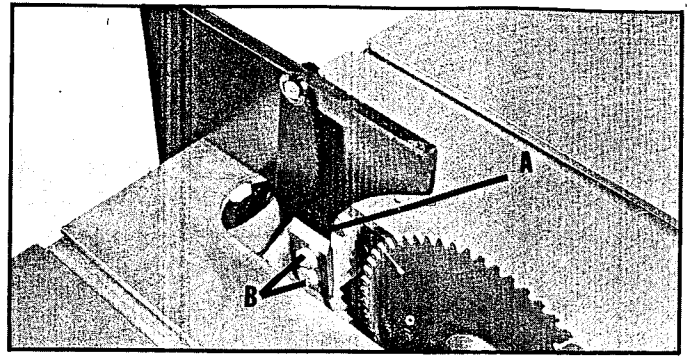


Fig. 13

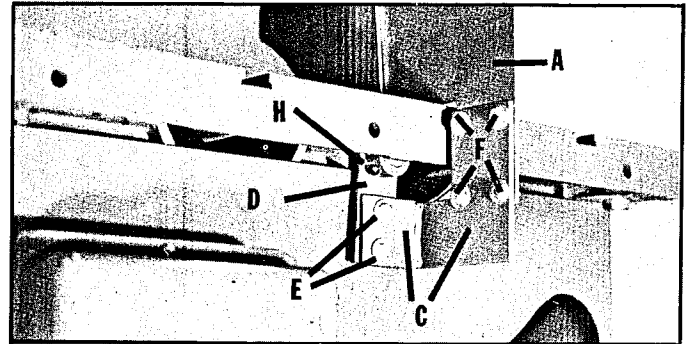


Fig. 14

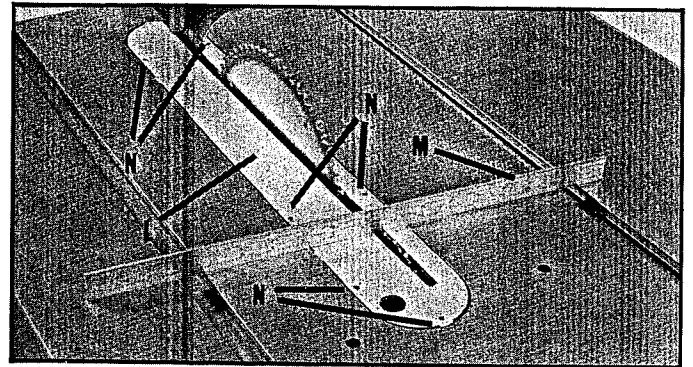


Fig. 16

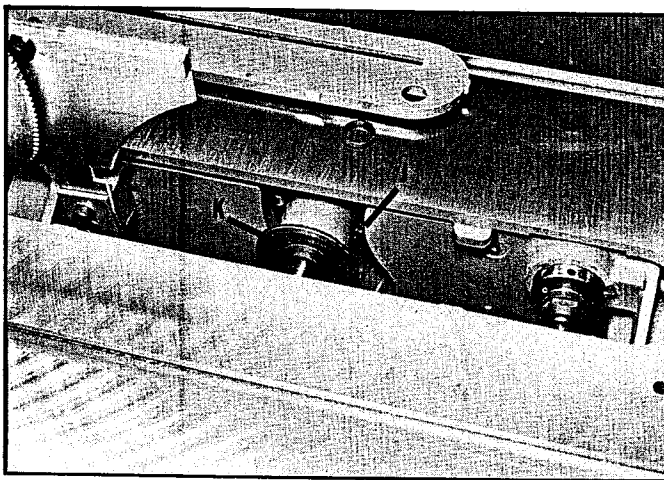


Fig. 15

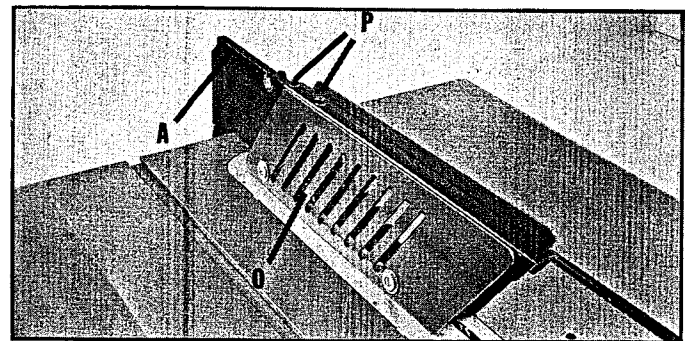


Fig. 17

CONSTRUCTING UNIFENCE TABLE

If you purchased the RT-31, 10" Panel Scoring Saw without the 34-876 Table, then a table must be constructed. The table should be constructed of $3/4''$ material (preferably particle board) by following the dimensions shown in Fig. 19.

Locate thirteen $9/64''$ diameter holes on the bottom of the table, as shown in Fig. 19. Drill thirteen $9/64''$ diameter holes, $5/8''$ deep. Locate three undercuts on the bottom of the left end of the table, as shown in Fig. 19. Make these undercuts to the dimensions shown in detail, Fig. 18.

IMPORTANT: For maximum ease when sliding the Unifence across the table, it is recommended that the top of the table be covered with a veneer.

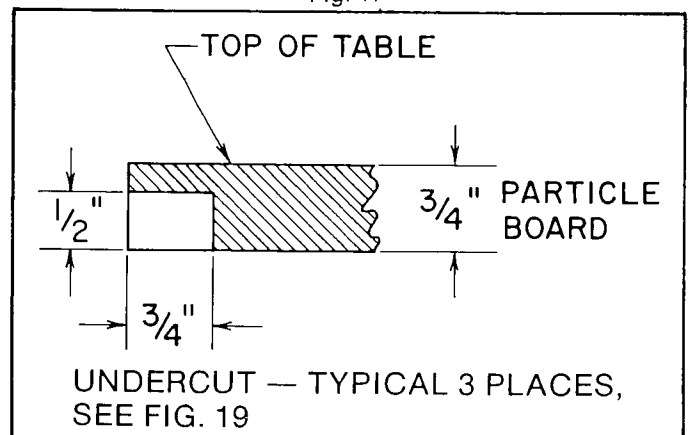


Fig. 18

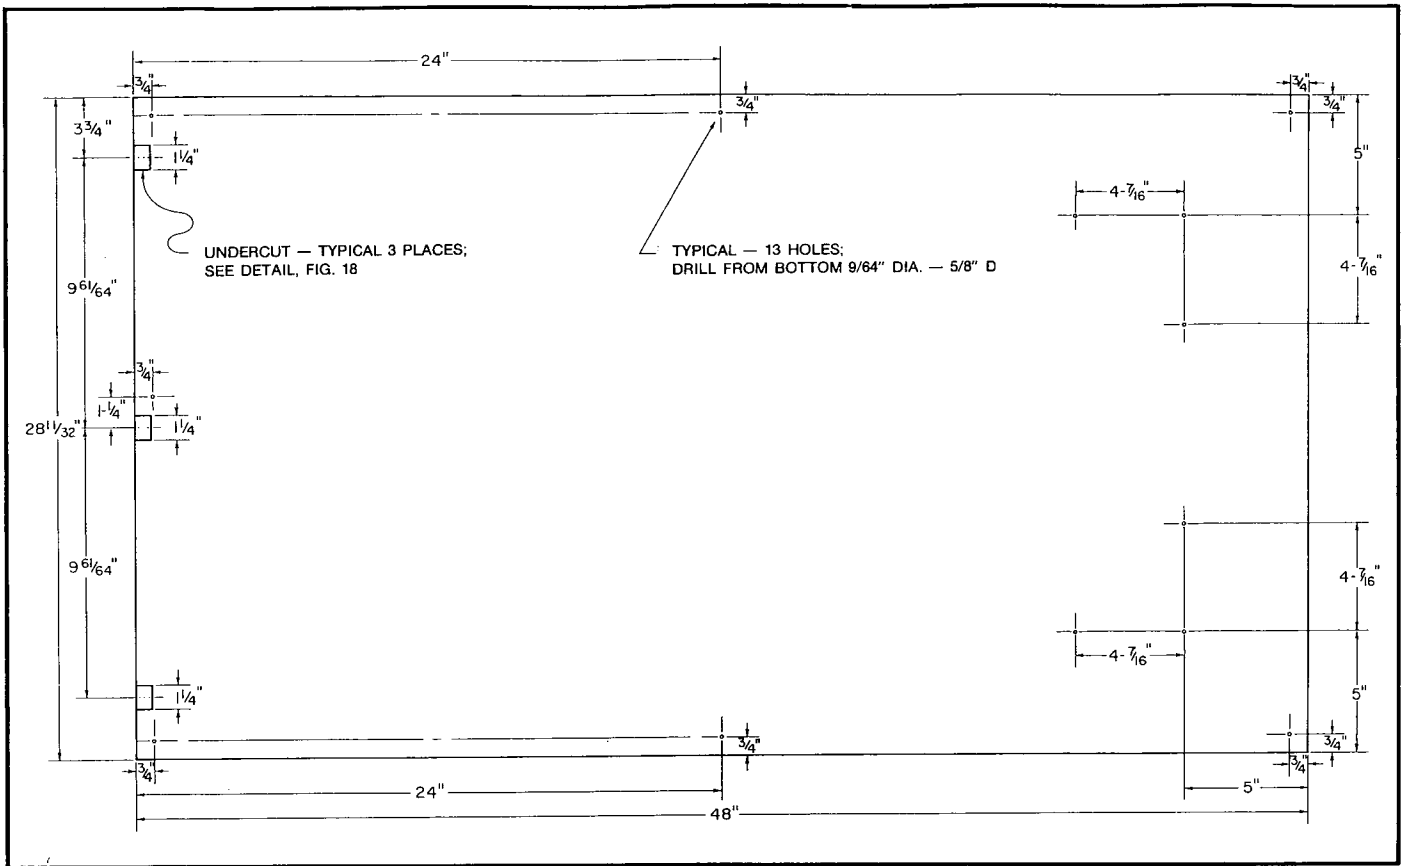


FIG. 19

ASSEMBLING UNIFENCE TABLE AND GUIDE RAIL TO THE SAW

1. Lay the table upside down on a bench or the floor, as shown in Fig. 20
2. Assemble the two legs (A) to the table, as shown in Fig. 20, using six #14 x 3/4" washer face screws supplied. NOTE: overtightening of all screws in particle board may cause them to strip.
3. Fasten the rear table support (B) and front table support (C) Fig. 21, to the bottom of the table, as shown, using four #14 x 3/4" washer face screws (D) supplied. NOTE: The slotted holes closest to the bend in the table supports (B) and (C) should be against the table. Screws (D) for rear table support (B) should be run in tight. Do not completely tighten screws (D) on front table support (C).

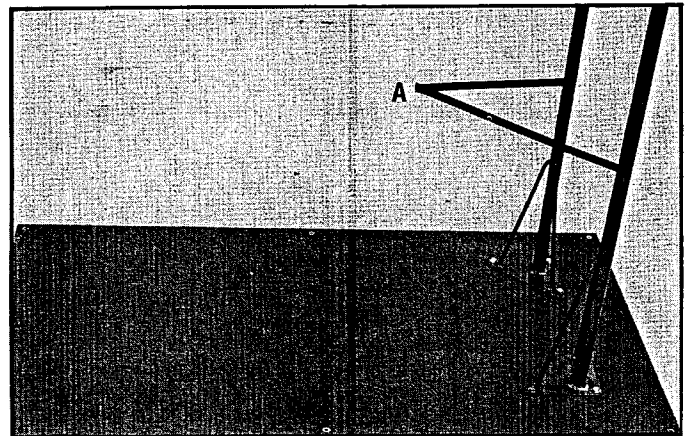


Fig. 20

4. Assemble the adaptor plate (F) Fig. 22 supplied with the RT-31, to the right side of the saw table, as shown, using three M10 x 18mm hex head screws (G) and 10mm flat washers supplied. Before tightening screws (G) make sure top of adaptor plate (F) is flush with or slightly below surface of saw table. Also, be certain that the front edge of the adaptor plate (F) does not extend beyond the front of the saw table.

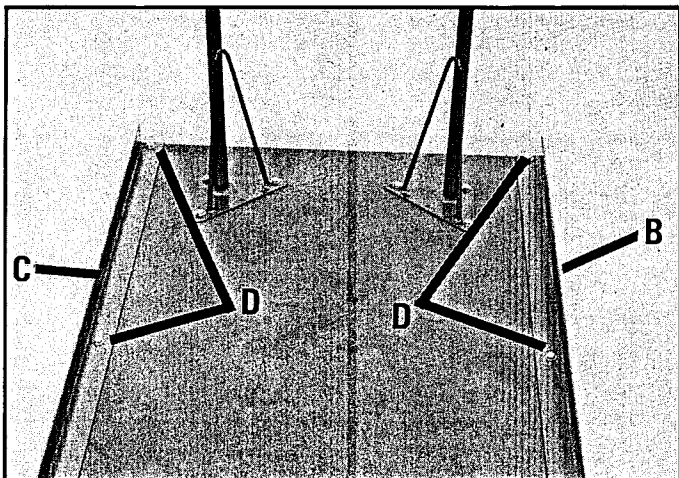


Fig. 21

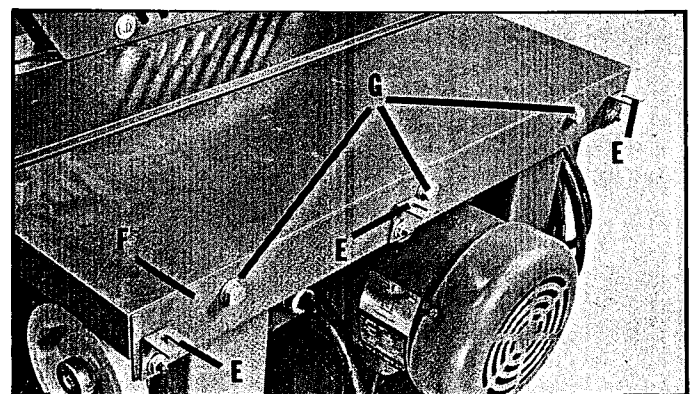


Fig. 22

5. Assemble the three brackets (E) to the adaptor plate (F), as shown in Fig. 22, using three 1/4-20 x 3/4" carriage bolts, washers and nuts supplied. NOTE: The long leg of the brackets (E) should be against the adaptor plate (F) as shown. Do not completely tighten brackets (E) to adaptor plate (F) at this time.

6. Assemble the table (J) to the three table brackets (E) Fig. 23, using three #14 x 3/4" washer face screws (K) and (L) Fig. 24. NOTE: The two screws (K) Fig. 24, should be run in tight. Do not fully tighten screw (L).

7. Using a straight edge, make certain the table surface (M) Fig. 25, is even with the saw table (N). IMPORTANT: Front edge of table (M) must be flush with or slightly behind front edge of saw table (N). Tighten three nuts (H) Fig. 24.

8. With the straight edge across the saw table (N) and the Unifence table (M), as shown in Fig. 25, adjust the two leveling screws (P) so that the Unifence table (M) is level with saw table (N)

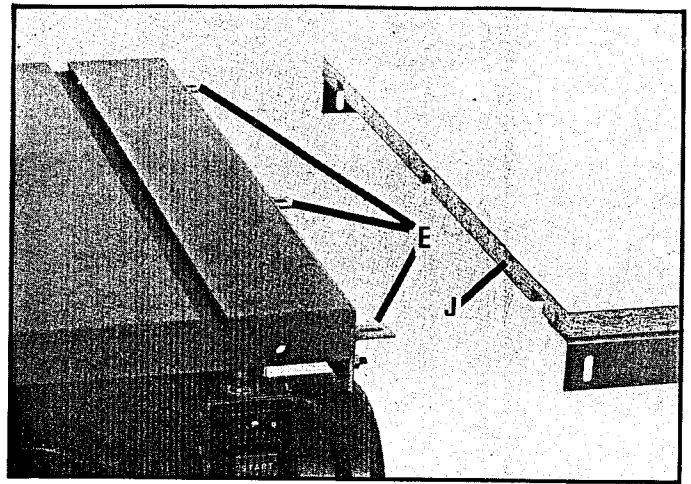


Fig. 23

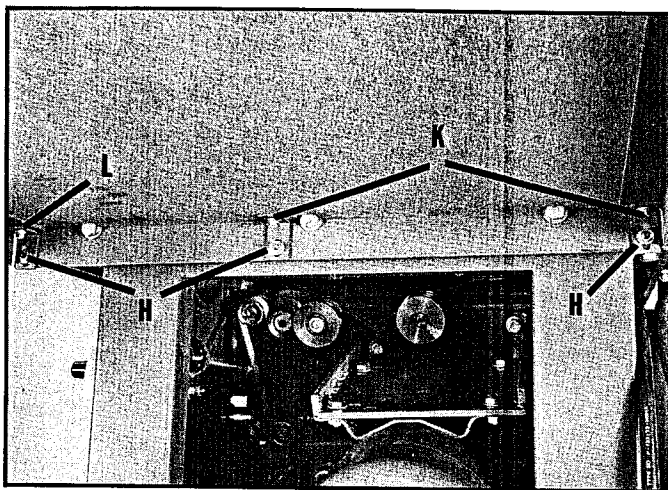


Fig. 24

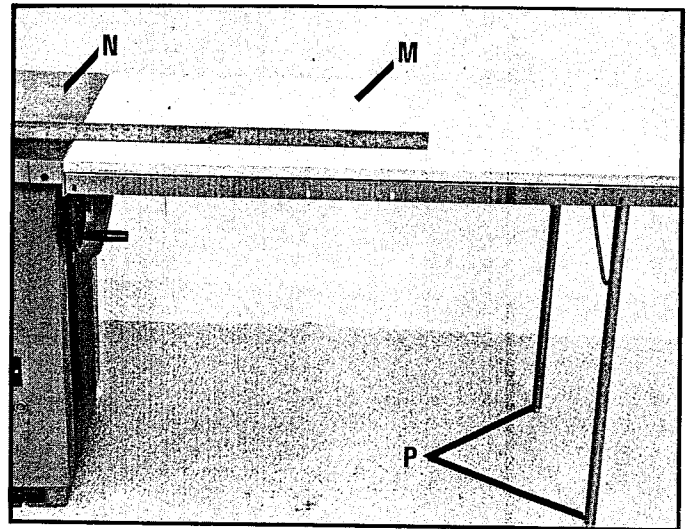


Fig. 25

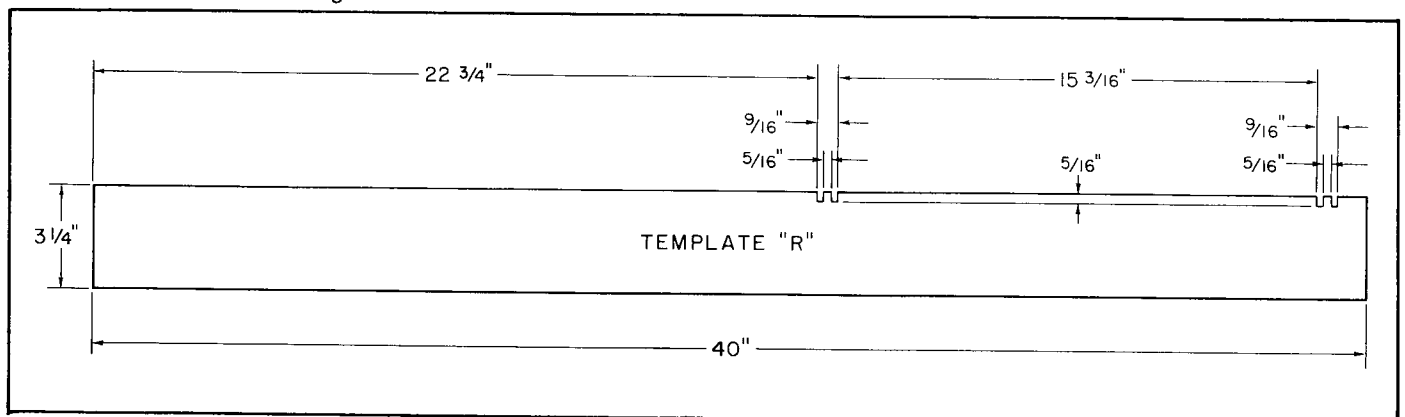


Fig. 26

9. Make a template (R) according to the dimensions, shown in Fig. 26, using a piece of cardboard from the packing material.

10. Place the two 3/8" - 24 hex nuts (Q) in position on the two tabs on the cardboard template (R) as shown in Fig. 27.

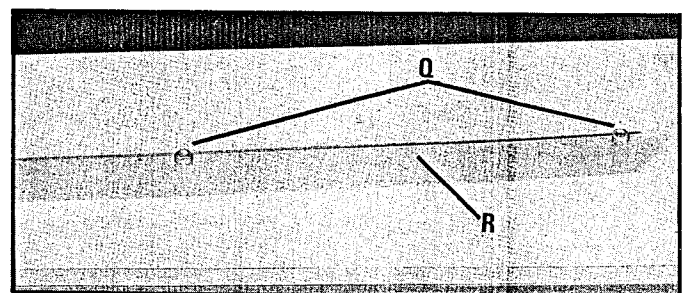


Fig. 27

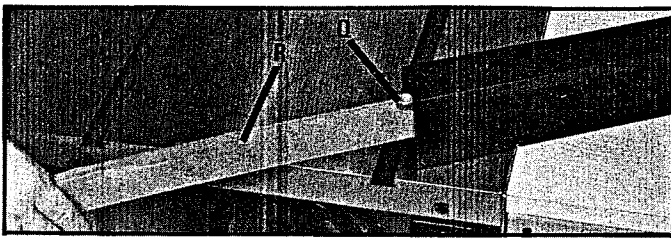


Fig. 28

11. Insert cardboard template (R) into channel in end of guide rail, as shown in Fig. 28, until the two nuts one of which is shown at (Q), line up with the second and fourth holes in the guide rail.

12. The short fine threads of studs (S) are to be threaded into the two hex nuts inside the channel of the guide rail, as shown in Fig. 29.

13. Assemble the guide rail (T) Fig. 30, to the saw table by inserting the two studs (S) into the two holes (U) on front of the saw table and fasten guide rail in place using the two flat washers and hex nuts (V).

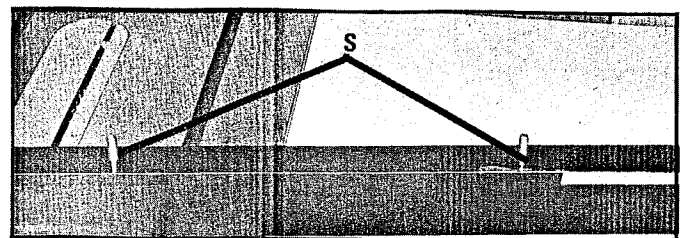


Fig. 29

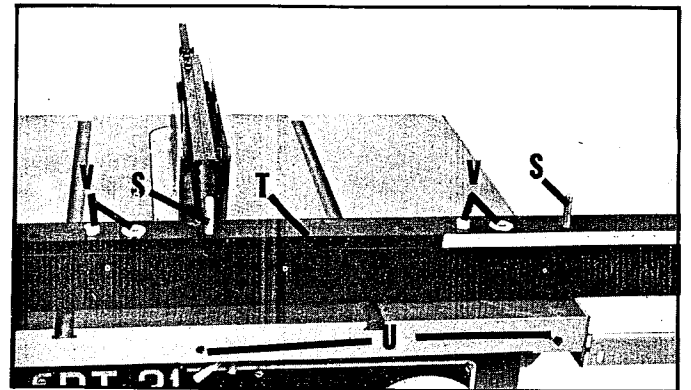


Fig. 30

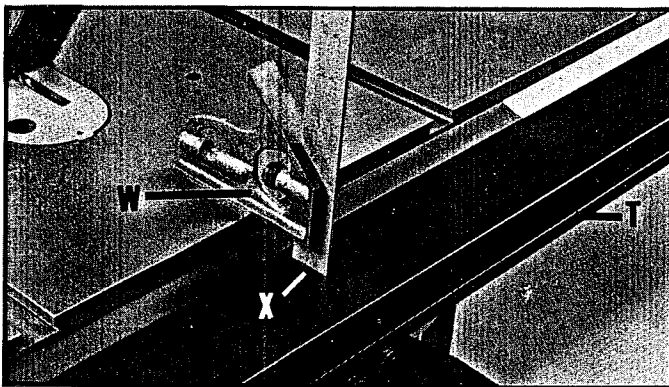


Fig. 31

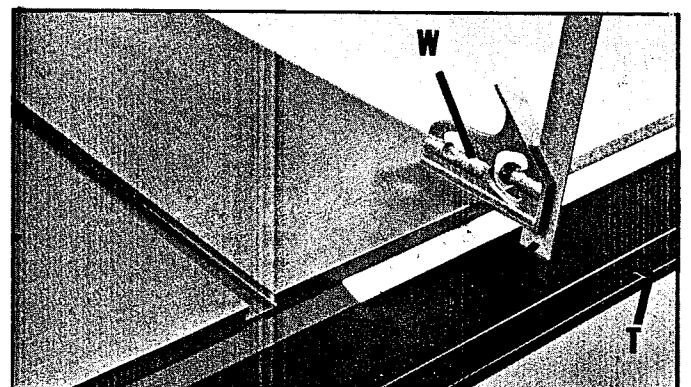


Fig. 32

14. Adjust the guide rail (T) parallel with table surface of the saw by placing a square (W) on the saw table at both the left and right front edge of the table with rule (X) of square against flat surface on top of guide rail, as shown in Figs. 31 and 32. The guide rail (T) can be moved up or down at either end. After you are certain the flat surface of the guide rail is parallel with the table surface, firmly tighten the two nuts that fasten the guide rail to the table.

15. Move front table support (C) Fig. 33, until it contacts back of guide rail (T) and tighten the three screws (D).

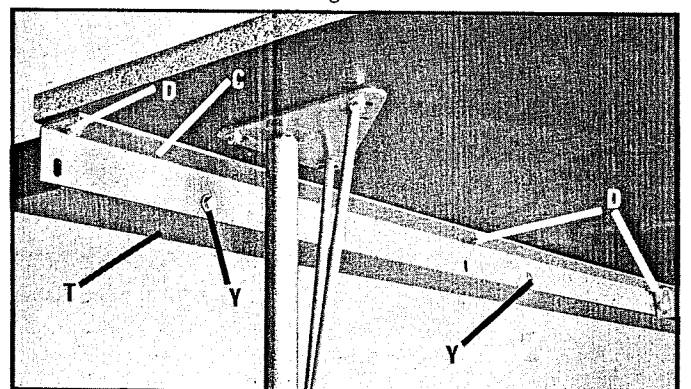


Fig. 33

16. Using the two 1/4-20 x 5/8" screws and 9/32" washers (Y), Fig. 33, fasten the guide rail (T) to the front table support (C), as shown, NOTE: Before tightening two screws (Y) Fig. 33, adjust guide rail (T) Fig. 34, parallel to table surface using an adjustable square (W) in the same manner as Step 14.

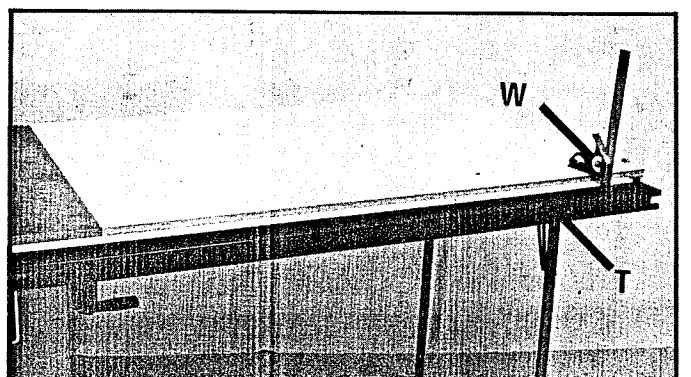


Fig. 34

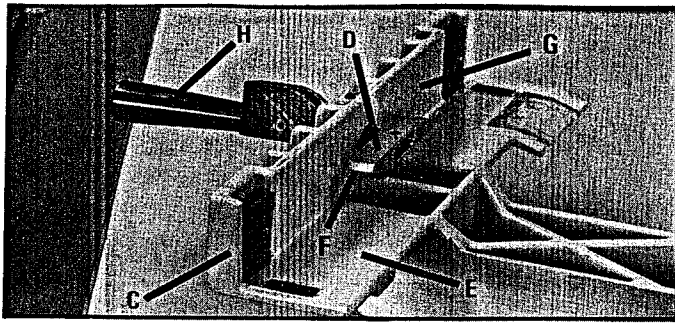


Fig. 35

ASSEMBLING UNIFENCE TO GUIDE RAIL

1. Turn fence body (C) Fig. 35, upside down and lay it on a table or bench. Push handle (H) in against fence body. Before assembling fence body to guide rail make sure that the surface (D) of the clamp bracket is parallel to the face (E) of the fence body and that the inside edge (F) of the clamp bracket is parallel to the surface (G) of the fence body. Turn handle (H) Fig. 35, if necessary.

2. Place fence body (C) Fig. 36, onto the guide rail, making sure clamp bracket is inserted into slot (J) on rail. Then turn handle (H) to the right, which will prevent the fence body from sliding out of the guide rail.

3. Lock the fence body (C) to the guide rail by pushing down on the handle (H) as shown in Fig. 37.

4. Insert the two studs (K) Fig. 38, of fence clamping plate into the two holes (L) located on the side of the fence body (C). Assemble the two washers (B) and lock knobs (A) onto the two studs (K). Do not completely tighten lock knobs (A) as plate (N) must be loose when assembling fence.

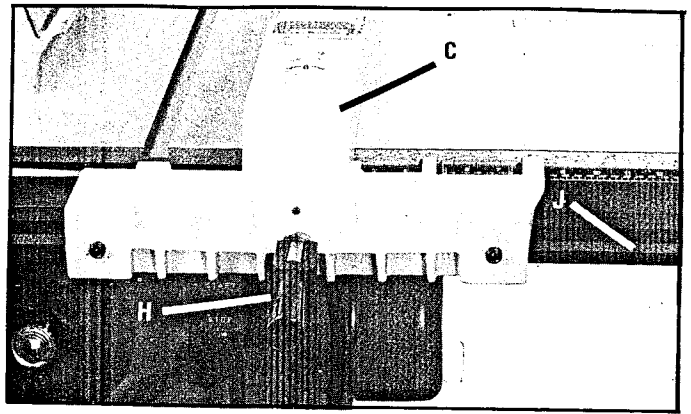


Fig. 36

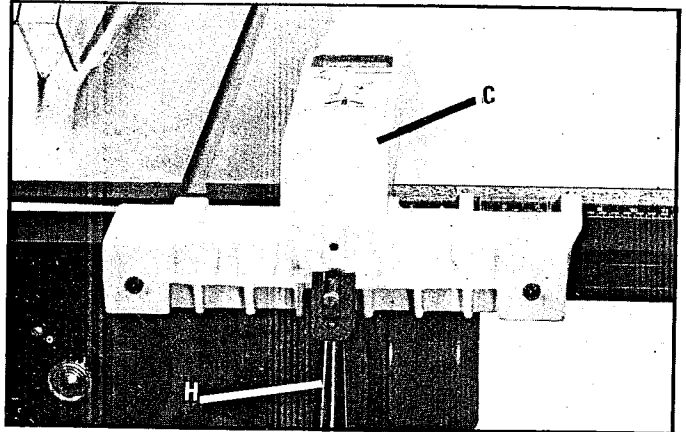


Fig. 37

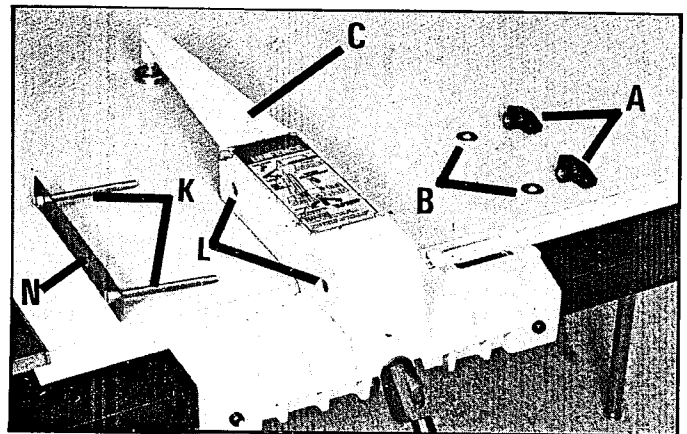


Fig. 38

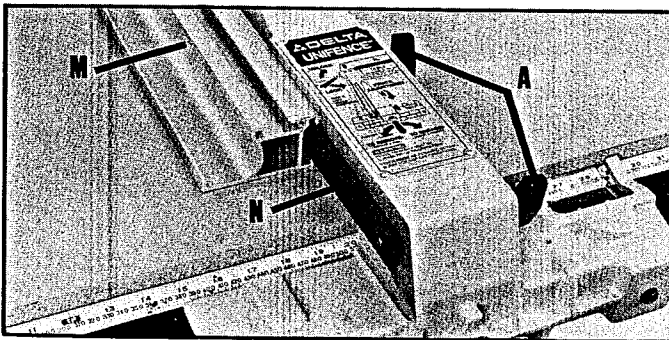


Fig. 39

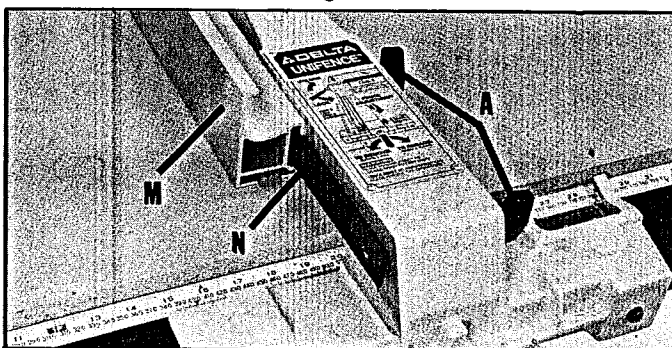


Fig. 40

5. The fence (M) can be assembled to the clamp plate (N) in either the horizontal position as shown in Fig. 39, or the vertical position as shown in Fig. 40. Make sure the two lock knobs (A) are loose and slide the fence (M) onto the clamp plate (N) as shown in Fig. 39, and Fig. 40.

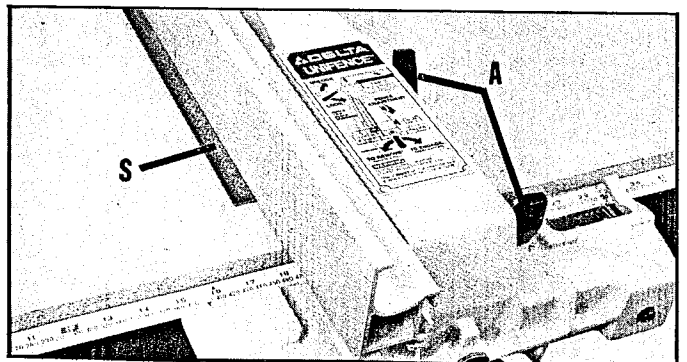


Fig. 41

6. For most normal ripping operations the bottom of the fence should be positioned slightly above the table surface. Place a thin material, such as a wood ruler (S) between the table and fence, as shown in Fig. 41, and tighten the two lock knobs (A).

ASSEMBLING STOP ROD ASS'Y TO MITER GAGE

Assemble stop rod assembly (A) into hole in the side of the miter gage body (B), as shown in Fig. 42, and tighten clamp knob (C).

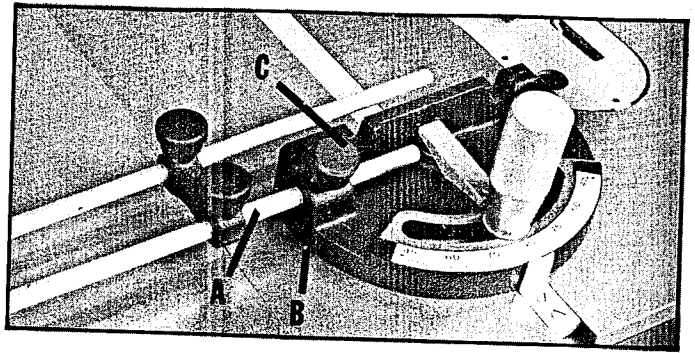


Fig. 42

SAW BLADE RAISING AND TILTING MECHANISMS

To raise or lower the saw blade, loosen lock knob (A) Fig. 43, and turn handwheel (B). When the saw blade is at the desired height, tighten lock knob (A).

To tilt the saw blade, loosen lock knob (C) Fig. 43, and turn handwheel (D). The saw blade can be tilted up to 45 degrees to the right. When the saw blade is at the desired angle, tighten lock knob (C).

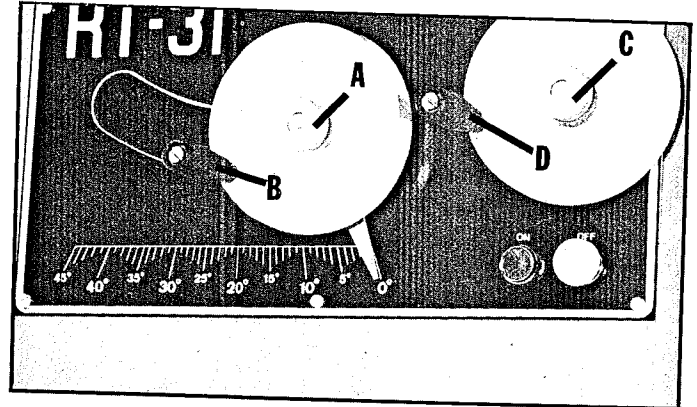


Fig. 43

ADJUSTING 90 DEGREE AND 45 DEGREE POSITIVE STOPS

Factory set positive stops are provided to ensure that the blade can be set at 90° or 45° to the table. To check and adjust, proceed as follows:

1. Disconnect the machine from the power source and remove blade guard.
2. Set the blade at 90° to the table by turning the blade tilting handwheel counterclockwise as far as it will go. Place a square on the table with one end against the blade, as shown in Fig. 44, and check to see if the blade is exactly 90° to the table.
3. If an adjustment is necessary, turn blade tilting handle clockwise enough to allow you to locate nut (A) Fig. 45, through the right hand side of the machine, and loosen nut (A). NOTE: The table has been removed for clarity in Fig. 45. Then loosen screw (B) Fig. 44. Turn blade tilting handle counterclockwise until the blade is perfectly set at 90° to the table and lock it in place. Tighten screw (B) Fig. 44 until it bottoms and tighten nut (A) Fig. 45.
4. The 45° positive stop can be checked and adjusted in the same manner by means of the set screw (C) Fig. 46, after the nut (D) Fig. 45, is loosened. Access to nut (D) Fig. 45, can be made through the front end of the table insert opening.
5. After adjustments are completed, replace blade guard.

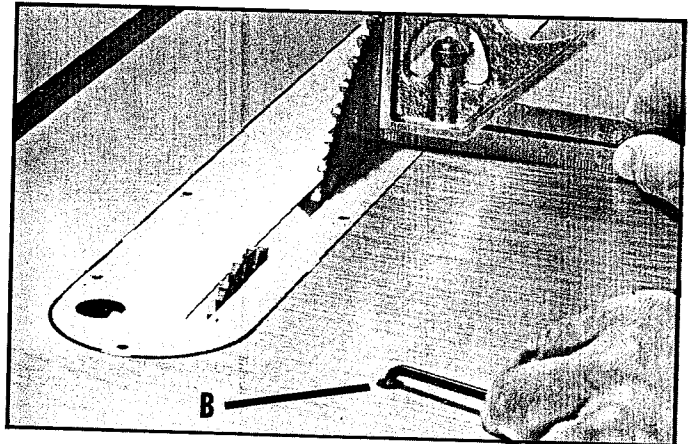


Fig. 44

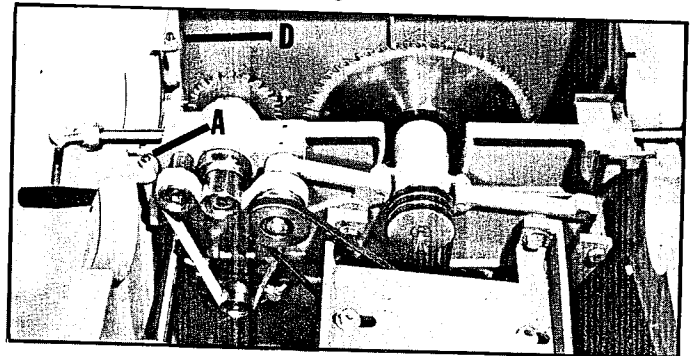


Fig. 45

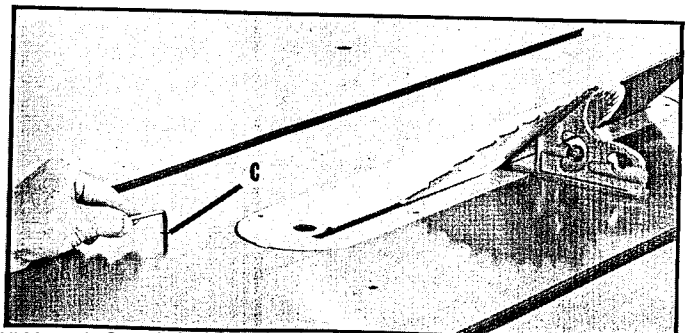


Fig. 46

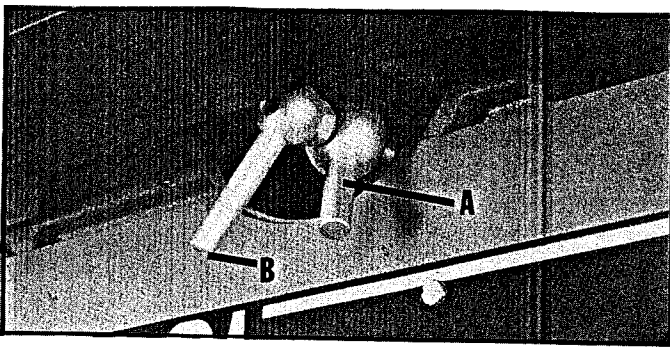


Fig. 47

ADJUSTING SCORING BLADE

The scoring blade must always be in alignment with the saw blade. To adjust the scoring blade right or left, loosen clamp lever (A) Fig. 47. Turn lever (B) to the left to shift scoring blade right. Turn lever (B) to the right to shift scoring blade left. When scoring blade is aligned with saw blade, tighten clamp lever (A) Fig. 47.

The scoring blade can be raised or lowered by loosening clamp lever (A) Fig. 47, and inserting rod (C) in arbor eccentric (D) Fig. 48. Rotate arbor eccentric (D) Fig. 48, using rod (C), until the scoring blade is at the desired height. Tighten clamp lever (A) Fig. 47.

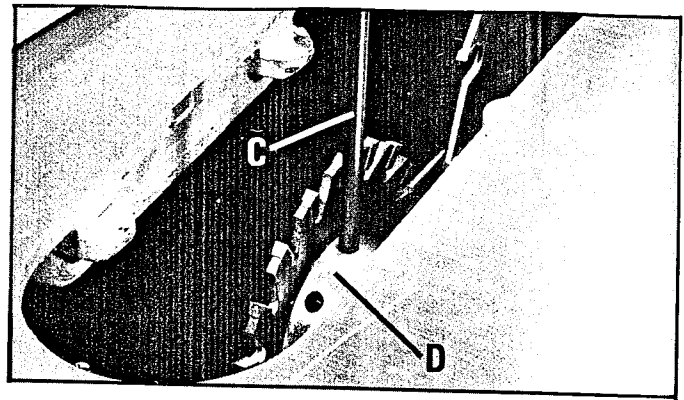


Fig. 48

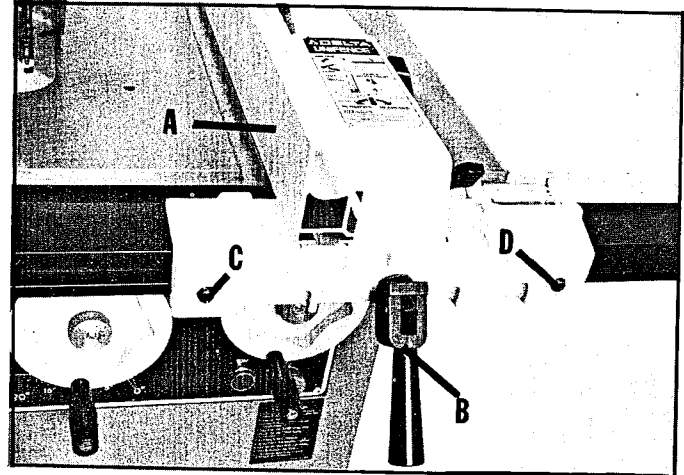


Fig. 49

ADJUSTING FENCE PARALLEL TO MITER GAGE SLOTS

The fence (A) Fig. 49, should be adjusted so it is parallel to the miter gage slots. To check and adjust, move the fence until the bottom front edge of the fence is in line with the edge of the miter gage slot, and push down on fence clamping lever (B). Check to see if the fence is parallel to the miter gage slot the complete length of the table. If the rear of the fence must be moved to the left, slightly tighten screw (C). If the rear of the fence must be moved to the right, slightly tighten screw (D). **IMPORTANT: DO NOT OVERTIGHTEN SCREWS (C) AND (D) FIG. 49. VERY LITTLE MOVEMENT OF THESE SCREWS IS NECESSARY WHEN ADJUSTING THE FENCE PARALLEL WITH THE MITER GAGE SLOT.**

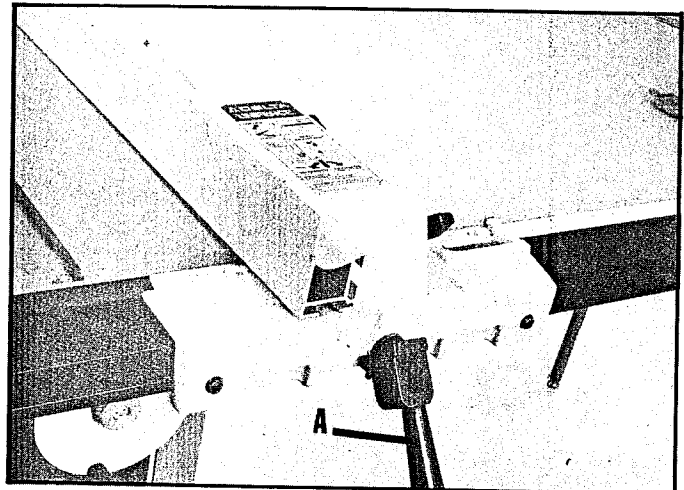


Fig. 50

ADJUSTING CLAMPING ACTION OF FENCE LOCKING HANDLE

When the fence locking handle (A) is pushed to the down position, as shown in Fig. 50, the fence body should be completely clamped to the guide rail. If the fence body is not completely clamped to the guide rail when the lever is in the position shown in Fig. 50, lift up on locking handle (A) Fig. 51, and slightly tighten two screws (B). Screws (B) should be tightened an equal amount. Check to see if the fence body is completely fastened to the rail by pushing down on locking lever (A). Adjust further if necessary. **IMPORTANT: AFTER ADJUSTING THE CLAMPING ACTION OF THE FENCE LOCKING HANDLE, CHECK TO SEE IF THE FENCE IS PARALLEL TO THE MITER GAGE SLOT AND ADJUST IF NECESSARY.**

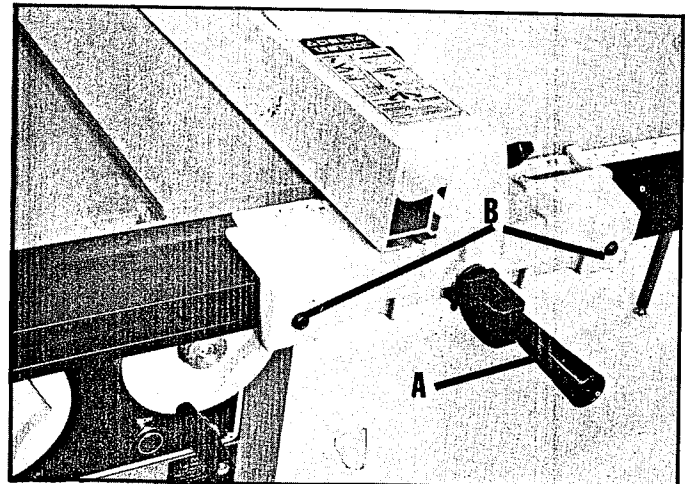


Fig. 51

ADJUSTING MITER GAGE AND STOP RODS

1. The miter gage body (B) Fig. 52 can be adjusted up to 45° right and left by loosening lock knob (D) and depressing lever (E).

2. The stop rods can be adjusted by loosening lock knobs (C).

3. Positive stops are provided on the miter gage at the 90 and 45 degree right and left positions. To adjust the gage to a 45° angle, right or left, hold a square at a 45° angle against the bar and body (B) Fig. 54. After the amount of adjustment has been determined, remove the gage from the table with the base facing up, as shown in Fig. 55. Loosen lock screw (A) with allen wrench and turn adjusting hex head screw, located on the inside of the miter gage body directly in back of set screw (A) Fig. 55. After the hex head stop screw is adjusted correctly, tighten screw (A). The other 45° positive stop can be adjusted in the same manner.

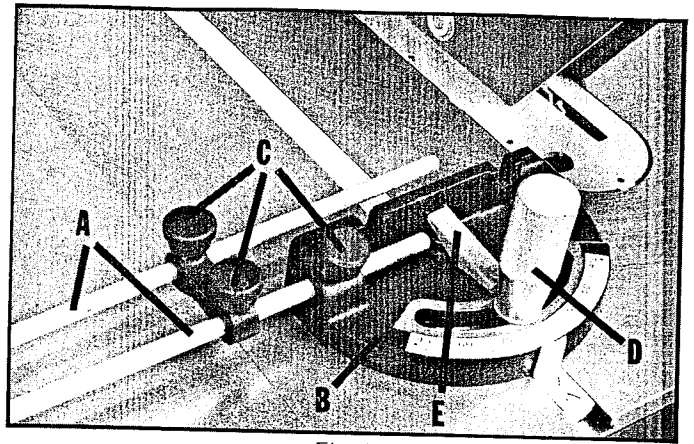


Fig. 52

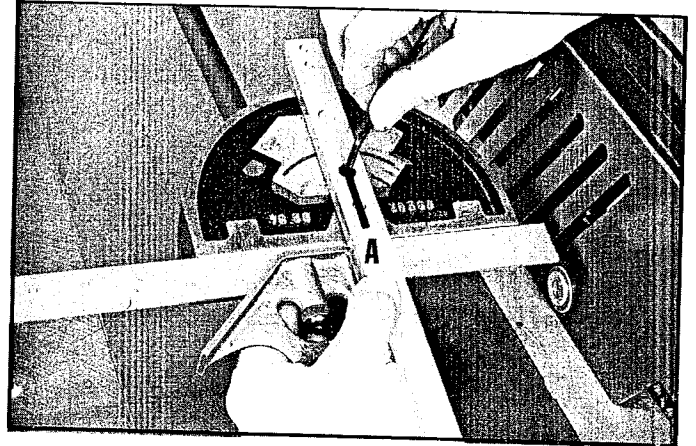


Fig. 53

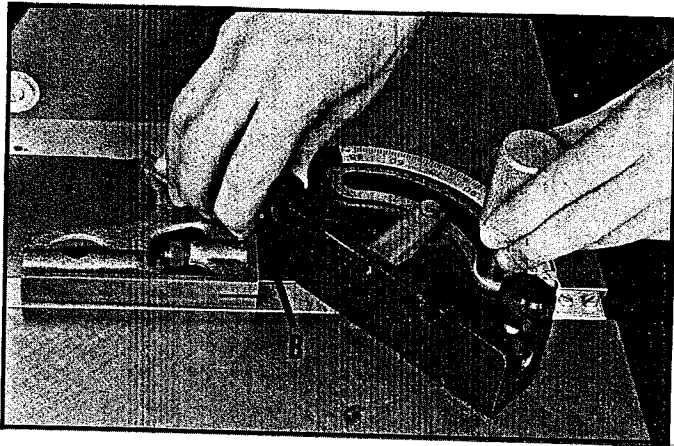


Fig. 54

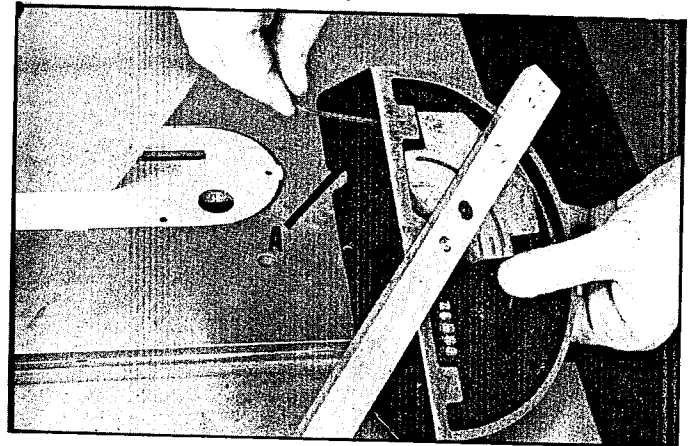


Fig. 55

ADJUSTING V-BELT TENSION

1. To adjust V-belt tension, position the saw blade at a 45° cutting angle. Loosen bolts (A) and (B) Fig. 56. Press lightly on bracket (C) until belts are properly tensioned, and tighten bolts (B) and (A).

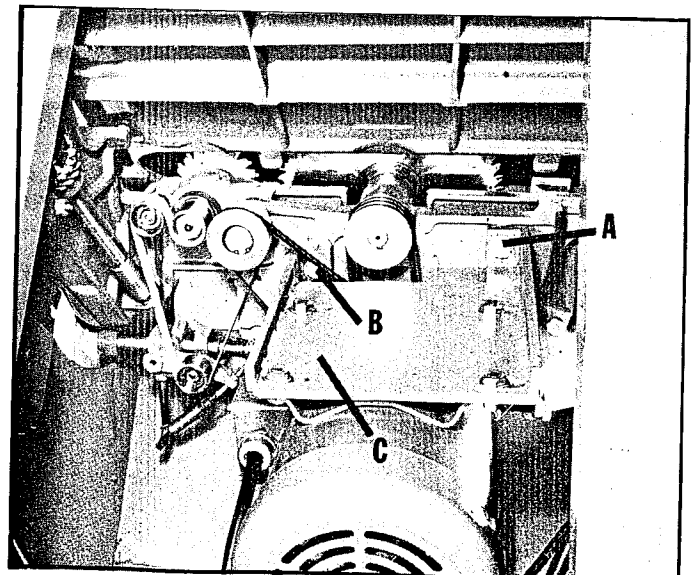


Fig. 56

ADJUSTING TENSION ON SCORING DRIVE BELT

To increase or decrease tension on the scoring drive belt, tighten or loosen nut (A) Fig. 57.

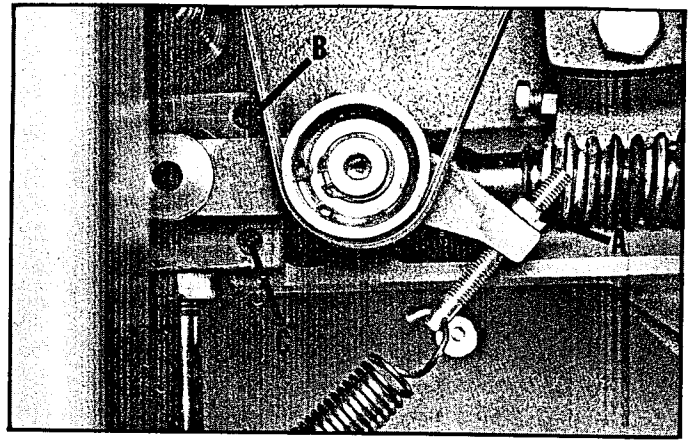


Fig. 57

SCORING BELT TRACKING

1. The scoring belts should track in the center of the four pulleys. If adjustment is necessary, loosen set screw (A) Fig. 58.

2. Tracking adjustments can be made (refer to Fig. 57), by loosening set screw (B) and tightening set screw (C); or loosening set screw (C) and tightening set screw (B). Once proper belt tracking is obtained, retighten set screw (A) Fig. 58.

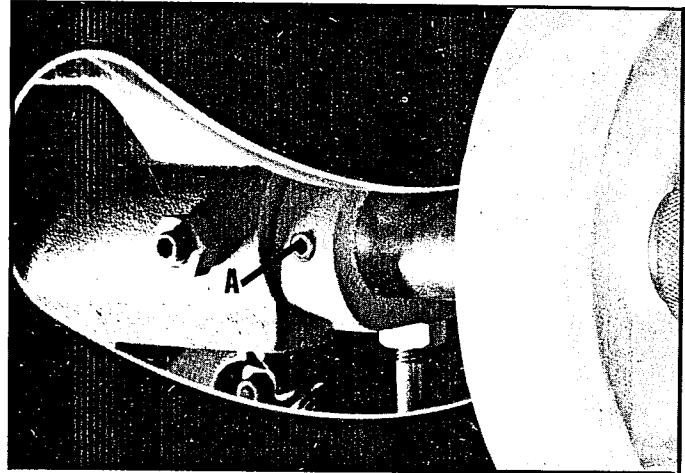


Fig. 58

ELEVATING AND BEVEL SHAFT END PLAY ADJUSTMENT

1. After extensive use, end play in the elevating shaft could develop. This end play can be removed by loosening lock nut (A) Fig. 59 and tightening screw (B). Retighten lock nut (A) after adjustment has been made.

2. End play in the bevel shaft can be removed by loosening nut (A) Fig. 60 and tightening screw (B). Retighten nut (A) after adjustment has been made.

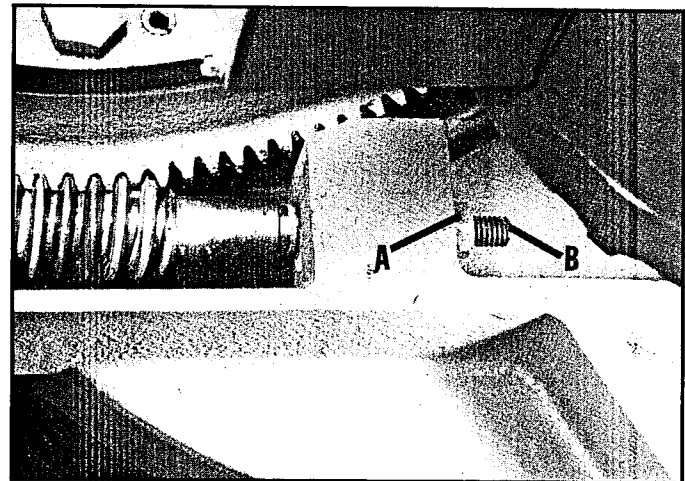


Fig. 59

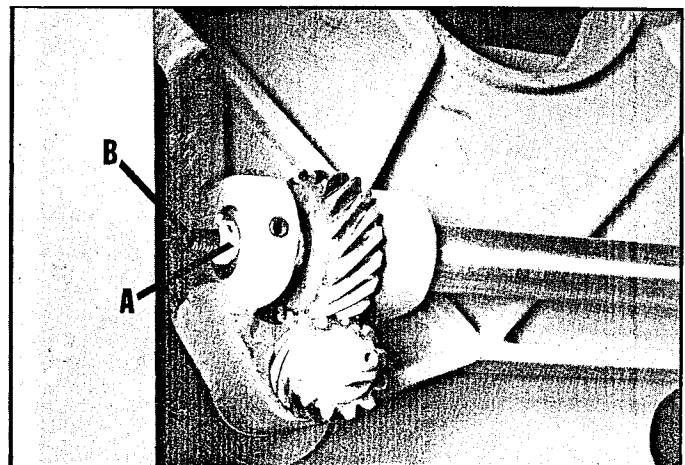


Fig. 60

UPPER AND LOWER BLADE STOP ADJUSTMENT

1. To adjust the upper blade stop, loosen nut (A) Fig. 61 and turn screw (B). NOTE: The correct adjustment with a 10" blade is that the blade should be 3-1/8" above the table surface when the blade is all the way to the top.

2. To adjust the lower blade stop, loosen nut (C) and turn screw (D) Fig. 61. The correct adjustment is when a 10" blade is just below the table surface when the blade is all the way to the bottom.

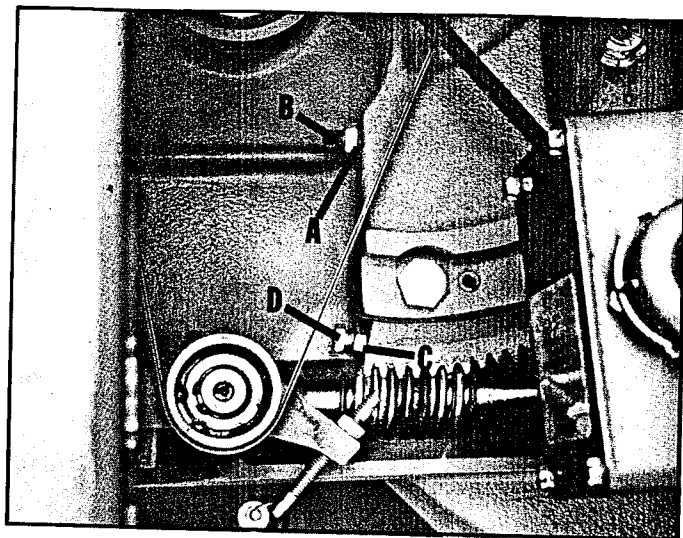


Fig. 61

CHIP EXHAUST CHUTE

The lower half of the saw blade is completely covered with a large chip exhaust chute (A) Fig. 62. The exhaust chute moves with the saw arbor when the blade is tilted. The diameter of the opening of the exhaust chute is 3" O.D. and may be attached to a central dust collection system.

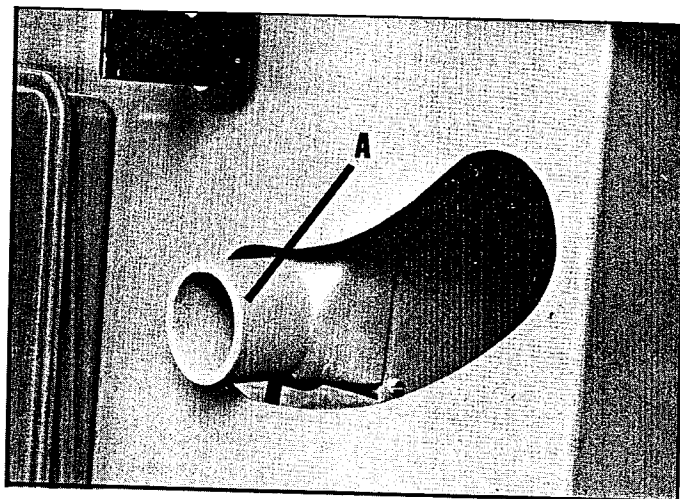


Fig. 62

START/STOP SWITCH

The start/stop switch is located on the front of the machine for easy accessibility. To start the machine, press the smaller green button (A) Fig. 63. To stop the machine press the larger red stop button (B).

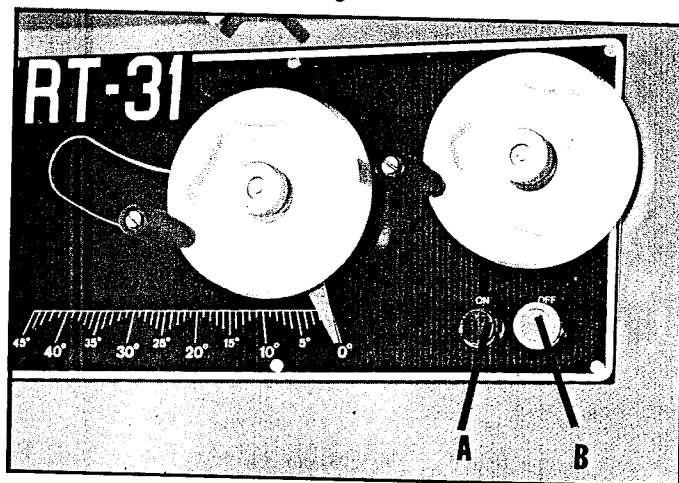


Fig. 63

OVERLOAD PROTECTION

The RT-31 Saw is provided with overload protection which will shut off the motor if the saw is overloaded or if line voltage falls below safe levels. If the motor shuts off due to overloading or low voltage, let the motor cool for approximately five minutes. The overload block supplied with this saw will automatically reset itself and the machine can be started again by pushing the start button.

If the machine continually shuts off due to overloading, the cause of overloading must be corrected. If this happens, it is recommended you obtain advice from a qualified electrician.

UNIFENCE OPERATION

Before operating, make certain the fence is adjusted parallel to the miter gage slot, as explained on page 12.

For most normal ripping operations of standard size lumber the fence is used in the vertical position, as shown in Fig. 64.

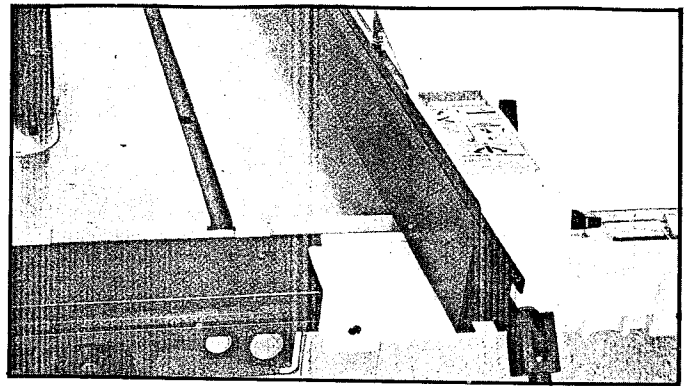


Fig. 64

When ripping thin stock, it is sometimes more convenient to use the fence in the horizontal position, as shown in Fig. 65.

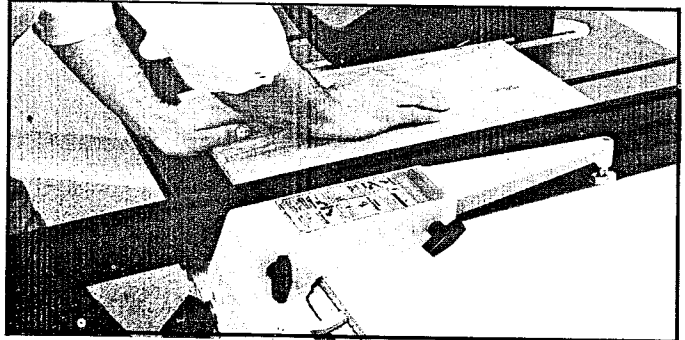


Fig. 65

When ripping materials with a veneer facing that extends over the material, the fence should be in the horizontal position with the veneer extending over the lip of the fence, as shown in Fig. 66.

When ripping materials with a veneer facing and the material is not thick enough for the veneer to extend over the lip of the fence, as shown in Fig. 66, the fence can be positioned slightly above the surface of the table and the veneer can be placed between the fence and the table with the material against the fence.

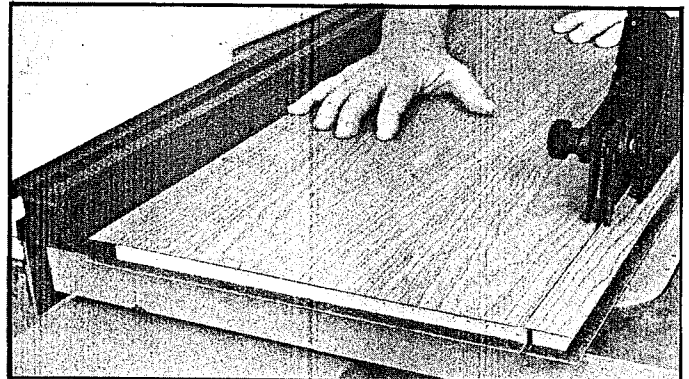


Fig. 66

To move the fence along the guide rail, lift up clamp lever (A), as shown in Fig. 67, slide fence to the desired position on the rail, and push down on clamp lever (A) to lock fence in place.

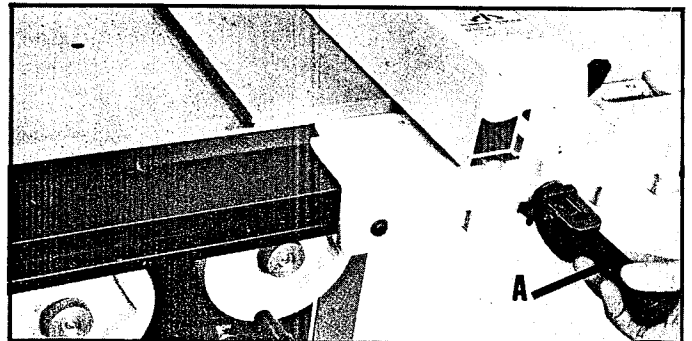


Fig. 67

The distance the fence is positioned away from the blade is indicated by the two witness lines (A) and (B) Fig. 68, located on the cursor (D). Witness line (A) indicates the distance the fence is away from the blade when the fence is in the horizontal position and witness line (B) indicates the distance the fence is away from the blade when the fence is in the vertical position. If it is necessary to adjust cursor (D), make a test cut with the fence in either the vertical or horizontal position, measure the distance of the finished cut and move the cursor (D) by loosening the two screws (C) Fig. 68.

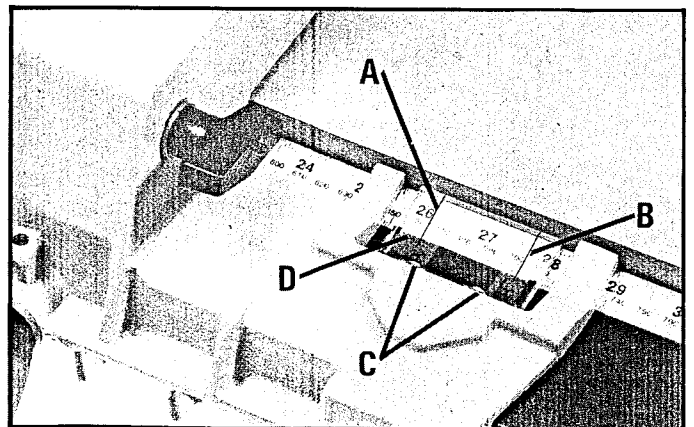


Fig. 68

To remove the fence and fence body assembly (D) Fig. 69, from the guide rail, lift up on fence clamping lever (E) and turn lever (E) to the left indent position. The fence assembly (D) can then be pulled straight off the guide rail and removed, as shown in Fig. 69.

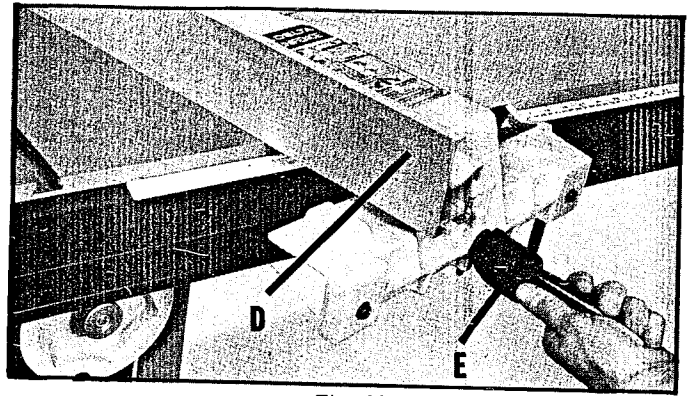


Fig. 69

RIPPING ON LEFT SIDE OF SAW BLADE

In some cases it may be desirable to use the fence on the left side of the saw blade. This is easily accomplished by repositioning the fence, fence clamp bar and lock knobs so that the fence is attached to the right side of the fence body, as shown in Fig. 70.

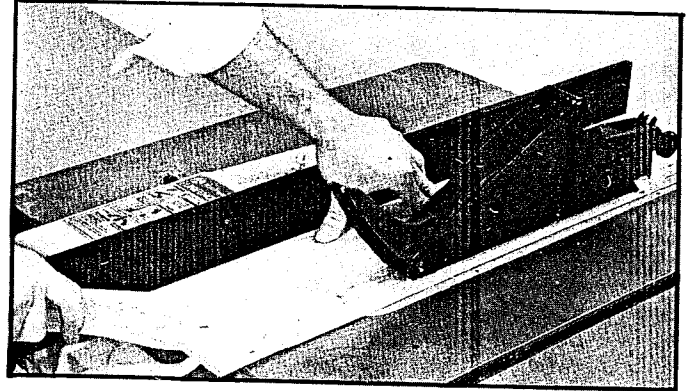


Fig. 70

USING THE UNIFENCE AS A CUT-OFF GAGE

The fence can be used as a cut-off gage when crosscutting a number of pieces to the same length. **IMPORTANT:** When using the fence as a cut-off gage, position the fence to the front, as shown in Fig. 71, or purchase the accessory 34-883, 12" long fence, as shown in Fig. 72.

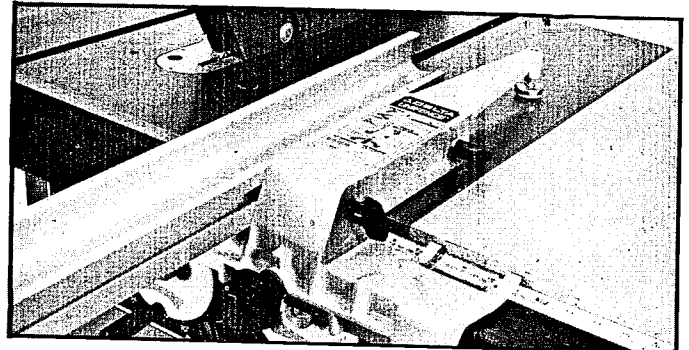


Fig. 71

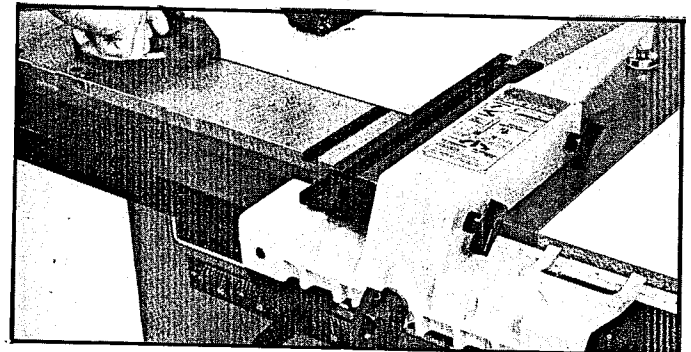


Fig. 72

MITER GAGE AND ADJUSTABLE STOP ROD OPERATION

The miter gage is used to support the material being cut when performing crosscut operations. The material should be held firmly against the body of the miter gage (A) as shown in Fig. 73. The miter gage and the material are pushed all the way through the cut and clear of the blade.

For repetitive work, the adjustable stop rod assembly (B) Fig. 73, can be set to the desired length of work

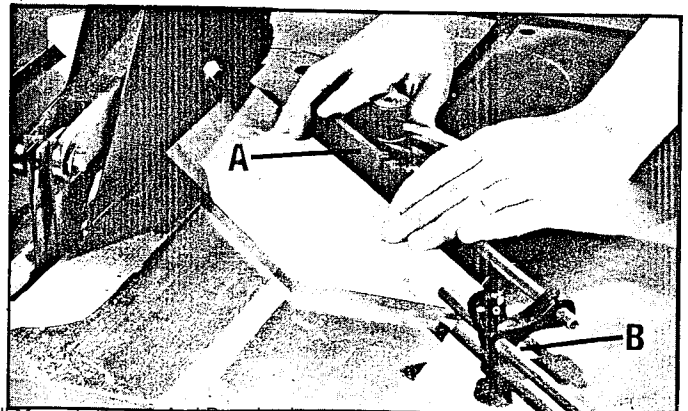


Fig. 73

ASSEMBLING MITER GAGE SUPPORT EXTENSION

A miter gage support extension (A) Fig. 74, is supplied with your RT-31 10" Panel Scoring Saw for increasing the distance in front of the saw table to support the miter gage when cross-cutting large workpieces. To assemble the support extension, proceed as follows:

1. Insert clamp (B) Fig. 74, into groove (C) of guide rail.
2. Fasten extension (A) Fig. 74, to bracket (D) using the two 30mm hex socket head cap screws (F)

3. Assemble extension (A) and bracket (D) to the guide rail by inserting the screw (E) through the centerhole in the bracket (D) and fasten in place using the flat washer (G) and clamp handle (H) Fig. 74.

4. Align the miter gage slot of the extension to the miter gage slot in the table by tightening or loosening the four 16mm socket set screws (J) Fig. 74.

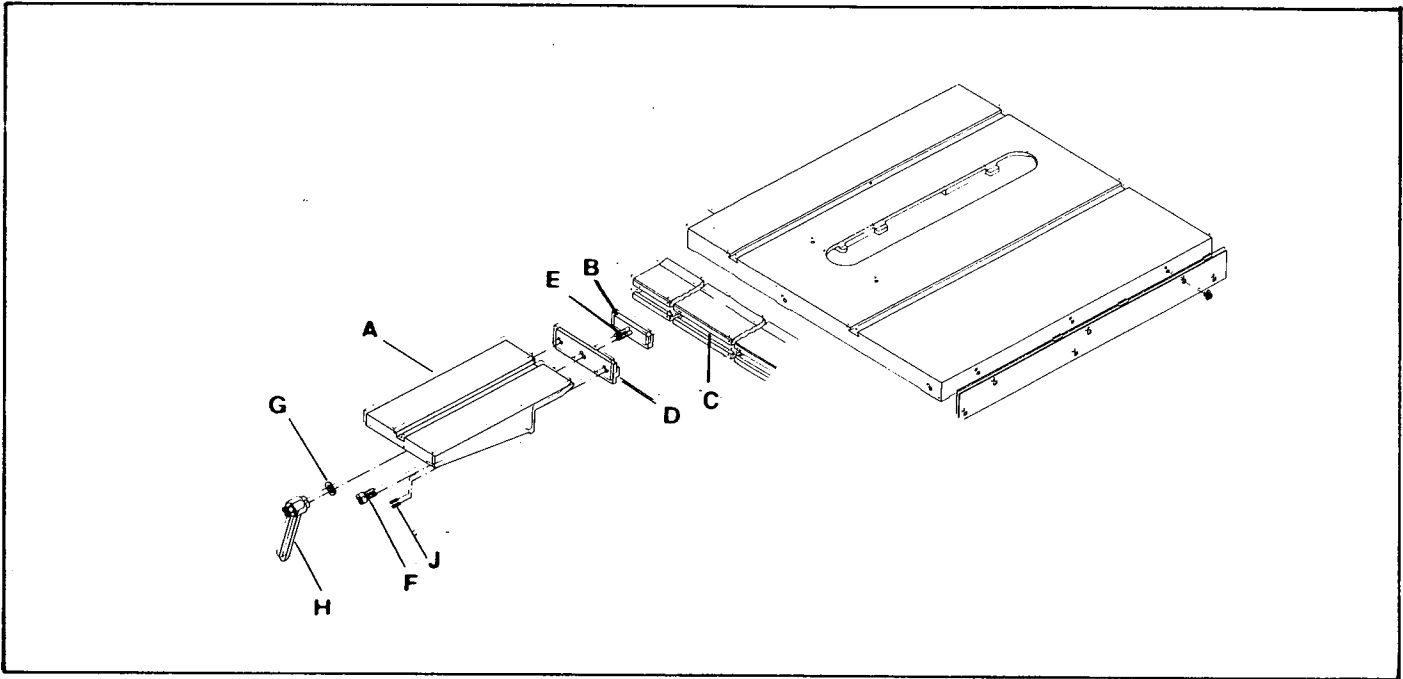


Fig. 74

ACCESSORY STORAGE

Built into the saw cabinet is a handy tray for storing miscellaneous saw accessories (A), Fig. 75. Miter gage, saw blades and other accessories may be stored on the side of the saw cabinet.

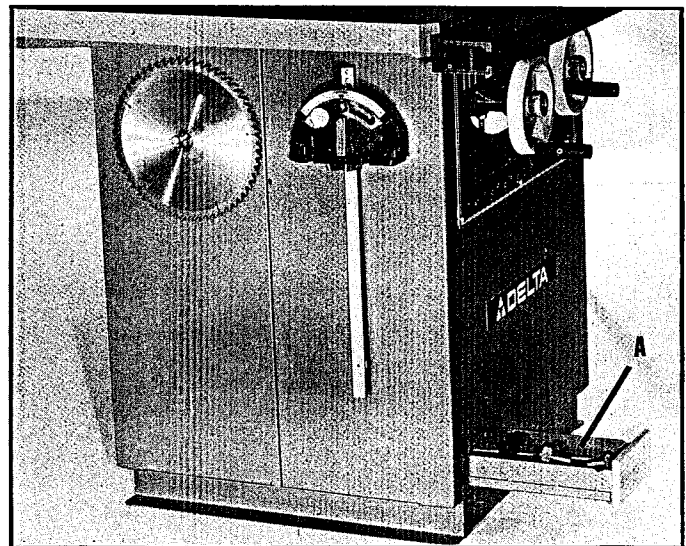


Fig. 75




PARTS, SERVICE OR WARRANTY ASSISTANCE

All Delta Machines and accessories are manufactured to high quality standards and are serviced by a network of factory service centers and authorized service stations listed in your owner's manual. To obtain additional infor-

mation regarding your Delta quality product or to obtain parts, service or warranty assistance, please call or fax Delta's toll-free 'hotline' number.

Delta maintains a modern, efficient Parts Distribution Center, maintaining an inventory of over 15,000 parts located in Memphis, Tennessee.

Highly qualified and experienced Customer Service Representatives are standing by to assist you on weekdays from 8:00 A.M to 5:00 P.M. Memphis time.

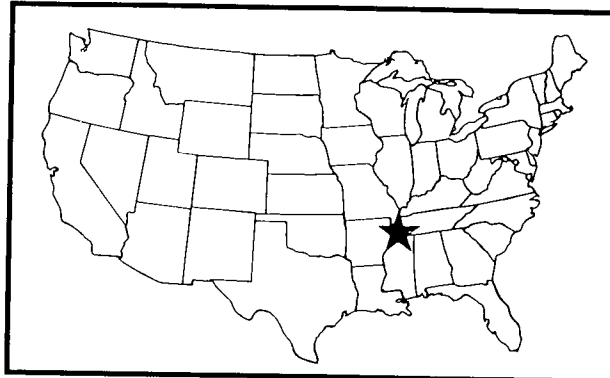

Memphis, TN 38118
4290 Raines Road
Phone: (901) 363-8800

HOTLINE
800-223-PART
FAX: 800-535-6488

FACTORY SERVICE CENTERS

ALABAMA

Birmingham 35209
Porter-Cable Corporation
131 W. Oxmoor Rd.
Suite 105
205-942-6325

CALIFORNIA

City of Industry 91745
Porter-Cable Corporation
1305 John Reed Court
818-333-3566

San Leandro 94577
Porter-Cable Corporation
3039 Teagarden Street
P.O. Box 1913
415-357-9762

COLORADO

Denver 80204
Porter-Cable Corporation
2561 West 8th Ave.
303-892-6113

FLORIDA

Hialeah 33014
Porter-Cable Corporation
16373-75 NW 57th Ave.
305-624-2523

Orlando 32803
Porter-Cable Corporation
1807½ Winter Park Road
407-644-8100

Tampa 33609
Porter-Cable Corporation
4536 W. Kennedy Blvd.
813-877-9585

GEORGIA

Forest Park 30050
Porter-Cable Corporation
4017 Jonesboro Road
404-363-8000

ILLINOIS

Addison (Chicago) 60101
Porter-Cable Corporation
311 Laura Drive
312-628-6100

MARYLAND

Baltimore 21227
Porter-Cable Corporation
7397 Washington Blvd.
Suite #102
301-799-9394
Fax: 301-799-9398

MASSACHUSETTS

Boston (Allston) 02134
Porter-Cable Corporation
414 Cambridge Street
617-782-1700

MICHIGAN

Grand Rapids 49508
Porter-Cable Corporation
3755 G Broadmoor S.E.
Broadmoor Business Center
616-949-9040

Southfield (Detroit) 48075
Porter-Cable Corporation
18650 W. Eight Mile Road
313-569-4333

MINNESOTA

Minneapolis 55429
Porter-Cable Corporation
4315 68th Avenue North
612-561-9080

MISSOURI

North Kansas City 64116
Porter-Cable Corporation
1141 Swift Avenue
P.O. Box 12393
816-221-2070

St. Louis 63119
Porter-Cable Corporation
7574 Watson Road
314-968-8950

NEW JERSEY

Union 07083
Porter-Cable Corporation
945 Ball Avenue
201-964-1730

NEW YORK

Flushing 11365
Porter-Cable Corporation
175-25 Horace Harding
Expressway
212-225-2040

NORTH CAROLINA

Charlotte 28209
Porter-Cable Corporation
4303B South Boulevard
704-525-4410

OHIO

Columbus 43215
Porter-Cable Corporation
4560 Indianola Avenue
614-263-0929
Valley View 44125
Porter-Cable Corporation
Sweet Valley Business Park
Unit #18
216-447-9030

PENNSYLVANIA

Philadelphia 19154
Porter-Cable Corporation
12285 McNulty Road
215-677-7800
Fax No.: 215-677-9908

RHODE ISLAND

Providence 02914
Porter-Cable Corporation
1009 Waterman Avenue
401-434-3620

TEXAS

Dallas 75220
Porter-Cable Corporation
10714 N. Stemmons Freeway
214-353-2996

Houston 77092
Porter-Cable Corporation
5201 Mitchelldale, Suite B-9
713-682-0334

WASHINGTON

Renton 98055
Porter-Cable Corporation
268 Southwest 43rd Street
206-251-6680

WISCONSIN

Milwaukee 53222
Porter-Cable Corporation
10700 W. Burleigh Street
414-774-3650



▲ DELTA
Two Year Limited Warranty
Delta Machinery

Delta will repair or replace, at its expense and at its option, any Delta machine, machine part, or machine accessory which in normal use has proven to be defective in workmanship or material, provided that the customer notifies his supplying distributor of the alleged defect within two years from the date of delivery to him, of the product and provides Delta Machinery with reasonable opportunity to verify the defect by inspection. Delta Machinery may require that electric motors be returned prepaid to the supplying distributor or authorized service center for inspection and repair or replacement. Delta Machinery will not be responsible for any asserted defect which has resulted from misuse, abuse or repair or alteration made or specifically authorized by anyone other than an authorized Delta service facility or representative. Under no circumstances will Delta Machinery be liable for incidental or consequential damages resulting from defective products. This warranty is Delta Machinery's sole warranty and sets forth the customer's exclusive remedy, with respect to defective products; all other warranties, express or implied, whether of merchantability, fitness for purpose, or otherwise, are expressly disclaimed by Delta.

▲ DELTA
Delta International Machinery Corp.
246 Alpha Drive, Pittsburgh, PA 15238

Printed in U.S.A.
Nupp Printing Co.

DADO CUTTING WITH THE RT-31 10" PANEL SAW

On some earlier models of RT-31 10" Panel Scoring Saws, it is necessary to modify the side plate cover to allow the use of dado blades.

To modify the side plate cover, proceed as follows:

1. Make certain the machine is disconnected from the power source.
2. Remove the blade guard and splitter assembly from the saw.
3. Carefully remove the saw blade and scoring blade.
4. Unscrew the (4) slot head screws and remove the side plate cover (A) Fig. 1, which is done thru the rear of the machine.

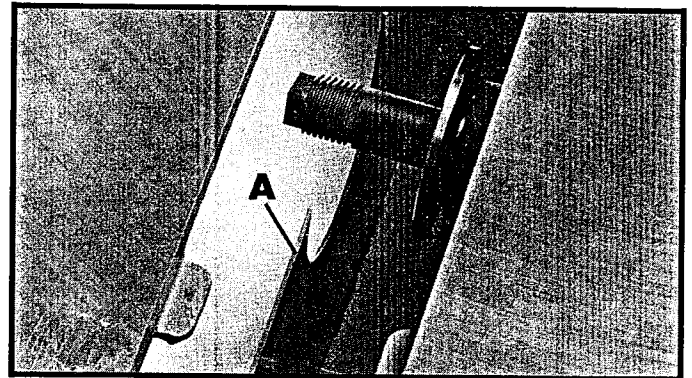


Fig. 1

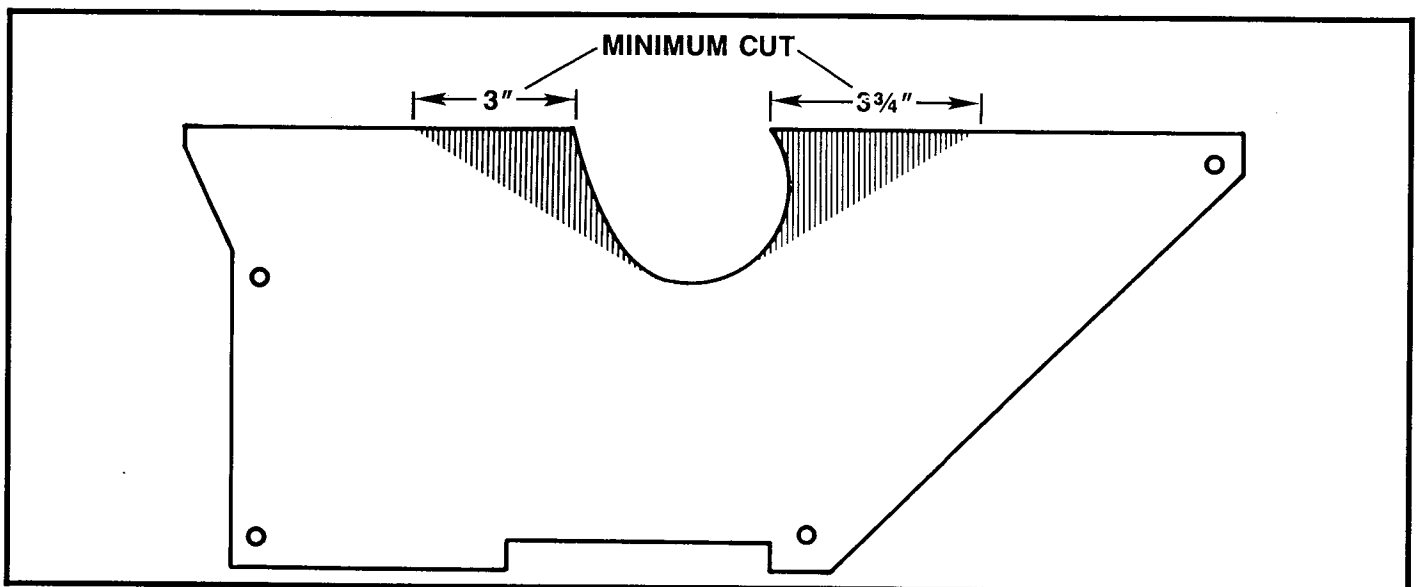


Fig. 2

5. Place the side plate cover on a flat surface and mark the area as indicated in Fig. 2, where the modifications to the cover must be made. The shaded area of the drawing Fig. 2, indicates the minimum amount of material that must be removed from the cover to allow the use of dado blades.

6. Using a band saw, cut the side plate cover as shown in Fig. 3. After cutting, be careful to remove the burrs and sharp edges along its cutting edge, and reinstall the side plate cover inside the saw with the four slot head screws that were removed in Step 4.

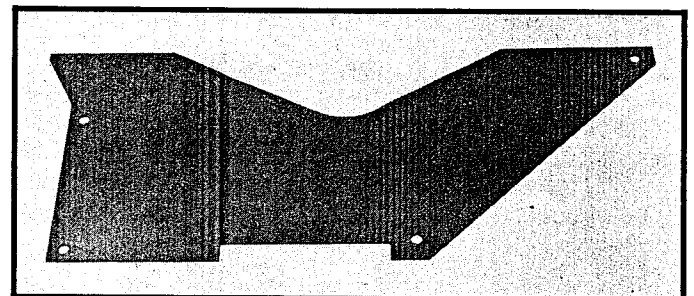


Fig. 3

INSTALLING DADO HEADS SETS

1. Place the Dado extension on the arbor and tighten with wrench (A) Fig. 4, while holding arbor with allen wrench (B) inserted into end of arbor as shown.

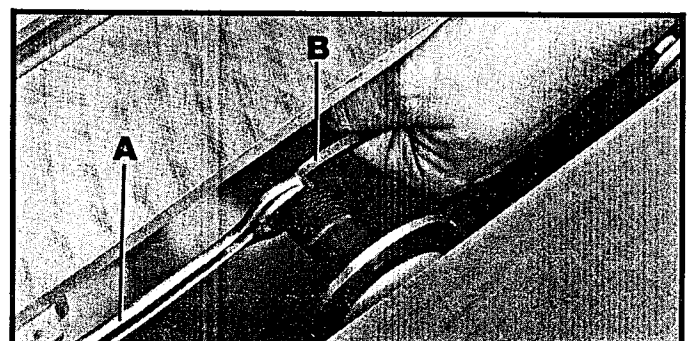


Fig. 4

2. Install the required width of dado cutters on the arbor extension and install the arbor nut (C) Fig. 5. NOTE: If necessary, the standard 1/4" wide spacer can be used between the arbor nut and dado blade to tighten the dado cutters on the arbor, or for very narrow dado cuts the accessory 43-823 1/2" or 1" wide spacers can be used. Tighten the arbor nut (C) Fig. 5, with wrench (D) while holding arbor with allen wrench (E) inserted into end of arbor.

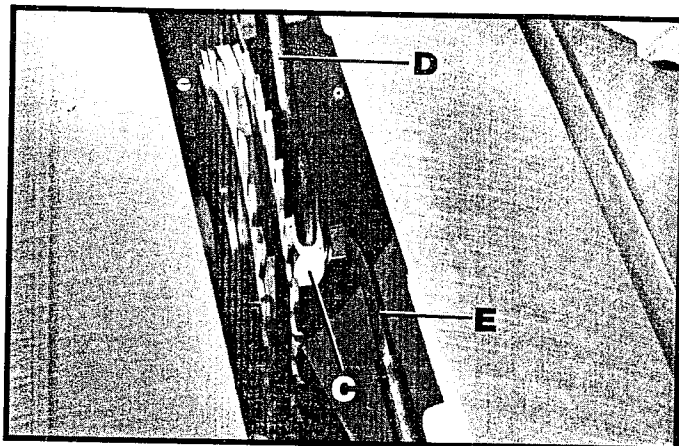


Fig. 5

PREPARING TABLE INSERTS

When dado cutting on the RT-31 Panel Saw, it is necessary to construct dado table inserts from hardwood, such as oak, cherry, etc. NOTE: Do not use soft woods for these inserts. Proceed as follows:

1. Using the regular table insert as a template Fig. 6, trace its shape on a piece of **hard wood** that is 9/16" thick as shown.
2. Cut out this shape on a band saw and form it until it fits firmly in the table opening.
3. With the required dado blades firmly tightened on the arbor, move the arbor to its lowest position and place the wooden insert in the table opening.
4. Be certain the blade is in a straight 90 degree position to the table top.
5. Secure the blank insert in the saw table using lumber as hold-downs clamped in four places, similar to the method used in Fig. 7.
6. Apply electrical power to the saw. Raise the arbor slowly and allow the blade to cut its way thru the insert from below until the dado cutter is at its desired height, as shown in Figs. 7 & 8. **DO NOT FORCE THE CUT.** Additional inserts can be cut similar to this method to accommodate varying cutting depths and widths of cutters.

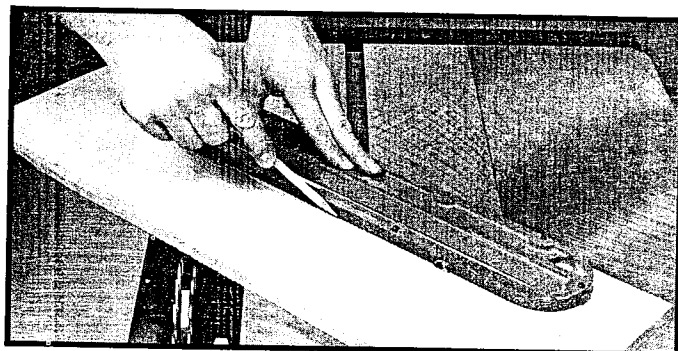


Fig. 6

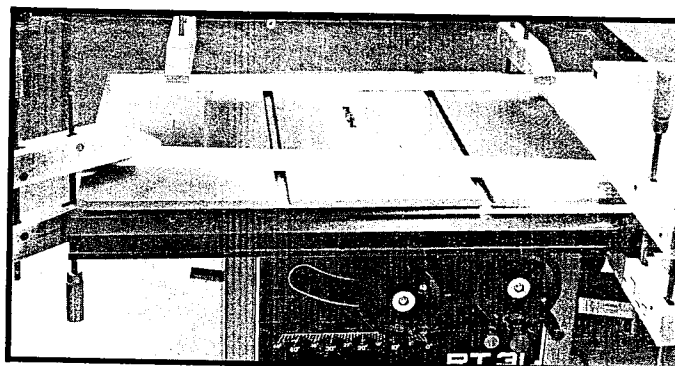


Fig. 7

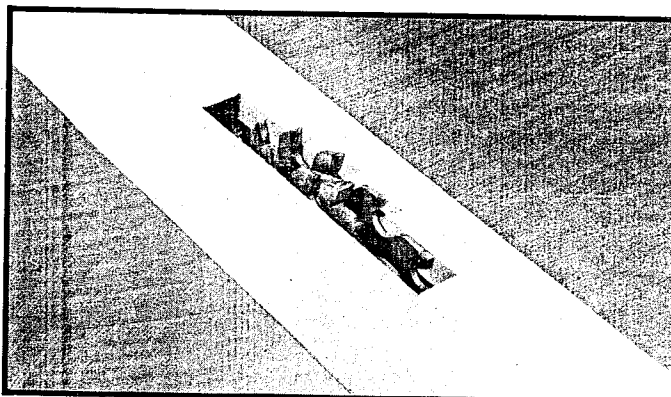


Fig. 8

REPLACEMENT PARTS

| Ref. No. | Part No. | Description |
|-------------|-----------------|--|
| * | 422-31-354-0001 | Blade Guard Assembly, Const. of: |
| 1 | 1246155 | (DIN 963) M6 x 12mm Slot Flat Hd. Scr. |
| 2 | 422-31-017-0005 | Bushing (See Service Note A) |
| 3 | 422-31-104-0001 | Washer |
| 4 | 422-31-054-0001 | Blade Guard |
| 5 | 422-31-089-0001 | Guard Support |
| 6 | 1246193 | (DIN 1481) Ø6 x 60mm Roll Pin |
| 7 | 422-31-071-0002 | Pin |
| 8 | 422-31-004-0001 | Bar |
| 9 | 422-31-017-0001 | Bushing |
| 10 | 1246137 | (DIN 913) M5 x 8mm Hex Soc. Set Scr. (See Service Note A) |
| 11 | 1246056 | (DIN 912) M6 x 12mm Hex Soc. Hd. Cap Scr. |
| 12 | 1246198 | (DIN 912) M10 x 60mm Soc. Hd. Cap Scr. |
| 13 | 1243502 | (DIN 125) Ø10mm Flat Washer |
| 14 | 422-31-104-0009 | Spacer |
| 15 | 422-31-104-0010 | Spacer |
| 16 | 1243497 | (DIN 471) 12e External Retaining Ring |
| 17 | 422-31-047-0001 | Anti-Kick Back Finger |
| 18 | 422-31-071-0003 | Pin |
| 19 | 422-31-086-0001 | Splitter |
| 20 | 422-31-104-0007 | Washer |
| 21 | 1243379 | (DIN 912) M6 x 10mm Soc. Hd. Cap Scr. |
| 22 | 1246015 | (DIN 933) M6 x 20mm Hex Hd. Cap Scr. |
| 23 | 904-01-010-1604 | 1/4" Flat Washer |
| 24 | 422-31-014-0001 | Splitter Bracket |
| 25 | 1243456 | (DIN 934) M6 Hex Nut |
| 26 | 1246013 | (DIN 933) M6 x 12mm Hex Hd. Cap Scr. |
| 27 | 1246009 | (DIN 913) M8 x 10mm Hex Soc. Set Scr. |
| 28 | 422-31-027-0001 | Guard Clamp |
| 29 | 422-31-071-0001 | Pin |
| 30 | 422-31-363-0001 | Table Insert Assy., Incl: |
| 31 | 1246137 | (DIN 913) M5 x 8mm Hex Soc. Set Scr. |
| 32 | 1246109 | (DIN 1481) Ø5 x 16mm Roll Pin |
| 33 | 422-31-109-0001 | Extension Wing |
| 34 | 1246074 | (DIN 912) M10 x 30mm Soc. Hd. Cap Scr. |
| 35 | 1243360 | (DIN 7980) Ø10mm Lockwasher |
| 36 | 422-31-091-0001 | Table |
| 37 | 1243502 | (DIN 125) Ø10mm Flat Washer |
| 38 | 1246148 | (DIN 933) M10 x 18mm Hex Hd. Cap Scr. |
| 39 | 422-29-072-0004 | Adapter Plate |
| 40 | 1243502 | (DIN 125) Ø10mm Flat Washer |
| 41 | 1246018 | (DIN 933) M10 x 25mm Hex Hd. Cap Scr. |
| 42 | 1246035 | (DIN 933) M10 x 30mm Hex Hd. Cap Scr. |
| 43 | 422-31-112-0001 | Adjusting Screw |
| 44 | 1246029 | (DIN 933) M10 x 40mm Hex Hd. Cap Scr. |
| 45 | 1243496 | (DIN 934) M10 Hex Nut |
| 46 | 1246013 | (DIN 933) M6 x 12mm Hex Hd. Cap Scr. |
| 47 | 422-31-071-0012 | Pin |
| 48 | 1243497 | (DIN 471) 12e External Retaining Ring |
| 49 | 422-31-014-0006 | Bracket |
| 50 | 1246135 | (DIN 963) M6 x 16mm Slot Flat Hd. Scr. |
| 51 | 1243456 | (DIN 934) M6 Hex Nut |
| 52 | 422-31-305-0001 | Base, Incl.: |
| 53 | 428-07-137-0001 | Nameplate |
| 54 | 428-06-079-0001 | Rivit |
| 55 | 422-31-123-0001 | Panel |
| 56 | 1246130 | (DIN 84) M6 x 16mm Slot Cheese Hd. Mach. Scr. |
| 57 | 438-01-017-0173 | On Button w/Switch |
| 58 | 438-01-017-0172 | Off Button w/Switch |
| 59 | 422-31-013-0001 | Accessory Tray |
| 60 | 901-06-133-1263 | #10-24 x 3/8" Type F Self Tap Pan Hd. Scr. |
| 61 | 1246034 | (DIN 933) M8 x 20mm Hex Hd. Cap Scr. |
| 62 | 904-01-010-1605 | 5/16" Flat Washer |
| 63 | 422-31-055-0001 | Guide |
| 64 | 1243398 | (DIN 934) M8 Hex Nut |
| 65 | 422-31-122-0002 | Flat Spring |
| 66 | 422-29-101-0003 | Lever |
| 67 | 955-03-020-2200 | 5/16" Allen Wrench |
| 68 | 432-07-101-0001 | Open End Wrench |
| 69 | 422-31-101-0001 | Wrench |
| 70 | 422-31-101-0002 | 17 x 19mm Wrench |

* NOT SHOWN ASSEMBLED

SERVICE NOTES:



A - Install new part with Loctite to prevent loosening during operation.

REPLACEMENT PARTS

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------|-------------------|---|----------|-----------------|---|
| 125 | 422-29-031-0001 | Cover | 190 | 428-07-051-0013 | Gear |
| 126 | 1246130 | (DIN 84) M6 x 16mm Slot Cheese Hd. Mach. Scr. | 191 | 422-31-104-0006 | Spacer |
| 127 | 1246001 | (DIN 84) M5 x 12mm Slot Cheese Hd. Mach. Scr. | 192 | 1246141 | Bearing |
| 128 | 422-29-031-0003 | Dust Cover | 193 | 422-31-051-0002 | Tilt Worm Gear |
| 129 | 422-30-079-0009 | Scoring Extension Nut (used for Dado operations) | 194 | 428-06-079-0003 | Key |
| 130 | 422-31-079-0002 | Scoring Arbor Nut (used for standard cutting operations) | 195 | 422-31-017-0007 | Bushing |
| 131 | 422-31-103-0001 | Flange (used for standard cutting operations) | 196 | 422-31-106-0003 | Tilt Handwheel Shaft |
| 132 | 422-31-104-0004 | Spacer | 197 | 1246196 | (DIN 471) 15e External Retaining Ring |
| 133 | 422-31-003-0001 | Scoring Arbor w/Dado Extension | 198 | 422-31-100-0001 | Handwheel |
| 134 | 428-06-079-0003 | Key | 199 | 428-06-111-0001 | Handle Stud |
| 135 | 1246145 | (DIN 472) 35i Internal Retaining Ring | 200 | 428-06-067-0001 | Handle |
| 136 | 422-29-139-0002 | Bearing | 201 | 1246026 | (DIN 6799) RS-8 Retaining Ring |
| 137 | 422-31-017-0003 | Bushing | 202 | 422-31-067-0002 | Wheel Lock Nut |
| 138 | 422-31-014-0002 | Scoring Arbor Bracket | 203 | 1246102 | (DIN 125) Ø5mm Flat Washer |
| 139 | 1246147 | (DIN 1481) Ø3 x 14mm Roll Pin | 204 | 1246001 | (DIN 84) M5 x 12mm Slot Cheese Hd. Mach. Scr. |
| 140 | 422-30-079-0002 | Wave Washer | 205 | 1246041 | (DIN 914) M8 x 16mm Hex Soc. Set Scr. |
| 141 | 422-31-130-0001 | Pulley | 206 | 422-31-068-0002 | Lock |
| 142 | 428-06-104-0002 | Washer | 207 | 422-31-106-0001 | Adjusting Shaft |
| 143 | 1246004 | (DIN 912) M6 x 16mm Hex Soc Hd. Cap. Scr. | 208 | 422-31-106-0002 | Locking Shaft |
| 144 | 422-30-079-0008 | Arbor Nut (for use with Dado Blades) | 209 | 1243339 | (DIN 913) M6 x 18mm Hex Soc. Set Scr. |
| 145 | 422-31-079-0003 | Arbor Nut (for use with Standard Blades) | 210 | 422-31-117-0001 | Lock Lever |
| 146 | 422-29-103-0001 | Flange | 211 | 1243496 | (DIN 934) M10 Hex Nut |
| 147 | 422-31-104-0004 | Spacer (for use with Standard Blades) | 212 | 422-29-117-0001 | Lock Lever |
| 148 | 422-31-003-0002 | Arbor w/Flange and Dado Extension | 213 | 1243496 | (DIN 934) M10 Hex Nut |
| 149 | 428-07-079-0005 | Key | 214 | 1246134 | (DIN 915) M10 x 25mm Hex Soc. Set Scr. |
| 150 | 422-31-139-0001 | Bearing | 215 | 1246197 | (DIN 5401) 5/16" Dia. Ball |
| 151 | 422-31-104-0003 | Collar | 216 | 422-31-051-0003 | Elevating Worm Gear |
| 152 | 422-31-017-0004 | Bushing | 217 | 428-06-079-0003 | Key |
| 153 | 422-31-014-0003 | Arbor Bracket | 218 | 1246141 | Bearing |
| 154 | 1246017 | (DIN 933) M8 x 30mm Hex Hd. Cap Scr. | 219 | 422-31-089-0002 | Pivot Support |
| 155 | 904-01-010-1605 | 5/16" Flat Washer | 220 | 1246009 | (DIN 913) M8 x 10 Hex Soc. Set Scr. |
| 156 | 1246157 | (DIN 7980) Ø8 Lockwasher | 221 | 1243339 | (DIN 913) M6 x 18mm Hex Soc. Set Scr. |
| 157 | 1246034 | (DIN 933) M8 x 20mm Hex Hd. Cap Scr. | 222 | 422-31-075-0001 | Pointer |
| 158 | 1243321 | (DIN 913) M6 x 10mm Hex Soc. Set Scr. | 223 | 422-31-100-0002 | Wheel Hub |
| 159 | 422-31-130-0002 | Arbor Pulley | 224 | 422-31-100-0001 | Handwheel |
| 160 | 422-31-102-0001 | Yoke | 225 | 428-06-111-0001 | Handle Stud |
| 161 | 1246147 | (DIN 1481) Ø3 x 14mm Roll Pin | 226 | 428-06-067-0001 | Handle |
| 162 | 422-29-051-0002 | Rack-Tilt | 227 | 1246026 | (DIN 6799) RS-8 Retaining Ring |
| 163 | 1243550 | (DIN 1481) Ø8 x 20mm Roll Pin | 228 | 422-31-067-0002 | Wheel Lock Nut |
| 164 | 1246034 | (DIN 933) M8 x 20mm Hex Hd. Cap Scr. | 229 | 1246102 | (DIN 125) Ø5mm Flat Washer |
| 165 | 1246122 | (DIN 912) M6 x 16mm Hex Soc. Hd. Cap. Scr. | 230 | 1246001 | (DIN 84) M5 x 12mm Slot Cheese Hd. Mach. Scr. |
| 166 | 1246113 | (DIN 84) M8 x 20mm Slot Cheese Hd. Mach. Scr. | 231 | 1243496 | (DIN 934) M10 Hex Nut |
| 167 | 904-01-010-1605 | 5/16" Flat Washer | 232 | 422-31-071-0010 | Spring Pin |
| 168 | 422-29-026-0001 | Dust Chute | 233 | 422-31-112-0002 | Adjusting Screw |
| 169 | 422-31-014-0004 | Rear Trunnion | 234 | 422-31-122-0003 | Spring |
| 170 | 422-29-104-0007 | Spacer | 235 | 422-31-071-0009 | Pin |
| 171 | 422-31-314-0001 | Elevating Bracket Incl:(See Service Note B) | 236 | 422-31-090-0001 | Arm |
| 171A | Three (3) Spacers | Not available as individual replacement part (See Service Note B) | 237 | 1243456 | (DIN 934) M6 Hex Nut |
| 172 | 422-29-051-0001 | Elevating Rack | 238 | 422-31-071-0008 | Pin |
| 173 | 1243456 | (DIN 934) M6 Hex Nut | 239 | 422-31-130-0004 | Flat Pulley |
| 174 | 1246015 | (DIN 933) M6 x 20mm Hex Hd. Cap Scr. | 240 | 1246195 | (DIN 472) 32i Internal Retaining Ring |
| 175 | 1246124 | (DIN 913) M6 x 25mm Hex Soc. Set Scr. | 241 | 422-31-139-0002 | Bearing |
| 176 | 1243550 | (DIN 1481) Ø8 x 20mm Roll Pin | 242 | 1246196 | (DIN 471) 15e External Retaining Ring |
| 177 | 1246018 | (DIN 933) M10 x 25mm Hex Hd. Cap Scr. | 243 | 1243398 | (DIN 934) M8 Hex Nut |
| 178 | 422-31-079-0004 | Retainer | 244 | 1246150 | (DIN 913) M8 x 25mm Hex Soc. Set Scr. |
| 179 | 1246099 | (DIN 933) M10 x 50mm Hex Hd. Cap Scr. | 245 | 422-31-071-0007 | Pin |
| 180 | 1243398 | (DIN 934) M8 Hex Nut | 246 | 422-31-130-0004 | Flat Pulley |
| 181 | 1246150 | (DIN 913) M8 x 25mm Hex Soc. Set Scr. | 247 | 1246195 | (DIN 472) 32i Internal Retaining Ring |
| 182 | 422-31-014-0005 | Front Trunnion Bracket | 248 | 422-31-139-0002 | Bearing |
| 183 | 1246112 | (DIN 913) M8 x 35mm Hex Soc. Set Scr. | 249 | 1246196 | (DIN 471) 15e External Retaining Ring |
| 184 | 422-31-017-0006 | Bushing | 250 | 422-31-071-0006 | Pin |
| 185 | 1246197 | (DIN 5401) 5/16" Dia. Ball | 251 | 422-31-139-0002 | Bearing |
| 186 | 1246009 | (DIN 913) M8 x 10mm Hex Soc. Set Scr. | 252 | 422-31-104-0005 | Spacer |
| 187 | 422-31-051-0001 | Gear | 253 | 422-31-130-0003 | Pulley |
| 188 | 1243301 | (DIN 471) 16e External Retaining Ring | 254 | 1246195 | (DIN 472) 32i Internal Retaining Ring |
| 189 | 1243526 | (DIN 125) Ø8 x 24mm Flat Washer | 255 | 422-29-079-0001 | Washer |
| | | | 256 | 1246078 | (DIN 933) M8 x 15mm Hex Hd. Cap Scr. |
| | | | 257 | 422-31-133-0002 | Belt |

SERVICE NOTES:

B - When replacing Elevating Bracket Ref. No. 171, old Spacer Ref. No. 171A must be discarded. Elevating Bracket comes cast with three (3) Spacers attached, which must be broken off and used with new part.


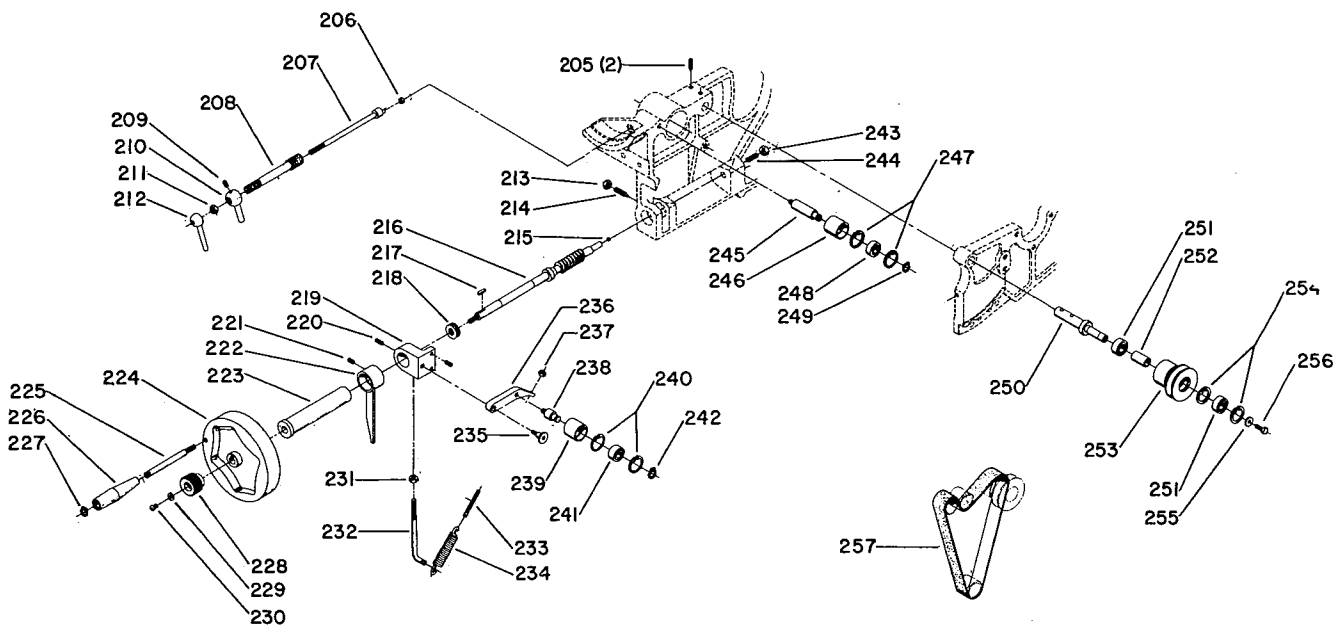
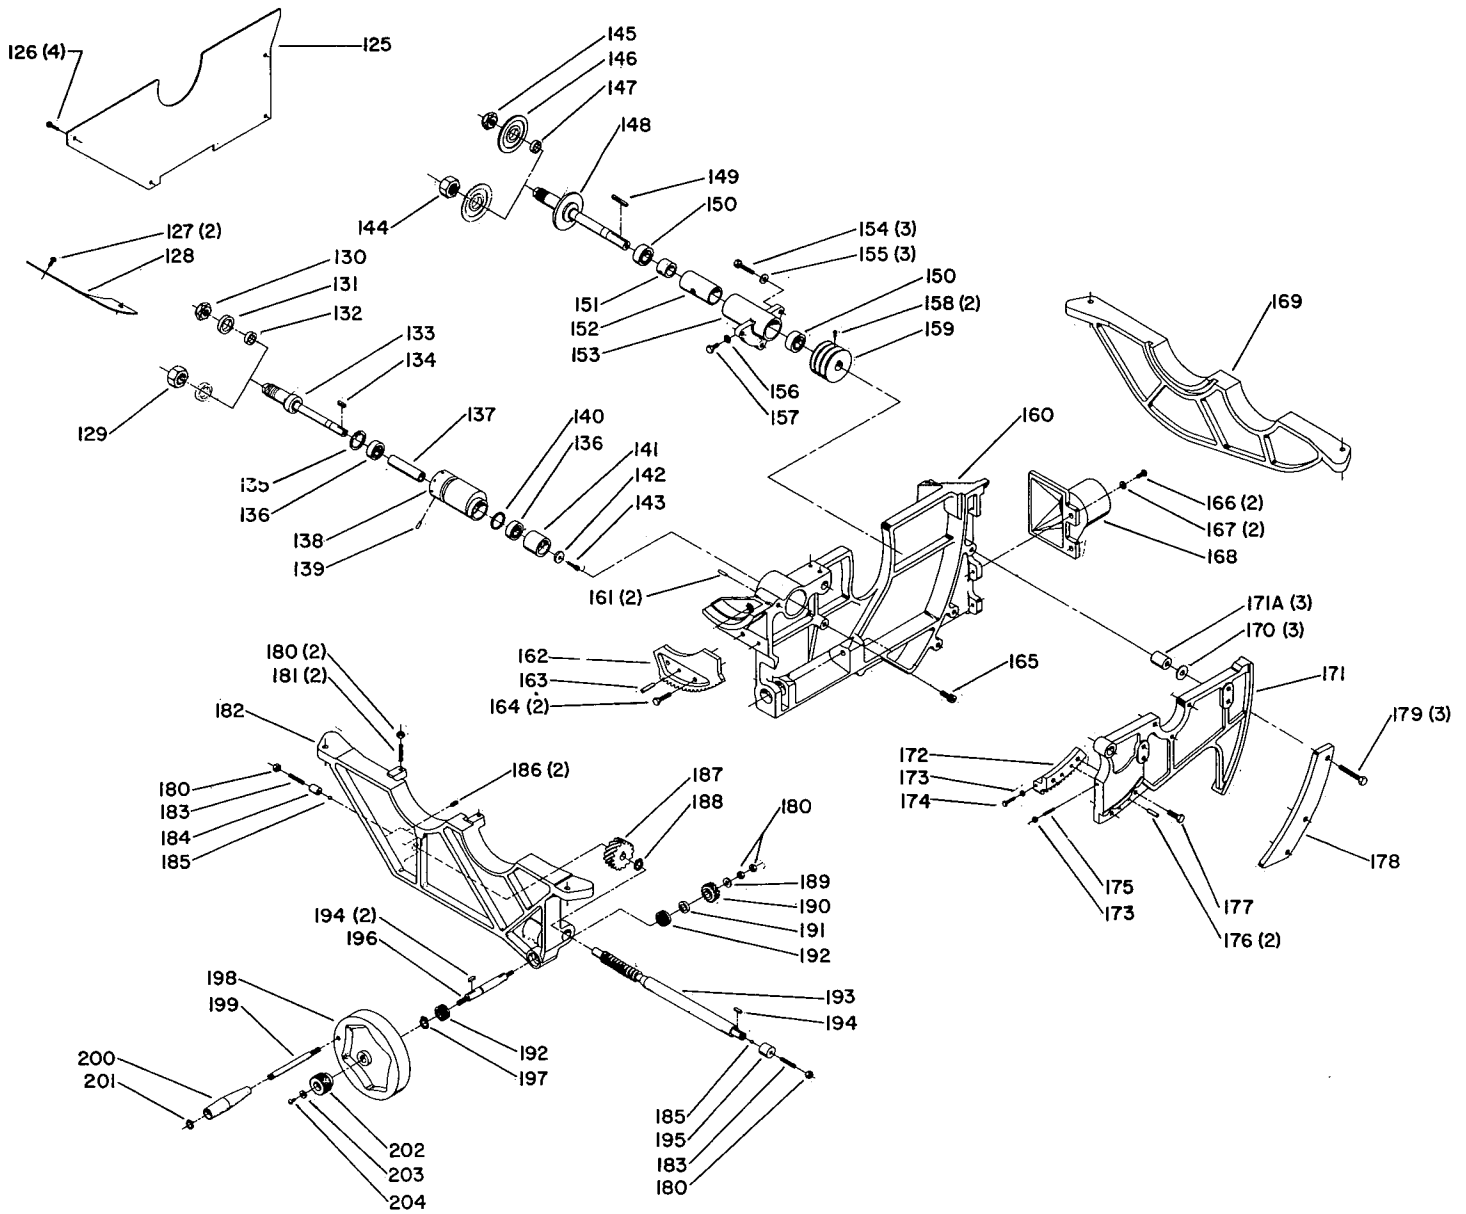


REPLACEMENT PARTS

| Ref. No. | Part No. | Description |
|----------|-----------------|--|
| 300 | 422-29-133-0001 | Matched Set of Three (3) V-Belts, 512mm O.C. |
| 301 | 422-31-133-0001 | V-Belt, 737mm O.C. |
| 302 | 422-31-130-0005 | Motor Pulley (for use with Three Phase Motors) |
| 303 | 422-31-130-0006 | Motor Pulley (for use with Single Phase Motors) |
| 304 | 1243321 | (DIN 913) M6 x 10mm Hex Soc. Set Scr. |
| 305 | 422-31-072-0001 | Motor Plate |
| 306 | 1246035 | (DIN 933) M10 x 30mm Hex Hd. Cap Scr. |
| 307 | 422-29-079-0015 | Washer |
| 308 | 1243502 | (DIN 125) Ø10mm Flat Washer |
| 309 | 1246099 | (DIN 933) M10 x 50mm Hex Hd. Cap Scr. |
| 310 | 422-31-104-0011 | Motor Plate Spacer (for use with Three Phase Motors) |
| 311 | 1243496 | (DIN 934) M10 Hex Nut |
| 312 | 438-02-314-0965 | Motor-200-220/440V, 3 PH, 60 HZ, 5 H.P. |
| 313 | 83-069 | Motor-230V, 1 PH, 60 HZ, 3 H.P. |
| * | 422-31-350-0001 | Miter Gage, Const. of: |
| 325 | 422-29-089-0001 | Stop Support |
| 326 | 422-29-108-0002 | Rod |
| 327 | 1243321 | (DIN 913) M6 x 10mm Hex Soc. Set Scr. |
| 328 | 422-29-138-0004 | Knob |
| 329 | 422-29-108-0001 | Stop Rod |
| 330 | 422-31-067-0003 | Handle |
| 331 | 1243502 | (DIN 125) Ø10mm Flat Washer |
| 332 | 422-29-138-0003 | Knob |
| 333 | 1246119 | (DIN 1481) Ø3 x 16mm Roll Pin |
| 334 | 422-31-067-0001 | Lever |
| 335 | 422-31-071-0004 | Pin |
| 336 | 422-31-017-0002 | Bushing |
| 337 | 422-31-071-0005 | Pin |
| 338 | 422-31-122-0001 | Spring |
| 339 | 422-31-071-0011 | Hinge Pin |
| 340 | 1246008 | (DIN 913) M5 x 12mm Hex Soc. Set Scr. |
| 341 | 1246159 | (DIN 913) M5 x 5mm Hex Soc. Set Scr. |
| 342 | 422-31-012-0001 | Miter Gage Body, Incl: |
| 343 | 428-06-079-0001 | Rivet |
| 344 | 422-29-132-001 | Scale |
| 345 | 422-31-088-0001 | Stop |
| 346 | 422-31-111-0002 | Stud |
| 347 | 1243501 | (DIN 84) M4 x 10mm Slot Cheese Hd. Mach. Scr. |
| 348 | 422-29-075-0001 | Pointer |
| 349 | 1246051 | (DIN 912) M5 x 12mm Hex Soc. Hd. Cap Scr. |
| 350 | 422-31-004-0002 | Guide Bar |
| 351 | 422-29-083-0001 | Shim |
| 352 | 1246021 | (DIN 963) M5 x 10mm Slot Flat Hd. Scr. |
| * | 1330006 | Extension Assembly, Const. of: |
| 370 | 1330008 | Clamp |
| 371 | 1330009 | Support |
| 372 | 1330007 | Extension |
| 373 | 1243502 | (DIN 125) Ø10mm Flat Washer |
| 374 | 432-07-138-0007 | Knob |
| 375 | 1246074 | (DIN 912) M10 x 30mm Hex Soc. Hd. Cap Scr. |
| 376 | 1246010 | (DIN 913) M8 x 16mm Hex Soc. Set Scr. |
| 377 | 901-11-020-0821 | 1/4-20 x 3/4" Carriage Bolt |
| 378 | 422-29-072-0004 | Adapter Plate |
| 379 | 34-876 | Table (Optional Accessory) |
| 380 | 422-27-089-0007 | Angle Bracket |
| 381 | 901-06-223-1380 | #14 x 3/4" Slot Hex, Washer Face, Type AB Scr. |
| 382 | 902-01-120-1034 | 1/4-20 Hex Nut |
| 383 | 904-01-010-1614 | 9/32" Washer |
| 384 | 422-27-089-0006 | Table Support |
| 385 | 901-01-060-0612 | 1/4-20 x 5/8" Hex Hd. Cap Scr. |
| 386 | 904-01-010-1614 | 9/32" Washer |
| 387 | 901-06-223-1380 | #14 x 3/4" Slot Hex, Washer Face, Type AB Scr. |
| 388 | 422-27-066-0001 | Leg, Incl: |
| 389 | 422-27-412-0001 | Foot |
| 390 | 422-27-055-0003 | Front Guide Rail, Incl: |
| 391 | 400-06-432-0001 | Scale |
| 392 | 902-01-010-5900 | 3/8-16 Hex Nut |
| 393 | 904-01-010-1615 | 13/32" Washer |
| 394 | 422-27-111-0003 | Stud |
| 395 | 902-01-010-1207 | 3/8-24 Hex Nut |
| 396 | 902-01-010-1300 | 5/16-18 Hex Nut |
| 397 | 422-27-048-0001 | Foot-Rear Support |
| 398 | 422-27-068-0003 | Locking Lug |
| 399 | 905-01-010-2702 | 1/4 x 5/8" Roll Pin |
| 400 | 904-01-010-1620 | 11/32" Washer |
| 401 | 424-12-060-0003 | Knob |
| 402 | 901-02-050-5634 | #6-32 x 1/2" Fillister Hd. Scr. |
| 403 | 904-01-043-1370 | #6 Washer, Type B |
| 404 | 400-06-375-0001 | Cursor |
| 405 | 400-06-312-0001 | Fence Body Assy, Incl: |
| 406 | 422-27-137-0002 | Nameplate |
| 407 | 901-06-450-2250 | #4 x 3/16" Drive Screw |
| 408 | 422-27-112-0004 | Nylon Screw |
| 409 | 422-27-112-0003 | Slide Adjusting Screw |
| 410 | 400-06-384-0002 | Adjusting Slide Assy, Incl: |
| 411 | 422-27-084-0006 | Nylon Slide |
| 412 | 422-27-079-0001 | Retainer |
| 413 | 422-27-112-0002 | Spring Plunger |
| 414 | 422-27-104-0002 | Thrust Washer |
| 415 | 422-27-106-0003 | Control Shaft |
| 416 | 905-01-103-1370 | Coiled Spring Pin |
| 417 | 422-27-019-0002 | Cam |
| 418 | 1087659 | Handle |
| 419 | 1087658 | 5/16 x 2-1/2" Rd. Hd. Scr. |
| 420 | 400-06-327-0001 | Clamp Assembly |
| 421 | 34-894 | 43" Fence |
| 423 | 955-03-010-0006 | Allen Wrench |

* NOT SHOWN ASSEMBLED

1577G

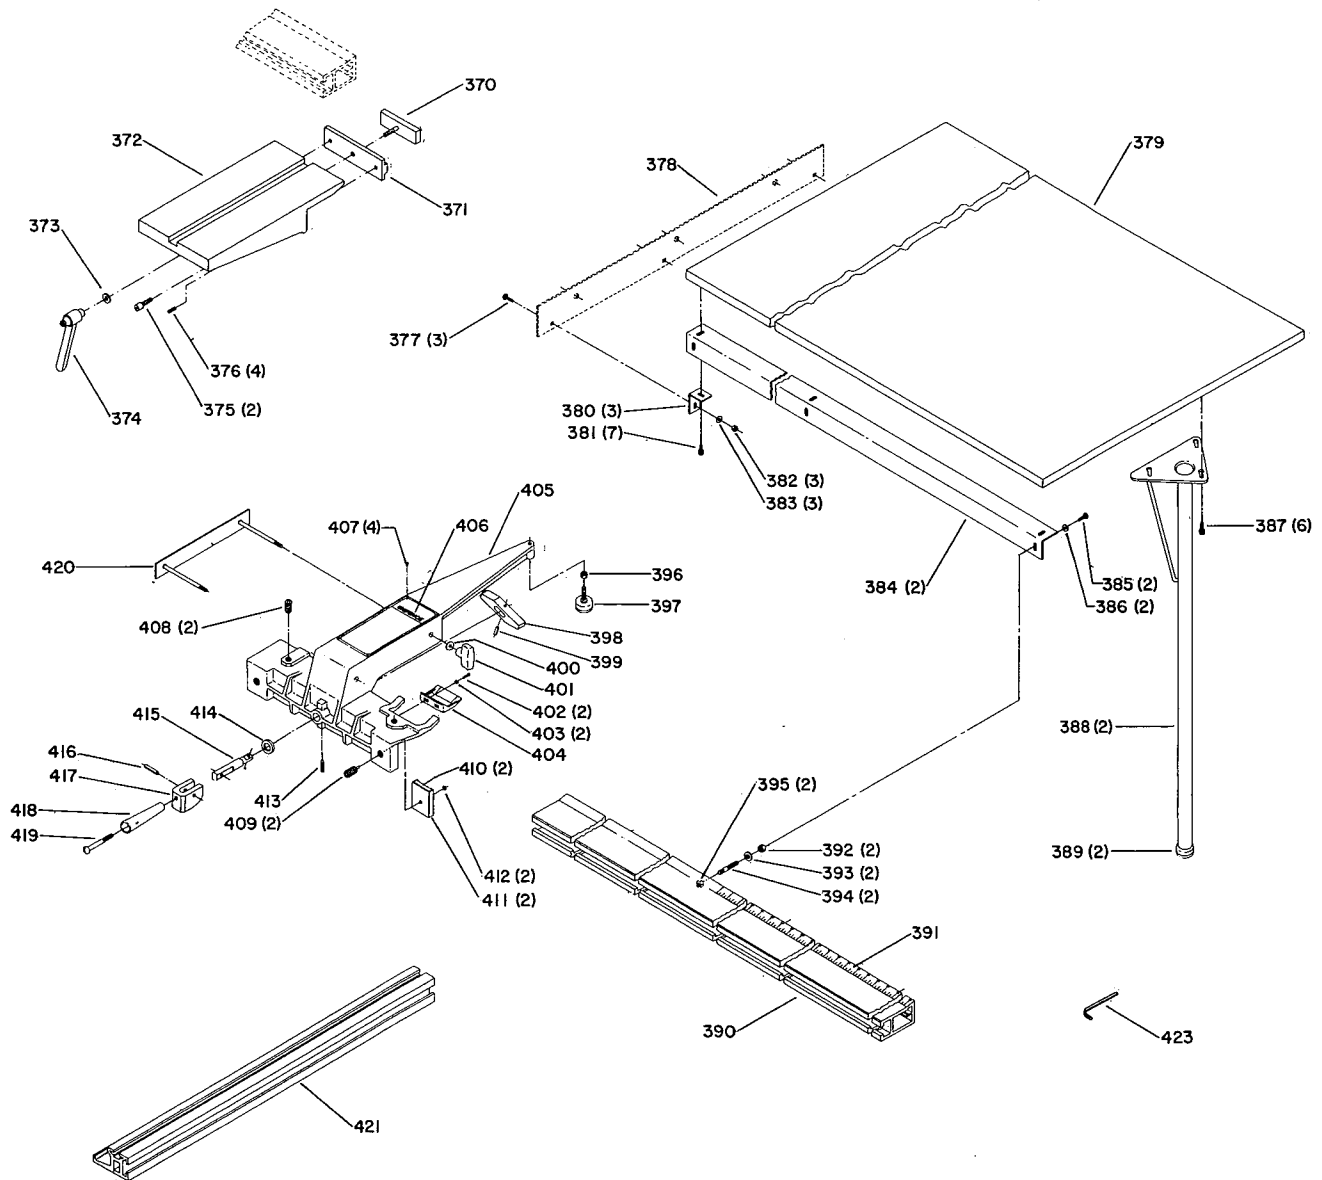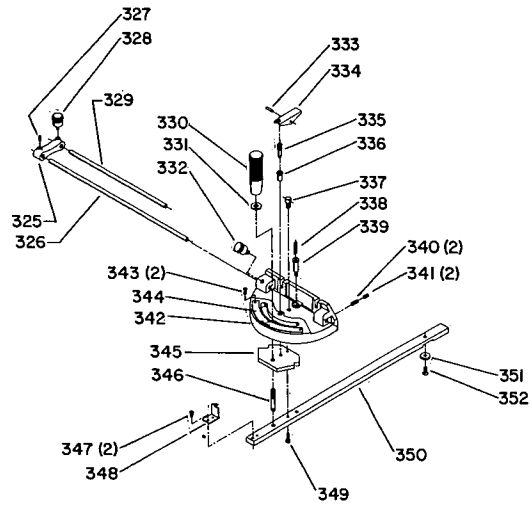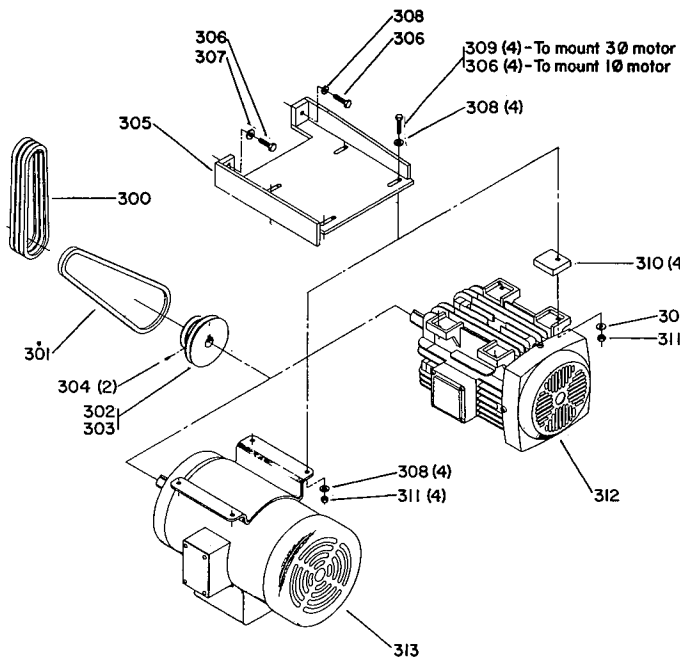

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>