


GRACO®

Cradle Swing

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,
Please fill in the model and serial numbers above from the label beneath the motor of your new swing.

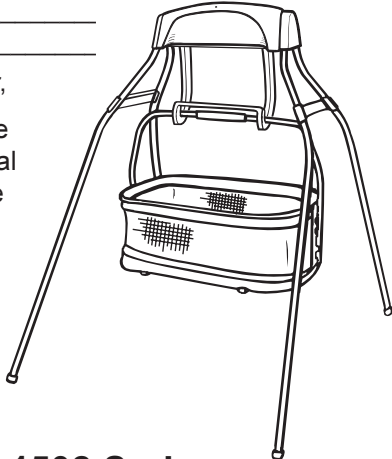

Model No. 1502 Series

Congratulations on your purchase of a Graco® swing!

Graco is the recognized leader in the design and manufacture of quality baby swings. We believe your new Graco® swing is a wise choice, promising many hours of enjoyment for your baby.

Before using your swing, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you use your swing properly.


Please save your Owner's Manual for future use.

Customer Satisfaction


Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak with Graco about your product, please contact our **Customer Service Department at 1-800-345-4109**. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

⚠️ WARNING


Failure to follow these warning instructions could result in serious injury or death.

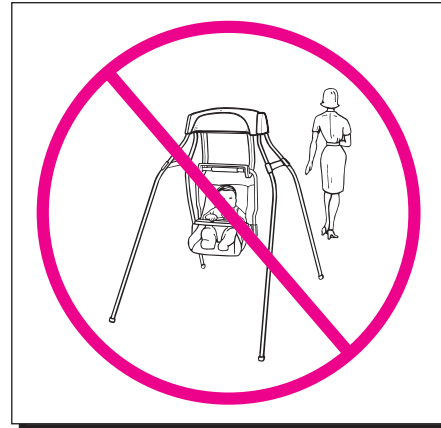

Never leave child unattended. Always keep your child in view.

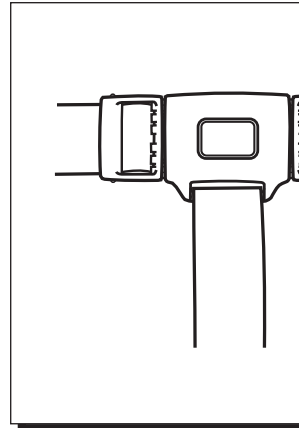

Avoid serious injury from sliding out. Always use safety harness when child is in the infant car seat.

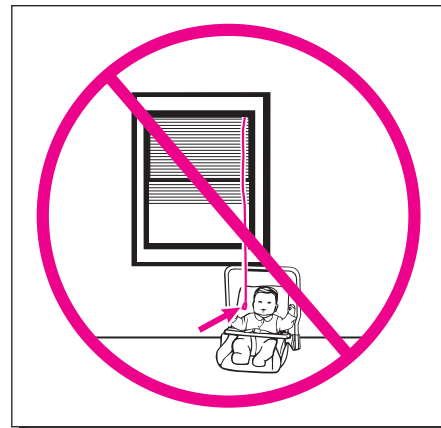

STRANGULATION HAZARD: DO NOT place cradle or infant carrier in any location where there are cords, such as window blind cords, drapes, phone cords, etc.



DO NOT use INFANT CRADLE if child weighs over 25 lbs (11.3 kg). Maximum weight for INFANT CRADLE is 13 pounds.




DO NOT place infant carrier near edge of a table or counter. Infant movement or rocking may cause it to move.

FOLLOW ASSEMBLY INSTRUCTIONS. If you experience any difficulties, please contact Customer Service.
DO NOT USE CRADLE POSITION.
DO NOT USE INFANT CRADLE POSITION.
DO NOT USE INFANT CRADLE POSITION.
DO NOT ADJUST HANDLE.
DISCONTINUE USING if child becomes too active.
DISCONTINUE USING if product becomes damaged or broken.
THIS PRODUCT IS NOT TO BE USED AS A STROLLER.

WARNING

Read the warnings and the assembly instructions. Failure to do so may result in serious injury or death.

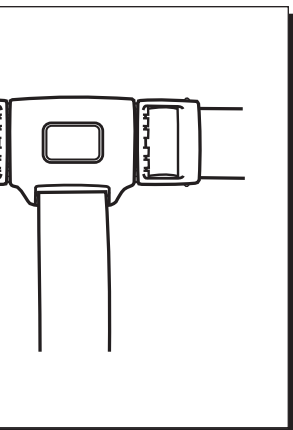

Prevent serious injury from falling or tipping. Always use seat belt when in the infant carrier.



DO NOT use the infant carrier as a car seat. This infant carrier is not designed for use in a vehicle.



DO NOT use INFANT CARRIER in a shopping cart. Maximum weight for infant carrier is 13 pounds (5.9 kg).



Strings can cause strangulation. DO NOT place items with a string around your child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over cradle or infant carrier or attach strings to toys.

READ ASSEMBLY INSTRUCTIONS CAREFULLY. If you experience any difficulty, please contact the Customer Service Department.

DO NOT USE CRADLE as a night-time bed or car bed.

DO NOT USE INFANT CARRIER without the seat cover.

DO NOT USE INFANT CARRIER in a shopping cart.

DO NOT TOUCH HANDLE while infant carrier is on swing.

DO NOT USE YOUR CRADLE OR INFANT CARRIER when child is too active.


DO NOT USE YOUR CRADLE OR INFANT CARRIER should it become damaged or broken.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.


PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your swing. If any parts are missing, call Customer Service at 1-800-345-4109.


Tools required: Screwdriver and wrench (wrench included)

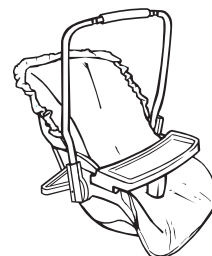

Infant carrier

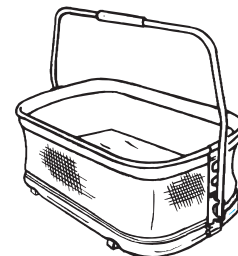


Cradle

 

Motor unit



Plastic leg brace (2)

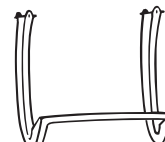

Hanger



Screw (2)



Wrench



Acorn nut (2)



Leg tip (4)



Upper leg section (4)



Lower leg section (4)

CARE AND MAINTENANCE

FROM TIME TO TIME CHECK YOUR SWING for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

REMOVABLE CLOTH SEAT COVER may be machine washed in lukewarm water on delicate cycle and drip-dried. NO BLEACH.


TO CLEAN SWING FRAME, use only household soap or detergent and warm water. NO BLEACH.

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

Attaching the Legs


Step 1.

Push **oval** end of the upper leg sections firmly onto the four plastic pegs. Hold tube vertically while pushing in. **Push leg on completely.**

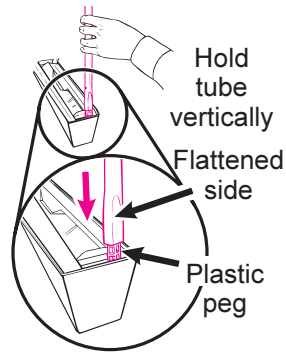


Step 2.

Push the leg tips on the round ends of the lower leg sections. (The other ends have a wire.)

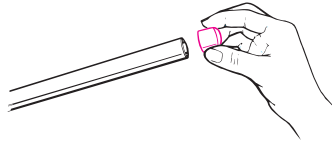

Step 3.


Put the wire end of lower leg sections into the **round** end of the upper leg sections. Push the sections together while twisting lower leg slightly. This will ensure a snug fit.

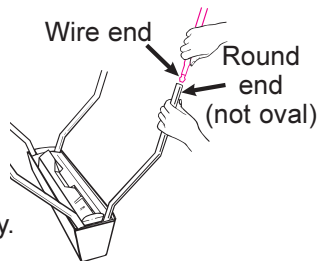

Step 4.


CHECK:

Lift swing as shown. If legs are assembled properly, the legs will dangle from the motor unit and not fall off.

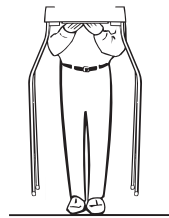


IF LEG FALLS:

Holding leg vertically, push leg firmly up while pushing the motor unit down.

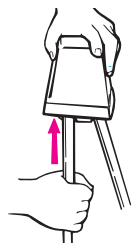


Step 5.

Open the swing legs completely. Snap plastic leg braces onto outside of legs. The plastic pins inside the ends of the braces will fit into the dimples on the legs.

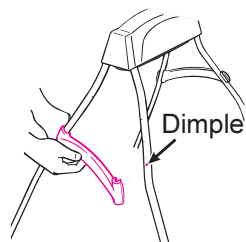

It may be necessary to spread the legs as shown.


⚠ WARNING Do not use swing without the leg braces.

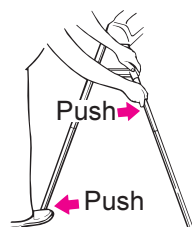

Attaching the Hanger


Step 1.

With crossbar of hanger toward front of the motor unit, line up holes in hanger brackets with holes on the sides of motor unit.

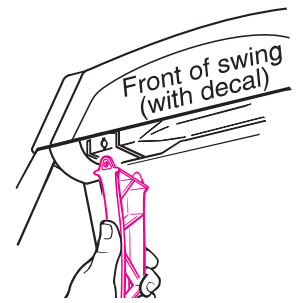

Step 2.

Insert screws into both brackets as shown. Fasten with acorn nuts using the enclosed hex wrench. Tighten nuts firmly with hex wrench and screwdriver.

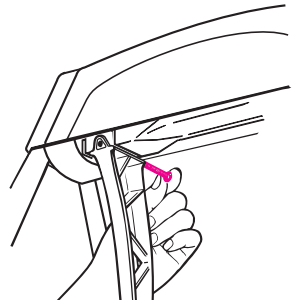


Installing Batteries

⚠ WARNING NEVER INSERT OR REMOVE BATTERIES WITH BABY IN THE SEAT. THEY COULD FALL ON BABY IF DROPPED!

Step 1.

With baby out of swing, open the battery compartment by gently pressing on the lid at the ridged area and lifting the lid.

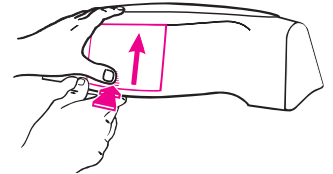


Step 2.

Insert four "D" cells. Be sure the batteries are put in correctly. (Swing will not run if batteries are put in backwards.)



Step 3.

Snap the lid closed.

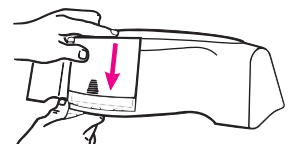


Using the Cradle

⚠ WARNING Not intended for use as a night-time bed or car bed.

REMOVE LAW TAGS FROM CRADLE PAD AND QUILTED SHEET BEFORE USING THIS CRADLE.


Step 1.

Cover soft side of cradle pad with quilted sheet provided.

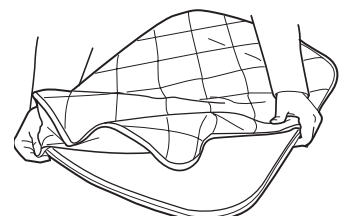


Step 2.

Lift top frame of cradle, and turn handle so that it lines up with the plastic hinges.

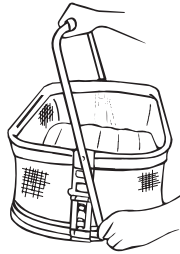


Step 3.

Snap handle and hinges together to lock. **Be sure handle is locked into the plastic hinges.**

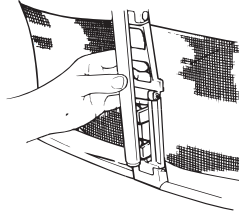

Step 4.

Place cradle in hanger. **Be sure handle notches are seated in the hanger.**

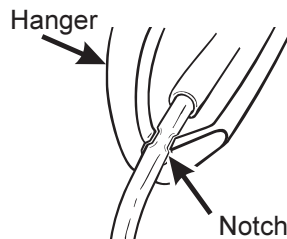


Step 5.

Place your child in the cradle.

Step 6.

Set the control switch between the low and medium positions. Your cradle will swing properly only in the lower range.

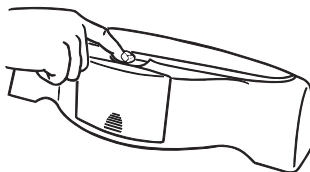

Step 7.

Give cradle a push to start the swinging motion.


Using the Infant Carrier

Lift carrier in and out of swing.

▲ WARNING Do not adjust the handle while carrier is on swing.



Different uses for infant carrier...

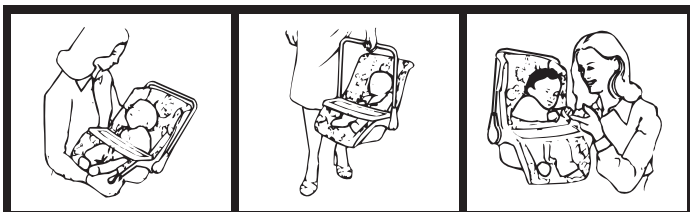

Cuddler

Carrier

Feeder


...or as a Rocker.

Adjusting the Handle

To bring infant carrier handle from resting position into position for carrying or swinging, first **set the carrier down**.


Then push down on center of handle, and rotate the handle forward until it clicks into the locked position.

Push down on center of handle

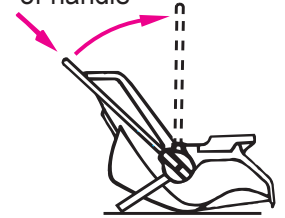

To return the handle to resting position, first **set the carrier down**. Then push down on center of handle, and rotate the handle backward until it clicks into place.


Push down on center of handle

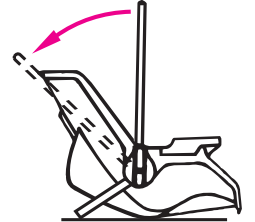

NOTE: It is normal for the handle to seem loose in the resting position.

Using the Tray

Unlatch the tray by squeezing the two latches under the tray at the same time, and lift up tray. **Be careful** not to let tray hit your baby when lifting or closing tray.

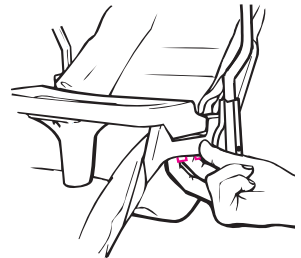

To latch tray, push down firmly. **Tray must be latched at all times when baby is in the swing.**


Adjusting the Stand

To change recline of the carrier, squeeze the adjustment wire and move to desired position.

To adjust for rocking, move the adjustment wire to the highest position.

▲ WARNING Do not change recline with baby in infant carrier.

Be aware that infant movement or rocking may cause the infant carrier to move on a table.

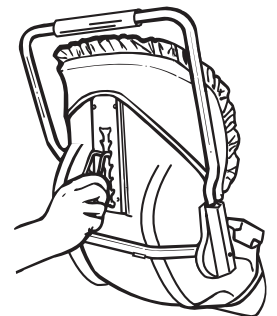


Using the Swing

CHECK that all parts are securely fastened together before using the swing.

Step 1.


Place carrier in hanger. **Be sure handle notches are seated in the hanger.**

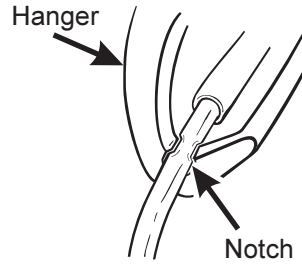

Step 2.

Thread both sides of seat belt through the buckles as shown.

CHECK that the belt is threaded correctly by pulling on the seat belt. **The belt should not slip through the buckle.**

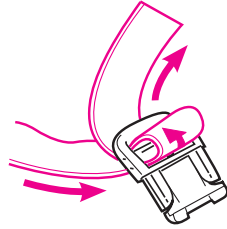


Step 3.


Open tray and place baby in the seat. (If your child is very small, you may want to use rolled-up blankets as a prop.)

Step 4.

Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

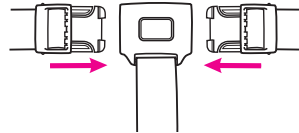

To release, push in on front of buckle.

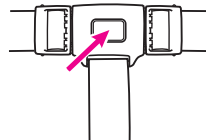

Step 5.

Close the tray. **CHECK** that tray is latched by pulling up on the tray.




▲ WARNING Do not depend on the tray or seat belt alone to hold your baby. Always secure your baby with both the seat belt and tray when your child is in the swing.

Step 6.

Adjust the control switch to medium setting.

- For a lower speed, push the control switch toward "low."
- For a higher speed, push the control switch toward "high."

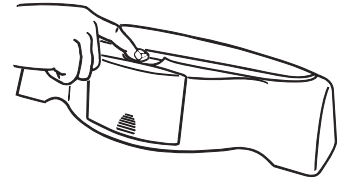

Step 7.

Give seat a push to start the swing.

Observe the swinging motion for a minute. It takes time for your swing to adjust to a new setting.

NOTE: A small, quiet baby will swing higher on each setting than a larger, more active baby.

Indicator Light-
ON/OFF light comes on when swing is turned on.

NOTE: SEAT MAY BE STOPPED ANY TIME MOTOR IS RUNNING WITHOUT DAMAGING MOTOR. PUSH SWING TO RESTART.

IF YOUR SWING MOTOR STOPS OPERATING BY ITSELF, PROTECTIVE DEVICE MAY HAVE BEEN ACTIVATED. TURN OFF MOTOR, WAIT 3 MINUTES, THEN RESTART SWING.

FOR SAFE BATTERY USE:

Do not remove or insert the batteries with baby in swing. The batteries could fall on baby if dropped.

Keep the batteries out of children's reach.

Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly (put in backwards) or if all batteries are not replaced or recharged at the same time.

Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged. Never recharge a cell of one type in a recharger made for a cell of another type.


Discard leaky batteries immediately. Leaky batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

Always remove batteries if the swing is not going to be used for a month or more. Batteries left in the unit may leak and cause damage.

Recommended Type Batteries—Size D

- Rechargeables—Use and recharge according to manufacturer's instructions.
- Disposables—Alkaline.
- **NEVER** mix battery types.

Change batteries when swing ceases to operate satisfactorily.

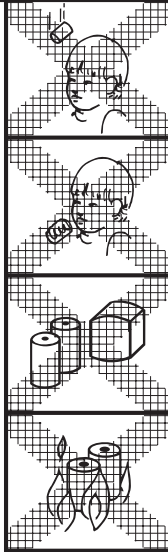

Replacement Parts

Instructions for ordering swing parts:

Complete form below. Your swing model number **MUST** be included on the form to ensure proper replacement parts. Your model number can be found on a sticker beneath the swing motor. **Payment must accompany your order.**

Parts List:	Price:*
Motor unit.....	\$25.00
Infant carrier.....	\$30.00
Plastic hanger assembly...	\$ 7.00
Cloth seat cover.....	\$17.00
Seat belt with buckle.....	\$ 7.00
Plastic leg brace.....	\$ 5.00 (each)
Upper leg section.....	\$ 7.00 (each)
Lower leg section.....	\$ 7.00 (each)
Leg tips (set of four).....	\$ 5.00
Cradle.....	\$25.00

* Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions, please call toll-free:

1-800-345-4109

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
MAIN STREET
ELVERSON, PA 19520

Caring for Your Battery Powered Swing

Problem: Possible Reasons for Problem:

- | | |
|------------------------------|---|
| Swing won't operate | <ol style="list-style-type: none"> 1. No batteries in swing. 2. Batteries dead. 3. Speed setting too low. 4. Batteries in backwards—check “+” and “-”. 5. Corrosion on battery terminals. Rotate batteries in place against terminals, or clean with sandpaper or steel wool if corrosion is severe. 6. Baby leaning too far forward. 7. Baby grabbing swing legs. (Discontinue use.) 8. Seat not pushed high enough for a good start. 9. Protective device activated. (Turn off motor, wait 3 minutes, then restart swing.) |
| Seat doesn't swing very high | <ol style="list-style-type: none"> 1. Control setting too low. 2. Blanket hanging down, causing increased wind resistance. 3. Batteries too weak. 4. Baby leaning too far forward. 5. Baby too heavy or too active. (Discontinue use.) 6. Soft carpet (swings higher on hard floors). |

If you still have problems, call our toll-free number, 1-800-345-4109.

Model Number	SHIP TO:
(Must be filled in)	Name _____
<input type="checkbox"/> Motor unit	Address _____
<input type="checkbox"/> Infant carrier	City, State, Zip _____
<input type="checkbox"/> Plastic hanger assy.	() _____
<input type="checkbox"/> Cloth cover	Telephone _____
<input type="checkbox"/> Seat belt with buckle	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Plastic leg brace	(payable to Graco Children's Products Inc.)
<input type="checkbox"/> Upper leg section	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Lower leg section	<input type="checkbox"/> Visa
<input type="checkbox"/> Leg tips	<input type="checkbox"/> MasterCard
<input type="checkbox"/> Cradle	<input type="checkbox"/> Discover
Total: _____	Account #: _____
6% sales tax (PA only): _____	Expiration date: _____
Total amount due: _____	Signature: _____

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>