

INSTALLATION INSTRUCTIONS FOR OPTIONAL STYLE VIEW DOOR KITS FOR USE WITH GAS FIREPLACES

ARCH DESIGN KITS			
Cat. No.	Model	Description	Model Series
H0858	AD35C	35" Arch Doors, Charcoal	MPD3530 MPD35ST MPB35ST LMDV-3530
H0859	AD35TI	35" Arch Doors, Textured Iron	
H0860	AD35SP	35" Arch Doors, Satin Pewter	
H0861	AD35AB	35" Arch Doors, Antique Brass	
H0862	AD40C	40" Arch Doors, Charcoal	SDDV-40, EDV4035, ED4035-2, *EDVST, EDST-2, EDVCR/L, EDCR/L-2, EDVVF, EDPF-2, MPD4035, LMDV-4035
H0863	AD40TI	40" Arch Doors, Textured Iron	
H0864	AD40SP	40" Arch Doors, Satin Pewter	
H0865	AD40AB	40" Arch Doors, Antique Brass	
H0866	AD45C	45" Arch Doors, Charcoal	
H0867	AD45TI	45" Arch Doors, Textured Iron	EDV4540, ED4540-2, MPD4540
H0868	AD45SP	45" Arch Doors, Satin Pewter	
H0869	AD45AB	45" Arch Doors, Antique Brass	
H0870	AD35EC	35" Elite Arch Doors, Charcoal	SDDV-35, EDV3530, ED3530
H0871	AD35ETI	35" Elite Arch Doors, Textured Iron	
H0872	AD35ESP	35" Elite Arch Doors, Satin Pewter	
H0873	AD35EAB	35" Elite Arch Doors, Antique Brass	




ARCH PANE DESIGN KITS			
Cat. No.	Model	Description	Model Series
H0930	APD35C	35" Arch Pane Doors, Charcoal	MPD3530 MPD35ST MPB35ST LMDV-3530
H0931	APD35TI	35" Arch Pane Doors, Textured Iron	
H0932	APD35SP	35" Arch Pane Doors, Satin Pewter	
H0933	APD35AB	35" Arch Pane Doors, Antique Brass	
H0934	APD40C	40" Arch Pane Doors, Charcoal	SDDV-40, EDV4035, ED4035-2, *EDVST, EDST-2, EDVCR/L, EDCR/L-2, EDVVF, EDPF-2, MPD4035, LMDV-4035
H0935	APD40TI	40" Arch Pane Doors, Textured Iron	
H0936	APD40SP	40" Arch Pane Doors, Satin Pewter	
H0937	APD40AB	40" Arch Pane Doors, Antique Brass	
H0938	APD45C	45" Arch Pane Doors, Charcoal	
H0939	APD45TI	45" Arch Pane Doors, Textured Iron	EDV4540, ED4540-2, MPD4540
H0940	APD45SP	45" Arch Pane Doors, Satin Pewter	
H0941	APD45AB	45" Arch Pane Doors, Antique Brass	
H0942	APD35EC	35" Elite Arch Pane Doors, Charcoal	SDDV-35, EDV3530, ED3530
H0943	APD35ETI	35" Elite Arch Pane Doors, Textured Iron	
H0944	APD35ESP	35" Elite Arch Pane Doors, Satin Pewter	
H0945	APD35EAB	35" Elite Arch Pane Doors, Antique Brass	

SQUARE DESIGN KITS			
Cat. No.	Model	Description	Model Series
H0946	SD35C	35" Sq. Doors, Charcoal	MPD3530 MPD35ST MPB35ST LMDV-3530
H0947	SD35TI	35" Sq. Doors, Textured Iron	
H0948	SD35SP	35" Sq. Doors, Satin Pewter	
H0949	SD35AB	35" Sq. Doors, Antique Brass	

SQUARE DESIGN KITS (continued)			
Cat. No.	Model	Description	Model Series
H0950	SD40C	40" Sq. Doors, Charcoal	SDDV-40, EDV4035, ED4035-2, *EDVST, EDST-2, EDVCR/L, EDCR/L-2, EDVVF, EDPF-2, MPD-4035, LMDV-4035
H0951	SD40TI	40" Sq. Doors, Textured Iron	
H0952	SD40SP	40" Sq. Doors, Satin Pewter	
H0953	SD40AB	40" Sq. Doors, Antique Brass	
H0954	SD45C	45" Sq. Doors, Charcoal	EDV4540, ED4540-2, MPD4540
H0955	SD45TI	45" Sq. Doors, Textured Iron	
H0956	SD45SP	45" Sq. Doors, Satin Pewter	
H0957	SD45AB	45" Sq. Doors, Antique Brass	SDDV-35, EDV3530, ED3530
H0958	SD35EC	35" Elite Sq. Doors, Charcoal	
H0959	SD35ETI	35" Elite Sq. Doors, Textured Iron	
H0960	SD35ESP	35" Elite Sq. Doors, Satin Pewter	
H0961	SD35EAB	35" Elite Sq. Doors, Antique Brass	

SQUARE PANE DESIGN KITS			
Cat. No.	Model	Description	Model Series
H0962	SPD35C	35" Sq. Pane Doors, Charcoal	MPD3530 MPD35ST MPB35ST LMDV-3530
H0963	SPD35TI	35" Sq. Pane Doors, Textured Iron	
H0964	SPD35SP	35" Sq. Pane Doors, Satin Pewter	
H0965	SPD35AB	35" Sq. Pane Doors, Antique Brass	
H0966	SPD40C	40" Sq. Pane Doors, Charcoal	SDDV-40, EDV4035, ED4035-2, *EDVST, EDST-2, EDVCR/L, EDCR/L-2, EDVVF, EDPF-2, MPD-4035, LMDV-4035
H0967	SPD40TI	40" Sq. Pane Doors, Textured Iron	
H0968	SPD40SP	40" Sq. Pane Doors, Satin Pewter	
H0969	SPD40AB	40" Sq. Pane Doors, Antique Brass	
H0970	SPD45C	45" Sq. Pane Doors, Charcoal	EDV4540, ED4540-2, MPD4540
H0971	SPD45TI	45" Sq. Pane Doors, Textured Iron	
H0972	SPD45SP	45" Sq. Pane Doors, Satin Pewter	
H0973	SPD45AB	45" Sq. Pane Doors, Antique Brass	
H0974	SPD35EC	35" Elite Sq. Pane Doors, Charcoal	SDDV-35, EDV3530, ED3530
H0975	SPD35ETI	35" Elite Sq. Pane Doors, Text. Iron	
H0976	SPD35ESP	35" Elite Sq. Pane Doors, Satin Pewt.	
H0977	SPD35EAB	35" Elite Sq. Pane Doors, Ant. Brass	

KIT CONTENTS:	TOOLS REQUIRED:
1 ea. Door, Left 1 ea. Door, Right 1 ea. Doorframe Assembly 1 ea. Instruction Sheet	None

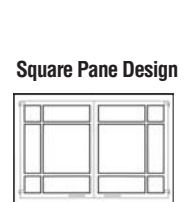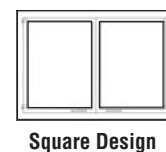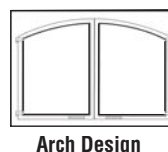

* Note: EDVST models manufactured August 2004 or earlier will also require a magnet mounting kit, Cat. No. H2110


NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

CAUTION


INSTALL ONLY WHEN THE FIREPLACE IS OFF AND COLD!

INSTALLATION INSTRUCTIONS:


1. Remove top louver or radiant panel/hood assembly (if possible), by pulling the assembly up and out (see Figure 1). In instances where the radiant panel is used but it is framed in with tile or other approved material, the hood must still be removed by firmly pulling it forward until it releases from the receiving brackets. If installing Style View doors on Elite units, remove top and bottom bustle by lifting them up and out. Merit Plus models are not equipped with bustles.

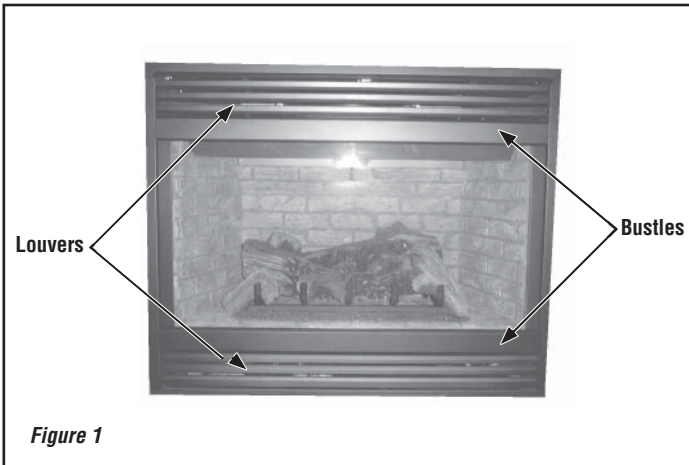

2. Ensure the glass door assembly on the fireplace is properly aligned as follows:
 - a. Open the bottom louver (hinges down).
 - b. (For Elite-2 and EDV Models only)
 - i. Remove the bottom compartment door by sliding the hinge pin, located at the door's left side, to the right until it disengages from the left corner post hole. Pull the door diagonally to the left, away from the fireplace.
 - ii. Remove the modesty panel as follows: Lift the modesty panel by the tab on the panel's right end, pull the right end of the panel away from cabinet and then pull the panel diagonally out of the corner post slots on the left side of the unit. Remove the modesty panel carefully, so that none of the wires become loose or disconnected.
 - c. Open both latches at the bottom of the glass door assembly (refer to Homeowners Manual).
 - d. Adjust glass door so that it is evenly spaced and aligned to the fireplace chassis on both sides.
 - e. Fasten the 2 latches (ensure that both latches are engaged with the door's vee-flange and fully closed).
3. Remove Style View doorframe from packaging. Install the door-frame as follows:
 - a. Locate slots on each side of fireplace (see Figure 2).

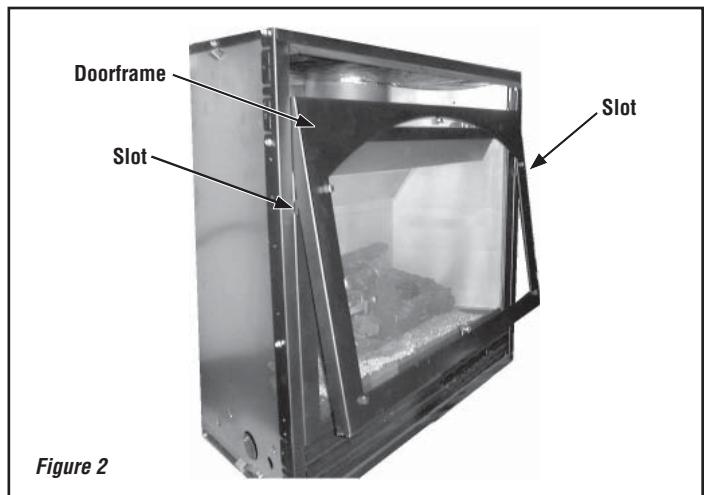

- b. Position the top of the doorframe above the top of the glass door assembly (centered and approximately 1" above glass door assembly). Note: The bottom of the doorframe should be held slightly away as shown in Figure 2. Swing the bottom of the doorframe inward aligning the sides of the doorframe between the glass door and fireplace chassis and tabs on doorframe aligning into slots on fireplace. Swing the bottom of the doorframe in, then push down to ensure engagement.
4. Remove the Style View doors from packaging. Install them by aligning hinge pins on the doors with the hinge holes on the doorframe and slide down (see Figure 3). Ensure the hinge pins are fully seated onto the shoulders of the hinge holes.

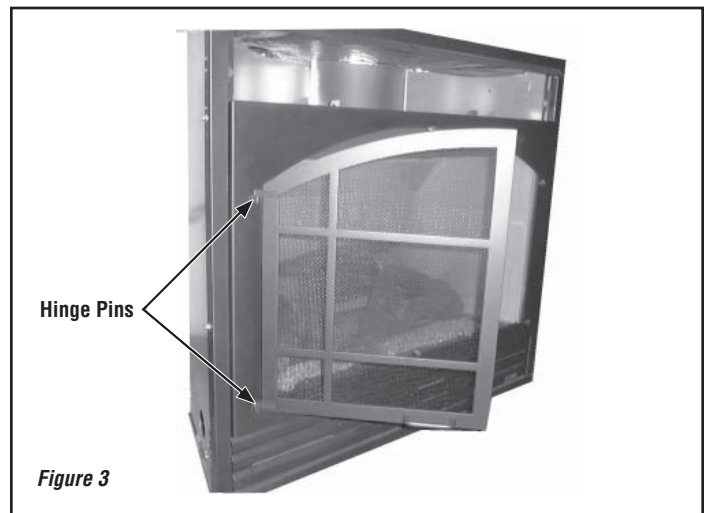

5. Close both doors.
6. Ensure that both latches below the door are engaged with the door's vee-flange and fully closed before operating the fireplace.
7. For Elite-2 and EDV models, reinstall modesty panel, ensuring all wires are securely connected.
8. Re-install the top louver assembly, hood or bustles, if applicable.
9. Close the bottom louver assembly.

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and the discontinuance of colors, styles and products. Consult your local distributor for fireplace code information.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>