

music hall

dac15.2

digital to analog converter

INSTRUCTION MANUAL



music hall

<http://www.musicchallaudio.com>

Congratulations on Your Purchase

You have selected a state of the art digital-to-analog converter (DAC). Each component chosen for assembly and construction of the music hall dac15.2 was selected to provide you with superior performance and the highest level of sound reproduction available today. We know of no digital-to-analog converter that costs as much to produce that sells for so little. Please take a few moments to read over the instruction manual to ensure that you get the best performance from your unit and years of trouble-free service.

SAFETY GUIDELINES

This product is designed and manufactured to strict quality and safety standards. However, you should be aware of the following installation and operation precautions:

1. Take heed of warnings and instructions

Read all the instructions before connecting or operating the unit.

Keep this manual so you can refer to these safety instructions. Heed all warnings and safety information in these instructions and on the unit.

2. Water and Moisture

To reduce the risk of fire or electric shock, do not expose the unit to moisture or water. If the unit is exposed to moisture, immediately disconnect the power cord from the wall. Take the unit to an authorized music hall service center for inspection. Do not touch the unit, power cord, or plug with wet hands.

3. Object or liquid entry

Do not allow foreign objects or liquids into the unit. If this happens, immediately disconnect the power cord from the wall and take the unit to an authorized music hall service center for inspection.

4. Ventilation

You must allow 2 inches (5 cm.) of unobstructed clearance around the unit. Do not place the unit on a bed, sofa, rug, or similar surface that could block ventilation from the bottom. Do not stack another component on top of the amplifier. If the component is placed in a bookcase or cabinet, it must be ventilated to allow proper cooling.

5. Heat

Keep the unit away from naked flames, radiators, heat registers, stoves, or any other heat-producing appliances (including amplifiers).

6. Climate

The unit has been designed for use in moderate climates. Do not attempt to use below 41 degrees Fahrenheit (5 degrees Celsius) or above 95 degrees Fahrenheit (35 degrees Celsius).

7. Rack and Stands

Place the unit on a fixed, level surface strong enough to support its weight. Do not place it on a moveable cart that could tip over. We recommend only using stands approved for use with audio equipment.

8. Cleaning

Unplug the unit from the mains supply before cleaning. The case should normally require only a wipe with a soft lint-free cloth.

9. Power Sources

Only connect the unit to a power supply of the type and voltage described in the operating instructions or specified on the rear panel of the unit.

10. Power cord protection

Connect the unit to the power outlet only with the cord supplied. Do not modify the supplied cable in any way. Do not attempt to defeat grounding and/or polarization provisions. Do not use extension cords. Do not route the power cord where it will be crushed, pinched, bent at severe angles, exposed to heat, or damaged in any way.

11. Non-use periods

If the unit is to be left unused for a long period of time, the power cord should be unplugged from the wall outlet.

12. Damage Requiring Service

Stop using the unit immediately and have it inspected by an authorized music hall service center whenever:

1. The power supply cord or plug has been damaged.
2. Liquid has been spilled into the unit.
3. The unit has been exposed to rain.
4. The unit does not operate properly.
5. The unit has been dropped or damaged.
6. Smoke or any unusual smell is detected from the unit.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Getting Started

Thank you for purchasing the music hall dac15.2. The dac15.2 is a solid-state digital- to-analog converter (DAC) designed for the music lover. We chose a select group of technologically advanced components to create this sophisticated digital-to-analog converter. The dac15.2 can accept any coax (s/pdif), USB, or optical (toslink) digital input from one of music hall's compact disc players, a CD/DVD transport, iPod transport, computer, media server, Sonos, Squeezebox, DVD in stereo, and will output two channel stereo analog. When used with your computer or in a top-end audio system, your music hall digital-to-analog converter will provide years of listening enjoyment.

The dac15.2 features the latest Texas Instruments (formerly Burr-Brown) PCM 1796 24bit, 192kHz, advanced segment, stereo audio digital-to-analog converter. This processor features 123dB dynamic range, an 8 x oversampling digital filter, and just 0.0005% THD.

A Few Precautions


Please read this manual carefully. In addition to installation and operating instructions, it provides valuable information that will help you get optimum performance from your system. Please contact your authorized music hall dealer for answers to your questions. In addition, all of us at music hall welcome your questions and comments. Save the shipping carton and all enclosed packing material for future use. Shipping or moving the unit in anything other than the original packing material may result in severe damage that is not covered by the warranty. Be sure to keep the original sales receipt. It is your best record of the date of purchase, which you will need in the event warranty service is required.

Placement

Use common sense when placing the dac15.2. Always place it on a firm, level surface. Make sure that the shelf or cabinet can support the weight. Ensure that there is adequate ventilation. Avoid placing the dac15.2 where it may be subject to excessive heat, such as near a heat register. Do not place anything on top of it. For best performance, avoid placing the dac15.2 where it may be subject to vibration, such as near a speaker.

Audio Out

To avoid damage to the dac15.2, make sure it is **NOT** plugged into an AC outlet while connecting up or disconnecting the audio outputs. The dac15.2 has one set of fixed audio outputs on the back. Connect the **ANALOG OUT** connectors to the appropriate audio inputs on your integrated amplifier, preamplifier, or receiver.

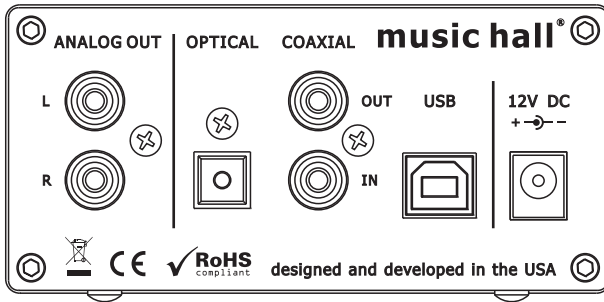

Connecting to the Mains - Plugging In

Check that the Power Switch on the front of the dac15.2 is in the **off** position. Look at the **voltage selector** slider on the back of the unit and confirm that it is set for the correct voltage: (~115V USA/~230V Europe). **Connect the low voltage plug from the power supply to 12V DC socket on the dac15.2 before connecting to the mains.**

Digital In - Connecting Source Components to the dac15.2

The dac15.2 has 3 digital inputs: COAXIAL IN (s/pdif), OPTICAL (toslink), and USB.

Connect your source components to the appropriate inputs on the back of the dac15.2. You can connect one or all three inputs at the same time. Choose between the inputs using the **input** selector on the front panel.

Special note: When connecting the dac15.2 via USB to your computer: the dac15.2 and your computer should both be powered up. **Quit any open media player programs (iTunes, Windows Media, Real Media, etc) on your computer prior to connecting the dac15.2.**

Connect the USB cable from your computer to the dac15.2. Your computer will recognize the dac15.2 and install the necessary drivers.

You will probably find that setting your media player and computer volume to max will sound best.

Apple computers and some PC's may not automatically recognize the dac15.2. In this case; with your computer and the dac15.2 powered up; connect the USB cable. Go to System Preferences (Control Panel) → Sound Output → choose the USB Audio DAC for output. Close System Preferences. Launch iTunes.

Digital Out COAXIAL OUT


S/PDIF output for use with other digital components. This output converts the USB and OPTICAL (toslink) input signal to an S/PDIF output.

Using the dac15.2 power - on/off

Turn on the dac15.2. If no digital input is active the locked light will not light.

input

Use the input switch to select desired input. Enjoy.

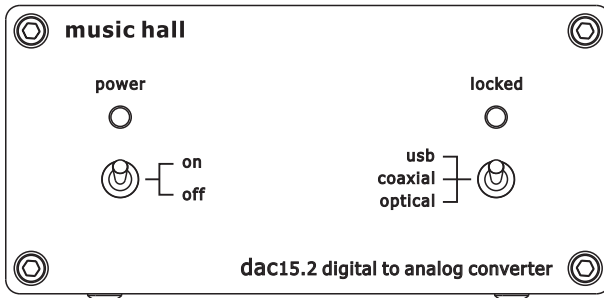

Troubleshooting

If no sound comes out of the system with the dac15.2 connected, there are several areas to check. Either you are not getting an audio signal to your preamplifier, or you don't have a good digital source feeding the dac15.2.

First, check to make sure your preamplifier, integrated amp, or receiver is switched to the input that the dac15.2 is connected to. Test the connection and the cables to make sure. Keeping the input selected and using the same cable, connect this input to a known good source like a tuner or the analog output of a CD player. If that works, then it is most likely not a connection problem between the dac15.2 and the preamp, integrated amp, or receiver.

The next step is to check and see if the digital input is properly connected. Look on the front panel of the dac15.2 to see if the locked light is illuminated. If it is not, this is most likely the problem. Switch the **input** selector to another input to see if one locks. If one does not lock, you either have a bad digital cable or you aren't getting a good digital signal. Try replacing the digital cable on the input you've selected. For instance, if you are using a coax connection try replacing the coax cable with another coax cable. If this doesn't work, try selecting a different input (optical for instance) and try using the CD player's optical output with an optical cable instead.

If you are using a USB connection, it is necessary for the computer to recognize the dac15.2 as a connected device. Check in the computer's control panel under USB devices and see if the dac15.2 is selected. If not, with both the dac15.2 and your computer powered up, remove the USB cable from the computer and then re-insert it. Watch the computer monitor for an indication it has found the hardware. Apple computers may not automatically recognize the dac15.2. Apple users check your System Preferences as suggested above.

Technical Specifications

THD+N: <0.0012% (20Hz 20kHz)

Output level: RCA 2.1V

COAX 0.5Vp-p (@75 OHM)

Frequency response: DC-20KHz +/-0.5dB

SNR: >110dB

Power dissipation: <10W

Dynamic range: > 115dB (24 bit)

> 96dB (16bit)

Crosstalk: <-105dB

Operating temperature: 0 ~ 40°C

USB input accepts 24bit/96kHz signals

All other inputs accept signals up to 24bit/192kHz

Power supply: AC100-240V 50/60Hz

Ti PCM1796 24bit/192kHz DAC

Physical

Dimensions: W x D x H (4.2 x 6.0 x 2.0 in.) (107 x 152 x 52)

Weight: 3 lbs. Pkg.

Supplied Accessories: external power transformer

USA - This product complies with FCC requirements.

Guarantee

This entitles you to have the music hall dac15.2 repaired or replaced, at our discretion, free of charge for one year after purchase, at any authorized music hall dealer, provided the unit was purchased from an authorized dealer. Your original sales receipt is used as proof of purchase date. Music hall can take no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorized repair and or adjustment. Neither can music hall accept responsibility for damage or loss occurring during transit to or from the person claiming under the guarantee.

Warranty

Your music hall dac15.2 warranty covers parts and labor costs for one year from the purchase date. After one year, you must pay for both parts and labor costs. The warranty does not cover transportation costs at any time.

Claims under guarantee

The unit should be packed in the original packing and returned to the dealer from whom it was purchased, or to an authorized music hall service center. It should be sent by a reputable carrier, carriage prepaid. Do not send the unit via USPS (United States Postal Service). No responsibility can be accepted for the unit while in transit to the dealer, customer, or authorized service agent, therefore, customers are advised to insure the unit against loss, damage, or theft while in transit.



FOR FURTHER INFORMATION CONTACT:

Music Hall
108 Station Road
Great Neck, NY 11023
Tel: 516-487-3663
Fax: 516-773-3891
<http://www.musicchallaudio.com>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>