

# Dell™ E1909W Flat Panel Monitor User's Guide

[About Your Monitor](#)

[Setting Up the Monitor](#)

[Operating the Monitor](#)

[Troubleshooting](#)

[Appendix](#)

---

## Notes, Notices, and Cautions



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.

---

Information in this document is subject to change without notice.  
© 2008 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc; *Microsoft* and *Windows* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries; *Adobe* is a trademark of Adobe Systems Incorporated, which may be registered in certain jurisdictions. *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

---

Model E1909Wc

July 2008 Rev. A00

[Back to Contents Page](#)

## About Your Monitor


Dell™ E1909W Flat Panel Monitor User's Guide





- [Package Contents](#)
- [Product Features](#)
- [Identifying Parts and Controls](#)
- [Monitor Specifications](#)
- [Plug and Play Capability](#)
- [Maintenance Guidelines](#)



---

## Package Contents

Your monitor ships with the components shown below. Ensure that you have received all the components and [contact Dell](#) if something is missing.

 **NOTE:** Some items may be optional and may not ship with your Monitor. Some features or media may not be available in certain countries.

	1 Monitor
	1 Stand
	1 Power Cable
	1 VGA Cable (attached to the monitor)

	<ul style="list-style-type: none"><li>1 DVI Cable</li></ul>
	<ul style="list-style-type: none"><li>1 <i>Drivers and Documentation</i> media</li><li>1 <i>Quick Setup Guide</i></li><li>1 <i>Safety Information</i></li></ul>

---

## Product Features


The **E1909W** flat panel display has an active matrix, thin-film transistor (TFT), liquid crystal display (LCD). The monitor features include:

- 19-inch (481.4 mm) viewable area display.
- 1440x900 resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position, or while moving from side-to-side.
- Tilt capability.
- Removable pedestal and Video Electronics Standards Association (VESA) 100 mm mounting holes for flexible mounting solutions.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation media which includes an information file (INF), Image color Matching File (ICM), and product documentation.
- Energy Saver feature for Energy Star compliance.
- Security lock slot.
- EPEAT™ GOLD compliant.

---

## Identifying Parts and Controls

### Front View

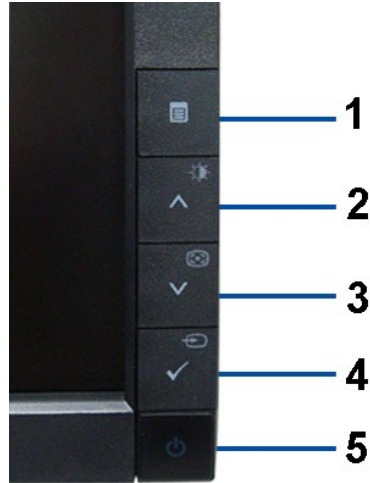


Front panel controls


Front View

Label	Description
1	Menu
2	Adjust up/Brightness & Contrast
3	Adjust down/Automatic adjust
4	Select/Input source Select
5	Power (with power light indicator)

## Back View

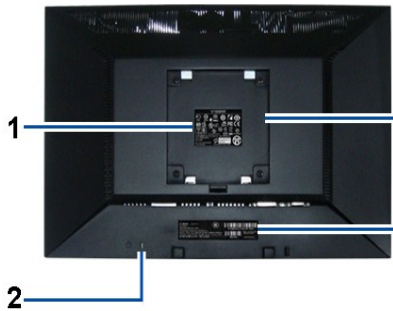

Back view

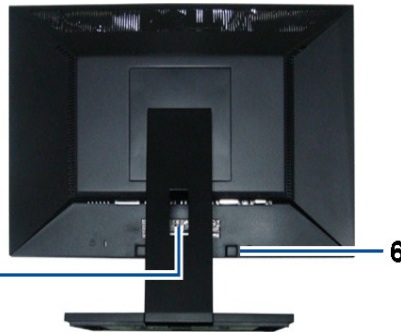


Back View with monitor stand

Label	Description	Use
1	Regulatory rating label	Lists the regulatory approvals.
2	Security lock slot	To help secure your monitor.
3	Barcode serial number label	To contact Dell for technical support.
4	VESA mounting holes (100mm) (Behind attached base plate)	To mount the monitor.
5	Cable management slot	To organize cables by placing them through the slot.
6	Dell Soundbar mounting brackets	To attach the optional Dell Soundbar.

**Side View**



**Bottom View**

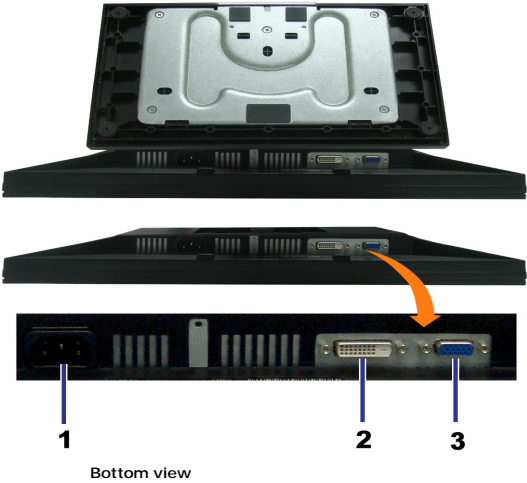

Label	Description
1	AC power cord connector
2	DVI connector
3	VGA connector

**Monitor Specifications**

**Flat Panel Specifications**

Screen type	Active matrix - TFT LCD
Screen dimensions	19 inches (19-inch viewable image size)
Preset display area:	408.24(H)X255.15(V)
Horizontal	408.24 mm (16.08 inches)

Vertical	255.15 mm (10.05 inches)
Pixel pitch	0.2835 mm
Viewing angle	160° (vertical) typical, 160° (horizontal) typical
Luminance output	300 CD/m <sup>2</sup> (typical)
Contrast ratio	1000 to 1 (typical)
Faceplate coating	Antiglare with hard-coating 3H
Backlight	CCFL (4) edgelight system
Response Time	5 ms typical
Color Gamut	82%*

\*[E1909W] color gamut (typical) is based on CIE1976 (82%) and CIE1931 (72%) test standards.









[Back to Contents Page](#)


## Appendix

### Dell™ E1909W Flat Panel Monitor User's Guide

- [Safety Instructions](#)
- [FCC Notice \(U.S. Only\) and Other Regulatory Information](#)
- [Contacting Dell](#)

---

### CAUTION: Safety Instructions

 **CAUTION:** Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the *Product Information Guide*.

---


### FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

---

### Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit [support.dell.com](http://support.dell.com).
2. Verify your country or region in the **Choose A Country/Region** drop-down menu at the bottom of the page.
3. Click **Contact Us** on the left side of the page.
4. Select the appropriate service or support link based on your need.
5. Choose the method of contacting Dell that is convenient for you.

---

[Back to Contents Page](#)

[Back to Contents Page](#)


## Setting Up Your Monitor

### Dell™ E1909W Flat Panel Monitor

---

#### **If you have a Dell™ desktop or a Dell™ portable computer with internet access**

1. Go to <http://support.dell.com>, enter your service tag, and download the latest driver for your graphics card.
2. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1440x900** again.

 **NOTE:** If you are unable to set the resolution to 1440x900, please contact Dell™ to inquire about a Graphics Adapter that supports these resolutions.

---

[Back to Contents Page](#)

[Back to Contents Page](#)


## Setting Up Your Monitor

Dell™ E1909W Flat Panel Monitor

---

### If you have non Dell™ desktop, portable computer, or graphic card

1. Right-click on the desktop and click **Properties**.
2. Select the **Settings** tab.
3. Select **Advanced**.
4. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
5. Refer to the graphic card provider website for updated driver (for example, <http://www.ATI.com> OR <http://www.NVIDIA.com>).
6. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1440X900** again.

 **NOTE:** If you are unable to set the resolution to 1440x900, please contact the manufacturer of your computer or consider purchasing a graphics adapter that will support the video resolution of 1440x900.

---

[Back to Contents Page](#)


## Operating the Monitor






### Dell™ E1909W Flat Panel Monitor User's Guide



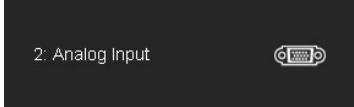
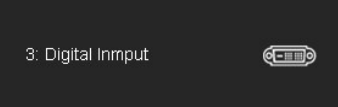

- [Using the Front Panel Controls](#)
- [Using the On-Screen Display \(OSD\) Menu](#)
- [Setting the Optimal Resolution](#)
- [Using the Dell Soundbar \(Optional\)](#)
- [Using the Tilt](#)
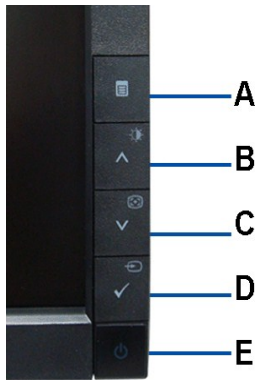
## Using the Front Panel

Use the control buttons on the front of the monitor to adjust the characteristics of the image being displayed. As you use these buttons to adjust the controls, an OSD shows the numeric values of the characteristics as they change.



Front panel Button	Description
<p>A</p>  <p>Menu</p>	Use the MENU button to launch the on-screen display (OSD) and select the OSD Menu. See <a href="#">Accessing the Menu System</a> .
<p>B</p>  <p>Brightness&amp;Contrast /Adjust UP</p>	Use this button to directly access the "Brightness/Contrast" menu or to increase the values of the selected menu option.
<p>C</p>  <p>Automatic Adjust /Adjust Down</p>	<p>Use Auto Adjust to activate automatic setup/adjustment or to decrease the values of the selected menu option. The following dialog appears on a black screen as the monitor self-adjusts to the current input:</p>  <p>Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under Image Settings.</p> <p><b>NOTE:</b> Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables.</p>
<p>D</p>  <p>Input Source Select/Select</p>	<p>Use this button to select the input source or select an OSD menu option. Use the Input source button to select one of the two different video signals that may be connected to your monitor:</p> <ul style="list-style-type: none"> <li>1 VGA input</li> <li>1 DVI-D input</li> </ul>

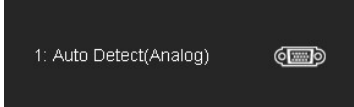		or	
		or	
 <b>Power</b> <b>(with power light indicator)</b>	<p>Use the Power button to turn the monitor on and off.</p> <p>The Blue LED indicates the monitor is on and fully functional. An amber LED indicates DPMS power save mode.</p>		

If either VGA or DVI-D input is selected and both VGA and DVI-D cables are not connected, a floating dialog box as shown below appears.




## Using the On-Screen Display (OSD) Menu

### Accessing the Menu System

**NOTE:** If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.


1. Push the MENU button to launch the OSD menu and display the main menu.

#### Main Menu for Analog (VGA) Input

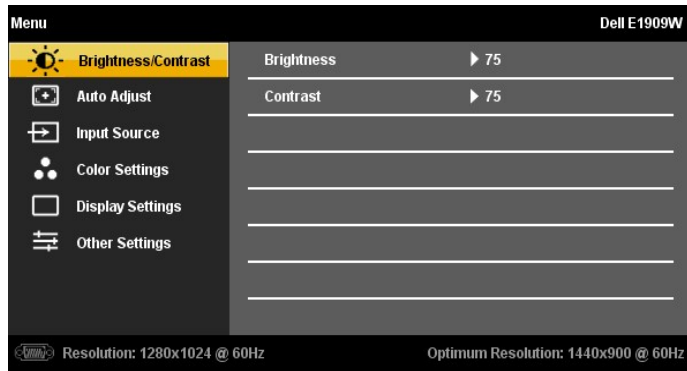

or


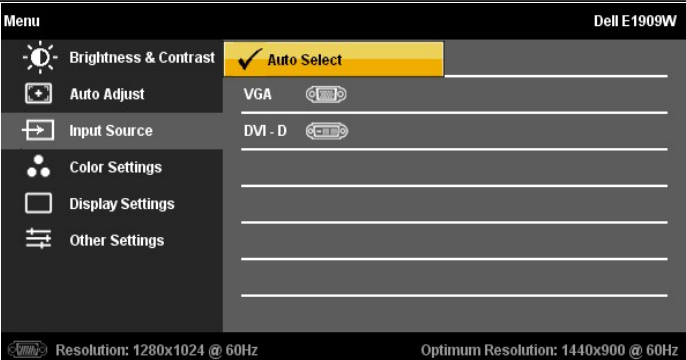


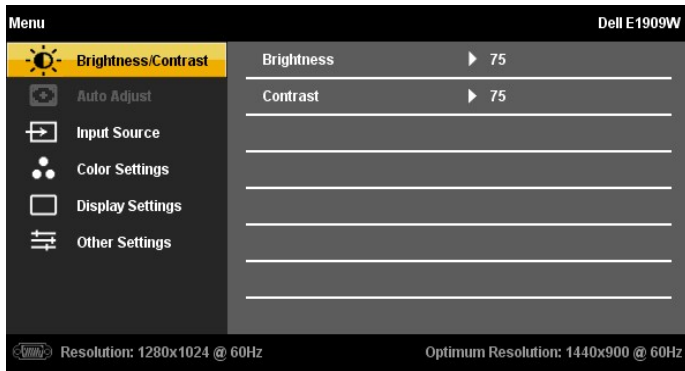


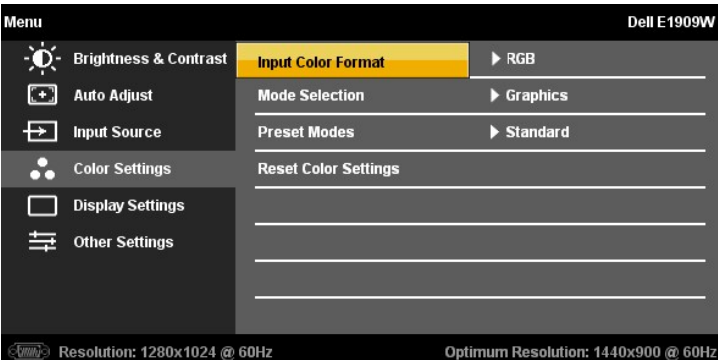
#### Main Menu for non Analog (non VGA) Input




**NOTE:** AUTO ADJUST is only available when you use the analog (VGA) connector.

2. Push the and buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the following table for a complete list of all the options available for the monitor.
3. Push the MENU button once to activate the highlighted option.
4. Push and button to select the desired parameter.
5. Push MENU to enter the slide bar and then use the and buttons, according to the indicators on the menu, to make your changes.
6. Select the "Menu/Exit" option to return to the main menu or exit the OSD menu.

Icon	Menu and Submenus	Description
	<b>BRIGHTNESS &amp; CONTRAST</b>	Use this menu to activate Brightness/Contrast adjustment.
	<b>Brightness</b>	Brightness adjusts the luminance of the backlight. Push the  button to increase brightness and push the  button to decrease brightness (min 0 ~ max 100).
	<b>Contrast</b>	Adjust Brightness first, and then adjust Contrast only if further adjustment is necessary. Push the  button to increase contrast and push the  button to decrease contrast (min 0 ~ max 100). The Contrast function adjusts the degree of difference between darkness and lightness on the monitor screen.
	<b>AUTO ADJUST</b>	Even though your computer recognizes your monitor on startup, the Auto Adjustment function optimizes the display settings for use with your particular setup.


		<div style="background-color: black; color: white; text-align: center; padding: 10px; font-weight: bold;">Auto Adjustment in Progress...</div> <p><b>NOTE:</b> In most cases, Auto Adjust produces the best image for your configuration.</p> <p><b>NOTE:</b> AUTO ADJUST option is only available when you are using the analog (VGA) connector.</p>
	<b>INPUT SOURCE</b>	<p>Use the INPUT SOURCE menu to select between different video signals that may be connected to your monitor.</p> 
	<b>VGA</b>	Select VGA input when you are using the analog (VGA) connector. Push  to select the VGA input source.
	<b>DVI-D</b>	Select DVI-D input when you are using the Digital (DVI) connector. Push  to select the DVI input source.
	<b>COLOR SETTINGS</b>	<p>Use the Color Settings to adjust the color setting mode and color temperature. There are different color setting sub-menus for VGA/DVI-D and Video input.</p> 
	<b>Input Color Format</b>	Choose the RGB option if monitor is connected to a PC or a DVD using a VGA or DVI cable. Choose the YPbPr option if monitor is connected to a DVD by a YPbPr to VGA or YPbPr to DVI cable or if the DVD color output setting is not RGB.
	<b>Mode Selection</b>	You can choose Graphics or Video according to the input signal. Select Graphics if connecting a PC to your monitor; for connecting DVD, STB or VCR to your monitor, Video is recommended.
	<b>Preset Modes</b>	<p>When you select Graphics, you can choose Standard, Multimedia, Game, Warm, Cool, or Custom (R,G,B):</p> <ul style="list-style-type: none"> <li>1 If you view media application like photo, clip etc via PC, choose "Multimedia" preset;</li> <li>1 If you play a game in PC, choose "Gaming" preset;</li> <li>1 If you prefer a lower color temperature (5700K), choose "Warm" preset;</li> <li>1 If you prefer a higher color temperature, choose "Cool" preset;</li> <li>1 Custom (R, G, B) Preset offers a range of 6500K colors;</li> <li>1 Choose "Standard" to utilize the panel native color format;</li> <li>1 Select Warm preset for a reddish tint. This color setting is used for color-intensive applications (photograph image editing, multimedia, movies, etc.)</li> <li>1 Select Cool preset for a bluish tint. This color setting is used for text based applications (spreadsheets, programming, text editors, etc.)</li> <li>1 Select Custom preset to increase or decrease each of the three colors (R, G, B) independently, in single digit increments, from 0 to 100.</li> </ul>



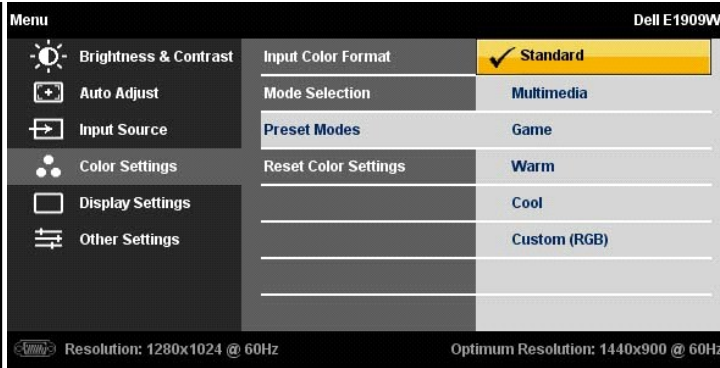





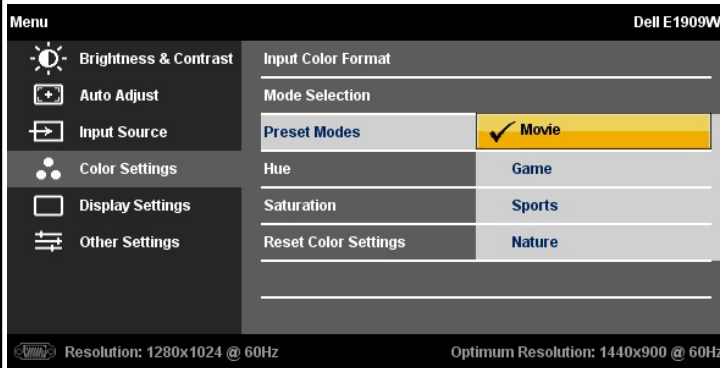





























When you select Video, you can choose Movie, Game, Sports, or Nature preset:

- 1 For playing a movie, choose "Movie" preset;
- 1 For playing a sport program, choose "Sports" preset;
- 1 For playing a game, choose "Game" preset;
- 1 For general picture or web or watch TV, choose Nature preset. You can adjust the Hue(Tint)/Saturation based on your preference. If you want to restore default color settings, choose Color Reset;
- 1 Select Color Reset preset to restore default (factory) Color settings. This setting is also the "sRGB" standard default color space.




<p>Hue</p>	<p>This feature can shift color of video image to green or purple. This is used to adjust the desired flesh tone color. Use  or  to adjust the hue from '0' to '100'.</p> <p></p> <p>Push  to increase the green shade of the video image</p> <p>Push  to decrease the purple shade of the video image</p> <p><b>NOTE:</b> Hue adjustment is available only for video input.</p>
<p>Saturation</p>	<p>This feature can adjust the color saturation of the video image. Use  or  to adjust the saturation from '0' to '100'.</p> <p></p> <p>Push  to increase the monochrome appearance of the video image</p> <p>Push  to decrease the colorful appearance of the video image</p> <p><b>NOTE:</b> Saturation adjustment is available only for video input.</p>
<p>Reset Color Settings</p>	<p>Reset your monitor color settings to the factory settings.</p>
<p> DISPLAY SETTINGS</p>	<p>Use the Display Settings to adjust image.</p>

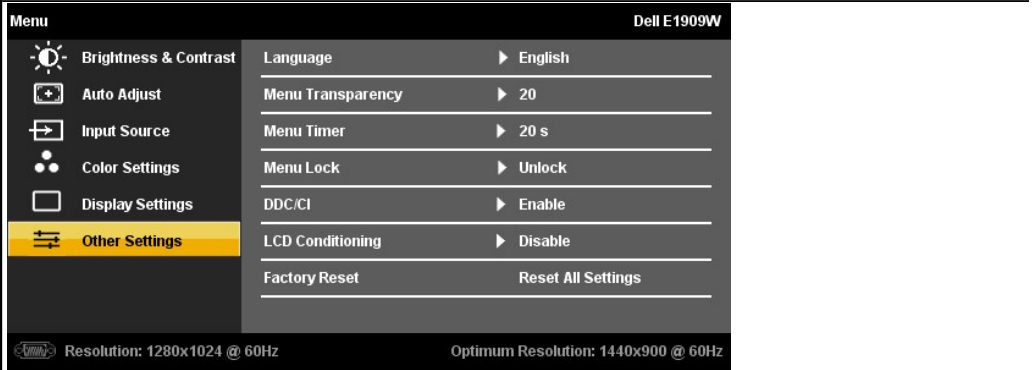		
Horizontal Position		Use the  or  buttons to adjust image left and right. Minimum is '0' (-). Maximum is '100' (+).
Vertical Position		Use the  or  buttons to adjust image up and down. Minimum is '0' (-). Maximum is '100' (+).
Sharpness		This feature can make the image look sharper or softer. Use  or  to adjust the sharpness from '0' to '100'.
Pixel Clock		The Phase and Pixel Clock adjustments allow you to adjust your monitor to your preference. These settings are accessed through the main OSD menu, by selecting 'Image Settings'.  Use the  or  buttons to adjust for best image quality.
Phase		If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use Phase (fine), again.  <b>NOTE:</b> Pixel Clock and Phase Adjustments are only available for "VGA" input.
Reset Display Settings		Select this option to restore default display settings.
 OTHER SETTINGS		Select this option to adjust the settings of the OSD, such as, the languages of the OSD, the amount of time the menu remains on screen, and so on.
		
Language		Language option to set the OSD display to one of seven languages (English, Espanol, Francais, Deutsch, Portugues, Simplified chinese or Japanese).
Menu Transparency		Select this option to change the menu transparency by pressing  or  (Minimum: 0 ~ Maximum: 100).
Menu Timer		OSD Hold Time: Sets the length of time the OSD will remain active after the last time you pressed a button.  Use the  or  buttons to adjust the slider in 5 second increments, from 5 to 60 seconds.
Menu Lock		Controls user access to adjustments. When 'Lock' is selected, no user adjustments are allowed. All buttons are locked except the menu  button.  <b>NOTE:</b> When the OSD is locked, pressing the menu button takes the user directly to the OSD settings menu, with OSD Lock selected. Select "Unlock" to unlock and allow user access to all applicable settings.
DDC/CI		DDC/CI (Display Data Channel/Command Interface) allows your monitor parameters (brightness, color balance etc) to be adjustable via software on your PC. You can disable this feature by selecting "Disable". Enable this feature for best user experience and optimum performance of your monitor.

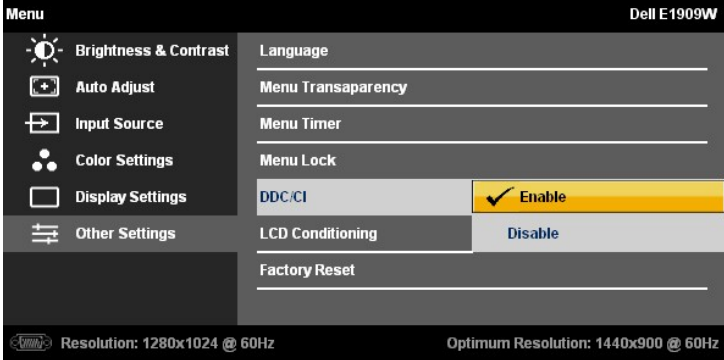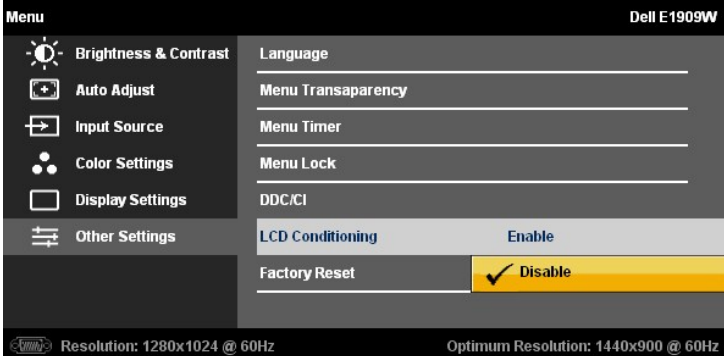		 <p>The screenshot shows the OSD menu for a Dell E1909W monitor. The 'DDC/CI' option is highlighted, and the 'Enable' button is selected. Other options include Brightness &amp; Contrast, Auto Adjust, Input Source, Color Settings, Display Settings, Other Settings, Language, Menu Transparency, Menu Timer, Menu Lock, LCD Conditioning (set to Disable), and Factory Reset. The resolution is 1280x1024 @ 60Hz, and the optimum resolution is 1440x900 @ 60Hz.</p>
LCD Conditioning	Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. You can enable this feature by selecting "Enable".	 <p>The screenshot shows the OSD menu for a Dell E1909W monitor. The 'LCD Conditioning' option is highlighted, and the 'Enable' button is selected. The 'Factory Reset' option is highlighted, and the 'Disable' button is selected. Other options include Brightness &amp; Contrast, Auto Adjust, Input Source, Color Settings, Display Settings, Other Settings, Language, Menu Transparency, Menu Timer, Menu Lock, DDC/CI, and Factory Reset. The resolution is 1280x1024 @ 60Hz, and the optimum resolution is 1440x900 @ 60Hz.</p>
Factory Reset	Reset all OSD settings to the factory preset values.	


## OSD Warning Messages

When the monitor does not support a particular resolution mode you will see the following message:

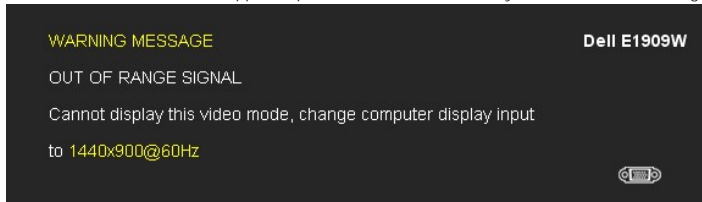

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor Specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 1440 x 900.

You will see the following message before the DDC/CI function is disabled.

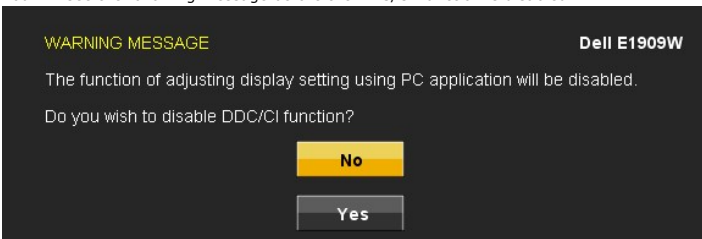


When monitor enters Power Save mode, the following message appears:




Activate the computer and wake up the monitor to gain access to the [OSD](#)

If you press any button other than the power button one of the following messages will appear depending on the selected input:  
**VGA/DVI-D input**

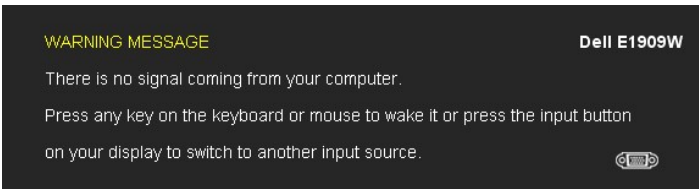

If either VGA or DVI-D input is selected and both VGA and DVI-D cables are not connected, a floating dialog box as shown below appears.



See [Solving Problems](#) for more information.

---

## Setting the Optimal Resolution

To set the optimal resolution for the monitor:

1. Right-click on the desktop and select **Properties**.
2. Select the **Settings** tab.
3. Set the screen resolution to 1440 x 900.
4. Click **OK**.


If you do not see 1440 x 900 as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures:

1. If you have a Dell desktop or portable computer:
  - o Go to [support.dell.com](http://support.dell.com), enter your service tag, and download the latest driver for your graphics card.
1. If you are using a non-Dell computer (portable or desktop):
  - o Go to the support site for your computer and download the latest graphic drivers.
  - o Go to your graphics card website and download the latest graphic drivers.

---

## Using the Dell Soundbar (Optional)

The Dell Soundbar is a stereo two channel system adaptable to mount on Dell Flat Panel Displays. The Soundbar has a rotary volume and on/off control to adjust the overall system level, a blue LED for power indication, and two audio headset jacks.

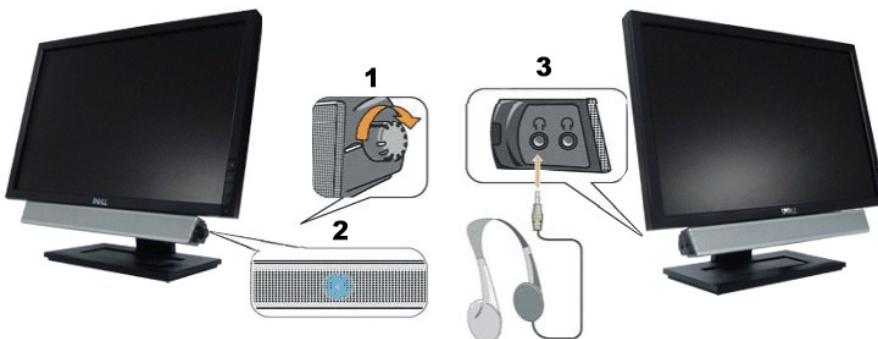


1. Power/volume control
2. Power indicator
3. Headphone connectors


---

## Using the Tilt

## Tilt

With the built-in pedestal, you can tilt the monitor for the most comfortable viewing angle.

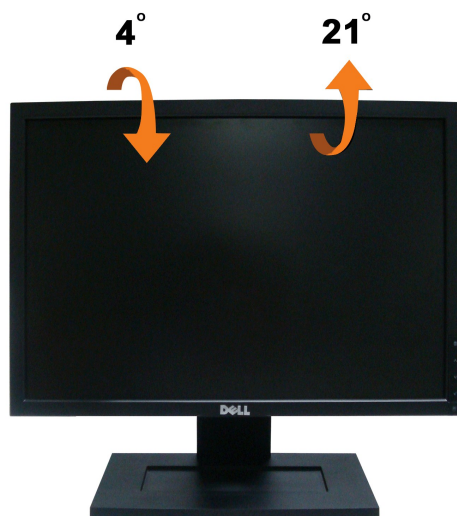

 **NOTE:** The stand is detached when the monitor is shipped from the factory.

---

[Back to Contents Page](#)

[Back to Contents Page](#)

## Setting Up Your Monitor

**Dell™ E1909W Flat Panel Monitor**

---

### Setting the display resolution to 1440X900 (Optimal)

For optimal display performance while using the Microsoft Windows operating systems, set the display resolution to 1440 x 900 pixels by performing the following steps:

1. Right-click on the desktop and click **Properties**.
2. Select the **Settings** tab.
3. Move the slider-bar to the right by pressing and holding left-mouse button and adjust the screen resolution to **1440 X900**.
4. Click **OK**.

If you do not see **1440X900** as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the provided directions:

**1: [If you have a Dell™ desktop or a Dell™ portable computer with internet access.](#)**

**2: [If you have non Dell™ desktop, portable computer, or graphic card.](#)**

---

[Back to Contents Page](#)

# Dell™ E1909W Flat Panel Monitor

[User Guide](#)

[Setting the display resolution to 1440x900\(Optimal\)](#)

---

Information in this document is subject to change without notice.  
© 2008 Dell Inc. All rights reserved

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo are trademarks of Dell Inc; *Microsoft*, *Windows*, *Windows 2000*, *Windows XP* and *Windows Vista* are registered trademarks of Microsoft Corporation; which may be registered in certain jurisdictions. *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

---

Model E1909Wc


July 2008 Rev. A00

## Setting Up the Monitor

Dell™ E1909W Flat Panel Monitor User's Guide

- [Attaching the Stand](#)
  - [Connecting the Monitor](#)
  - [Organizing Your Cables](#)
  - [Attaching the Soundbar \(optional\)](#)
  - [Removing the Stand](#)
- 

### Attaching the Stand


 **NOTE:** The stand is detached when the monitor is shipped from the factory.



To attach the monitor stand:

1. Place the stand on a flat surface
  2. Fit the groove on the back of the monitor to the two tabs on the upper part of the stand.
  3. Lower the monitor so that the monitor mounting area snaps on to or locks on to the stand.
- 

### Connecting Your Monitor


 **CAUTION:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).

To connect your monitor to the computer:


1. **Turn off your computer and disconnect the power cable.**
2. Connect either the white (digital DVI-D) or the blue (analog VGA) display connector cable to the corresponding video port on the back of your computer. **Do not use both cables on the same computer.** Use both the cables only when they are connected to two different computers with appropriate video systems.


#### Connecting the white DVI cable



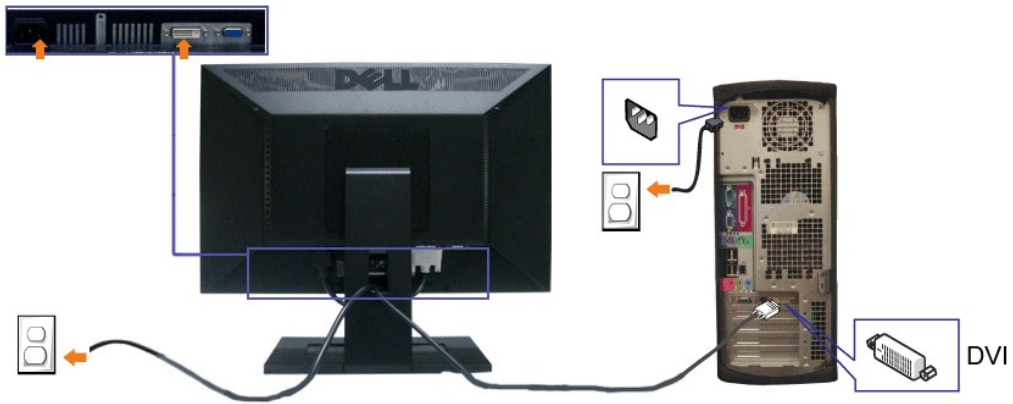


### Connecting the blue VGA cable

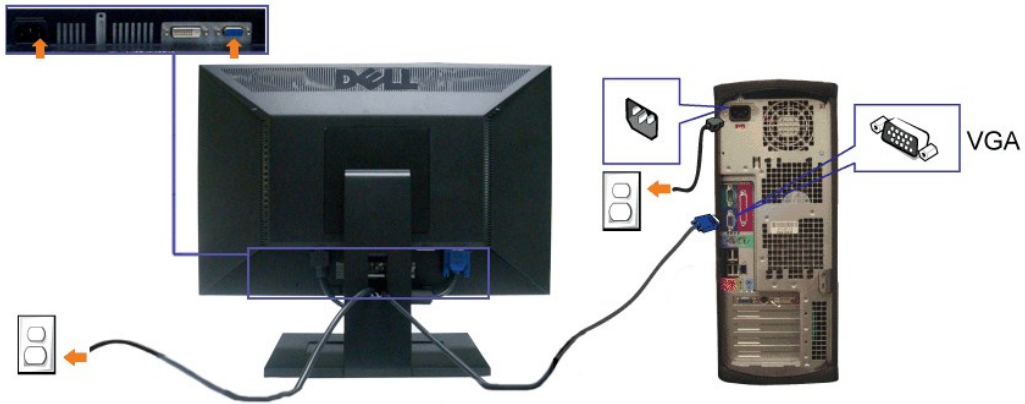

 **CAUTION:** The Graphics are used for the purpose of illustration only. Appearance of the computer may vary.

---

### Organizing Your Cables

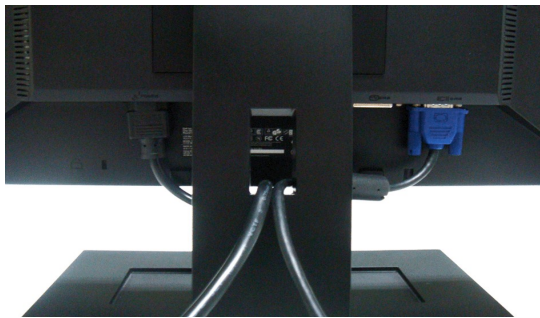

After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) use the cable management slot to organize all cables as shown above.

---

### Attaching the Dell Soundbar



⚠ **NOTICE:** Do not use with any device other than Dell Soundbar.

🔧 **NOTE:** Soundbar Power Connector +12V DC output is for optional Dell Soundbar only.

1. Working from the rear of the monitor, attach the Soundbar aligning the two slots with the two tabs along the bottom rear of the monitor.
2. Slide the Soundbar to the left until it snaps into place.
3. Connect the soundbar with the power brick.
4. Plug the power cable of the brick to a nearby power outlet.
5. Insert the lime-green mini stereo plug from the rear of the Soundbar into the computer's audio output jack.

## Removing the Stand

🔧 **NOTE:** To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a clean surface.




To remove the stand:

1. Rotate the stand to allow access to the stand release button.
2. Press and hold the Stand release button.
3. Lift the stand up and away from the monitor.

## Wall Mounting (Optional)

Refer to the instructions that come with the base mounting kit. To convert your LCD display from a desk-mounted to a wall-mounted display, do the following:

1. Verify that the power button is turned Off, then disconnect the power cord.
2. Lay the LCD display face down on a soft cloth.
3. Remove the stand assembly from the back of the LCD display by pressing quick release button.
4. Attach the mounting bracket from the VESA compatible wall mounting kit (100 mm x 100 mm distance). (Screw dimension: M4 x 10mm).
5. Attach the LCD display to the wall, following the instructions in the wall-mounting kit.

 **NOTE:** For use only with UL Listed Wall Mount Bracket with minimum weight/load: 4.44kg.

---

[Back to Contents Page](#)

## Troubleshooting

### Dell™ E1909W Flat Panel Monitor

- [Self-Test](#)
- [Common Problems](#)
- [Video Problems](#)
- [Product Specific Problems](#)
- [Dell Soundbar Problems](#)

**⚠ CAUTION:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).

---

### Self-Test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove both Digital (white connector) and the Analog (blue connector) cables from the back of computer.
3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains green. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.



4. This box also appears during normal system operation, if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

**📌 NOTE:** Self test feature check is not available for S-Video, Composite, and Component video modes.




---

### Built-in Diagnostics


Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.

**📌 NOTE:** You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in *self-test mode*.

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
3. Press and hold the  and  buttons on the front panel, simultaneously for 2 seconds. A gray screen appears.
4. Carefully inspect the screen for abnormalities.
5. Press the  button on the front panel again. The color of the screen changes to red.
6. Inspect the display for any abnormalities.
7. Repeat steps 5 and 6 to inspect the display in green, blue, and white colored screens.



The test is complete when the white screen appears. To exit, press the  button again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

---


### Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	What You Experience	Possible Solutions
No Video/Power LED off	No picture	<ul style="list-style-type: none"> <li>1 Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</li> <li>1 Verify that the power outlet is functioning properly using any other electrical equipment.</li> <li>1 Ensure that the power button is depressed fully.</li> </ul>
No Video/Power LED on	No picture or no brightness	<ul style="list-style-type: none"> <li>1 Increase brightness &amp; contrast controls via OSD.</li> <li>1 Perform monitor self-test feature check.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> <li>1 Perform Auto Adjust via OSD.</li> <li>1 Adjust the Phase and Pixel Clock controls via OSD.</li> <li>1 Eliminate video extension cables.</li> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Change the video resolution to the correct aspect ration (16:10).</li> </ul>
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"> <li>1 Perform Auto Adjust via OSD.</li> <li>1 Adjust the Phase and Pixel Clock controls via OSD.</li> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Check environmental factors.</li> <li>1 Relocate the monitor and test in another room.</li> </ul>
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"> <li>1 Cycle power on-off.</li> <li>1 Pixel that is permanently off is a natural defect that can occur in LCD technology.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"> <li>1 Cycle power on-off.</li> <li>1 Pixel that is permanently off is a natural defect that can occur in LCD technology.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Auto Adjust via OSD.</li> <li>1 Adjust brightness &amp; contrast controls via OSD.</li> </ul>
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Auto Adjust via OSD.</li> <li>1 Adjust brightness &amp; contrast controls via OSD.</li> </ul> <p><b>NOTE:</b> When using '2: DVI-D', the positioning adjustments are not available.</p>
Horizontal/Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Perform Auto Adjust via OSD.</li> <li>1 Adjust Phase and Pixel Clock controls via OSD.</li> <li>1 Perform monitor self-test feature check and determine if these lines are also in self-test mode.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> <li>1 Run the built-in diagnostics.</li> </ul> <p><b>NOTE:</b> When using '2: DVI-D', the Pixel Clock and Phase adjustments are not available.</p>
Synchronization Problems	Screen is scrambled or appears torn	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Perform Auto Adjust via OSD.</li> <li>1 Adjust Phase and Pixel Clock controls via OSD.</li> <li>1 Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> <li>1 Restart the computer in the <i>safe mode</i>.</li> </ul>
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> <li>1 Do not perform any troubleshooting steps.</li> <li>1 Contact Dell immediately.</li> </ul>
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> <li>1 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.</li> </ul>
Missing Color	Picture missing color	<ul style="list-style-type: none"> <li>1 Perform monitor self-test feature check.</li> <li>1 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> </ul>
Wrong Color	Picture color not good	<ul style="list-style-type: none"> <li>1 Change the Color Setting Mode in the Color Settings OSD to Graphics or Video depending on the application.</li> <li>1 Try different Color Preset Settings in Color Settings OSD. Adjust R/G/B value in Color Settings OSD if the Color Management is turned off.</li> <li>1 Change the Input Color Format to PC RGB or YPbPr in the Advance Setting OSD.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> <li>1 Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see <a href="#">Power Management Modes</a>).</li> <li>1 Alternatively, use a dynamically changing screensaver.</li> </ul>

## Product Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	<ul style="list-style-type: none"> <li>1 Check the Scaling Ratio setting in Image Setting OSD</li> <li>1 Reset the monitor to Factory Settings.</li> </ul>
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	<ul style="list-style-type: none"> <li>1 Turn off the monitor, unplug the power cord, plug back, and then turn on the monitor.</li> </ul>
No Input Signal when user controls are pressed	No picture, the LED light is green. When you press "+", "-", or "Menu" key, the message "No S-Video input signal", or "No Composite input signal", or "No Component input signal" appears	<ul style="list-style-type: none"> <li>1 Check the signal source. Ensure the Computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard.</li> <li>1 Check to make sure Video Source to S-Video, Composite or Component is powered and playing video media.</li> <li>1 <b>Check whether the signal cable is plugged in properly. Re-plug the signal cable if necessary.</b></li> <li>1 Reset the computer or video player.</li> </ul>
The picture does not fill the entire screen.	The picture cannot fill the height or width of the screen	<ul style="list-style-type: none"> <li>1 Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.</li> <li>1 Run the built-in diagnostics.</li> </ul>

 **NOTE:** When choosing DVI-D mode, the **Auto Adjust** function is not available.

## Dell™ Soundbar Problems

Common Symptoms	What You Experience	Possible Solutions
No Sound	No power to Soundbar - the power indicator is off	<ul style="list-style-type: none"> <li>1 Turn the Power/Volume knob on the Soundbar clockwise to the middle position; check if the power indicator (green LED) on the front of the Soundbar is illuminated.</li> <li>1 Confirm that the power cable from the Soundbar is plugged into the adaptor.</li> </ul>
No Sound	Soundbar has power - power indicator is on	<ul style="list-style-type: none"> <li>1 Plug the audio line-in cable into the computer's audio out jack.</li> <li>1 Set all Windows volume controls to their maximum</li> <li>1 Play some audio content on the computer (i.e. audio CD, or MP3).</li> <li>1 Turn the Power/Volume knob on the Soundbar clockwise to a higher volume setting.</li> <li>1 Clean and reseal the audio line-in plug.</li> <li>1 Test the Soundbar using another audio source (i.e. portable CD player).</li> </ul>
Distorted Sound	Computer's sound card is used as the audio source	<ul style="list-style-type: none"> <li>1 Clear any obstructions between the Soundbar and the user.</li> <li>1 Confirm that the audio line-in plug is completely inserted into the jack of the sound card.</li> <li>1 Set all Windows volume controls to their midpoints.</li> <li>1 Decrease the volume of the audio application.</li> <li>1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a lower volume setting.</li> <li>1 Clean and reseal the audio line-in plug.</li> <li>1 Troubleshoot the computer's sound card.</li> <li>1 Test the Soundbar using another audio source (i.e. portable CD player, MP3 player).</li> </ul>
Distorted Sound	Other audio source is used	<ul style="list-style-type: none"> <li>1 Clear any obstructions between the Soundbar and the user.</li> <li>1 Confirm that the audio line-in plug is completely inserted into the jack of the audio source.</li> <li>1 Decrease the volume of the audio source.</li> <li>1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a lower volume setting.</li> <li>1 Clean and reseal the audio line-in plug.</li> </ul>
Unbalanced Sound Output	Sound from only one side of Soundbar	<ul style="list-style-type: none"> <li>1 Clear any obstructions between the Soundbar and the user.</li> <li>1 Confirm that the audio line-in plug is completely inserted into the jack of the sound card or audio source.</li> <li>1 Set all Windows audio balance controls (L-R) to their midpoints.</li> <li>1 Clean and reseal the audio line-in plug.</li> <li>1 Troubleshoot the computer's sound card.</li> <li>1 Test the Soundbar using another audio source (i.e. portable CD player).</li> </ul>
Low Volume	Volume is too low	<ul style="list-style-type: none"> <li>1 Clear any obstructions between the Soundbar and the user.</li> <li>1 Turn the Power/Volume knob on the Soundbar clockwise to the maximum volume setting.</li> <li>1 Set all Windows volume controls to their maximum.</li> <li>1 Increase the volume of the audio application.</li> <li>1 Test the Soundbar using another audio source (i.e. portable CD player, MP3 player).</li> </ul>

[Back to Contents Page](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>