

Earn Reward Points

register your new
product today!
on back page

BISSELL®

WE MEAN CLEAN

VAC&shine™

USER'S GUIDE
60P4 SERIES

- 2 Thank You
- 3 Safety Instructions
- 4 Product View
- 5 Assembly
- 6-7 Operations
- 7-8 Maintenance and Care
- 9 Troubleshooting
- 10 Replacement Parts
- 11 Warranty
- 12 Product Registration
- 12 Consumer Services




Thanks for buying a BISSELL Vac&Shine™

We're glad you purchased a BISSELL Vac&Shine™. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Vac&Shine™ is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your .

Thanks again, from all of us at BISSELL.

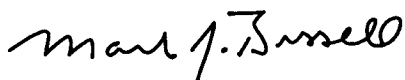

Mark J. Bissell
Chairman, President & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR VAC&SHINE™ CORDLESS HARD FLOOR CLEANER.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Store indoors.
- Do not expose to rain.
- Do not immerse.
- Do not handle with wet hands.
- Do not use Vac&Shine™ if it has been dropped, damaged, left outdoors or dropped into water. Have it repaired at an Authorized Service Center.
- Do not use with damaged cord or plug on the charger.
- Do not unplug charger by pulling on cord.
- Do not damage the charger cord. Never carry or pull the charger unit by the cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use an extension cord. Charger should plug directly into electrical outlet.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot, burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.)

- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Use only cleaning products formulated or recommended by BISSELL for this appliance.
- Use only the charger supplied by BISSELL (packaged with your appliance) to recharge your Vac&Shine™.
- Use charger unit only in standard electrical outlet (120v-60 hz).
- Use charger in dry location only.
- Keep openings free of dust, lint, hair, etc.
- Unplug charger unit from outlet before maintenance or cleaning.
- Unplug by grasping the plug, not the cord.
- Be extra careful when cleaning stairs.
- Turn off all controls when finished cleaning.
- Do not charge the unit outdoors.

Your Vac&Shine™ contains rechargeable nickel cadmium batteries. Do not incinerate batteries as they can explode when exposed to high temperatures.

Battery cell leaks can occur under extreme conditions. If battery cell liquid comes in contact with the skin:

- Wash immediately with soap and water, then neutralize with a mild acid such as vinegar or lemon juice.
- If battery cell liquid gets into the eyes: Flush immediately with clean water for a minimum of 10 minutes.
- Seek medical attention.
- Do not use without dust bin and/or filters in place.
- Do not run appliance over the charging cord.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

Product view



Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.



BISSELL
2X Hard
Floor
Solutions
Formula



BISSELL
2X Wood
Floor
Solutions
Formula

Assembly

Assembling your new Vac&Shine is a 3 Step Process, requiring no tools.

1. Insert foot into body of unit until you hear a click.
2. Place the Solution Tube onto the spray connector.
3. Insert the handle into the body of the unit. Turn handle until key in handle falls into position until you hear a "click".

Charging


Note: The unit will come partially charged. Charge completely before using 12 hours or overnight.

Average run time for Dry Vacuuming is 12 minutes.

- A. To charge, place the charger plug into the Charging Port on the side of the unit. Make sure it is in securely and the charge indicator light is illuminated. Make sure power switch is in the "off" position.

Filling the Clean Tank

1. Remove tank from the unit.
2. Unscrew the black cap on the bottom of the solution tank and remove the insert.
3. Fill with Tap Water to the full line and fill the remainder with BISSELL 2x Hard Floor or Wood Floor Solutions formulas. Replace the cap and insert assembly. Place the full tank back into the unit.

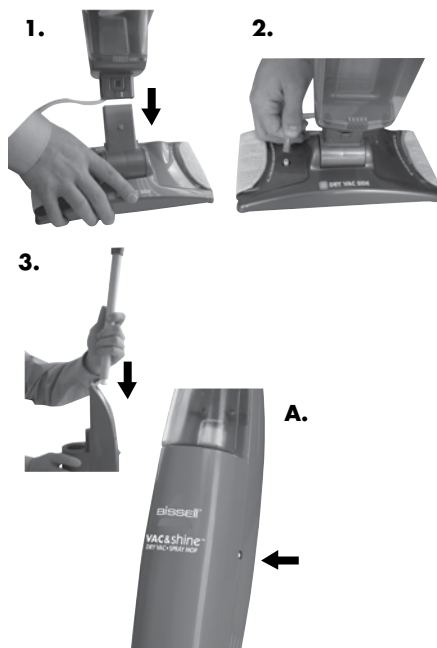

Tip:

You will only utilize battery charge while dry vacuuming. For wet mopping, the batteries are not used, extending usage time.

Tip:

Gently push the tank into place. If you see air bubbles in the tank, it is seated properly.



Operations

Dry Vac

1. Attach the Gentle Clean® MicroFiber pad onto the base of the unit. Begin by attaching the pad onto the Velcro on one side of the unit, wrapping it under the foot and attaching on the other side


Tip: If the MicroFiber covers the vacuum suction path, the unit will not suction. See picture 1B.

2. Turn the unit on.
3. With the Dry Vac side of the unit facing forward, begin cleaning. You will see dry dirt, crumbs and debris being collected in the Dirty Tank.
4. Check the filter frequently. If you see hair and fuzzy debris collecting on the filter, remove the dirty tank and dirty tank lid to clean the filter.

To clean the filter, gently tap it on the edge of the trash can, brushing off anything that may be sticking to the filter. The filter can also be rinsed with warm water. Let air dry before inserting back into the unit.

Tip:

The MicroFiber pad should be placed in the areas directed. Covering the vacuum suction path will stop all suction.

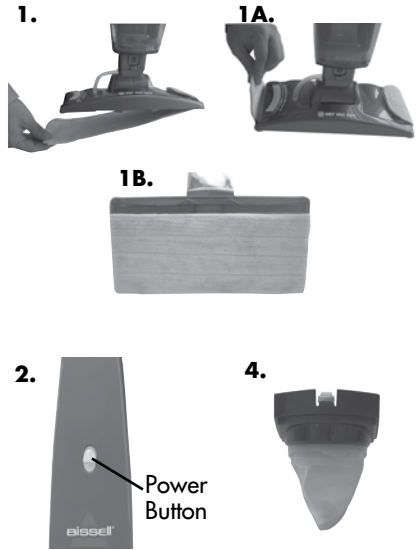

Switching from Dry Vac to Wet Mop

1. To change from dry vacuuming to wet cleaning simply flip the unit around!

Tip:

When the trigger is squeezed the vacuum suction will stop; extending battery life.

Operations

Wet Mop

1. By squeezing the trigger, you will turn off the vacuum suction.
2. Water and Solution will flow to the 2 spray tips on the Wet Mop side. Gently mop the floor with the Gentle Clean® MicroFiber pad. Depressing the trigger will dispense water and solution based on your cleaning job.

Sticky, dirty areas may require more water and solution.

Floor will need to air dry for 3-5 minutes.

2.



Tip:

You do not have to empty the Dirty Tank before wet mopping.

Cleaning the Gentle Clean® MicroFiber Pad

1. After Wet Mopping, remove the MicroFiber Pad to launder or wash.

To wash, simply toss in the wash, air dry and reuse. No need to buy disposable cloths every time you use your Vac&Shine!

1.




Maintenance and care

Storing and Charging your Vac&Shine

Your Vac&Shine can be stored Ready-to-Use, by leaving water and formula in the Clean Tank.

1. To charge while storing, place the charger plug into the charging port on the side of the unit. Make sure it is securely connected and the charger indicator light is illuminated.

1.

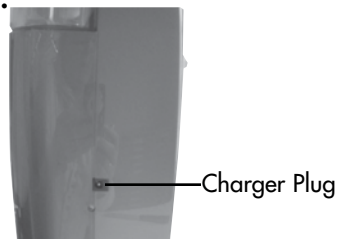

Maintenance and care

Battery Removal And Disposal




1. Important: Unplug charger.
2. Remove tanks (clean and dirty) and discard.
3. Remove screws (6) holding Product Housing together (see diagram).
4. Use screwdriver to score Rating Label on side of unit.
5. Separate Housings and locate Battery Pack in bottom/ center of unit.
6. Remove wires from the Battery Pack.
7. Keep Battery Pack together - DO NOT separate individual batteries. For specific disposal instructions of batteries, please contact: RBRC (Rechargeable Battery Recycling Corporation) 1-800-822-8837.
8. Discard remainder of product.


WARNING:

This product contains a rechargeable nickel cadmium battery (sometimes referred to as a "Ni-Cad" battery) pack. The average life of a Ni-Cad battery is 5-7 years, depending on frequency of use. According to Federal regulations, proper removal and disposal of Ni-Cad batteries are required.

3a.

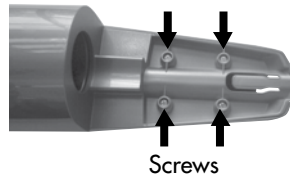

3b.

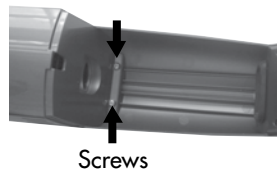

Troubleshooting



WARNING:

To reduce the risk of electric shock, turn power OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting.

Unit will not turn on

Possible causes

1. Unit is not charged

No or Low suction

Possible causes

1. Unit is not charged
2. Filter is clogged
3. Dirty tank is not properly installed
4. Microfiber pad is covering suction path

5. Foot not properly installed

No Spray

Possible causes

1. Clean tank is empty
2. Clean tank is not installed properly
3. Handle is not installed properly
4. Solution tube is not installed properly

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Remedies

1. Charge unit completely see page 5.

Remedies

1. Charge unit completely see page 5.
2. Clean filter. See page 6.
3. Remove and reinstall dirty tank.
4. Remove and replace microfiber pad. See page 6.
5. Remove and reinstall foot. See page 5.

Remedies

1. Fill clean tank. See page 5.
2. Remove and reinstall clean tank.
3. Remove and reinstall handle. See page 5.
4. Remove and reinstall solution tube. See page 5.

Replacement parts - BISSELL Vac&Shine

Item	Part No.	Part Name
1	203-6917	Handle Assembly
2	203-6918	Solution Tank (w/ cap & insert)
3	203-6919	Solution Tank cap & insert
4	203-6920	Collection Tank
5	203-7514	Collection Tank Lid
6	39U5	2-pack Filters
7	30A3	2-pack Pads
8	203-6926	Charger
9	56L9	16 oz. Hard Floor Solutions
10	81T7	16 oz. Wood Floor Solutions

1



2



3



4



5



6



7



8



9



10



Warranty - BISSELL Vac&Shine™

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, or regular mail as described below.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL Homecare, Inc. will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, mop pads, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

If your BISSELL product should require service:

Contact BISSELL Consumer Services to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Services.

Website or E-mail:

www.bissell.com

Use the "Customer Support" tab.

Or Call:

BISSELL Consumer Services

1-800-237-7691

Monday - Friday 8 a.m. - 10 p.m. ET

Saturday 9 a.m. - 8 p.m. ET

Or Write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids, MI 49501

ATTN: Consumer Services

BISSELL HOMECARE, INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**
THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.



Don't forget to register your product!

Registering is quick, easy and allows us to serve you better over the lifetime of your product. You'll receive:

BISSELL Reward Points

Automatically earn points for discounts and free shipping on future purchases.

Efficient Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Alerts

We'll contact you with any important product alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit bissell.com/registration now!



BISSELL consumer services

For information about repairs or replacement parts, or questions about your warranty, call:

BISSELL Consumer Services

1-800-237-7691

Monday - Friday 8 a.m. — 10 p.m. ET

Saturday 9 a.m. — 8 p.m. ET

Or write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids MI 49501

ATTN: Consumer Services

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.



©2010 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4213
Rev 6/10
Visit our website at:
www.bissell.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>